

Table des matières

FEMNET.....	2
First way to download it:.....	2
Second way to download it:.....	2
Other ways to download it:.....	2
Main characteristics to know before to use it.....	2
From the design to the equilibrated shape.....	3
Tools and file types.....	7
*.don file.....	9
- The first part:.....	9
- The second part:.....	22
./gengis.....	23
./tool_box.ods and a simple case.....	31
./phobos.....	54
- The first way:.....	54
- The second way:.....	56
./unix.....	57
./dyna.....	59
./batz.....	61
Automatic creation of links.....	63
Refining the calculation.....	65
Symmetry.....	68
Numerical twines.....	74
Quasi-static examples.....	78
Bottom trawl.....	78
Catch.....	85
Flexion.....	100
Stiff netting.....	100
cylindrical bar made of polyamide.....	102
Gravity catch.....	107
Dynamic examples.....	113
FAD.....	113
Mussels longline.....	116
Netting boom.....	122
Fish cage.....	128
Bottom seine.....	134
References.....	140
Index.....	141
Annex 1: Stiffness of cables.....	146
Annex 2: Volumic mass of cables.....	147
Assessment using linear mass.....	147
Assessment without linear mass.....	147
Rtex vs diameter of twine.....	147
Annex 3: Foil.....	148
Flume tank model tests.....	148
Foil determined by hydrodynamic coefficients and surface.....	150

FEMNET

FEMNET is a numerical modelling dedicated to mechanical assessment of flexible structures such as fishing gear and fish cage. This numerical modelling is based on the finite element method with a specific emphasis on netting structures. Netting is a main component of fish cage and fishing gear. This numerical modelling using the finite element method also takes into account cables, bars, floats and netting. FEMNET has been used in several scientific papers: [1], [2], [3] and book: [4].

FEMNET runs on linux.

First way to download it:

- Go in <https://github.com/dpriour/femnet>.
- Do, Code, Download ZIP.
- Copy programs and data_2001 folders, place these folders in your computer in ~/femnet
- Open a terminal, go in ~/femnet/programs, execute ./batz. If a graphical window opens, that's OK. It must be the same with ./phobos and ./gengis.

Second way to download it:

- Go in <https://github.com/dpriour/femnet>.
- Do, Code, Download ZIP.
- Copy the folders in ~/femnet
- libsx is the graphics library. FEMNET requires the file libsx.a. 2 possibilities to get it: a) use ~/femnet/libsx/src/libsx.a hoping that it is usable on your computer; b) find libsx on internet, compile it to get a libsx.a adapted to your computer.
- Edit makefile of ~/femnet/phobos_2005, and ~/femnet/batz and modify the path of libsx.a in order to indicate the path of your libsx.a.
- Do make in ~/femnet/lib_dp, in ~/femnet/unix_2004, in ~/femnet/dyna2, in ~/femnet/phobos_2005, in ~/femnet/batz and in ~/femnet/gengis.
- Place ~/femnet/unix_2004/unix, ~/femnet/dyna2/dyna, ~/femnet/phobos_2005/phobos, ~/femnet/batz/batz and ~/femnet/gengis/gengis in ~/femnet/programs.

Other ways to download it:

A previous version is on <http://femnetting2.free.fr/download.html>

A first version is on <https://gitlab.ifremer.fr/dp00644/femnet>

Main characteristics to know before to use it

To use FEMNET a main file is required: *.don. *.don file has to be written by the user. This file describes the structure and its environment. FEMNET is dedicated to assess the structure equilibrium in this environment.

5 tools are also required. They are in ~/femnet/programs:

1. gengis is a graphical tool which is an help to create a first level of *.don file.

2. phobos to transform *.don file in *.mdg file which is compatible with calculation of equilibrium by Finite Element Method.
3. unix which calculated the equilibrium in static conditions from *.don file and *.mdg file and records the equilibrium in *.sta file.
4. dyna which calculate the equilibrium in dynamic conditions from *.don file, *.mdg file and *.sta file and records the dynamic equilibrium in *.dyn file.
5. batz which display the equilibrium of the structure. It uses mainly *.sta file and *.dyn file if any.

From the design to the equilibrated shape

A design of a structure, such as on Figure 1, determines the netting panels, the cables, the rigging. This design has to be integrated in FEMNET. This integration is done through the *.don file and can be read by ./phobos tool (Figure 2). ./phobos integrates the design in order to create a *.mdg file compatible with Finite Element Method calculation tool ./unix. At this step the shape of the structure is not equilibrated (Figure 3). An equilibrated shape could be assessed with ./unix tool. ./unix creates an *.sta file. The equilibrated shape is displayed with ./batz tool (Figure 4).

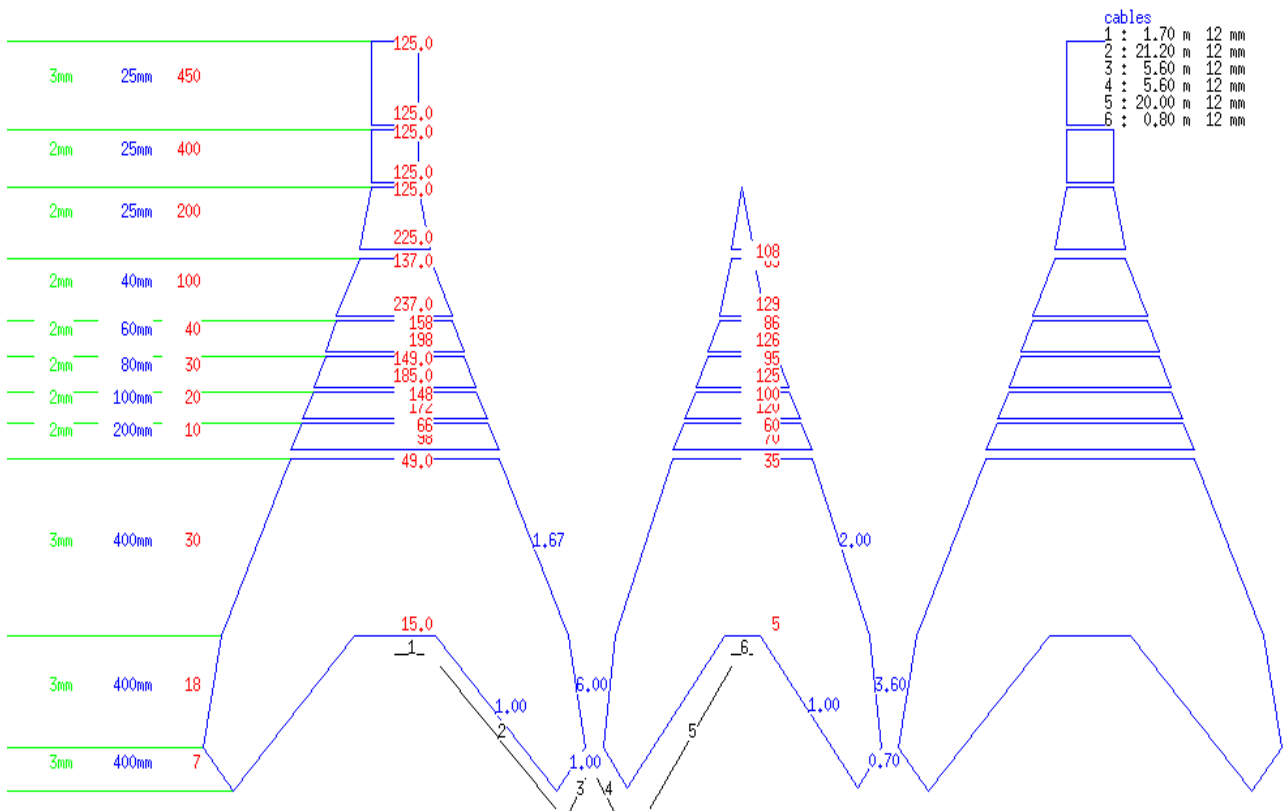


Figure 1: Trawl design: netting panels and cables.

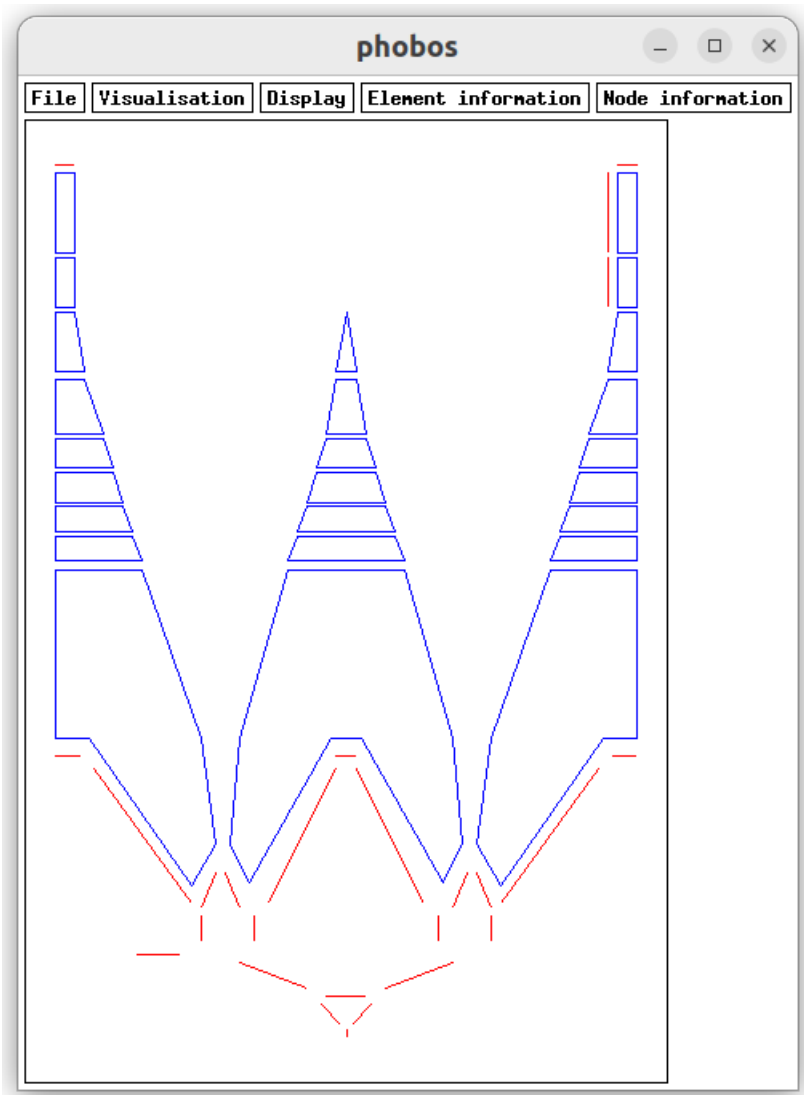


Figure 2: Trawl design integrated in ./phobos.

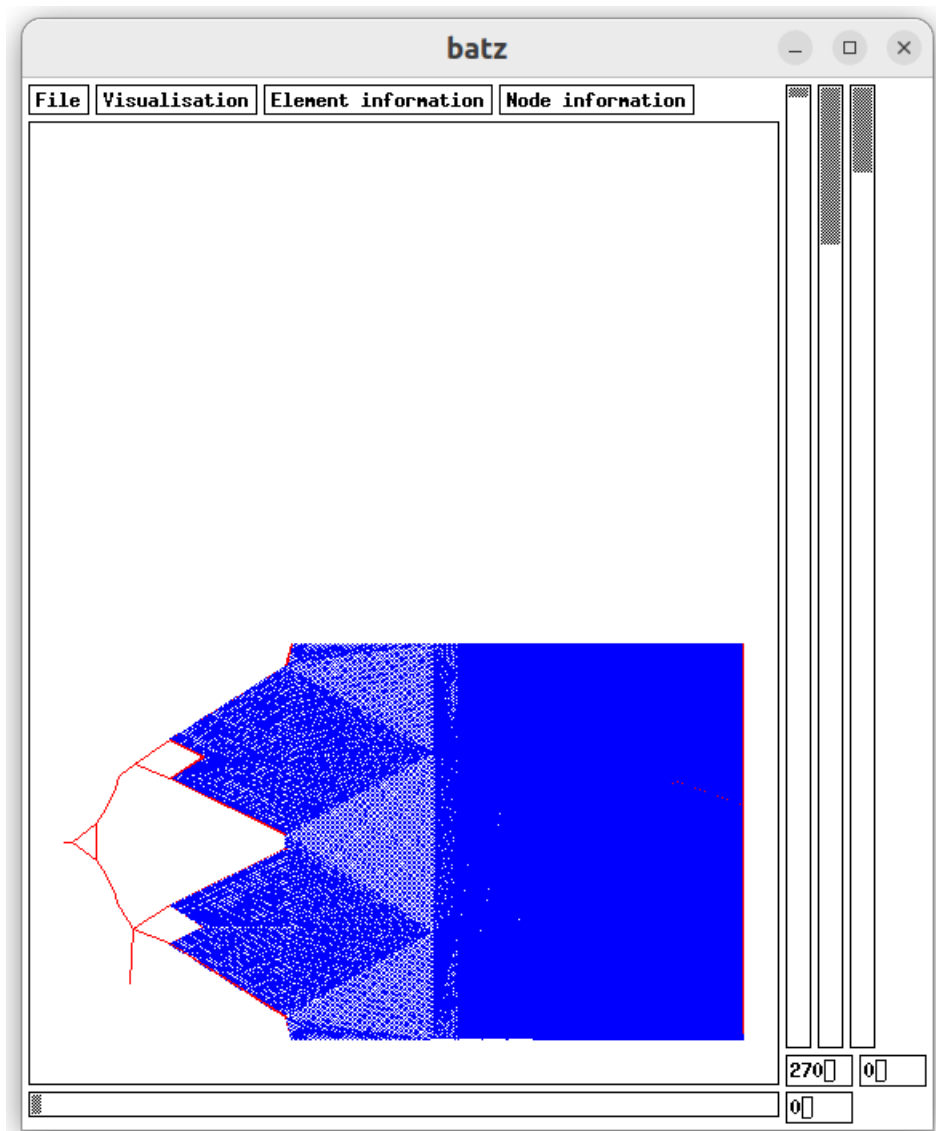


Figure 3: Initial shape (not equilibrated) of the trawl.


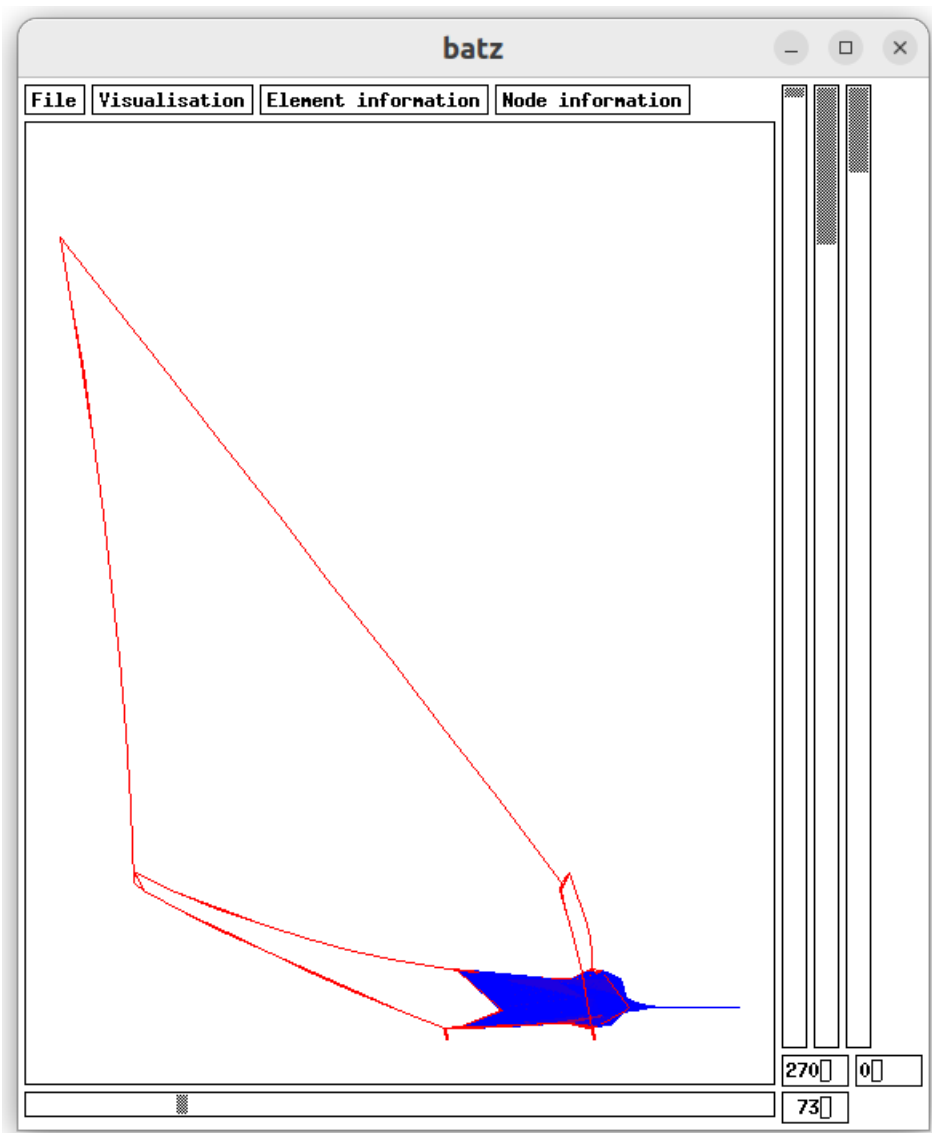


Figure 4: Final shape (equilibrated) of the trawl.

Tools and file types

There are 5 tools (./gengis, ./phobos, ./unix ./dyna and ./batz) and 4 main types of file (*.don, *.mdg, *.sta and *.dyn).

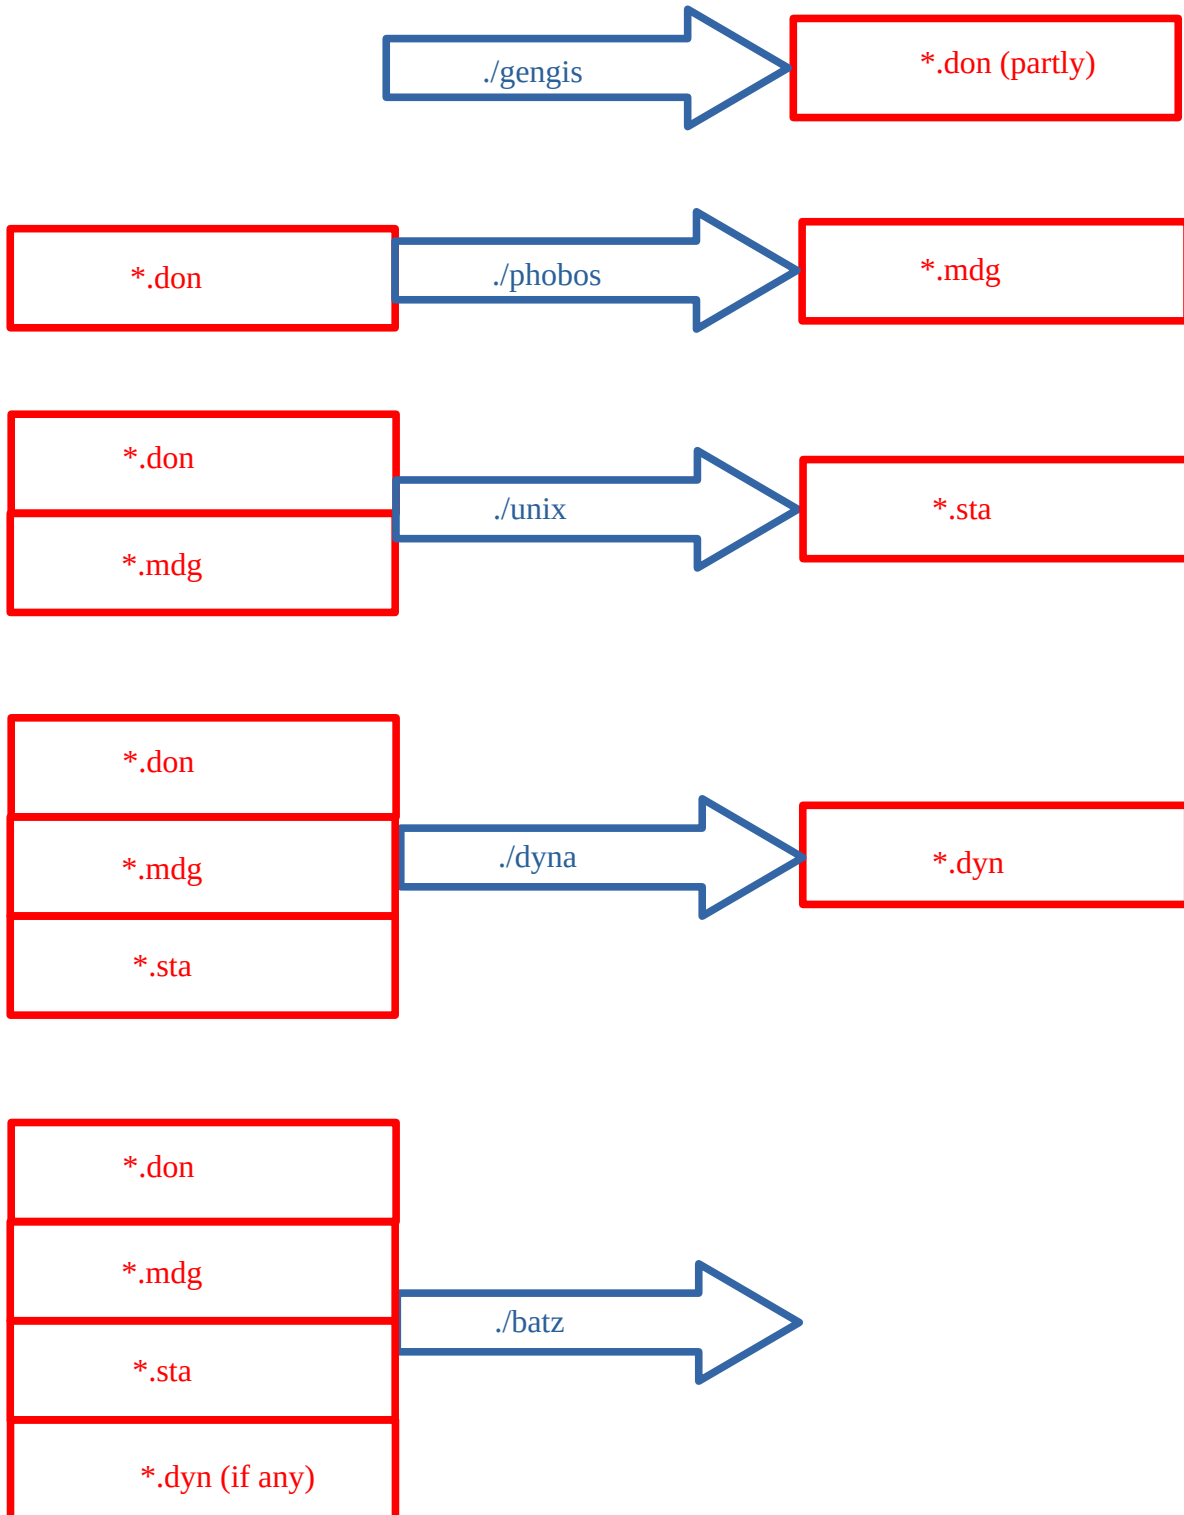

1. ./gengis is a graphical tool devoted to create a first level of *.don file, which has to be completed by hand.
2. ./phobos is a graphical tool devoted to create *.mdg file which is compatible with the finite element method.
3. ./unix is a tool which calculates the quasi-static equilibrium and records the result in *.sta file.
4. ./dyna is a tool which calculated the dynamic equilibrium and records the result in *.dyn file.
5. ./batz is a graphical tool dedicated to visualizing results: quasi-static and dynamic, where applicable.

*.don file

*.don file has two parts:

- the first part follows a strict template.
- the second part is a succession of commands which don't need to follow a specific order.

These two parts are described in the following.

*.don file requires colons (:). Colons (:) are used as separators, for example between a comment and a parameter value. It is recommended, if you modify a *.don file, not to delete colons and not to add colons. For example in the first line of the following *.don file (`design in the plane normal to axis: 2`), `design in the plane normal to axis` is the comment, `2` is the value of the parameter and between these two parts there is a colon (:).

In the following `s1.don` file (in `~/femnet/data_2001/readme/1pelagic_trawl`) is displayed in blue, a tentative of explanation is given in green and with figures. This file describes a pelagic trawl. In this file the boat is fixed and a current represents the towing speed. The file begins with the first part which follows a strict template:

- The first part:


In this first part, the order of the commands (in blue) must be respected.

`design in the plane normal to axis: 2`

The design of the structure is done in the plane normal to axis **2** (Y) that means in the plane ZX.

This is used by phobos. The Figure 5 gives the view of phobos of this file. That shows panels of netting in blue, cables or bars in red.

The design is in the plane ZX. To get the view of Figure 5 do `cd ~/femnet/programs, ./phobos, File, load_don_file`, choose `s1.don`, Visualisation, `contour_diamond`, Visualisation, `contour_cable_bar`, Visualisation, axes. If, in place of 2, 1 is used, the design is in the plane YZ. If 3 is used the design is in the plane XY.

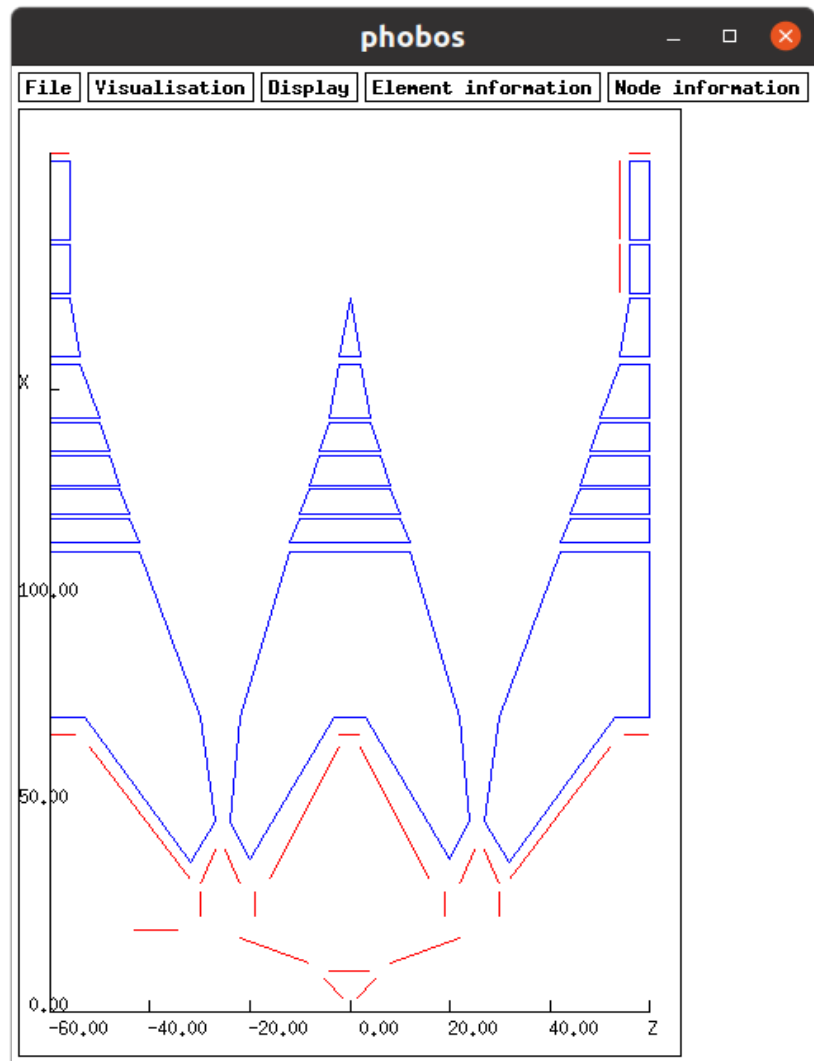

*Figure 5: Design of a pelagic trawl
~/femnet/data_2001/readme/1pelagic_trawl/s1 displayed with
phobos tool.*

panels number: 25

There are 25 panels of netting of diamond meshes, which can be seen in blue on Figure 5.

Panel: 1

The value 1 is not used. In fact the panel 1 is the first of this list of panels, panel 2 is the second and so on.

number of nodes around: 10

The panel 1 is a polygon made of 10 nodes around (see Figure 5).

nodes of the contour no x y z U V type and following type:

1	37.000000	0.000000	20.000000	0.000000	27.500000	2	2
---	-----------	----------	-----------	----------	-----------	---	---

This list of number are described in the following: The corner 1 is the first of this list of corners, the corner 2 the second and so on.

The corner 1 has a position X,Y and Z of 37m, 0m and 20m. The user defines an origin for counting the number of meshes for each corner. The origin is constant for all the corners of a panel. The corner 1 is at 0 mesh along U meshes and is at 27.5 mesh along V meshes. These number of meshes are calculated from the design shown on Figure 6. The Figure 7 displays the number of meshes for the corners of panel 1.

The type of corner 1 is 2 and the type of nodes, if any, between corner 1 and corner 2 is 2. This point will be discussed later (p18).

2	46.000000	0.000000	24.000000	7.000000	37.500000	2	2
3	71.000000	0.000000	22.000000	25.000000	32.500000	2	2
4	111.000000	0.000000	12.000000	55.000000	17.500000	2	2

5	111.0000000	0.000000	-12.000000	55.000000	-17.5000002	2
6	71.000000	0.000000	-22.000000	25.000000	-32.5000002	2
7	46.000000	0.000000	-24.000000	7.000000	-37.5000002	2
8	37.000000	0.000000	-20.000000	0.000000	-27.5000002	2
9	71.000000	0.000000	-3.000000	25.000000	-2.500000	2

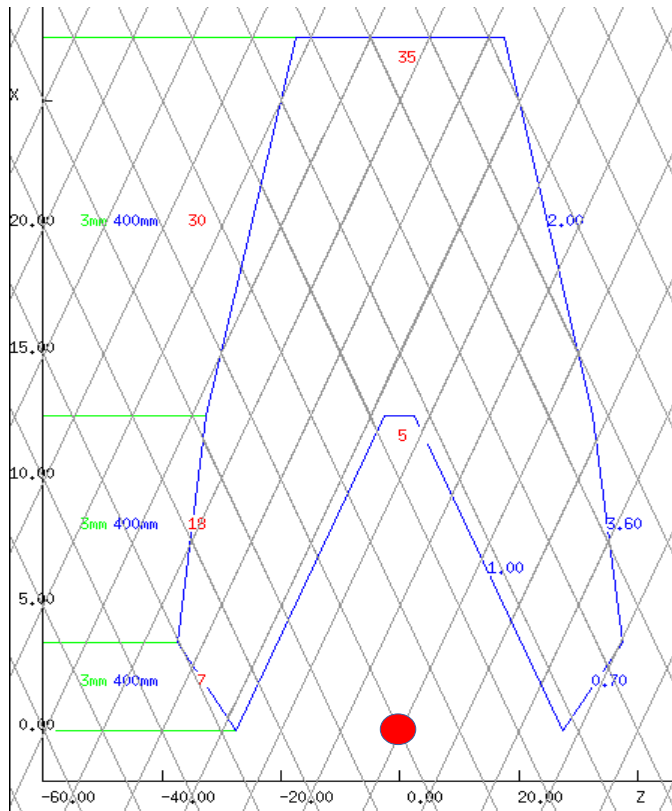


Figure 6: Design of panel 1. Twines diameter, mesh side are displayed, as well as the number of meshes and the cutting. The origin of mesh counting is the knot under the red dot. Only one twine on 10 is drawn.

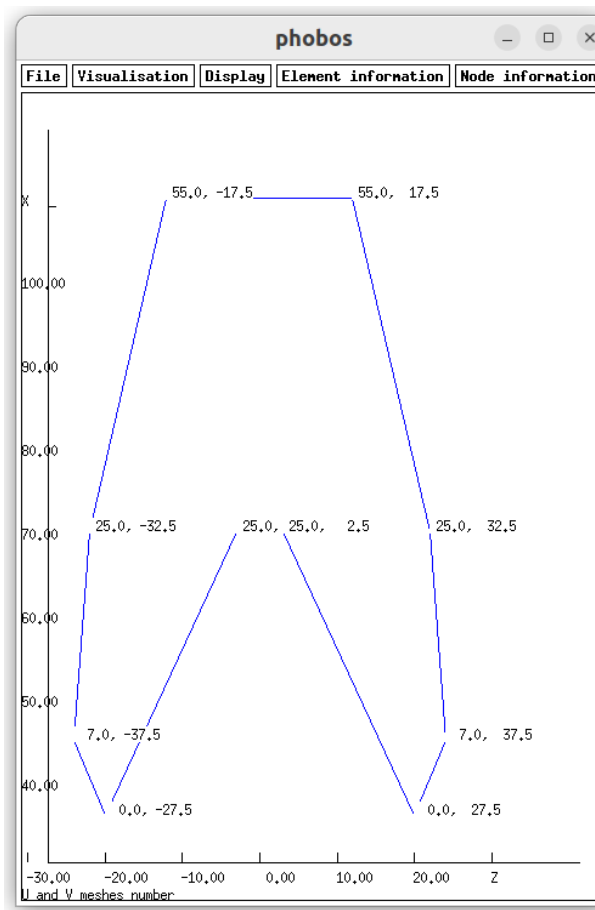


Figure 7: Mesh coordinates of the corners of the panel 1 of netting, displayed with phobos using
 ~/femnet/data_2001/readme/1pelagic_trawl/s
 1. Displayed with phobos tool.

Traction stiffness (N): 25000.000000

The traction stiffness, more exactly the force required to double the length of the twine, is 25000N. This value is $E \cdot A$. E is the Young modulus of the material and A (N/m^2) is the material section of the twine (m^2 , p146).

Compression stiffness (N): 1.000000

The compression stiffness is 1N. That means that there is more or less no force required to compressed the twine.

Mesh opening stiffness (N.m/rad): 0.000000

The mesh opening stiffness is the couple required to open the mesh of 1 Rad. Generally speaking, use 0N.m/Rad. For stiff netting see p100.

Unstretched length (m): 0.400000

The unstretched length is the length of the mesh side from a middle of a knot to the middle of a neighbouring knot.

Volumic mass (kg/m^3): 1025.000000

The volumic mass of the netting (material and sea water inside the hydrodynamic diameter, see p147 a method of assessment). Note that the default volumic mass of sea water used here is 1025kg/m^3 .

Hydrodynamic diameter (m): 0.002800

The diameter of the twine. This diameter is used for the calculation of the drag, the mass and the floatability.

Knot size (m): 0.005600

In case of the meshes are closed, the closing could be limited by the size of the knot. A default value is twice the twine diameter. 0.0 is also used.

Normal Cd: 1.200000

Normal Cd for the calculation of the drag. 1.2 is an usual value.

Tangential Cd: 0.080000
Tangential coefficient for the calculation of the drag. 0.08 is an usual value.

Meshing step (m): 27.000000
The distance between the numerical nodes created by phobos. Here the value is quite large, for finer calculations, as it can be seen in following files, this meshing step will decrease.

Type of internal nodes: 2
Type of the numeric nodes created by phobos. This point will be discussed later (p18).

Meshing type: 2
When the meshing type is 1 there is no constraint on the creation of the nodes by phobos. If the meshing type is 2, phobos tries to create the numeric node on a knot. It is preferable to use meshing type 2.

Panel: 2
Continue the same for all the panels. Here the panels 3 to 24 have been hidden.

number of nodes around: 7
nodes of the contour no x y z U V type and following type:

1	36.000000	0.000000	32.000000	0.000000	-32.5000002	2
2	71.000000	0.000000	53.000000	25.000000	-7.500000	2
3	71.000000	0.000000	60.000000	25.000000	0.000000	3
4	111.0000000	0.000000	60.000000	55.000000	0.000000	2
5	111.0000000	0.000000	42.000000	55.000000	-24.5000002	2
6	71.000000	0.000000	30.000000	25.000000	-42.5000002	2
7	46.000000	0.000000	27.000000	7.000000	-39.5000002	2

Traction stiffness (N): 25000.000000
Compression stiffness (N): 1.000000
Mesh opening stiffness (N.m/rad): 0.000000
Unstretched length (m): 0.400000
Volumic mass (kg/m3): 1025.000000
Hydrodynamic diameter (m): 0.002800
Knot size (m): 0.005600
Normal Cd: 1.200000
Tangential Cd: 0.080000
Meshing step (m): 27.000000
Type of internal nodes: 2
Meshing type: 2
.
.
.

Panel: 25
number of nodes around: 4
nodes of the contour no x y z U V type and following type:

1	186.00000	0.000000	-60.000000	0.000000	0.000000	3
2	205.00000	0.000000	-60.000000	450.00000	0.000000	2
3	205.00000	0.000000	-56.000000	450.00000	62.500000	2
4	186.00000	0.000000	-56.000000	0.000000	62.500000	2

Traction stiffness (N): 25000.000000
Compression stiffness (N): 1.000000
Mesh opening stiffness (N.m/rad): 0.000000
Unstretched length (m): 0.025000
Volumic mass (kg/m3): 1025.000000
Hydrodynamic diameter (m): 0.002800
Knot size (m): 0.005600

Normal Cd: 1.200000
Tangential Cd: 0.080000
Meshing step (m): 27.000000
Type of internal nodes: 2
Meshing type: 2

hexagonal panels number: 0

Number of panels of hexagonal meshes. Use 0, as the hexagonal meshes are not explained in this document.

Cables number: 26

There are 26 cables or bars.

Cable: 1

The value 1 is not used. In fact the cable (or bar) 1 is the first of this list of cables, cable 2 is the second and so on.

Extremities no x y z type:

1 0.000000 0.000000 0.000000 1
2 2.000000 0.000000 0.000000 4

There are 2 extremities (corners) for each cable or bar. The extremity 1 is the first, extremity 2 is the second. The coordinates X,Y,Z of extremity 1 are 0m, 0m, 0m and 2m, 0m, 0m for extremity 2. The type of node of extremity 1 is 1 and 4 for extremity 2 (p18).

Traction stiffness (N): 62000000.000000

This characteristics are the same as the one uses for twines previously described.

Compression stiffness (N): 1.000000
Unstretched length (m): 200.000000
Volumic mass (kg/m3): 4800.000000
Hydrodynamic diameter (m): 0.026000
Normal Cd: 1.800000
Tangential Cd: 0.080000
Bars number: 9

This cable will be discretized by 9 bars. For finer calculations in following files this number will decrease.

Type of internal nodes: 2

The nodes created by the 9 bars are of type 2 (p18).

Cable: 2

Continue the same for all the cables and bars. In this document, only few cables/bars are shown.

Extremities no x y z type:

1 3.000000 0.000000 1.000000 4
2 8.000000 0.000000 5.000000 2

Traction stiffness (N): 200000000.000000
Compression stiffness (N): 200000000.000000
Unstretched length (m): 3.000000
Volumic mass (kg/m3): 1025.000000
Hydrodynamic diameter (m): 0.010000
Normal Cd: 1.800000
Tangential Cd: 0.080000
Bars number: 1
Type of internal nodes: 2

.
.
.

Cable: 18

Extremities no x y z type:

1 32.000000 0.000000 -16.000000 2

```

2 64.000000 0.000000 -2.000000 2
Traction stiffness (N):      20000000.000000
Compression stiffness (N):   1.000000
Unstretched length (m):     20.000000
Volumic mass (kg/m3):       4800.000000
Hydrodynamic diameter (m):  0.012500
Normal Cd:                  1.800000
Tangential Cd:              0.080000
Bars number:                1
Type of internal nodes:     2

```

Sliding cables number: 0

This number must be always 0. There is a new method for the sliding ropes which will be described later.

Links number: 52

The panels and cables/bars have to be linked together. Here there are 52 links. The Figure 8 shows few links. The four corners (panels corners and cables extremities) noted 6 on Figure 8 are linked together, that means that they are represented by only one numeric node in the numerical model. The two corners noted 52 are linked. Be careful to the following rule: if two components are linked together by consecutive corners it is equivalent to a sewing of the two components. For example, on the Figure 8, the panel side between links 7 and 14 of panel 1 and the cable 18 with links 7 and 14 are sown. The Figure 9 shows that the nodes which are created on the panel side and the cable are linked (links 122 to 127).

```
nb_pt: 3 el: 3 nd: 1 el: 2 nd: 1 el: 1 nd: 2
```

This link relies 3 corners: extremity (nd) 1 of cable (el) 3, extremity (nd) 1 of cable (el) 2 and extremity (nd) 2 of cable (el) 1.

```
nb_pt: 3 el: 6 nd: 1 el: 4 nd: 2 el: 3 nd: 2
```

.

.

.

```
nb_pt: 2 pa: 1 nd: 6 pa: 3 nd: 6
```

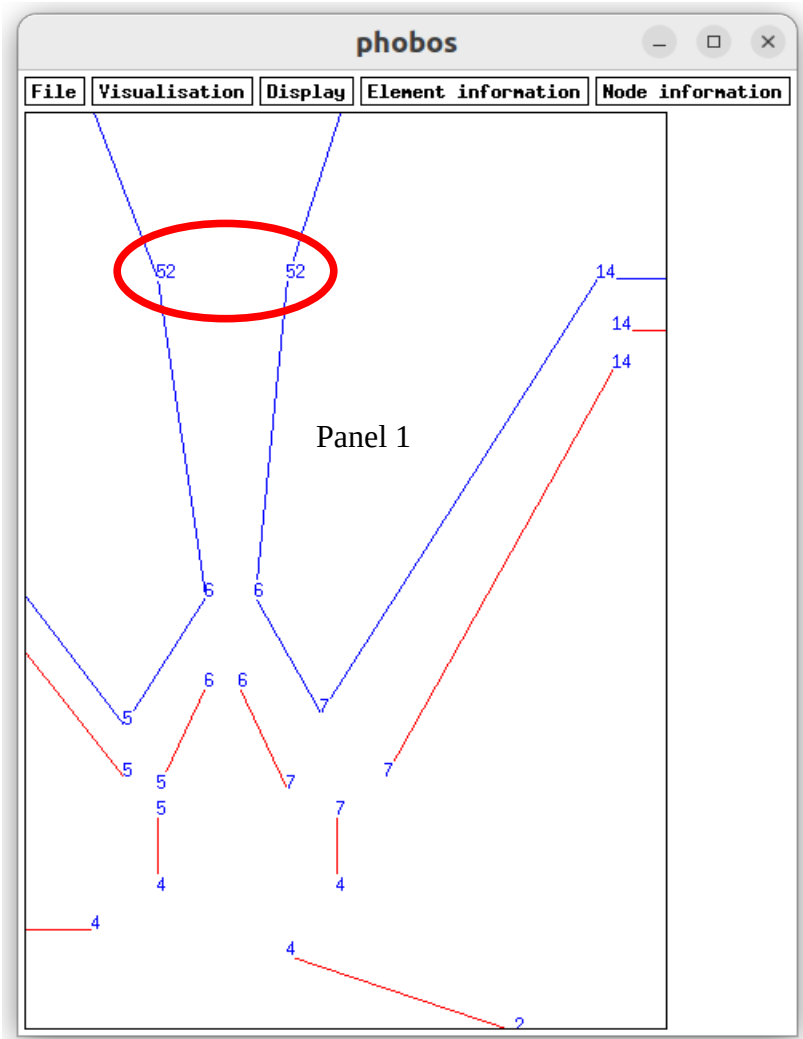


Figure 8: Links between components. The two corners noted 52 are linked and this link is the 52. View of phobos using `~/femnet/data_2001/readme/1pelagic_trawl/s1`.

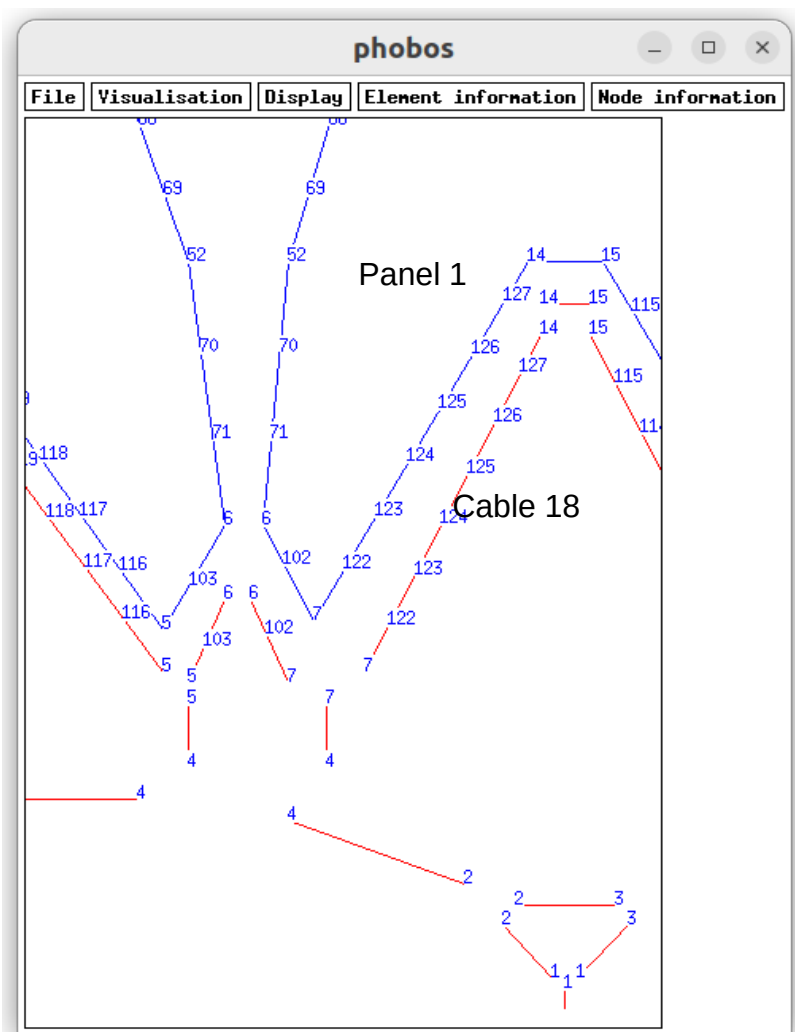


Figure 9: The cable 18 is sown to a side of panel 1. There are 8 common *nodes which are linked* (links 7, 122, 123, 124, 125, 126, 127, 14). Here panel 1 is *discretized* before cable 18 (this point is discussed later). View of phobos using `~/femnet/data_2001/readme/1pelagic_trawl/s3`.

Meshing order:

```

el: 23 el: 24 pa: 24 pa: 25 pa: 22 pa: 23 pa: 1 pa: 2 pa: 3 pa: 4
pa: 5 pa: 6 pa: 7 pa: 8 pa: 9 pa: 10 pa: 11 pa: 12 pa: 13 pa: 14
pa: 15 pa: 16 pa: 17 pa: 18 pa: 19 pa: 20 pa: 21 el: 1 el: 2 el: 3
el: 4 el: 5 el: 6 el: 7 el: 8 el: 9 el: 10 el: 11 el: 12 el: 13
el: 14 el: 15 el: 16 el: 17 el: 18 el: 19 el: 20 el: 21 el: 22 el: 25
el: 26

```

The meshing order defined the order by which each component is discretized by phobos. This is in relation with the previous point: the links between components. In the list above the panel 1 (**pa: 1**) is listed before cable 18 (**el: 18**), that means that the panel 1 is discretized before cable 18, the numeric nodes inside and around panel 1 are created before those of cable 18. In this example the discretization step of panel 1 is 3 m, that gives 6 new numeric nodes (links 122, 123, 124, 125, 126, 127 on Figure 9) on the panel side as visible on Figure 9. If cable 18 (el: 18) is before panel 1 (pa: 1) in the meshing order the result could be different: because the number of bars in cable 18 is 3 (see `~/femnet/data_2001/readme/1pelagic_trawl/s1.don`) that leads to create on this cable 2 new numeric nodes, and because panel 1 is sown to cable 18, consequently, on the side of panel 1 there are 2 new numeric nodes (links 58, 59) also, as visible on the Figure 10.

If the meshing order does not matter which is quite often the case, the list **Meshing order: el: 23 el: 26** could be replaced by **Meshing order: all**, in this case cables are meshed before diamond netting panels, and cable n before cable n+1 (idem for panels.) Another possibility is to use **Meshing order: bll**, in this case diamond netting panels are meshed before cables, and panel n before panel n+1 (idem for cables.)

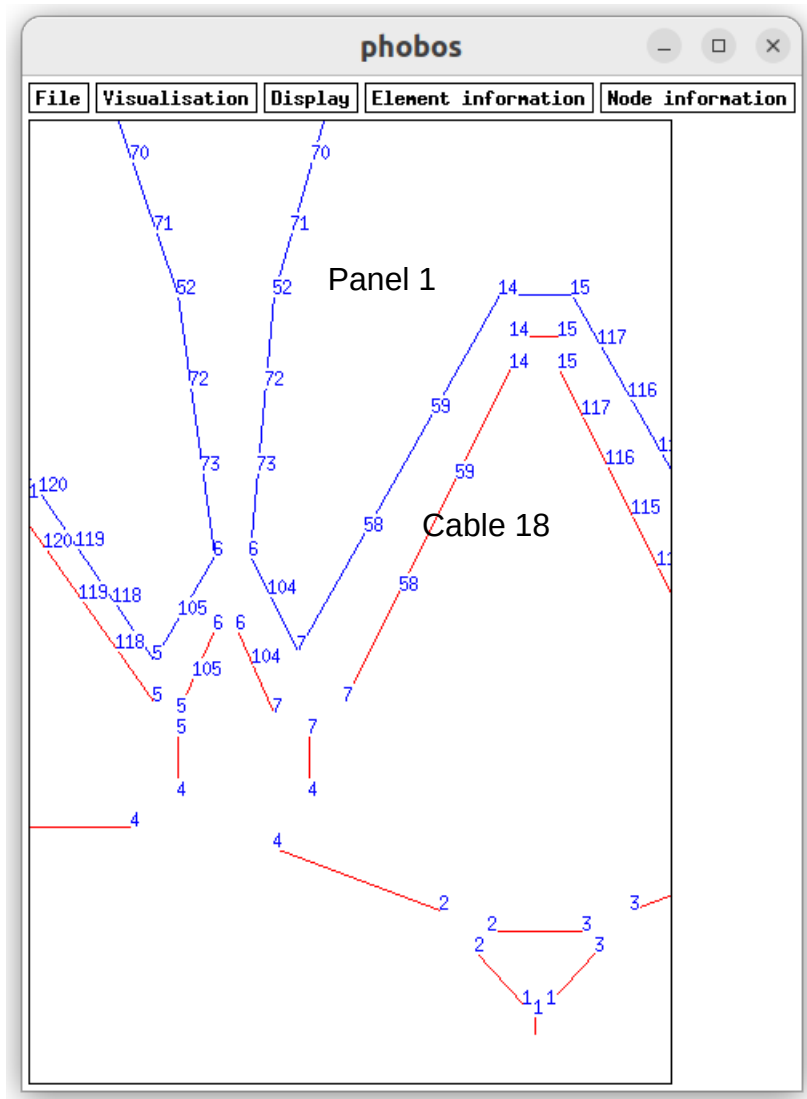


Figure 10: The cable 18 is sown to a side of panel 1. There are 4 common nodes which are linked (links 7, 58, 59, 14). Here the cable 18 is discretized before panel 1. View of phobos using ~/femnet/data_2001/readme/1pelagic_trawl/s3.

Number of types of nodes: 4

There are 4 types of nodes

No du type : 1

The type 1. Be careful this value 1 is not used: The type 1 is the first of this list, the type 2 is the second and so on.

Mass X,Y,Z (kg): 0.000000 0.000000 0.000000

The node mass. The mass along X, Y and Z could be different. Generally these 3 masses are equal.

Added mass X,Y,Z (kg): 0.000000 0.000000 0.000000

The added mass in case of dynamic.

Length X,Y,Z (m): 0.000000 0.000000 0.000000

The length of the node along X, Y and Z axis. These lengths could lead to floatability due to the volume and drag due to sections.

Drag coefficient X,Y,Z: 1.200000 1.200000 1.200000

The drag coefficient applied on sections.

External forces X,Y,Z (N): 0.000000 0.000000 0.000000

External constant forces along X, Y and Z axis.

Displacement X,Y,Z: 1 1 1

if **0** the displacement of the nodes with this type is possible. If **1** the node is fixed. The displacement is along X, Y and Z.

Limits X,Y,Z (m): 0.000000 0.000000 0.000000

In case of bottom sea the limit along Z is minus the depth. The limits could be also along X and Y axis.

Limits sense X,Y,Z: 0 0 0

If limits sense is **0** there is no limit. If limits sense is **1**, the limit previously defined is a floor. If limits sense is **-1**, the limit is a ceiling.

Symmetry X,Y,Z: 0 0 0

In case of symmetry relatively to the plane Y,Z (Z,X and X,Y) use **1 0 0** (**0 1 0** and **0 0 1**). In case of no symmetry use **0 0 0**.

No du type : 2

Mass X,Y,Z (kg): 0.000000 0.000000 0.000000

Added mass X,Y,Z (kg): 0.000000 0.000000 0.000000

Length X,Y,Z (m): 0.000000 0.000000 0.000000

Drag coefficient X,Y,Z: 1.200000 1.200000 1.200000

External forces X,Y,Z (N): 0.000000 0.000000 0.000000

Displacement X,Y,Z: 0 0 0

if **0** the displacement of the nodes with this type is possible. If **1** the node is fixed. The displacement is along X, Y and Z.

Limits X,Y,Z (m): 0.000000 0.000000 0.000000

Limits sens X,Y,Z: 0 0 0

Symmetry X,Y,Z: 0 0 0

No du type : 3

Mass X,Y,Z (kg): 0.000000 0.000000 0.000000

Added mass X,Y,Z (kg): 0.000000 0.000000 0.000000

Length X,Y,Z (m): 0.000000 0.000000 0.000000

Drag coefficient X,Y,Z: 1.200000 1.200000 1.200000

External forces X,Y,Z (N): 0.000000 0.000000 0.000000

Displacement X,Y,Z: 0 0 0

Limits X,Y,Z (m): 0.000000 0.000000 0.000000

Limits sens X,Y,Z: 0 0 0

Symmetry X,Y,Z: 0 1 0

No du type : 4

Mass X,Y,Z (kg): 0.000000 0.000000 0.000000

Added mass X,Y,Z (kg): 0.000000 0.000000 0.000000

Length X,Y,Z (m): 0.000000 0.000000 0.000000

Drag coefficient X,Y,Z: 1.200000 1.200000 1.200000

External forces X,Y,Z (N): 5600.000000 13000.000000 -15000.000000

Displacement X,Y,Z: 0 0 0

Limits X,Y,Z (m): 0.000000 0.000000 0.000000

Limits sens X,Y,Z: 0 0 0

Symmetry X,Y,Z: 0 0 0

These 4 types of node show that nodes could be fixed (type 1), free to move (type 2), free to move and on symmetry plane (type 3) and free to move with external forces (5600.000000 13000.000000 - 15000.000000, type 4). This last type (type 4) is dedicated to trawl door. To assess the hydrodynamic forces on trawl doors, use their hydrodynamic characteristics (drag coefficient, lift coefficient, as it

is defined for example in [5]), their surface and the water speed. For the vertical force use the weight of the trawl door.

NUMERIC ENVIRONMENT

Divisor (s): 0.000050 Not used.

Convergence threshold (N): 0.100000
The equilibrium is reached when the mean disequilibrium force per node is smaller than the convergence threshold (N).

Displacement limit for each iteration (m): 10.000000
Maximal displacement at each iteration per node (m).

Maximal number of iterations: 10000
If the convergence is not reached, the calculation stops when the number of iterations reaches this value.

Dynamic: Time step (s): 0.100000
In case of dynamic, calculation time step (s).

Dynamic: Record time step (s): 0.200000
In case of dynamic, time step for recording the shape of the structure (s). Record time step is equal or larger than time step.

Dynamic: Beginning time of record (s): 0.000000
In case of dynamic, beginning time for recording the shape of the structure (s).

Dynamic: End time of record and calculation (s): 0.000000
In case of dynamic, end time for calculation and recording the shape of the structure (s).

METEO/OCEANIC ENVIRONMENT

Current direction (deg): 0.000000
Direction of the current (deg.). When 0, the current is along X axis; when 90, the current is along Y axis; when 180, the current is opposite X axis; when 270 the current is opposite Y axis. As said previously, the boat is, in this model, fixed and the towing speed is represented by a current.

Current speed (m/s): 2.058000
Current amplitude (m/s).

Wave period (s): 10.000000
Wave period, only in case of dynamic (s). The default model is Airy intermediate depth. For the other models (Stokes 2d intermediate depth, Stokes 3d deep waters) see later "input wave_model".

Wave height (m): 0.000000
Wave height only in case of dynamic (m). Wave height is the double of wave amplitude.

Wave direction relatively X (deg): 0.000000
Wave direction only in case of dynamic (deg.).

Depth (m): 2000.000000
Depth used for wave calculation in case of dynamic (m). This depth is also used for visualisation with batz. Be careful, this depth is not used as limit of vertical position of nodes. For such limit see type of node previously described.

CATCH DESCRIPTION

Volume (m3): 0.000000
The catch in the netting (m³). In fact, it is a volume behind a vertical front (a plane) and the netting. This volume is the fish catch but also water. The catch applies a pressure on the netting, be careful that the pressure occurs on the inner side of the netting. The inner side of the netting could be seen with phobos (Visualisation, orientation_xy), and with batz (Visualisation, orientation_xy). See [6]. In case the inner side of a netting panel is not appropriate, to change it, replace the V coordinates of the panel by their opposite (or the U coordinates by their opposite). For example, in the *.don file, if a V coordinate of a corner of the panel is 10.0 replace it by -10.0.

Accuracy on this volume: 0.000010
The position of the front of the catch is calculated by dichotomy using this accuracy on the volume (m³).

Drag coefficient on this volume: 1.000000
Drag coefficient on the catch. 1.40 is an usual value.

BOTTOM SEA ENVIRONMENT

Wearing coefficient on the bottom: 0.500000

In case of contact on the bottom and movement of the structure on the bottom, the wearing force is proportional to this wearing coefficient and vertical force on the bottom. There is a contact with the bottom if the position of the node is under the limit defined in type of nodes as seen above.

Stiffness of the insertion in the sea bottom (N/m): 5000000.000000

In case of contact with the bottom, the vertical force on the node is proportional to its sinking into the ground and the stiffness of the insertion in the sea bottom (N/m).

TEXT OUTPUT

The following lines are used to gives specific result of the calculation

Distances number : 2

Here two distances (m) are displayed.

Distance: 1 comment: #PELAGIC TRAWL # no global 1: 1 no global 2: 1 decimal nb: 0

The distance 1. The comment is written between # #. The distance is calculated between the node 1 and 1 (and is zero m because the two nodes are the same). This distance is written with 0 decimal.

Distance: 2 comment: #Boat to door distance # no global 1: 48 no global 2: 49 decimal nb: 2

The distance 2. The comment is written between # #. The distance is calculated between the node 48 and 49. This distance is written with 2 decimal. For choosing the nodes use phobos (node information, node_global), or add output no_visible_symmetry at the end of *.don file, and use batz (Node information, number).

Forces number : 2

Here there are 2 forces (N) displayed

Force: 1 comment: #Boat Z force (N)# no global: 48 axe: 3 decimal nb: 0

The comment is between # #. The force applied on 48 along axis 3 (Z) is displayed with 0 decimal.

Force: 2 comment: #Boat X force (N)# no global: 48 axe: 1 decimal nb: 0

Tensions number : 3

Here there are 3 tensions (N) displayed.

Tension: 1 comment: #Warp tension (N)# cable: 1 extremity node: 49 decimal nb: 0

The comment is between # #. The tension is in cable 1 at the node 49 is displayed with 0 decimal. The cable number is visible in phobos (display, cable_number) and in batz (Element information, cable_type). The node number is visible in phobos (Node information, node_global) and in batz (node information, number). Be careful, in case of symmetry, in batz the symmetric of a node covers the number of node on the symmetry plane. In this case add at the end of the *.don file "output no_visible_symmetry". Prefer phobos view.

Tension: 2 comment: #Bottom bridle tension (N)# cable: 5 extremity node: 50 decimal nb: 0

Tension: 3 comment: #Top bridle tension (N)# cable: 6 extremity node: 51 decimal nb: 0

Sliding tensions number : 0

Remains at 0.

Positions number : 3

Here there are 3 positions (m) of nodes

Position: 1 comment: #Head line immersion (m)# no global: 13 axe: 3 decimal nb: 1

The comment is between # #. The position of node 13 along axis 3 (Z) is displayed with 1 decimal.

Position: 2 comment: #Bottom line immersion (m)# no global: 17 axe: 3 decimal nb: 1

Position: 3 comment: #Door immersion (m)# no global: 49 axe: 3 decimal nb: 1

Structure forces display : 1

If 1, the forces (N, along X, Y and Z) applied on the structure is displayed at the end of calculation on the terminal, recorded in sta file, recorded in detail in efg file, and visible by batz (Visualisation, comment). If 0, not.

Catch diameter display : 1

If 1, the diameter of the catch (m) is displayed at the end of calculation on the terminal and recorded in sta. If 0 not.

Catch thickness display : 1

If 1, the thickness of the catch (m) is displayed at the end of calculation on the terminal and recorded in sta. If 0 not.

Catch volume display : 1

If 1, the volume of the catch (m^3) is displayed at the end of calculation on the terminal and recorded in sta. If 0 not.

Filtrated surface display : 1

If 1, the surface filtrated (m^2) by the structure is displayed at the end of calculation on the terminal and recorded in sta. If 0 not.

Speed display : 1

If 1, the speed (current amplitude m/s) is displayed at the end of calculation on the terminal and recorded in sta. If 0 not.

- The second part:

In this second part there are a succession of commands (if any) which don't need to follow a specific order.

```
output catch_drag
    The drag on the catch (N) is displayed at the end of calculation on the terminal and recorded in *.sta file.

output bottom_drag
    The drag on the bottom (N) is displayed at the end of calculation on the terminal and recorded in *.sta file.

output element_drag
    The drag on the cables and bars (N) is displayed at the end of calculation on the terminal and recorded in *.sta filr.

output surface_drag
    The drag on the netting (N) is displayed at the end of calculation on the terminal and recorded in *.sta file.

input Auto_convergence
    Use a specific function for increasing the speed of convergence, by modifying the added stiffness added on the diagonal of the stiffness
    matrix [4].

#output no_visible_symmetry
    #indicates that this line is a comment

input convergence_parameters 1 10 100000000000
    The 3 convergence parameters are (1) the relaxation, (10) the print period, and (100000000000) the initial added stiffness (N).
    - The relaxation is the proportion of calculated displacement at each iteration which is effectively used for the calculation of the
    position of nodes, it is recommended to use 1.
    - The print period is the iteration period at which informations are displayed on the terminal during the calculation (see the first
    column of Figure 49).
    - The added stiffness is used to avoid singular matrix in the Newton-Raphson scheme [4]. In this scheme at each iteration the nodes
    displacement is calculated using  $f/f'$ , with  $f$  the vector of force disequilibrium and  $f'$  the stiffness matrix ( $df/dx$ ). To avoid a division
    by 0 the added stiffness is added to the diagonal of the matrix  $df/dx$ . See input Auto_convergence above to complete the information. If
    the line (input convergence_parameters 1 10 100000000000) don't exist in *.don file, the convergence parameters of the file
    ~/femnet/programs/param.txt are used. During the calculation, the user could change the value of *.par file if any or of
    ~/femnet/programs/param.txt.

    In case the convergence is difficult to reach, it could be useful to comment input Auto_convergence, by replacing it by #input
    Auto_convergence or removing the line. Then the *.par file is opened if any (if not, open ~/femnet/programs/param.txt), and the user
    could change, during calculation, the value of the added stiffness. A decrease of the added stiffness could accelerate the convergence
    with a risk of divergence.
```

./gengis

gengis is a graphical tool which facilitates the writing of *.don files. The *.don file produced by this tool will not be entirely complete and will require additional manual action.

In a terminal run the commands:

```
cd ~/femnet/programs  
./gengis
```

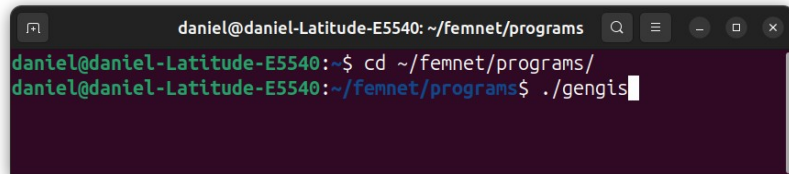
A terminal window with a dark background. The title bar shows 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The command 'cd ~/femnet/programs/' has been entered and executed. The prompt is now 'daniel@daniel-Latitude-E5540:~/femnet/programs\$'. The command './gengis' has been entered and is currently being executed, with a cursor at the end of the line.

Figure 11: Command for launching gengis.

This command gives the tool on Figure 12.

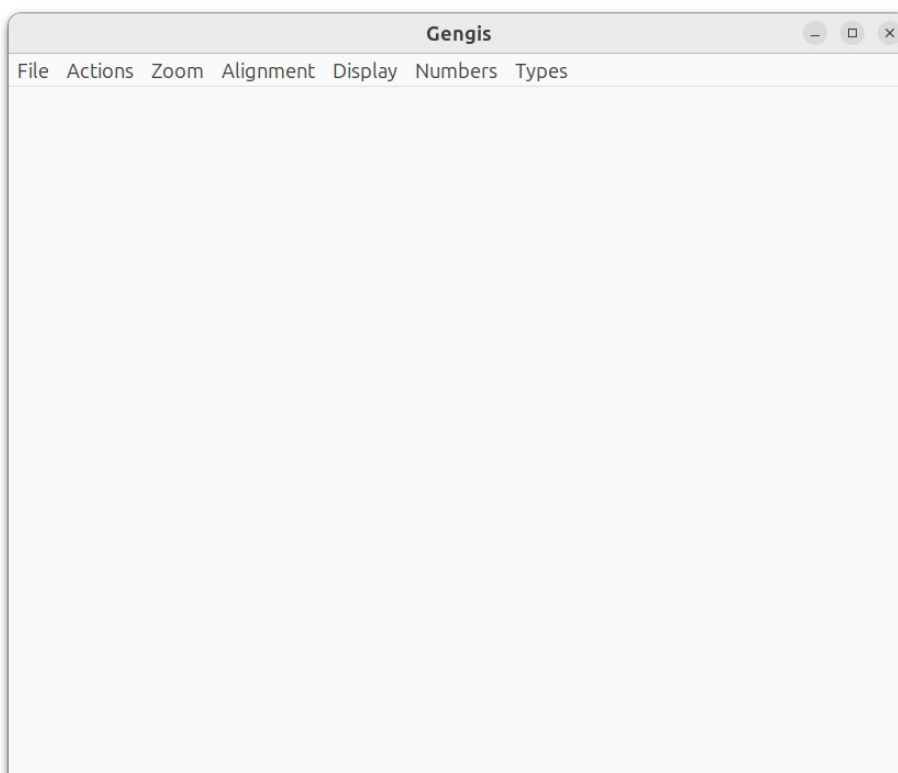


Figure 12: The tool ./gengis which is used for helping the writing of *.don files.

1. Choose the plane view. For trawl, prefer XZ. Do **Actions, View Plane...**, 2, **OK**.
2. Draw axes: Do **Display, Axes**.

- Eventually move axes. Z axe is vertical ascendant axe, with the zero at the free surface at rest. To move use the right button of the mouse.
- Draw netting panels in anticlockwise with the left button of the mouse. Do **Actions, Create Panels**. For closing the panel click twice on the last corner of the panel. Repeat as many times as there are panels. They appear is blue (Figure 13). The design used here is cambouis.pdf in ~/femnet/programs. Due to the symmetry of the structure and its environment, only half part is taken into account.

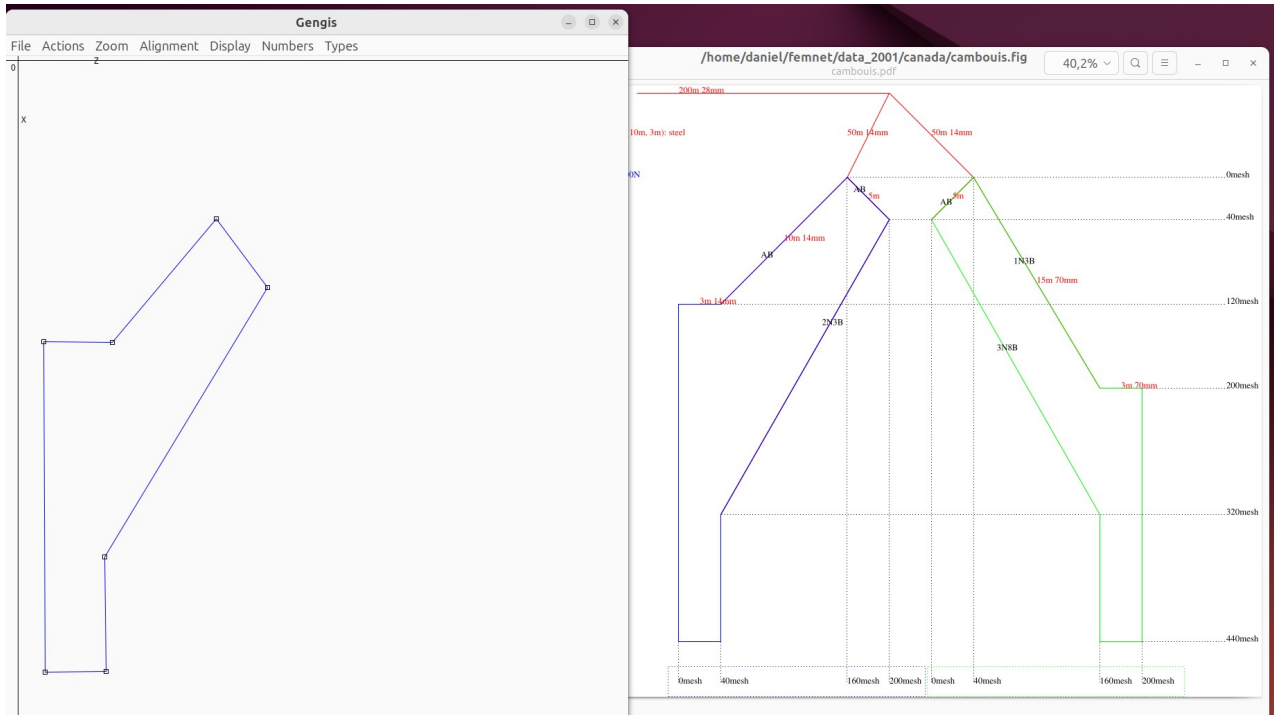


Figure 13: Gengis. On the left, creation of one netting panel with Actions, Create Panels. On the right the plan of the structure (~/femnet/programs/cambouis.pdf).

- Define the number of meshes per netting panel. Do **Actions, Modify UV**. Click inside the panel close an edge of the panel. This edge appears in red. The dialogue box allows to modify U and V meshes of this edge (Figure 14). Modify u1 and v1 (here u1 has been modified to **40.0** and v1 to **200.0** in order to be similar to the plan. Modify lu (lv) which is the number of meshes along U (V) between the 2 nodes of this edge (here **-40, -40**). Remember that the panel has been created anticlockwise, that means on Figure 14 that the first node the this edge is bottom right and the second is top left. Modify lu and lv for the following edges. Do that for each netting panel.

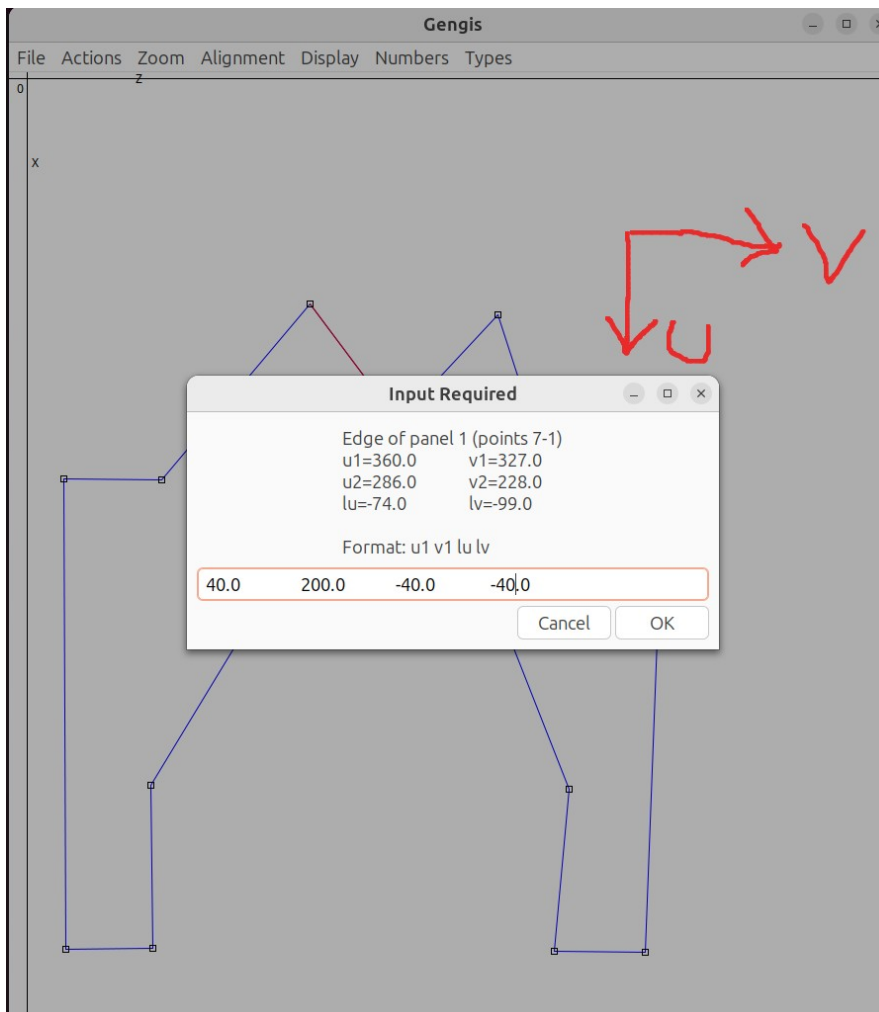


Figure 14: Determination of meshes number of an edge of the panel. The directions of U and V meshes are noted in red. 40 and 200 are the number of meshes of the first node of the highlighted edge. -40 and -40 are the number of meshes U and V between the 2 nodes of this edge.

6. Create cables. Do **Actions, Create Cables**. They appear in green (Figure 15).

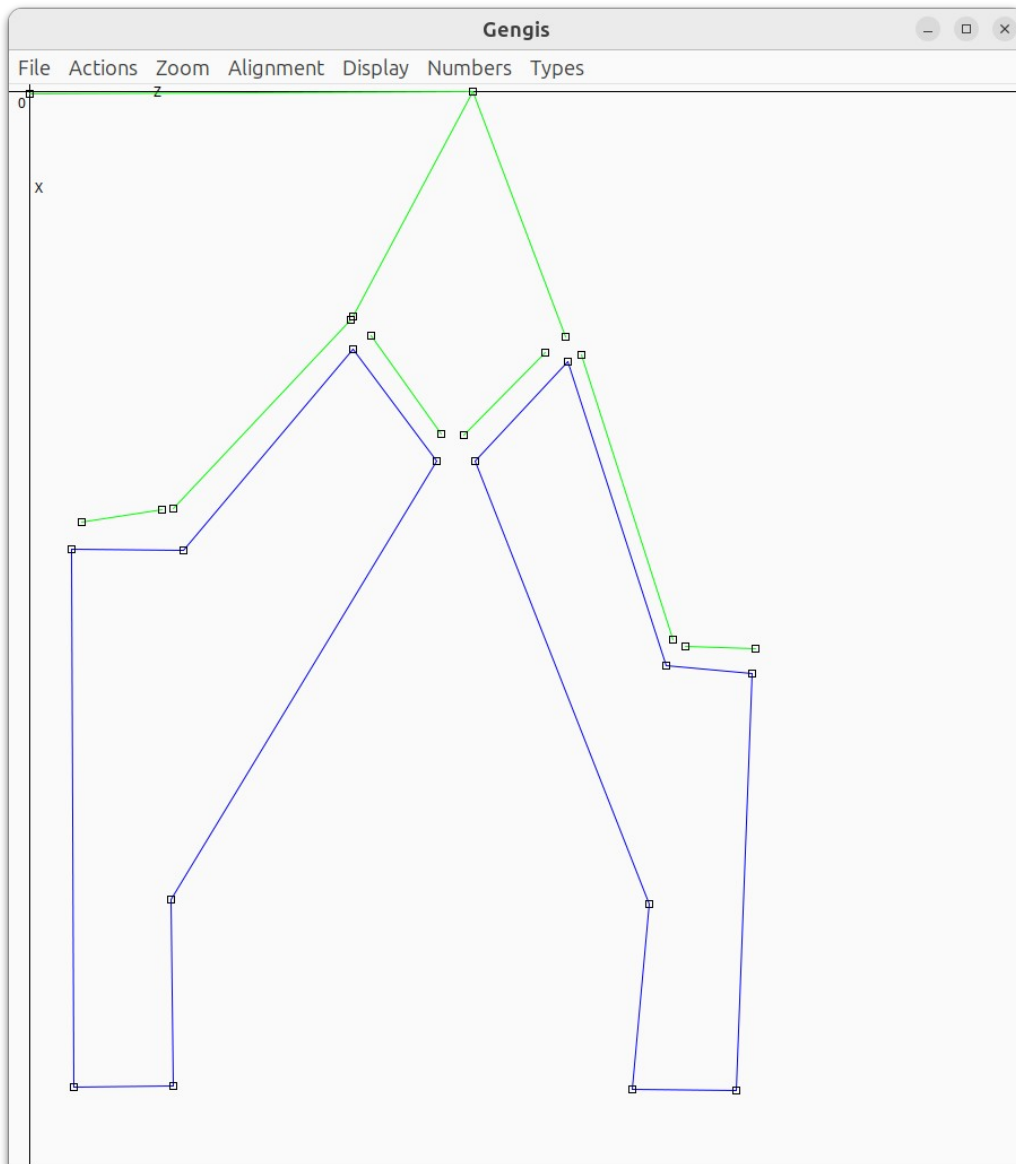


Figure 15: Creation of cables by doing Actions, Create cables and use the mouse. The cables appear in green.

7. In order to use the the automatic creation of links (such as `input link 0.01` seen later) or improve the visualisation of the structure, it could be useful to align nodes. Do **Alignment**, **Alignment mode**, Select nodes inside the red rectangle defined with the mouse (left button). The selected nodes appear in red. Do **Alignment**, **Modify X**. The dialogue box give the mean X value of the nodes and the standard deviation (Figure 16). Give a X value for these nodes and do **OK**.

8.

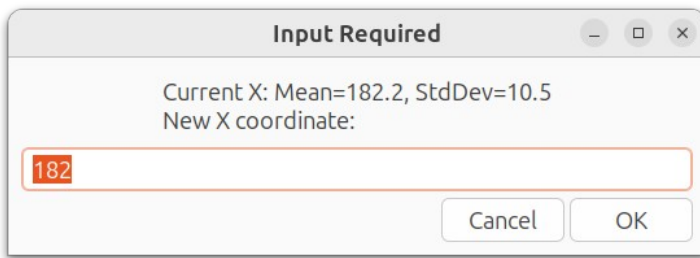


Figure 16: Dialogue box used to modify X coordinates of selected nodes. The mean and the standard deviation of selected nodes are displayed.

9. Do the same for the alignment along Z. Once done for each nodes, that give Figure 17.

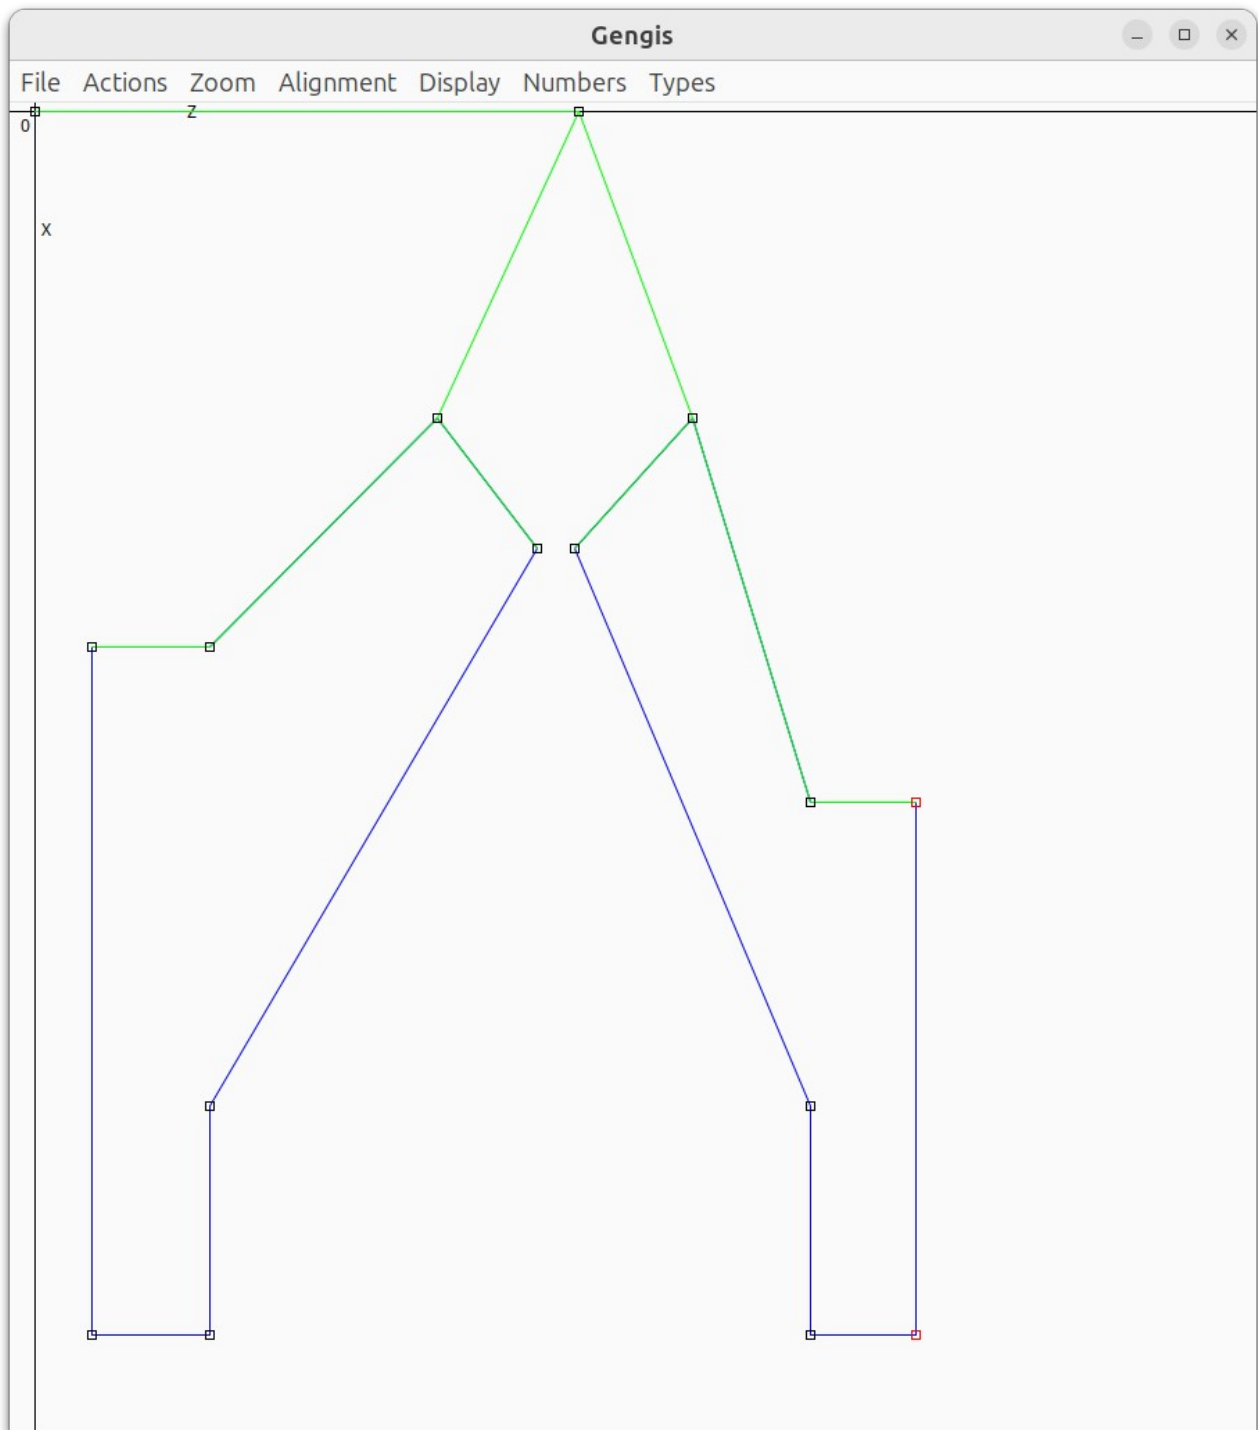


Figure 17: Once all nodes have been aligned using Alignment, Alignment Mode, Alignment X and Alignment Z.

10. The type of nodes, panels, edges of panels and cables have to be determined. In this case of simplified trawl, the boat is the top left node. The door is the top right node. And the nodes on the left of the left panel and the nodes on the right of the right panel are on the symmetrical plan. These characteristics are determined using types. Except the boat, door

and symmetrical plan, the nodes are of the same type, for example 2. Do **Alignment**, **Alignment Mode**, Select all the structure, do **Alignment**, **Modify type**, write 2, **OK**. To modify the type of just a node select around the node. For a cable select all the cable. For a panel select all the panel. For an edge of panel select all the edge. Now select only the top left node and write 1, for example. It will be the boat. Select the top right and write 4, it will be the door. Select the left edge of the panel on the left and write 3. 3 will be the type of nodes on the symmetrical plan. Select the right edge of the panel on the right and write 3. Once done that give Figure 18.

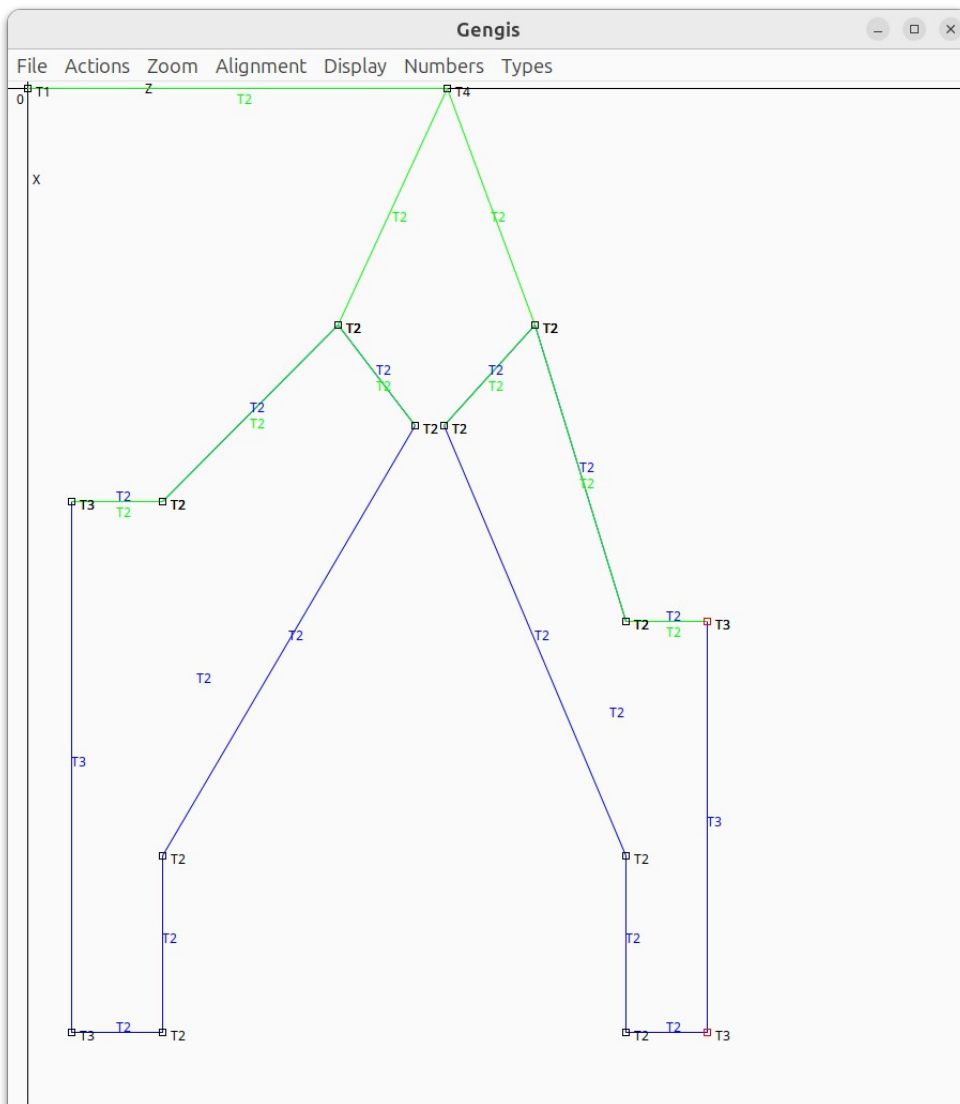


Figure 18: The types of nodes, panels, cable and edges of panels are displayed using Types, Point Types, Panel Panels, Edge Types and Cable Types.

11. In order to created the seams between the components, links have to be defined. Do **Actions**, **Create Links**. Once clicked the closest node is selected. Two nodes have to be selected for a link (Figure 19).

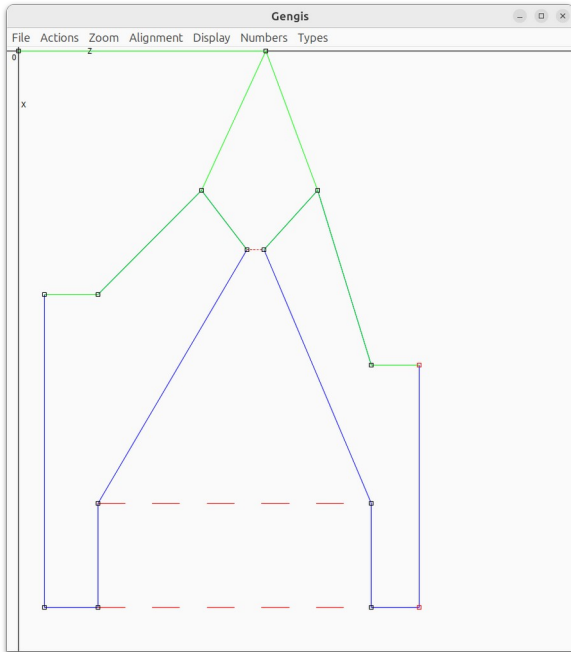


Figure 19: Do Actions, Create Links in order to link and to seam the components. The links appears in red dotted lines.

12. The dimensions X, Y And Z in ./gengis are in pixel. When the file is saved (File, Save), *.don file expects meter dimensions not pixel one. Because the screen has a resolution of around 1000pixel on height, that means that the structure would have a length of around 1000m. That's too large. In order to adjust meter to pixel do **Zoom, Set Zoom pixel/m** (Figure 20) and use a value such as the structure has a more reasonable length.

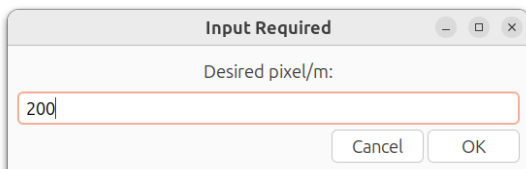


Figure 20: ./gengis has dimensions X, Y and Z in pixels when *.don file has dimensions in meters. The action Zoom, Set Zoom pixel/m allows to adjust the 2 dimensions.

13. Do **File, Save** in order to create a first level of don file, for example in **geometry.dat** file. This action create in the same time geometry.don file. *.dat files could be read by ./gengis when *.don files could be read by ./phobos. .
14. Verify the file geometry.don with ./phobos. Do **cd ~/femnet/programs** and launch **./phobos** in a terminal. Do **File, Create mdg file**, go in programs folder, select geometry.don. Do **Visualisation, contour_diamond, Visualisation, contour_cable_bar, Visualisation, twines_contour, Visualisation, twines_period**, choose **10** in order to have only one twine drawn on 10 (it is clearer) and **click** on the right mouse button. That gives Figure 21.

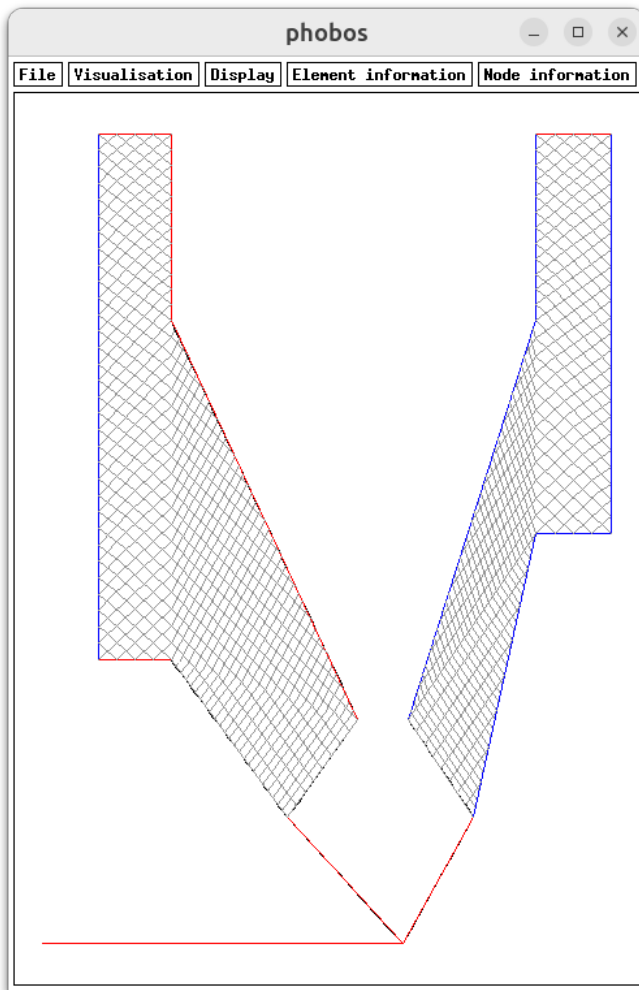


Figure 21: The file created by `./gengis` is verified using `./phobos`. Do **File**, **create_mdg_file**, **Visualisation**, **contour_diamond**, **contour_cable_bar**, **twines_contour**, **adjust twines_period** (here 10).

15. The don file is not fully completed: the characteristics of panels and cables have to be completed by hand, as well as environment such as towing speed, depth, node types...
16. The action **File**, **Load file** loads *.dat files which are in the folder of `./gengis` (`~/femnet/programs`).
17. **Zoom**, **Set Zoom** allows to adjust the zoom. Otherwise the **mouse wheel** has a zoom effect. The **left mouse** button is used for pan move.

`./tool_box.ods` and a simple case

In order to complete the previous `geometry.don`, it could be useful to use the spreadsheet `tool_box.ods`.

Open `tool_box.ods` with LibreOffice Calc.

1. For netting panel 1 the design gives material PE and Rtex 4000. Once in tool_box that gives a twine diameter of 0.00277m. This value is written in geometry.don for Hydrodynamic diameter (Figure 22).

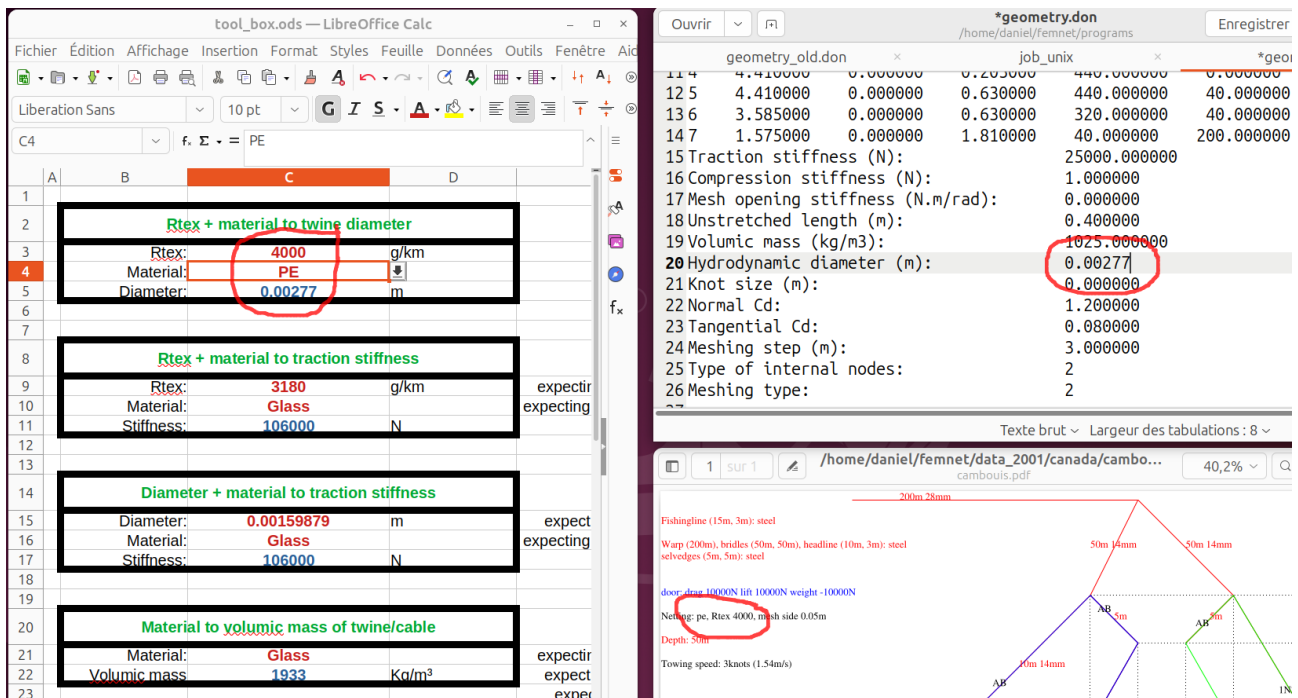


Figure 22: From Material (PE) and Rtex (4000) tool_box gives a diameter of 0.00277m which is indicated in the don file.

2. The mesh side indicated on the design (0.05m) has to be noted in don file (Figure 23).

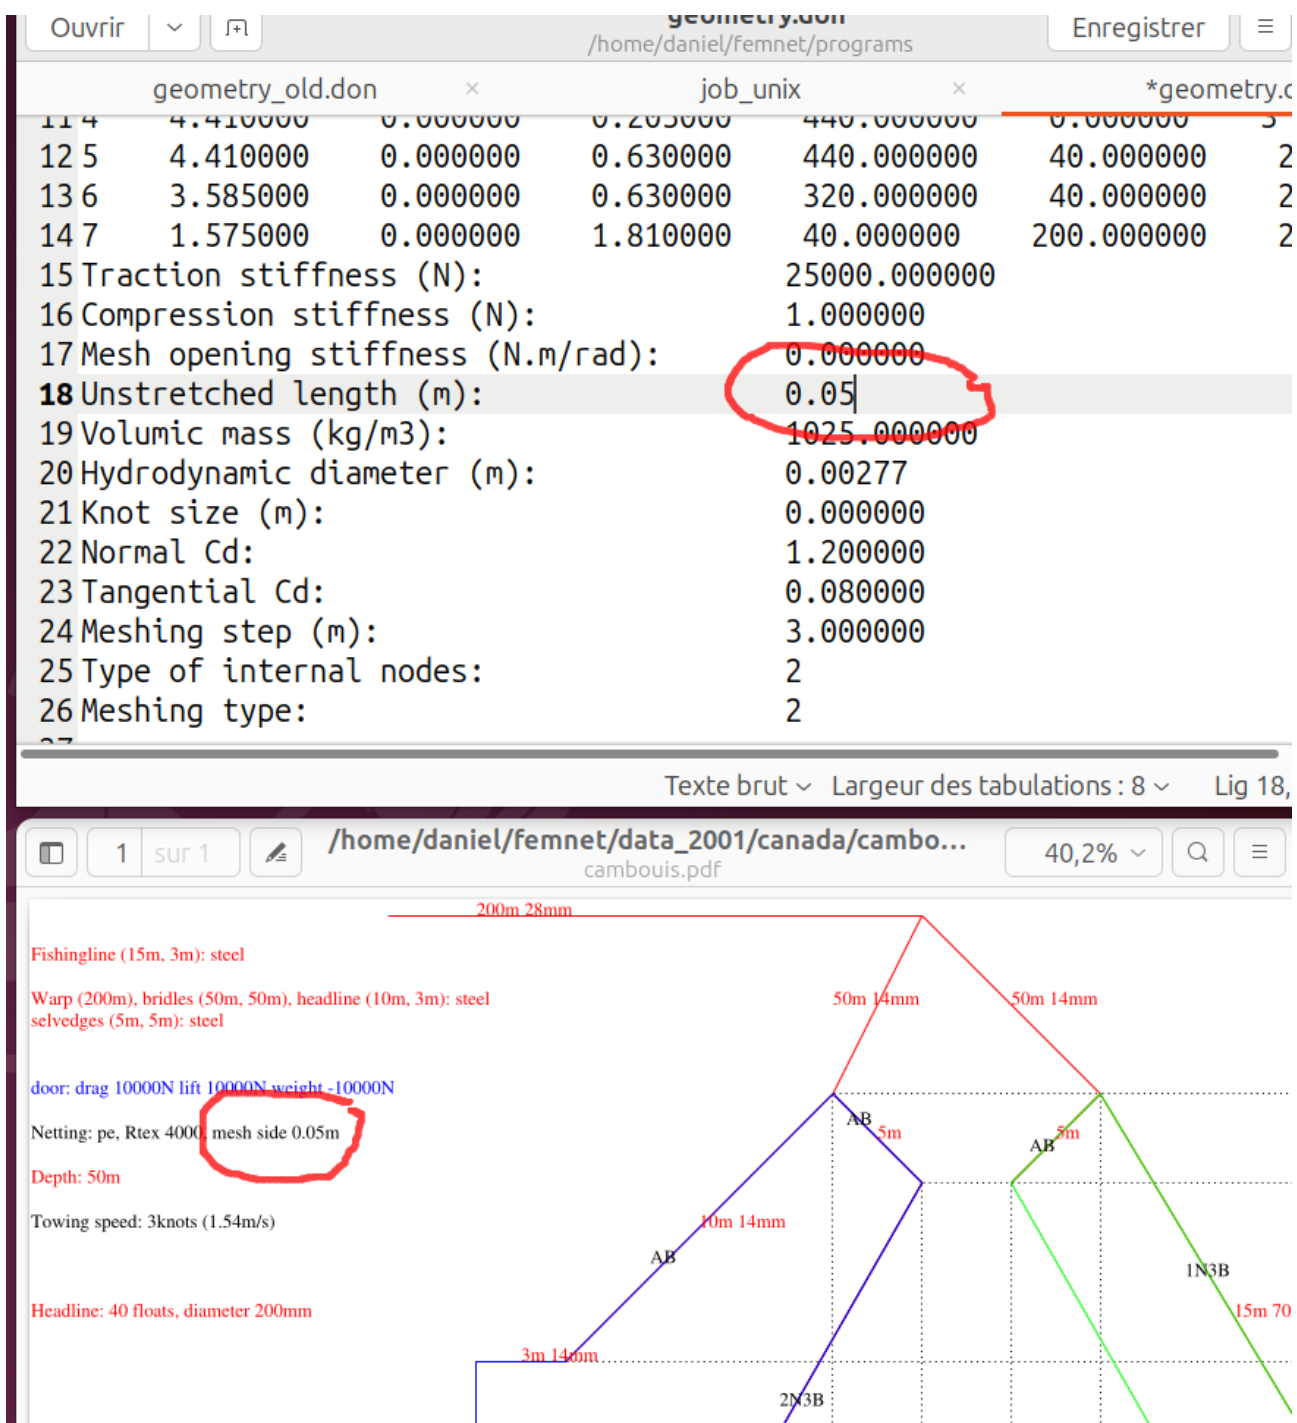


Figure 23: The mesh side determined in the design is reported in the don file

3. From Material and Rtex tool_box evaluates the traction stiffness of twines at 60870N. This value is reported in don file (Figure 24).

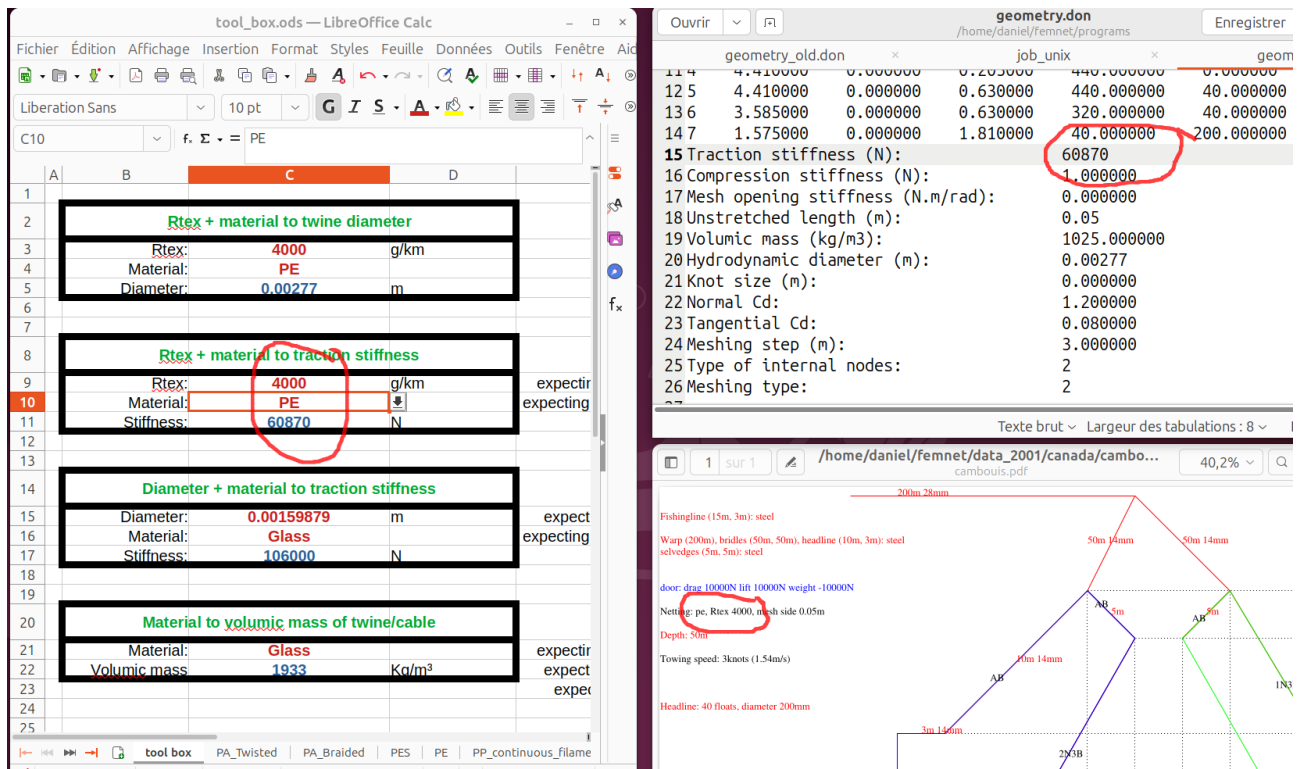


Figure 24: From Material (PE) and Rtex (4000) the traction stiffness is evaluated at 60870N, which is noted in don file.

4. The compression stiffness is assessed to 0N, which is a usual value for twines. In fact it is the force required to decrease the twine length by to its half (Figure 25).

geometry.don					
Ouvrir		/home/daniel/femnet/programs		Enregistrer	
geometry_old.don		job_unix		geometry	
11 4	4.410000	0.000000	0.203000	440.000000	0.000000
12 5	4.410000	0.000000	0.630000	440.000000	40.000000
13 6	3.585000	0.000000	0.630000	320.000000	40.000000
14 7	1.575000	0.000000	1.810000	40.000000	200.000000
15 Traction stiffness (N):				60870	
16 Compression stiffness (N):				0	
17 Mesh opening stiffness (N.m/rad):				0.000000	
18 Unstretched length (m):				0.05	
19 Volumic mass (kg/m3):				1025.000000	
20 Hydrodynamic diameter (m):				0.00277	
21 Knot size (m):				0.000000	
22 Normal Cd:				1.200000	
23 Tangential Cd:				0.080000	
24 Meshing step (m):				3.000000	
25 Type of internal nodes:				2	
26 Meshing type:				2	
27					

Texte brut ▾ Largeur des tabulations : 8 ▾ Lig 1

Figure 25: The compression stiffness could be assessed to 0N.

5. From the material (PE) the volumic mass could be assessed (956kg/m^3), cf. Figure 26.


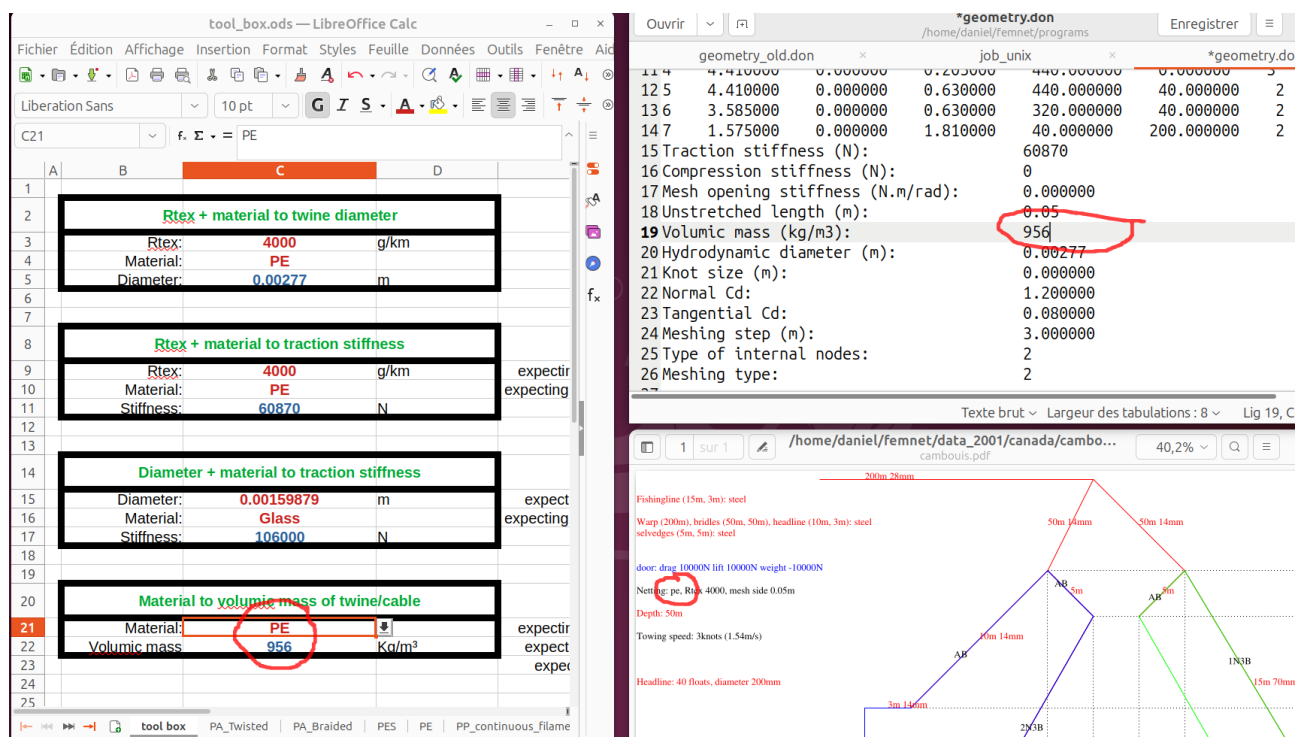


Figure 26: From the material (PE) tool_box proposes a volumic mass (956), which is noted in don file.

6. Because the netting panel 2 is of the same material of panel 1, the characteristics could be copied (Figure 27).

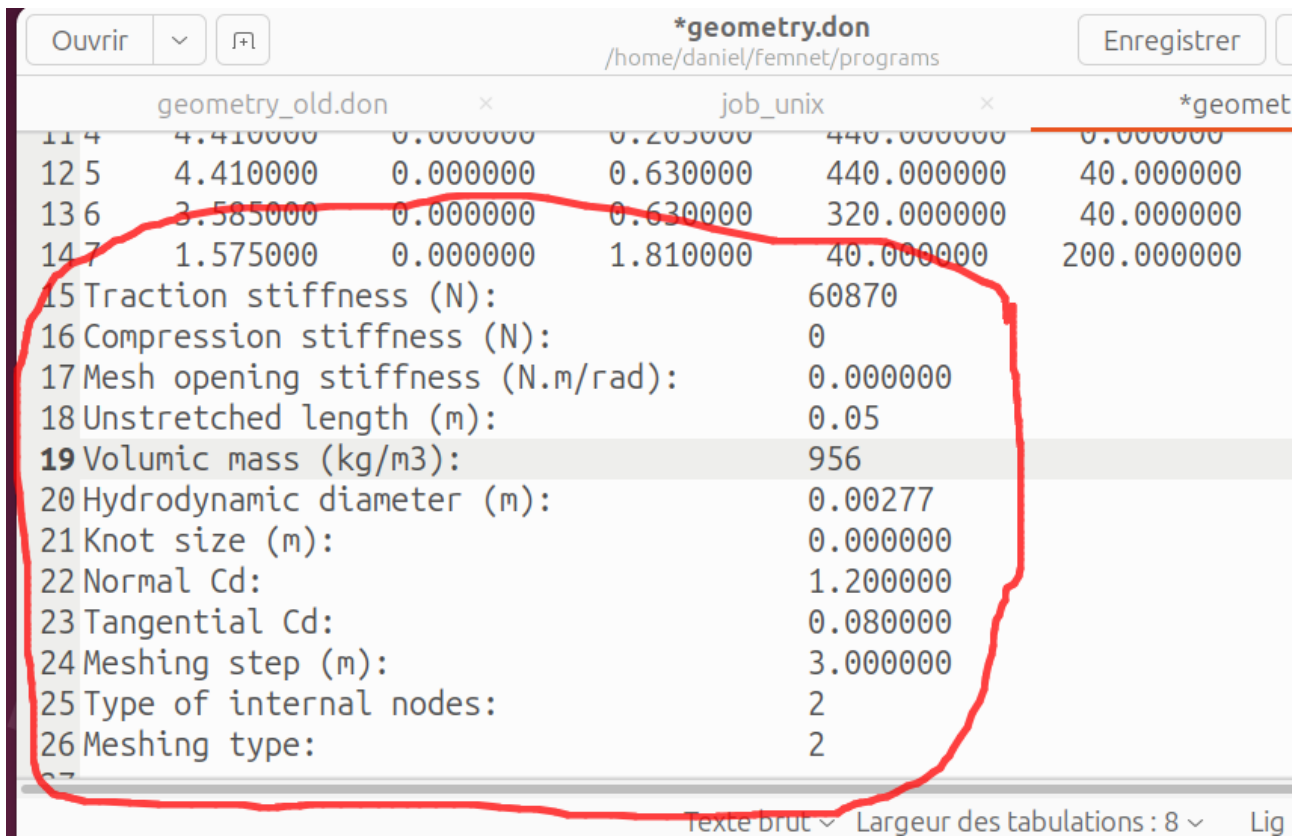

	geometry_old.don	×	job_unix	×	*geomet
11 4	4.410000	0.000000	0.203000	440.000000	0.000000
12 5	4.410000	0.000000	0.630000	440.000000	40.000000
13 6	3.585000	0.000000	0.630000	320.000000	40.000000
14 7	1.575000	0.000000	1.810000	40.000000	200.000000
15	Traction stiffness (N):		60870		
16	Compression stiffness (N):		0		
17	Mesh opening stiffness (N.m/rad):		0.000000		
18	Unstretched length (m):		0.05		
19	Volumic mass (kg/m3):		956		
20	Hydrodynamic diameter (m):		0.00277		
21	Knot size (m):		0.000000		
22	Normal Cd:		1.200000		
23	Tangential Cd:		0.080000		
24	Meshing step (m):		3.000000		
25	Type of internal nodes:		2		
26	Meshing type:		2		

Figure 27: The panel 1 and 2 have the same characteristics.

7. Due to the quite large number of cables and ropes ./gengis and the design are opened in the same time in order to see which cable/rope number corresponds in the design (Figure 28). Do in ./gengis **Numbers, Cable Numbers**.

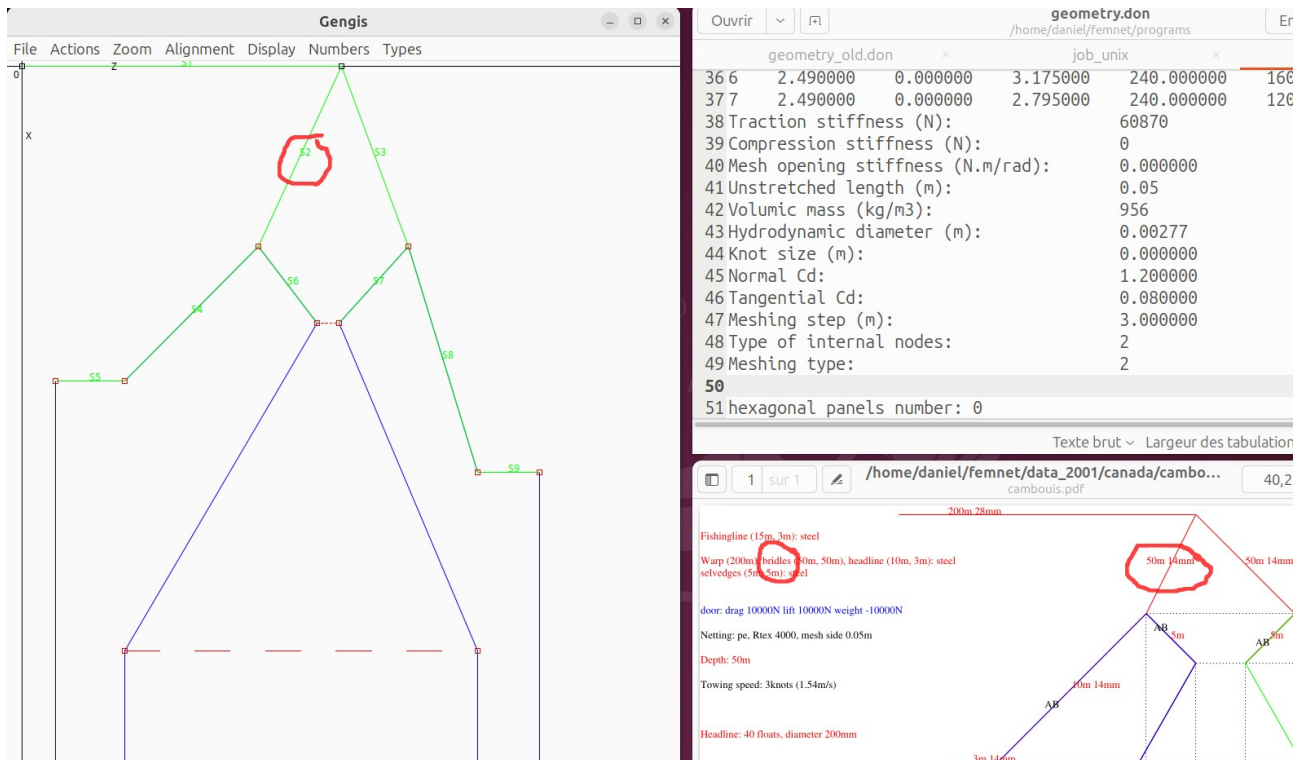


Figure 28: The cable 2 in gengis (left) corresponds to the top bridle in the design (right).

8. The length (200m) and the diameter (0.028) of the warp indicated on the design are reported on the don file (Figure 29).

```
Ouvrir  [icon] *geometry.don
/home/daniel/femnet/programs

geometry_old.don  x  job_unix  x

55 Cable: 1
56 Extremities no x y z type:
57 1 0.000000 0.000000 0.000000 1
58 2 0.000000 0.000000 1.960000 4
59 Traction stiffness (N): 62000000.000000
60 Compression stiffness (N): 1.000000
61 Unstretched length (m): 200
62 Volumic mass (kg/m3): 4800.000000
63 Hydrodynamic diameter (m): 0.028
64 Normal Cd: 1.800000
65 Tangential Cd: 0.080000
66 Bars number: 9
67 Type of internal nodes: 2
68
69 Cable: 2
70 Extremities no x y z type:
```

Fig

ure 29: The length and the diameter of the warp which are indicated on the design are reported in the don file.

9. The material and the diameter of the warp are indicated in the design. Tool_box assesses the traction stiffness to around 81000000N which is reported in the don file (Figure 30). The difference between the value calculated in tool_box (81279285) to the value reported in don file (81000000) is less than 0.4%. That means that the elongation of the warp due to the tension would be very similar between these 2 values.

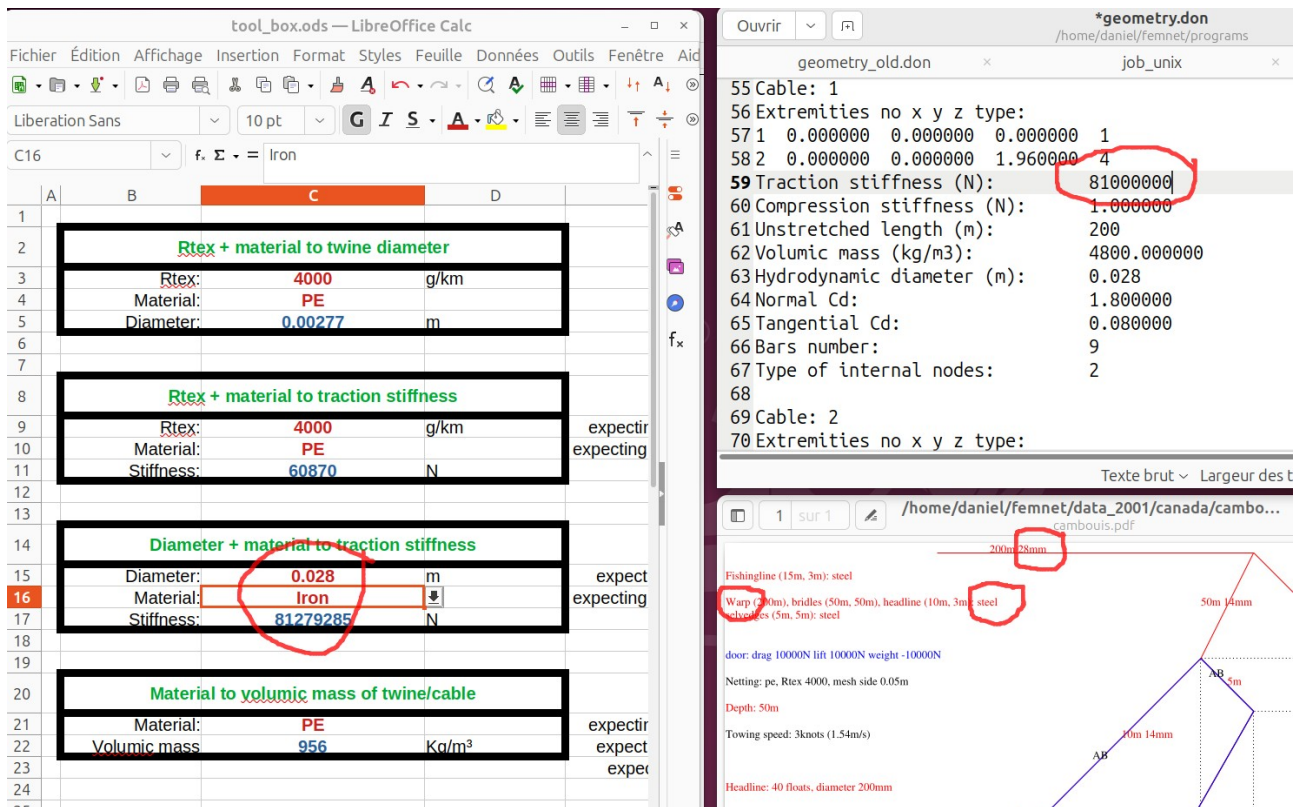


Figure 30: The material (steel) and the diameter (0.028m) gives a traction stiffness of 81279285N which can be rounded to 81000000N.

10. The compression stiffness could be assessed to 0N (Figure 31). That means that the cable has no resistance in compression, which is acceptable for such long cable.

```

Ouvrir  ▾  [icon]  *geometry.don
/home/daniel/femnet/programs

geometry_old.don  ×  job_unix

55 Cable: 1
56 Extremities no x y z type:
57 1  0.000000  0.000000  0.000000  1
58 2  0.000000  0.000000  1.960000  4
59 Traction stiffness (N): 81000000
60 Compression stiffness (N): 0
61 Unstretched length (m): 200
62 Volumic mass (kg/m3): 4800.000000
63 Hydrodynamic diameter (m): 0.028
64 Normal Cd: 1.800000
65 Tangential Cd: 0.080000
66 Bars number: 9
67 Type of internal nodes: 2
68
69 Cable: 2
70 Extremities no x y z type:

```

Figure 31: The compression stiffness is assessed at 0N.

11. The volumic mass of the warp could be evaluated with toolbox and reported in don file (Figure 32).

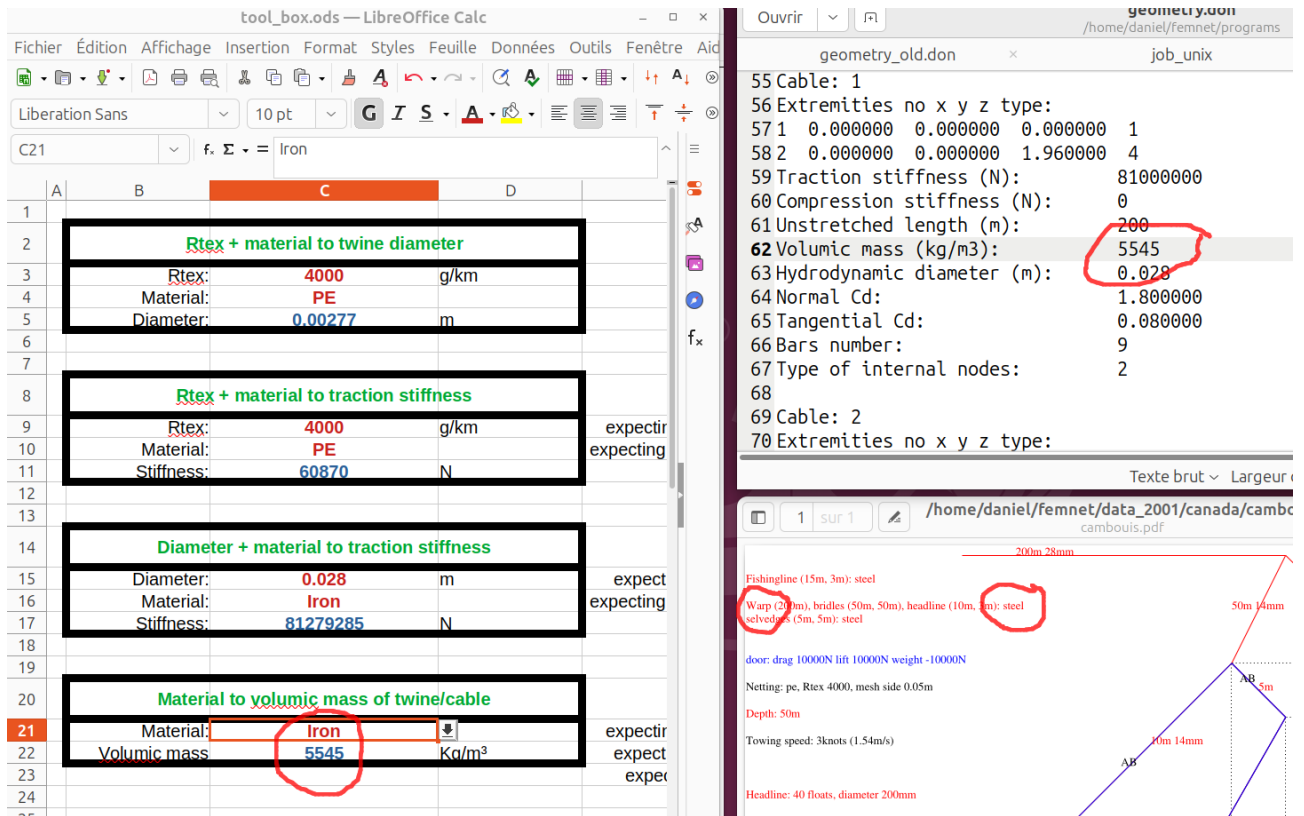


Figure 32: The material of the warp (steel) has a volumic mass assessed with tool_box and reported in don file.

12. This has to be done for all cables and ropes.

13. The types of nodes have to be determined. Type 1 corresponds to the boat. In the present case the node with this type is fixed. That is determined with the line Displacement along X, Y and Z at 1, 1 and 1 (Figure 33).

```
Ouvrir  geometry.don  Enregistrer
/home/daniel/femnet/programs
job_unix  x  geometry.don

220
221 Number of types of nodes: 4
222
223 No du type: 1
224 Mass X,Y,Z (kg): 0.000000 0.000000 0.000000
225 Added mass X,Y,Z (kg): 0.000000 0.000000 0.000000
226 Length X,Y,Z (m): 0.000000 0.000000 0.000000
227 Drag coefficient X,Y,Z: 1.200000 1.200000 1.200000
228 External forces X,Y,Z (N): 0.000000 0.000000 0.000000
229 Displacement X,Y,Z: 1 1 1
230 Limits X,Y,Z (m): 0.000000 0.000000 0.000000
231 Limits sens X,Y,Z: 0 0 0
232 Symetry X,Y,Z: 0 0 0
233
234 No du type: 2
235 Mass X Y Z (kg): 0.000000 0.000000 0.000000
```

Figure 33: When the Displacement X, Y, Z is 1, 1, 1 the displacement of a point with this type is not allowed, in other words it remains fixed.

14. Type 2 corresponds to the nodes for which there is no constraint. In the present case the node with this type is free to move. That is determined with the line Displacement along X, Y and Z at 0, 0, and 0 (Figure 34).

*geometry.don				
/home/daniel/femnet/programs				
Enregistrer				
job_unix	x			*geometry.don
230 Limits X,Y,Z (m):	0.000000	0.000000	0.000000	0.000000
231 Limits sens X,Y,Z:	0	0	0	
232 Symetry X,Y,Z:	0	0	0	
233				
234 No du type:	2			
235 Mass X,Y,Z (kg):	0.000000	0.000000	0.000000	0.000000
236 Added mass X,Y,Z (kg):	0.000000	0.000000	0.000000	0.000000
237 Length X,Y,Z (m):	0.000000	0.000000	0.000000	0.000000
238 Drag coefficient X,Y,Z:	1.200000	1.200000	1.200000	1.200000
239 External forces X,Y,Z (N):	0.000000	0.000000	0.000000	0.000000
240 Displacement X,Y,Z:	0	0	0	
241 Limits X,Y,Z (m):	0.000000	0.000000	0.000000	0.000000
242 Limits sens X,Y,Z:	0	0	0	
243 Symetry X,Y,Z:	0	0	0	
244				
245 No du type:	3			

Figure 34: When the displacement is 0, 0, 0 the nodes with this type can move during the equilibrium calculation.

- The depth is 50m, as it can be seen on the design. That means that the nodes of type 2 have a limit along Z at -50m and this limit is a floor (limits sens is 1) not a ceiling (limits sens is -1). cf. Figure 35.

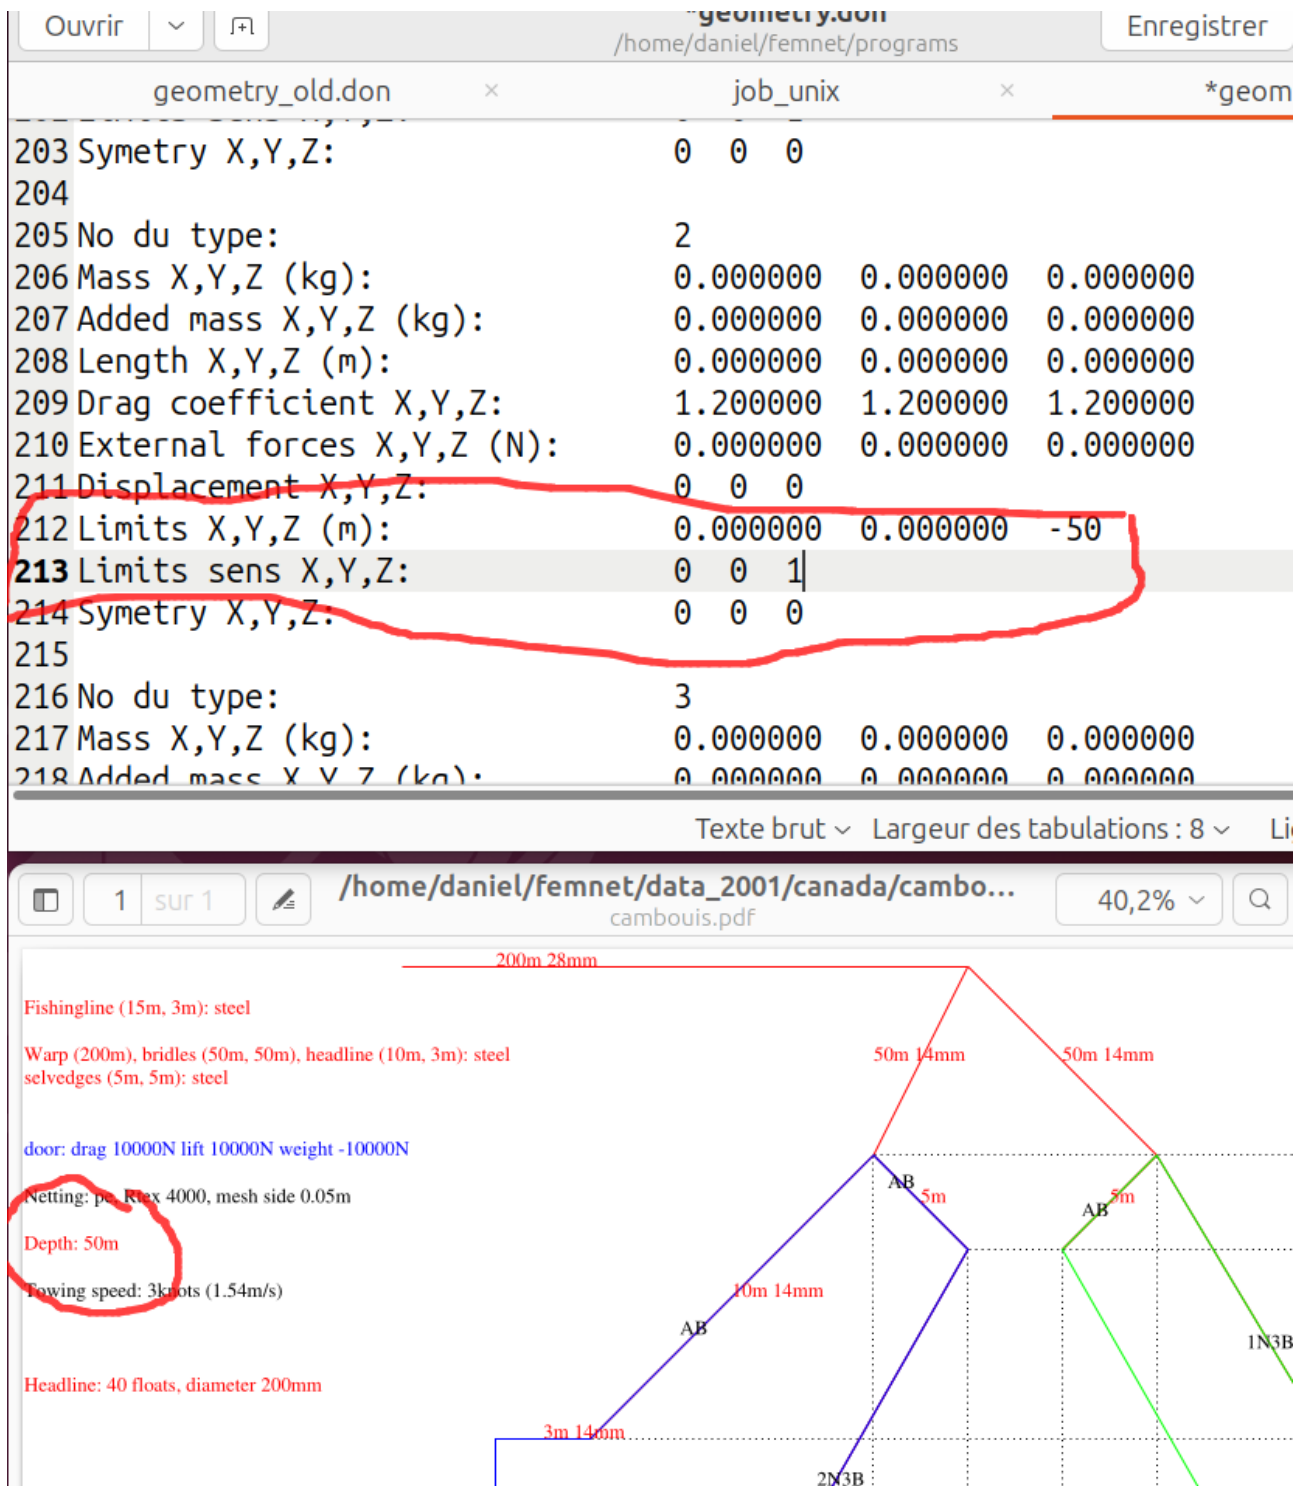


Figure 35: The sea bottom is at -50m of the free surface. In this case, in the don file, there is a limit at -50m and it is a floor because the limit sens is 1.

- The nodes on the symmetry plane XZ have the type 3. That is determined using Symmetry X, Y, Z 0 1 0. These nodes are also free to move that is determined using Displacement X,Y,Z: 0 0 0. This type indicates also a floor at -50m (Figure 36).

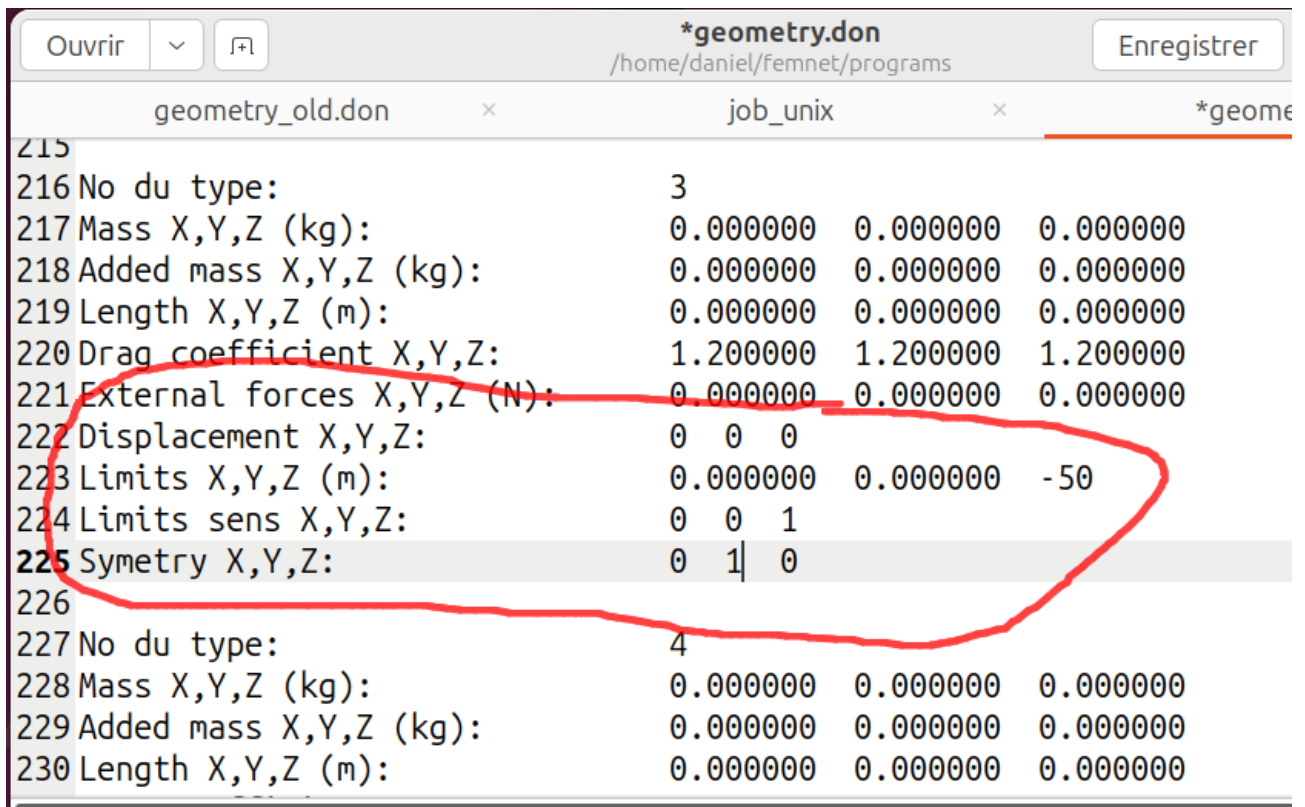


Figure 36: This type indicates a plane of symmetry XZ: Symetry X,Y,Z: 0 1 0.

17. The type 4 corresponds to the trawl door. These nodes are also free to move that is determined using Displacement X,Y,Z: 0 0 0. This type indicates also a floor at -50m. The external forces take into account here the drag force on the door (5000N along X axe), the lift force (5000N along Y axe) and the weight (-5000N along Z axe). cf. Figure 37.

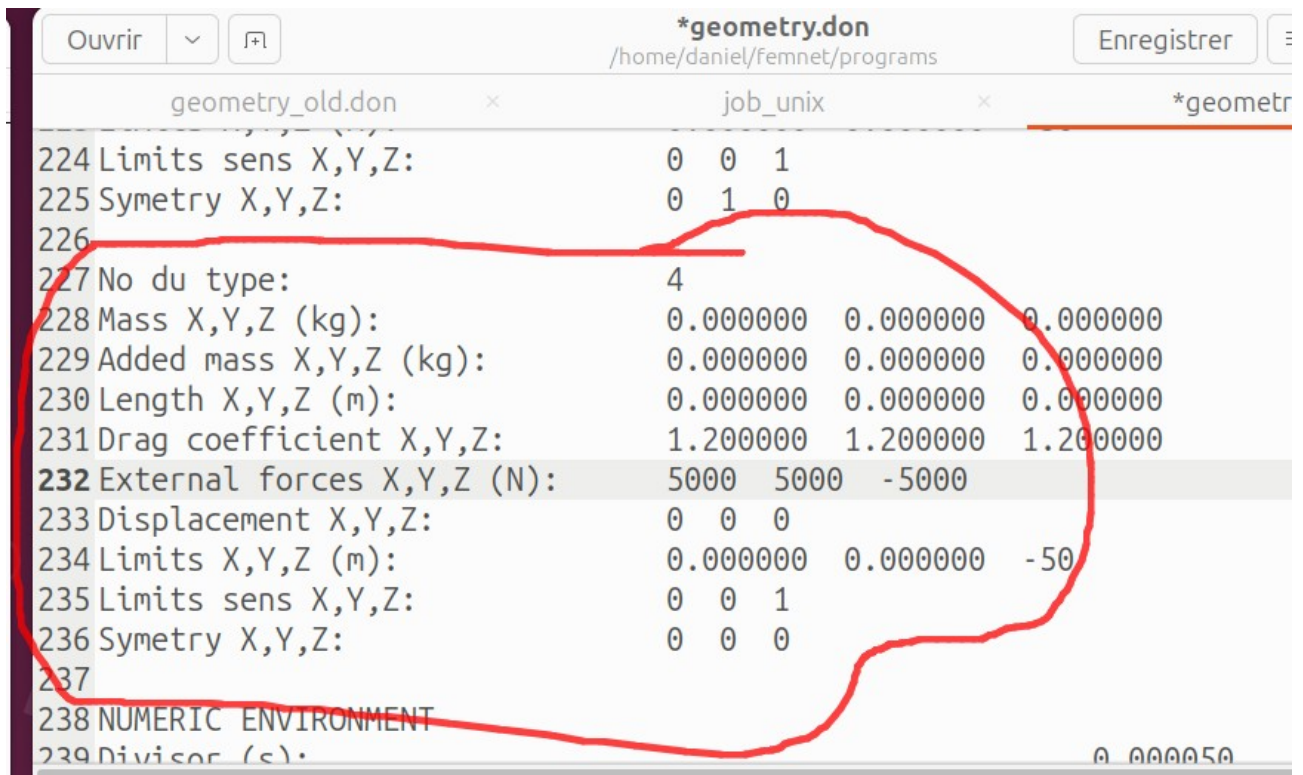


Figure 37: The type 4 corresponds to the trawl door. These nodes are also free to move that is determined using Displacement X,Y,Z: 0 0 0. This type indicates also a floor at -50m. The external forces correspond to the drag, lift and weight.

18. The convergence threshold is determined at 1N. That means that when the mean disequilibrium per node is less 1N the model suspects that the convergence is achieved (Figure 38).

19.

*geometry.don			
/home/daniel/femnet/programs			
Ouvrir	▼	⌂	Enregistrer
geometry_old.don	×	job_unix	×
			*geometry.
230 Length X,Y,Z (m):	0.000000	0.000000	0.000000
231 Drag coefficient X,Y,Z:	1.200000	1.200000	1.200000
232 External forces X,Y,Z (N):	5000	5000	-5000
233 Displacement X,Y,Z:	0	0	0
234 Limits X,Y,Z (m):	0.000000	0.000000	-50
235 Limits sens X,Y,Z:	0	0	1
236 Symetry X,Y,Z:	0	0	0
237			
238 NUMERIC ENVIRONMENT			
239 Divisor (s):			0.000050
240 Convergence threshold (N):			1
241 Displacement limit for each iteration (m):			10.000000
242 Maximal number of iterations:			10000
243			
244 DYNAMIC			
245 Dynamic: Time step (s):			0.100000

Figure 38: The convergence threshold is determined at 1N.

20. The current speed is 3knots which means 1.54m/s and the depth is 50m (Figure 39).

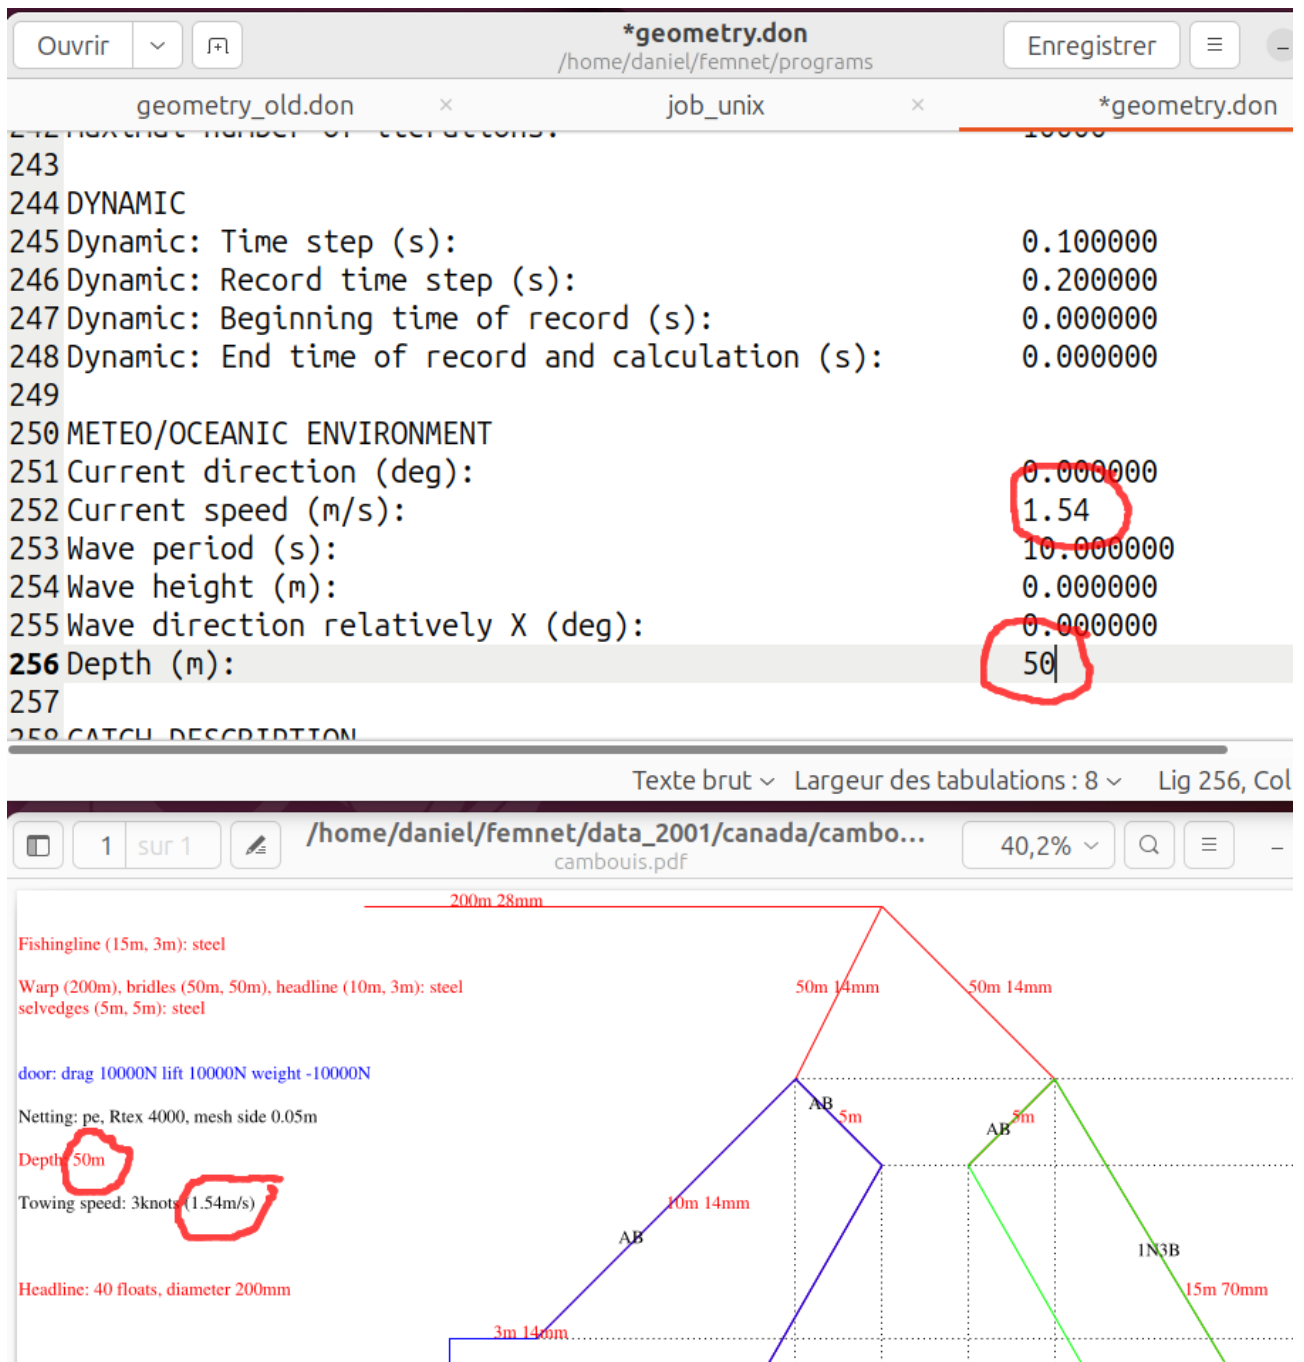


Figure 39: The current is 1.54m/s which means 3knots and the depth is 50m.

21. In order to link nodes that coincide the command input link 0.001 is used (Figure 40).

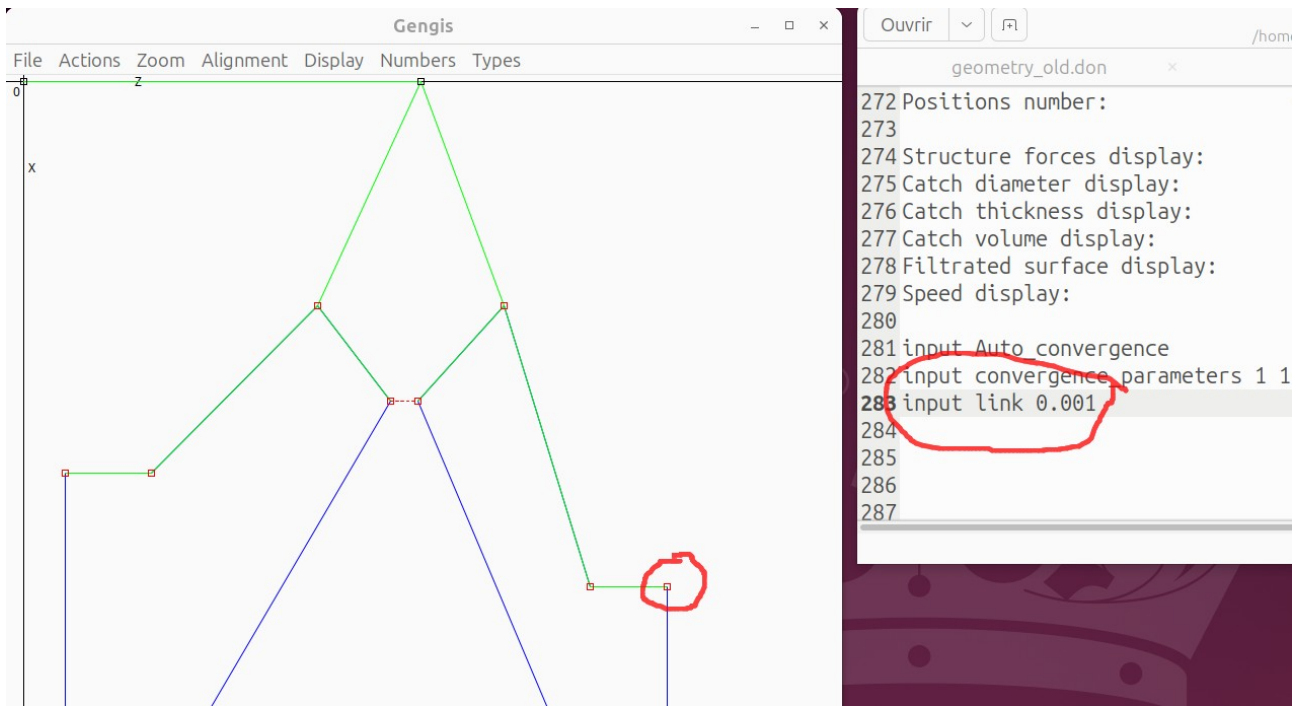


Figure 40: This command links automatically the nodes which are closer than 0.001m as noted on the right. The node of the green cable (on the left) and the node of the blue panel which are marked are at the same place. Because the distance between these 2 nodes is less than 0.001m they are linked.

22. In order to take into account the floats on the headline the 2 following commands are added:
input sphere_element 5 12 0.200 35.0 and **input sphere_element 4 28 0.200 35.0**. That determines that there are 12 floats on cable 5 and 28 on cable 4. The floats are spheres of diameter 0.2m and a buoyancy of 35N. cf. Figure 41.

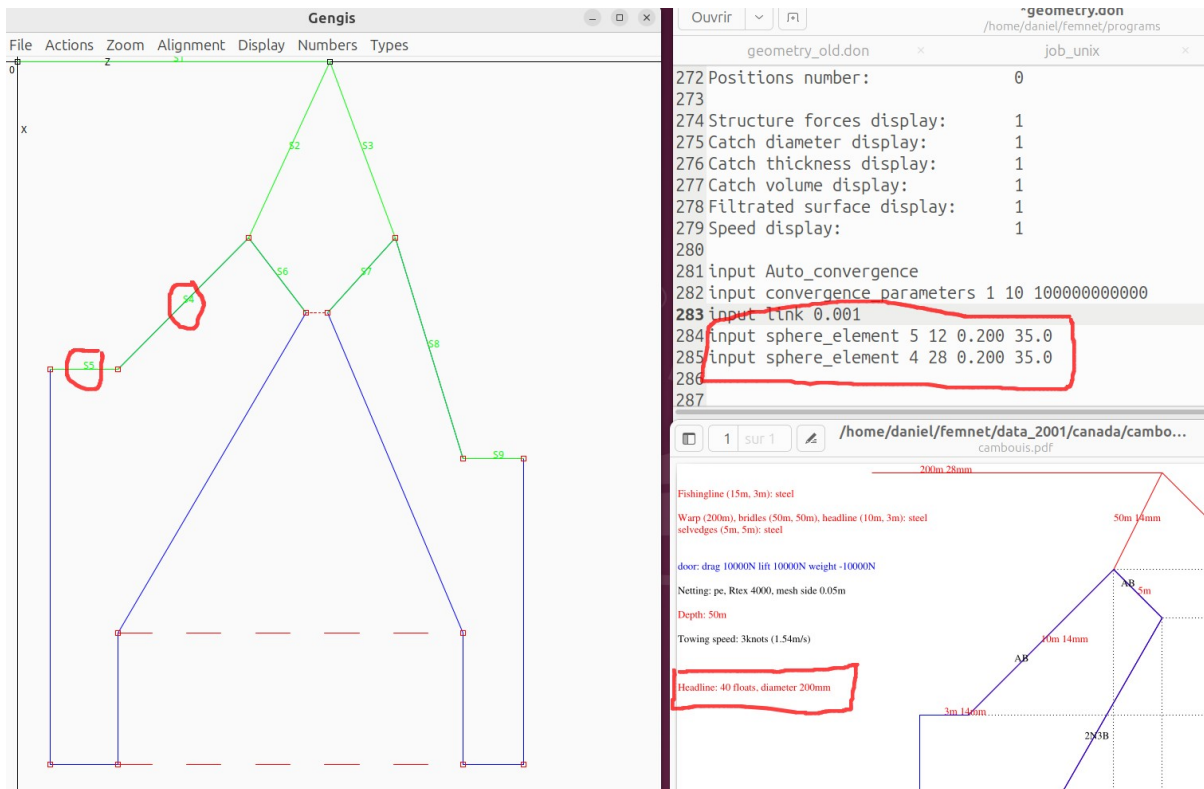


Figure 41: The headline is equipped of 40 floats of diameter 0.2m (bottom) that leads to 2 commands (top right) which defines the cable which supports the floats, the number of floats, their diameter and buoyancy.

45. In order to take into account that the sea bottom moves with the current, the command input moving_bottom is added (Figure 42).

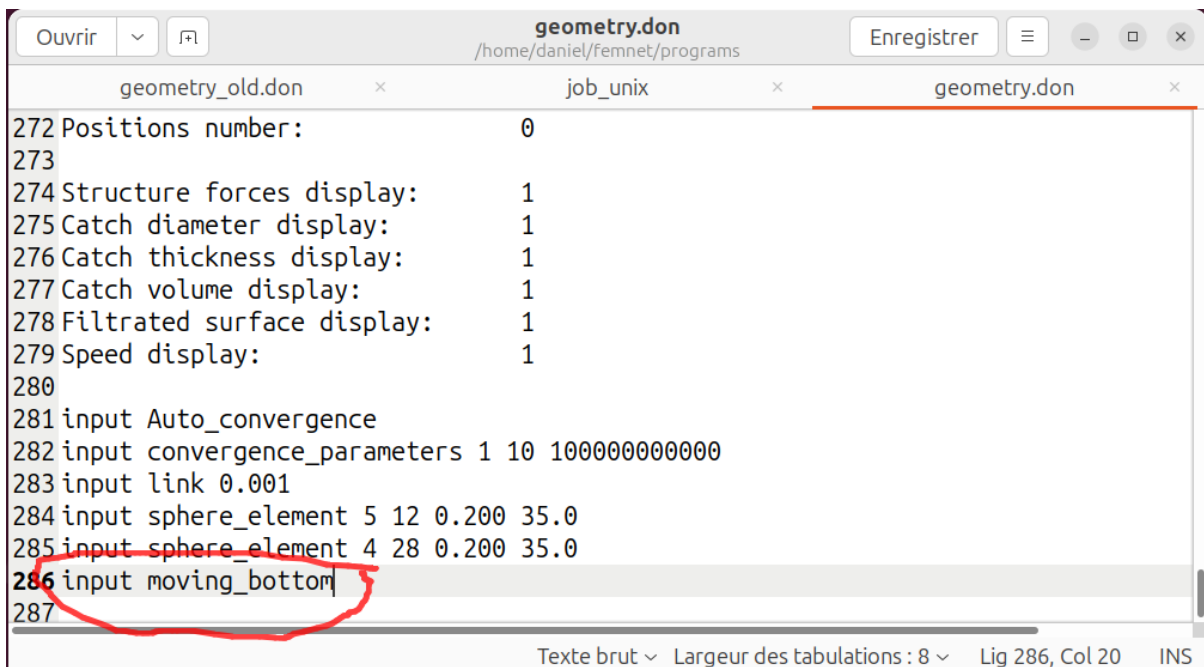


Figure 42: In order to take into account that the sea bottom moves with the current.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
fin numerotation_balls
panneau = 1 nb cote de maille u = 67200.000000 surface de fils = 18.614399
panneau = 2 nb cote de maille u = 40000.000000 surface de fils = 11.080000
Structure.surface_fils = 29.694399
Ball.nb 0
The file geometry.mdg is created
daniel@daniel-Latitude-E5540:~/femnet/programs$

```

Figure 43: Result of the command `./phobos geometry` in `~/femnet/programs`. The file `mdg` has been created as expected as it could be seen later.

45. In order to verify the result. In `~/femnet/programs` do `./phobos geometry` (Figure 43) followed by `./unix geometry` (Figure 44).

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
1660      -5.6625      0.00566      3.7261  0.00387      9e+02
1670       4.1862       0.00447      2.8449  0.00299      9e+02
1680       3.3381       0.00357      2.2005  0.00233      9e+02
1690      -3.2082       0.00537      1.6227  0.00338      4e+02
1700       1.5421       0.00336      0.9651  0.00206      4e+02
1700       1.5421       0.00336      0.9651  0.00206      4e+02

file geometry.sta
maximal diameter of the catch (m)      :      0.000
thickness of the catch (m)             :      0.00000000
effective volume of the catch (m3)     :      0.00000000
current amplitude (m/s)                 :      1.540
filtered surface (m2)                   :     -33.34

daniel@daniel-Latitude-E5540:~/femnet/programs$

```

Figure 44: Result of the command `./unix geometry` in `~/femnet/programs`. The convergence has been reached in 1700 iterations.

46. To verify the simulation, do in a terminal in a) `~/femnet/programs ./batz`, File, load_final_file, choose geometry, Visualisation, `u_twines`, Visualisation, `v_twines`, Visualisation, cable/bar_contour, change the rotation view with the middle mouse button in the 2 cursors close the figure (Figure 45).

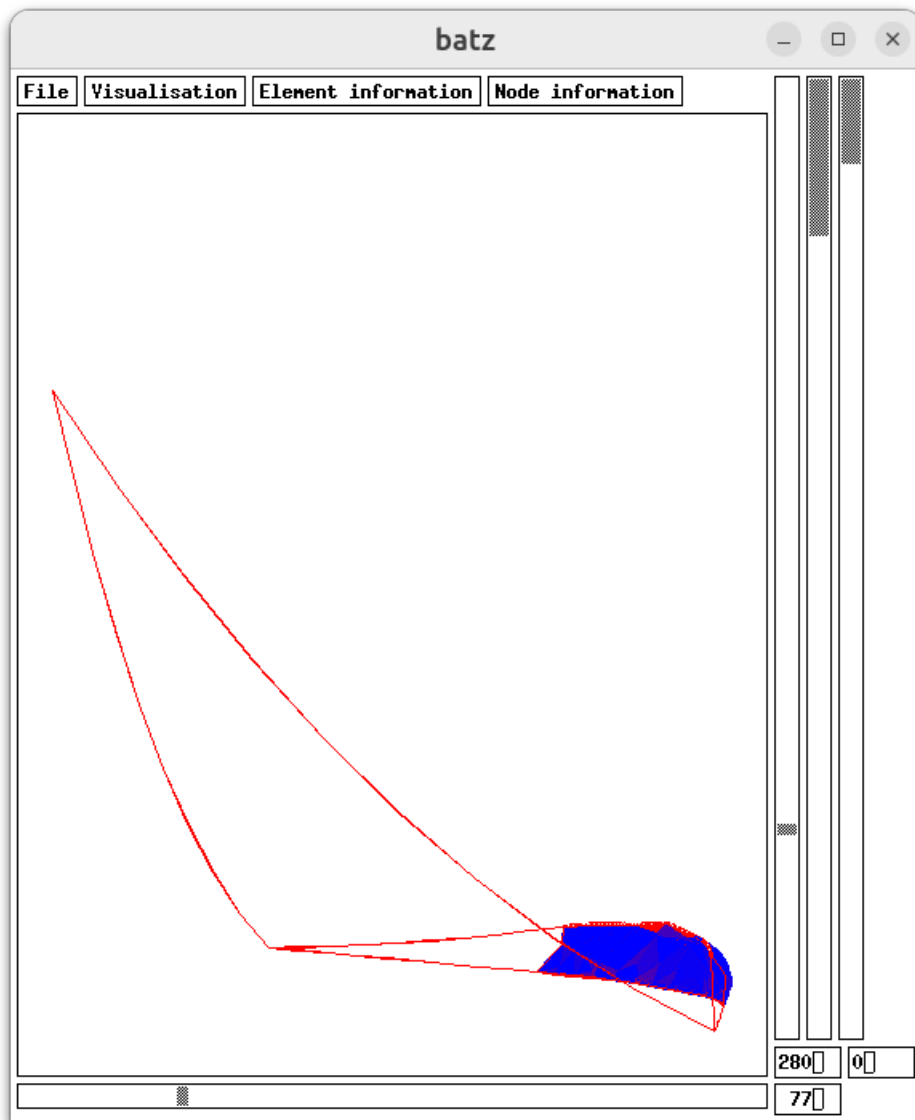


Figure 45: Result of `./batz` in `~/femnet/programs` with `Visualisation`, `u_twines`, `v_twines` and `cable/bar_contour`.


`./phobos`

2 ways to use phobos:

- The first way:

In a terminal run the commands :

```
cd ~/femnet/programs
./phobos
```

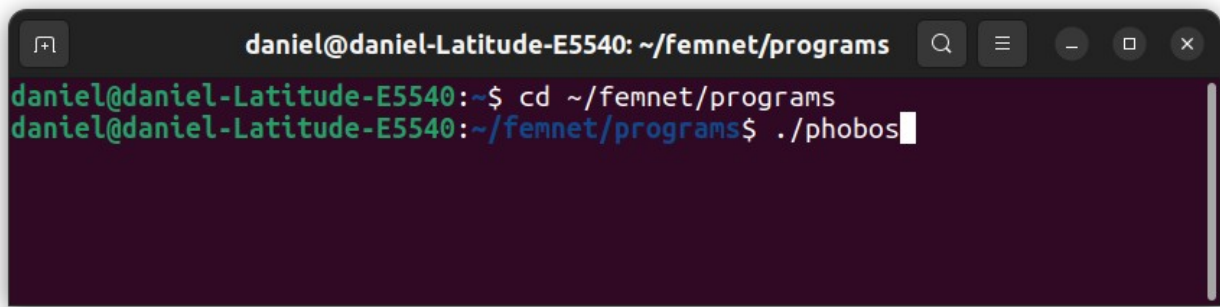A terminal window with a dark background. The title bar shows 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs'. The second command is './phobos', followed by a cursor. The window has standard Linux window controls (minimize, maximize, close) and a search icon.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos
```

Figure 46: Commands for phobos.

You get the Figure 47.

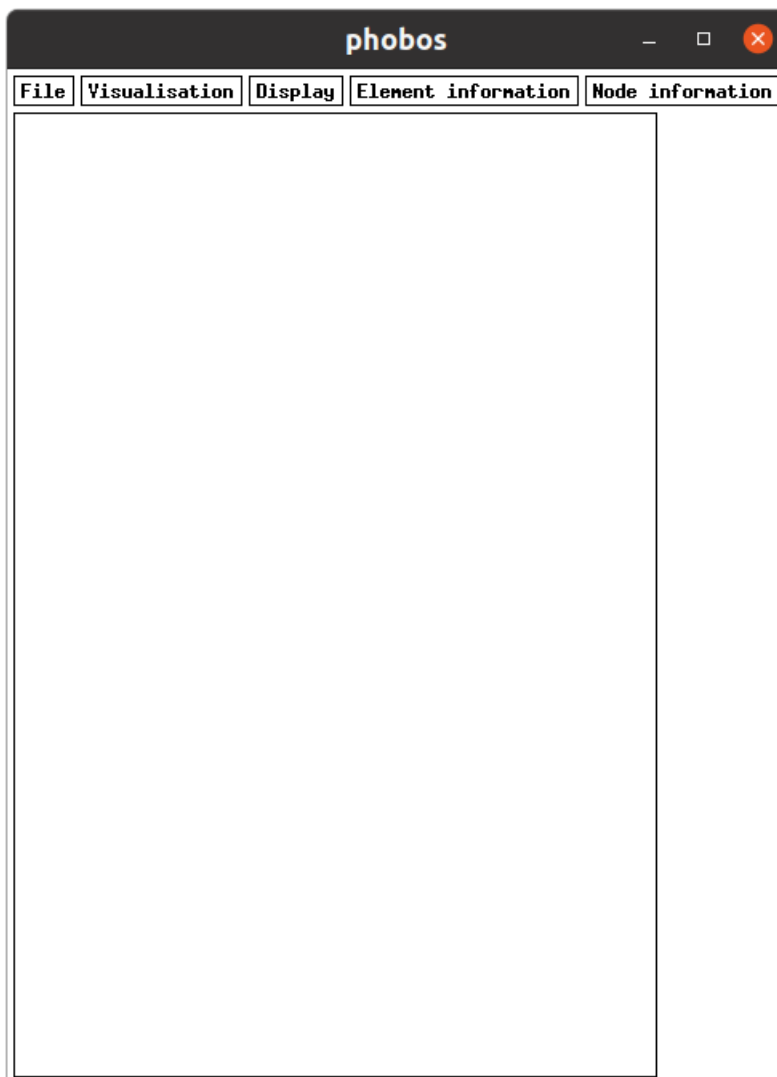


Figure 47: Window of phobos.

The main commands are the following:

To load a *.don file, do: File, load_don_file.

To make *.mdg file compatible with the Finite Element Method calculation, do: File, Create_mdg_file and choose a *.don file.

To display the diamond mesh panels, do: Vizualisation, contour_diamond.

To display the cables and bars, do: Vizualisation, contour_cable_bar.

To display the twines in the panels, do: Vizualisation, twines_contour.

If the number of twines is too large and you want to display 1 twine on 10, do: Vizualisation, twines_periods, 10.

To displayed the inner and outer side of the netting, do Vizualisation, orientation_xy.

This last point is in relation with a catch in the netting. The catch creates a pressure on the inner side of the netting. To change the orientation of the netting (inner in place of the outer side), the V coordinates in *.don file are replaced with their opposites (for example replace 10 by -10).

To display the links between components, do: Display, link_number.

To display the type of the nodes, do: Node information, node_type,.

- The second way:

In a terminal run the commands :

```
cd ~/femnet/programs
```

```
./phobos ~/femnet/data_2001/readme/lpelagic_trawl/s1
```


This command creates directly the s1.mdg file from s1.don file, without using the graphical tool.

./unix

The equilibrium could be calculated when *.don file and *.mdg file exist. For calculating the equilibrium of s1, use the commands:

```
cd ~/femnet/programs
```


```
./unix ~/femnet/data_2001/readme/1pelagic_trawl/s1
```

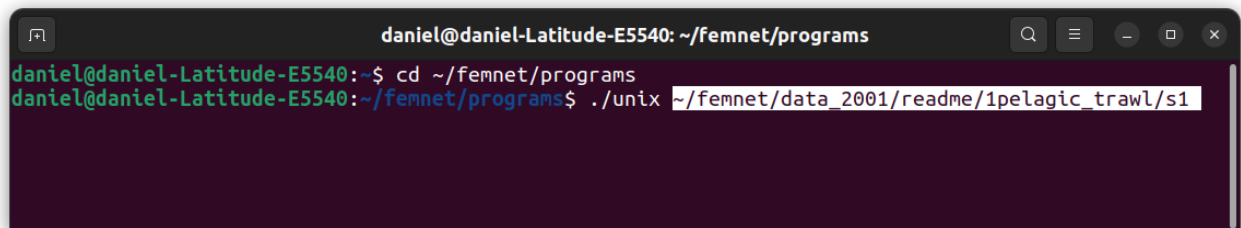

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/1pelagic_trawl/s1
```

Figure 48: Commands for calculating the equilibrium of s1, when s1.don and s1.mdg exist.

The result is displayed on the Figure 49 and Figure 50:

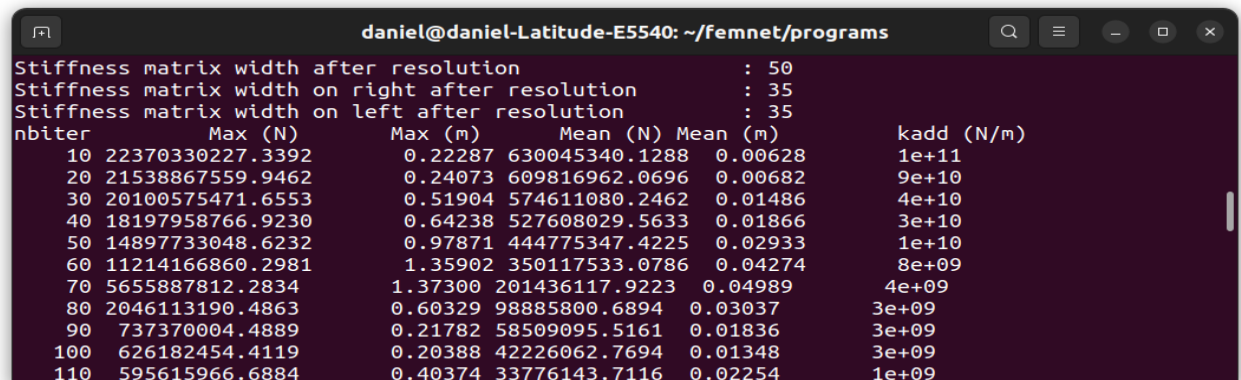

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
Stiffness matrix width after resolution      : 50
Stiffness matrix width on right after resolution : 35
Stiffness matrix width on left after resolution : 35
nbiter      Max (N)      Max (m)      Mean (N) Mean (m)      kadd (N/m)
10  22370330227.3392      0.22287  630045340.1288  0.00628      1e+11
20  21538867559.9462      0.24073  609816962.0696  0.00682      9e+10
30  20100575471.6553      0.51904  574611080.2462  0.01486      4e+10
40  18197958766.9230      0.64238  527608029.5633  0.01866      3e+10
50  14897733048.6232      0.97871  444775347.4225  0.02933      1e+10
60  11214166860.2981      1.35902  350117533.0786  0.04274      8e+09
70  5655887812.2834      1.37300  201436117.9223  0.04989      4e+09
80  2046113190.4863      0.60329  98885800.6894  0.03037      3e+09
90  737370004.4889      0.21782  58509095.5161  0.01836      3e+09
100 626182454.4119      0.20388  42226062.7694  0.01348      3e+09
110 595615966.6884      0.40374  33776143.7116  0.02254      1e+09
```

Figure 49: Iterations due to the calculation of the equilibrium of s1.

In Figure 49:

- the first column gives the iteration number,
- the second the maximal disequilibrium (N) per coordinate,
- the third the maximal displacement per coordinate (m),
- the fourth the mean disequilibrium (N) per node,
- the sixth the mean displacement (m) per node,
- the seventh the additional stiffness (N).

In the line of `s1.don` `input convergence_parameters 1 10 100000000000` the period of display is 10, as visible on the first column of Figure 49. This line indicates also that the added stiffness is initiated at 100000000000, as visible on the sixth column of Figure 49. This added stiffness varies on Figure 49 due to the line `input Auto_convergence` of `s1.don`.

```

1550      -133.3249      -0.00533      4.0093  0.00167      3e+01
1560       -8.5597      -0.00147      0.2593  0.00042      3e+01
1570       -0.2149      -0.00039      0.0091  0.00010      3e+01
1570       -0.2149      -0.00039      0.0091  0.00010      3e+01

file /home/daniel/femnet/data_2001/readme/1pelagic_trawl/s1.sta
PELAGIC TRAWL      :      0
Boat to door distance :      200.03
Boat Z force      (N):     -20291
Boat X force      (N):      32792
Warp tension      (N):      36057
Bottom bridle tension (N):      6675
Top bridle tension  (N):      16803
Head line immersion (m):     -125.4
Bottom line immersion (m):    -132.9
Door immersion      (m):     -109.0
bottom drag along X (N) :      0.0000
catch drag along X (N)  :      0.0000
element drag along X (N) :      9512
surface drag along X (N) :     17679
total drag along X (N)  :     27192
forces on the structure along X Y and Z (N) :      32792      6372      -20291
maximal diameter of the catch (m) :      0.000
thickness of the catch (m) :      0.0000000
effective volume of the catch (m3) :      0.0000000
current amplitude (m/s) :      2.058
filtered surface (m2)   :     100.95

daniel@daniel-Latitude-E5540:~/femnet/programs$

```

Figure 50: End of iterations for the calculation of the equilibrium of `s1`. In this case, it requires 1570 iterations.

This Figure 50 shows that the equilibrium has been reached in 1546 iterations (This number of iterations is very dependant of the added stiffness of the line `input convergence_parameters 1 10 100000000000` of `s1.don` and of the line `input Auto_convergence`. The equilibrium is reached when the mean disequilibrium (fourth column) is less than 0.1N (the convergence threshold defined in the `*.don` file). The result is stored in the `*.sta` file.

./dyna

When ./unix is used for evaluating static equilibrium, ./dyna is used for evaluating dynamic equilibrium. Dynamic occurs when there are waves, hauling... in other words when the conditions vary with time.

./dyna requires to complete *.don file with parameters seen previously:

Time step (s, p. 20), record time step (s, p. 20), beginning time of record (s, p. 20), end time of calculation (s, p. 20), wave period (s, p. 20), wave height (s, p. 20), wave direction (deg°, p. 20), depth (m, p. 20).

In case of waves, ./dyna considers regular waves (not irregular waves). Usual parameters are that the end time of calculation is several times the wave period and the beginning time of record is the end time of calculation minus one or two wave periods.

The wave conditions (wave period (T), wave height (H) and depth (d)) could be displayed on Figure 51. The position where is located these conditions on this figure shows which model is adapted. Only the Airy wave model, the wave model of Stokes 2d order and the wave model of Stokes 3d order in deep waters can be used.

The Airy wave model is used when using (in *.don file) `input wave_model 1`.

The Stokes 2d order in intermediate and deep waters is used when using `input wave_model 2`.

The Stokes 3d order in deep waters is used when using `input wave_model 3`.

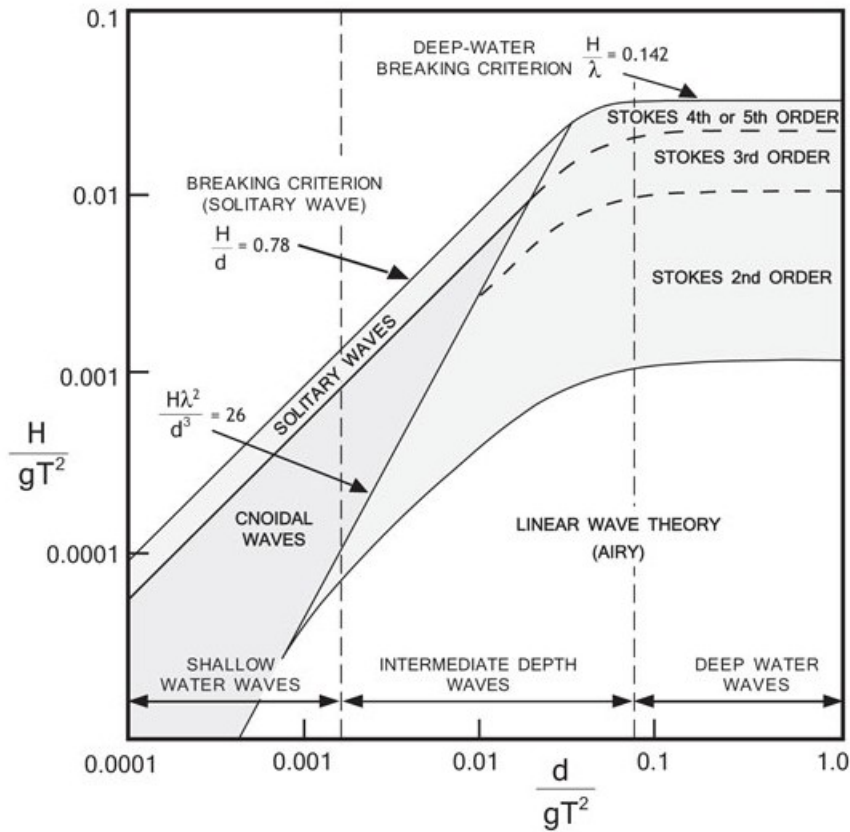



Figure 51: Wave models validity. The models which can be used in FEMNET are Airy model (linear wave theory), Stokes 2nd order in intermediate depth and deep waters, and Stokes 3rd order in deep waters. The valid wave model depends on H, T and d. H is wave height, T is wave period and d is depth .

./batz

To display the result use the commands:

```
cd ~/femnet/programs
```

```
./batz
```

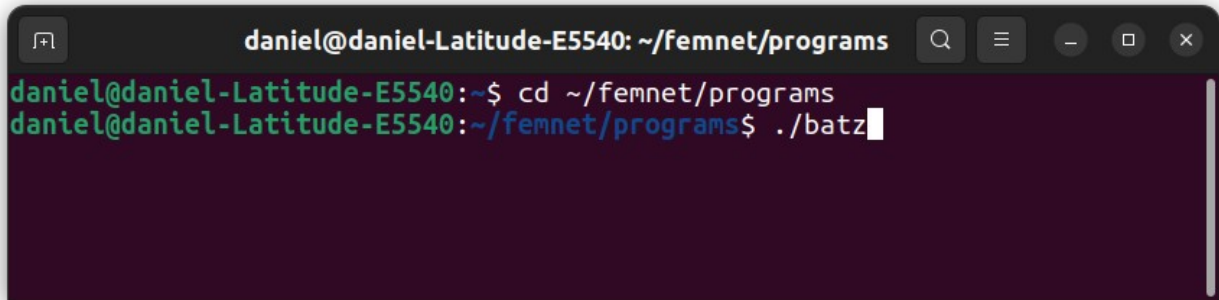A terminal window with a dark background. The title bar shows 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The terminal content shows two lines of command execution: 'daniel@daniel-Latitude-E5540:~\$ cd ~/femnet/programs' and 'daniel@daniel-Latitude-E5540:~/femnet/programs\$./batz'. The cursor is at the end of the second line.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./batz
```

Figure 52: Commands for batz. The tool used for displaying the result of calculation when *.don file, *.mdg file and *.sta file exist.

In the Figure 53 the structure is displayed. To display the structure, do:

- File, load_final_file, that loads the equilibrium shape of the structure.
- Vizualisation, cable/bar_contour, u_twines, v_twines, that displays the cables and the twines of the netting.
- File, twine_period, 10, that displays only one twine on 10, in case of too many twines.

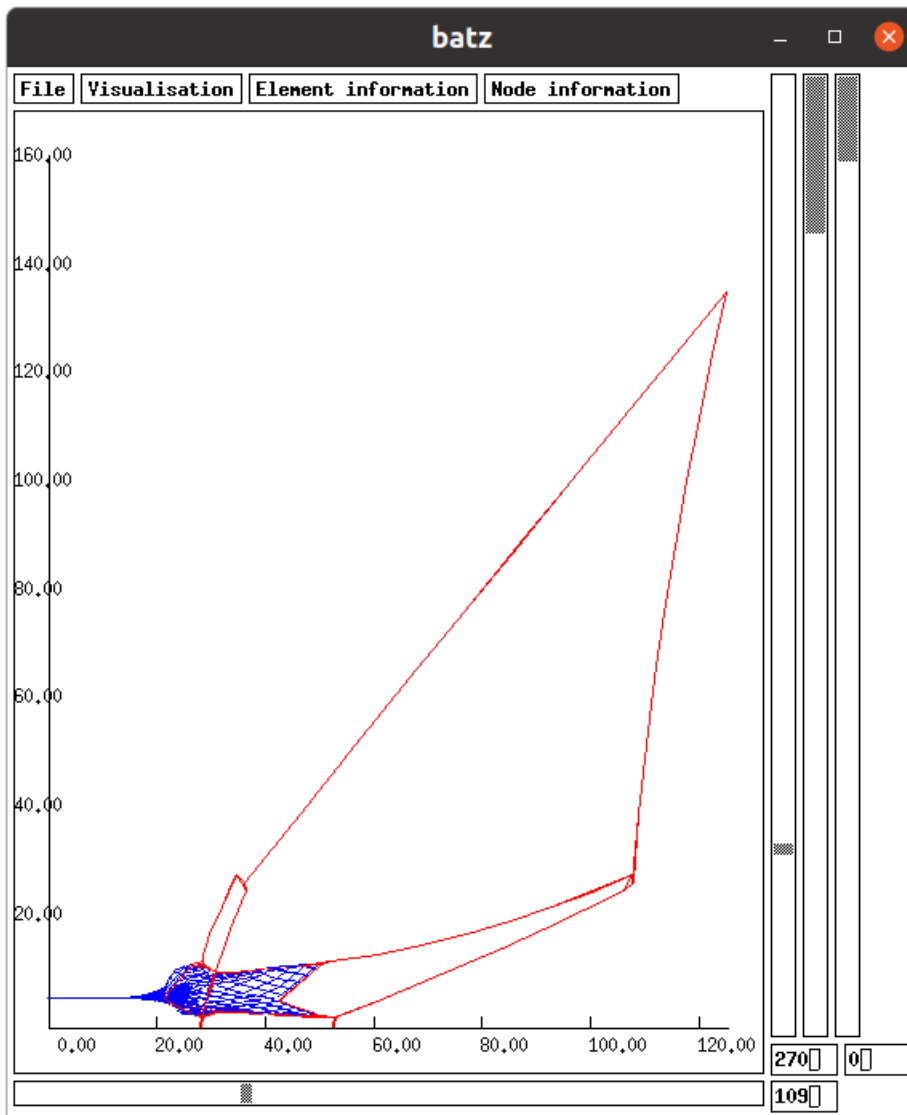


Figure 53: The pelagic trawl
 ~/femnet/data_2001/readme/1pelagic_trawl/s1 displayed with batz.

In Figure 53, the horizontal cursor and the left vertical cursor are for turning the structure.

The second vertical cursor defines a plane in front of which the netting is hidden. This works only when Visualisation, triangle_contour is selected.

The right vertical cursor is used for displaying dynamic calculation, if any.

Automatic creation of links

Another way to create links between points, is to place points in *.don file which have to be linked at the same position (X, Y and Z m). If they are at a distance (m) below a certain value, the points are automatically linked. To do that use at the end of the *.don file:

```
input link 0.01
```

In the previous line, all the points closer than 0.01m are automatically linked.

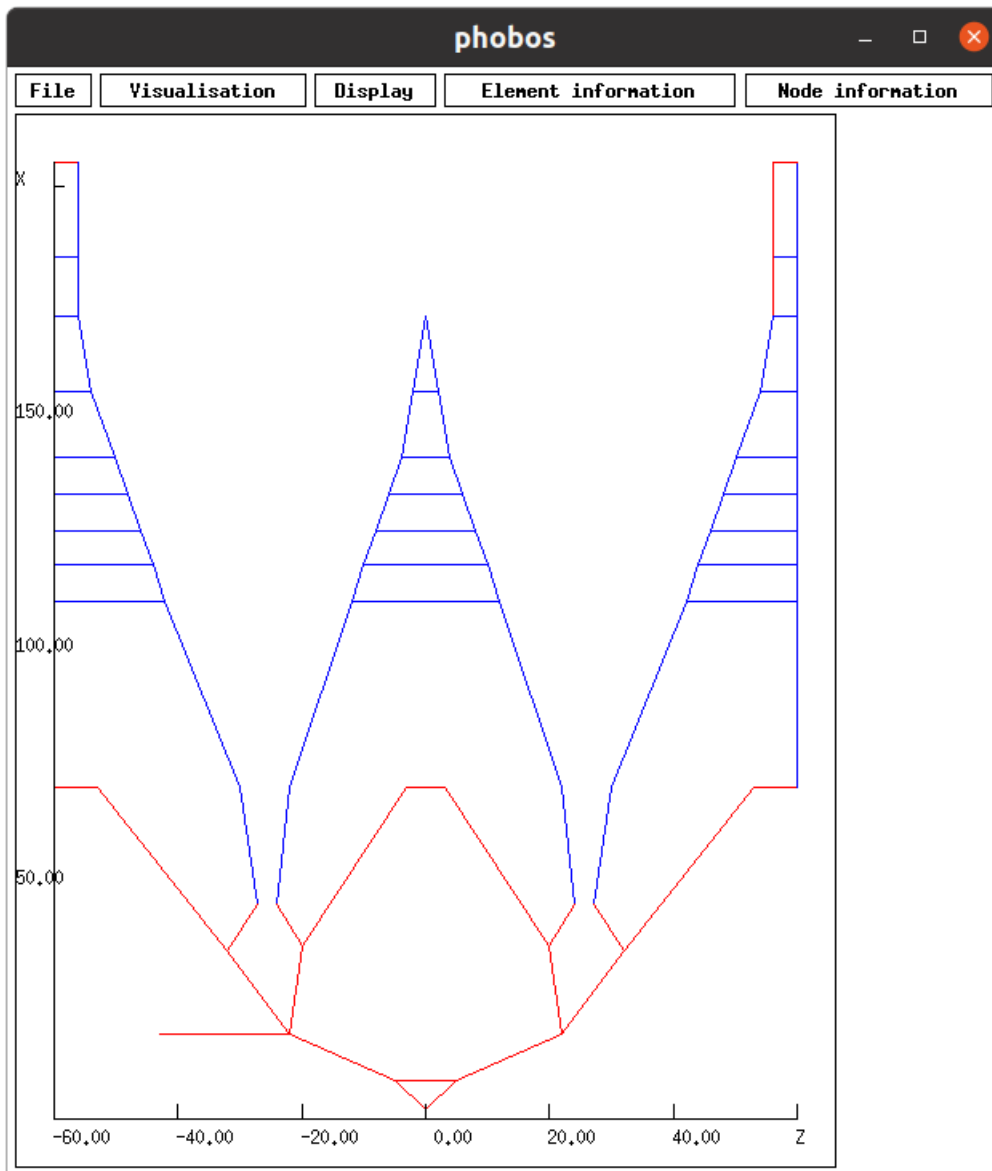


Figure 54: This design (`~/femnet/data_2001/readme/1pelagic_trawl/u1.don`) is identical to the one of figure 1. Here part of the links are automatically carried out using `input link 0.01` at the end of `u1.don`.

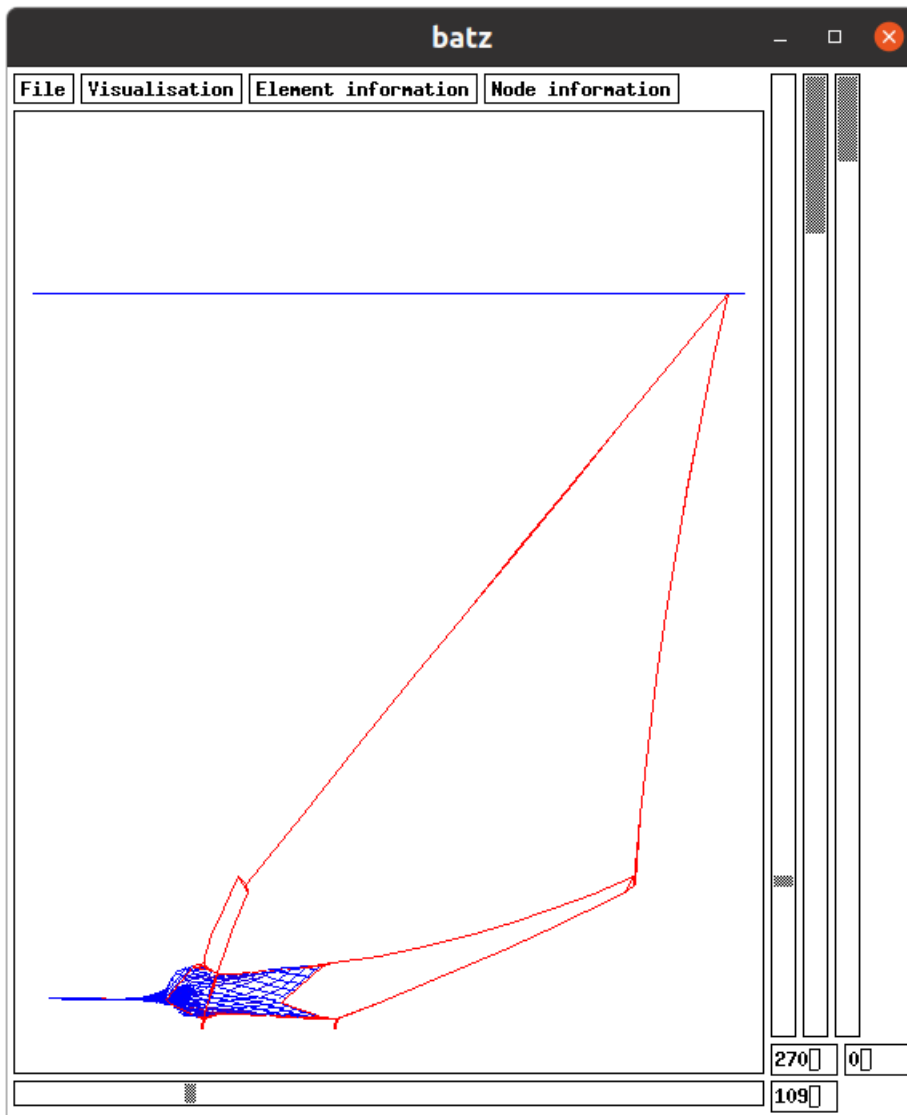


Figure 55: Shape of the pelagic trawl
~/femnet/data_2001/readme/1pelagic_trawl/u1. It is very similar to s1
trawl (Figure 53).

Refining the calculation


In order to refine the calculation of the equilibrium of the structure:

- Copy s1.don in s2.don,
- Replace in s2.don Meshing step (m): 27.000000 by Meshing step (m): 9.000000.

That leads to reduce the distance between numeric nodes created on netting panels. The user could also increase the number of bar per cable (see in *.don file `Bars number:` 9 for example, not done here).

It is worth to approximate the equilibrium of s2 using the equilibrium of s1. To do this, do:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/1pelagic_trawl/s2
~/femnet/data_2001/readme/1pelagic_trawl/s1
```

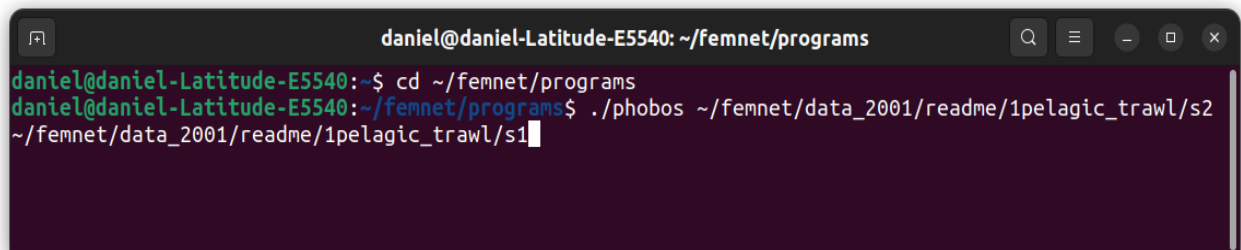A terminal window with a dark background and light text. The title bar reads 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The terminal shows the following commands and their output:

```
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/1pelagic_trawl/s2
~/femnet/data_2001/readme/1pelagic_trawl/s1
```

Figure 56: Phobos commands to generate s2.mdg and s2.sta from s2.don and s1.sta.

This command creates the file s2.mdg but also s2.sta which is an approximation of the equilibrium of the structure by using the equilibrium recorded in s1.sta. This approximation of s2.sta is done in order to accelerate the calculation of the equilibrium of s2.

```
cd ~/femnet/programs
./unix ~/femnet/data_2001/readme/1pelagic_trawl/s2
```

This command calculates the shape of the refined structure, and records the result is s2.sta.

The structure can be again refined. For that, the file s3.don is a copy of s2.don except that the meshing step of panels is reduced to 3m. Once s3.don is created. The command to create the s3.mdg and s3.sta is the following:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/1pelagic_trawl/s3
~/femnet/data_2001/readme/1pelagic_trawl/s2
```

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/1pelagic_trawl/s3
~/femnet/data_2001/readme/1pelagic_trawl/s2

```

Figure 57: Phobos commands to generate s3.mdg and s3.sta from s2.don and s2.sta.

To calculate the equilibrium of the refined structure and record the shape in s3.sta do:

```

cd ~/femnet/programs
./unix ~/femnet/data_2001/readme/1pelagic_trawl/s3

```

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/1pelagic_trawl/s3

```

Figure 58: Commands for calculating the equilibrium of s3.

This command gives:

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
750      0.0537      0.00383      0.0445  0.00323      1e+01
760      0.0326      0.00232      0.0269  0.00196      1e+01
770      0.0162      0.00187      0.0131  0.00157         8
774      0.0115      0.00133      0.0093  0.00112         8      778

file /home/daniel/femnet/data_2001/readme/1pelagic_trawl/s3.sta
PELAGIC TRAWL      :      0
Boat to door distance :      200.04
Boat Z force (N):    -20478
Boat X force (N):    33522
Warp tension (N):    36786
Bottom bridle tension (N): 7653
Top bridle tension (N): 16659
Head line immersion (m): -123.7
Bottom line immersion (m): -131.3
Door immersion (m): -107.7
bottom drag along X (N) :      0.0000
catch drag along X (N) :      0.0000
element drag along X (N) :      9368
surface drag along X (N) :     18555
total drag along X (N) :     27923
forces on the structure along X Y and Z (N) :      33522      6414      -20478
maximal diameter of the catch (m) :      0.000
thickness of the catch (m) :      0.0000000
effective volume of the catch (m3) :      0.0000000
current amplitude (m/s) :      2.058
filtered surface (m2) :      99.22

daniel@daniel-Latitude-E5540:~/femnet/programs$

```

Figure 59: End of iterations for the calculation of the equilibrium of s3. It requires 774 iterations. The figures are very comparable to those of s1 (Figure 50).

That means that the calculation is done in 774 iterations.

The result can be displayed with batz:

```
cd ~/femnet/programs  
./batz
```

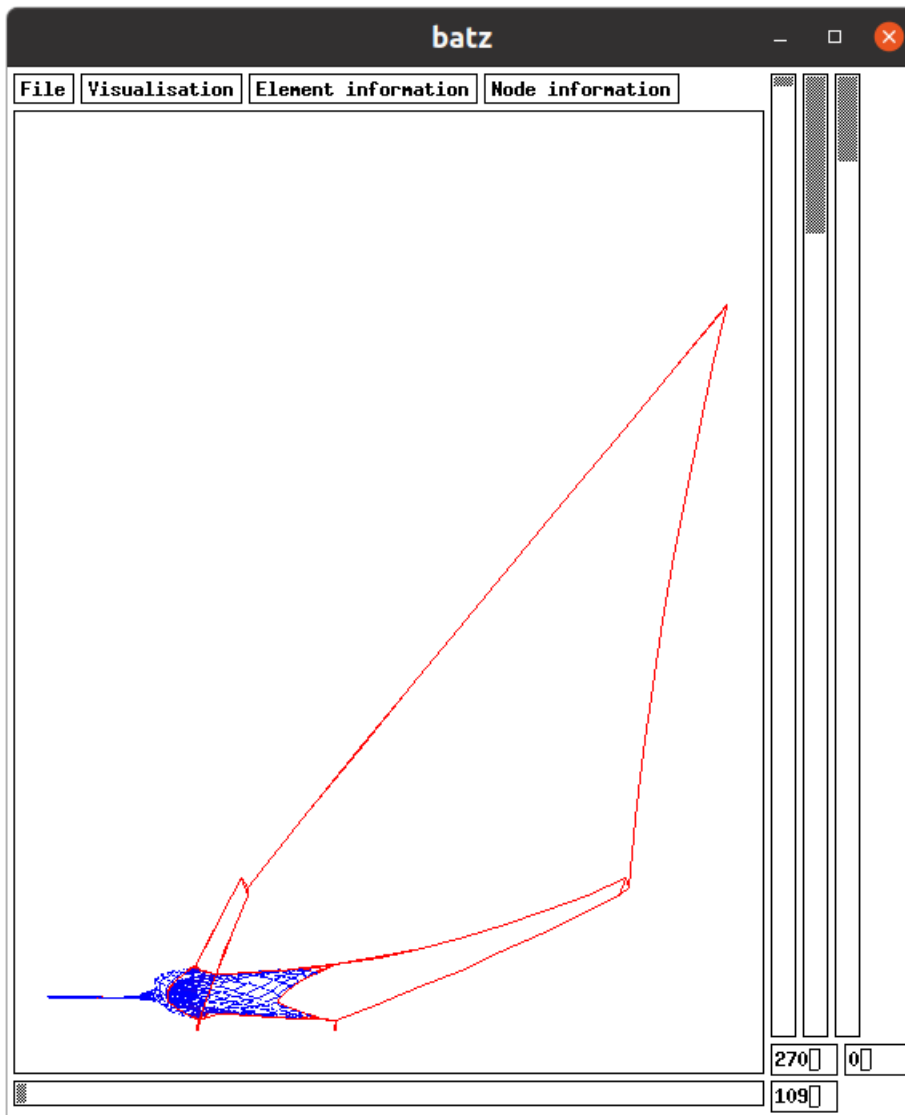


Figure 60: The pelagic trawl
~/femnet/data_2001/readme/1pelagic_trawl/s3 displayed with batz. This figure is very similar to Figure 53 (s1).

Symmetry

A structure and its environment could be symmetric. The symmetry planes are defined using type of node.

The following type of node defines a symmetry plane (YOZ) normal to X axis, see the last line (Symmetry X,Y,Z: 1 0 0):

```
No du type :                2
Mass X,Y,Z (kg):            0.000000  0.000000  0.000000
Added mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Length X,Y,Z (m):           0.000000  0.000000  0.000000
Drag coefficient X,Y,Z:      1.200000  1.200000  1.200000
External forces X,Y,Z (N):   0.000000  0.000000  0.000000
Displacement X,Y,Z:         0  0  0
Limits X,Y,Z (m):           0.000000  0.000000  0.000000
Limits sens X,Y,Z:          0  0  0
Symmetry X,Y,Z:             1  0  0
```

The following type of node defines a symmetry plane (ZOX) normal to Y axis, see the last line (Symmetry X,Y,Z: 0 1 0):

```
No du type :                2
Mass X,Y,Z (kg):            0.000000  0.000000  0.000000
Added mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Length X,Y,Z (m):           0.000000  0.000000  0.000000
Drag coefficient X,Y,Z:      1.200000  1.200000  1.200000
External forces X,Y,Z (N):   0.000000  0.000000  0.000000
Displacement X,Y,Z:         0  0  0
Limits X,Y,Z (m):           0.000000  0.000000  0.000000
Limits sens X,Y,Z:          0  0  0
Symmetry X,Y,Z:             0  1  0
```

The following type of node defines a symmetry plane (XOY) normal to Z axis, see the last line (Symmetry X,Y,Z: 0 0 1):

```
No du type :                2
Mass X,Y,Z (kg):            0.000000  0.000000  0.000000
Added mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Length X,Y,Z (m):           0.000000  0.000000  0.000000
Drag coefficient X,Y,Z:      1.200000  1.200000  1.200000
External forces X,Y,Z (N):   0.000000  0.000000  0.000000
Displacement X,Y,Z:         0  0  0
Limits X,Y,Z (m):           0.000000  0.000000  0.000000
Limits sens X,Y,Z:          0  0  0
Symmetry X,Y,Z:             0  0  1
```

The rule used here is that the [Mass](#), the [Added mass](#), the [Length](#) and [External force](#) of a node on the symmetry plane are defined for the whole structure, not only for the symmetric part of the structure.

If the mass in the type of node one a symmetry plane is 10Kg, the part of the mass of the whole structure is 10Kg that means that the part of this mass for the symmetric part is the half (5Kg).

In order to illustrate this symmetry, in the following, a structure identical to that of Figure 1 has been described without using the symmetry plane: all the structure is modelled. In Figure 61, the structure and its environment present a vertical plane of symmetry but it is not used and it is identical to Figure 2 where the symmetry is taken into account.

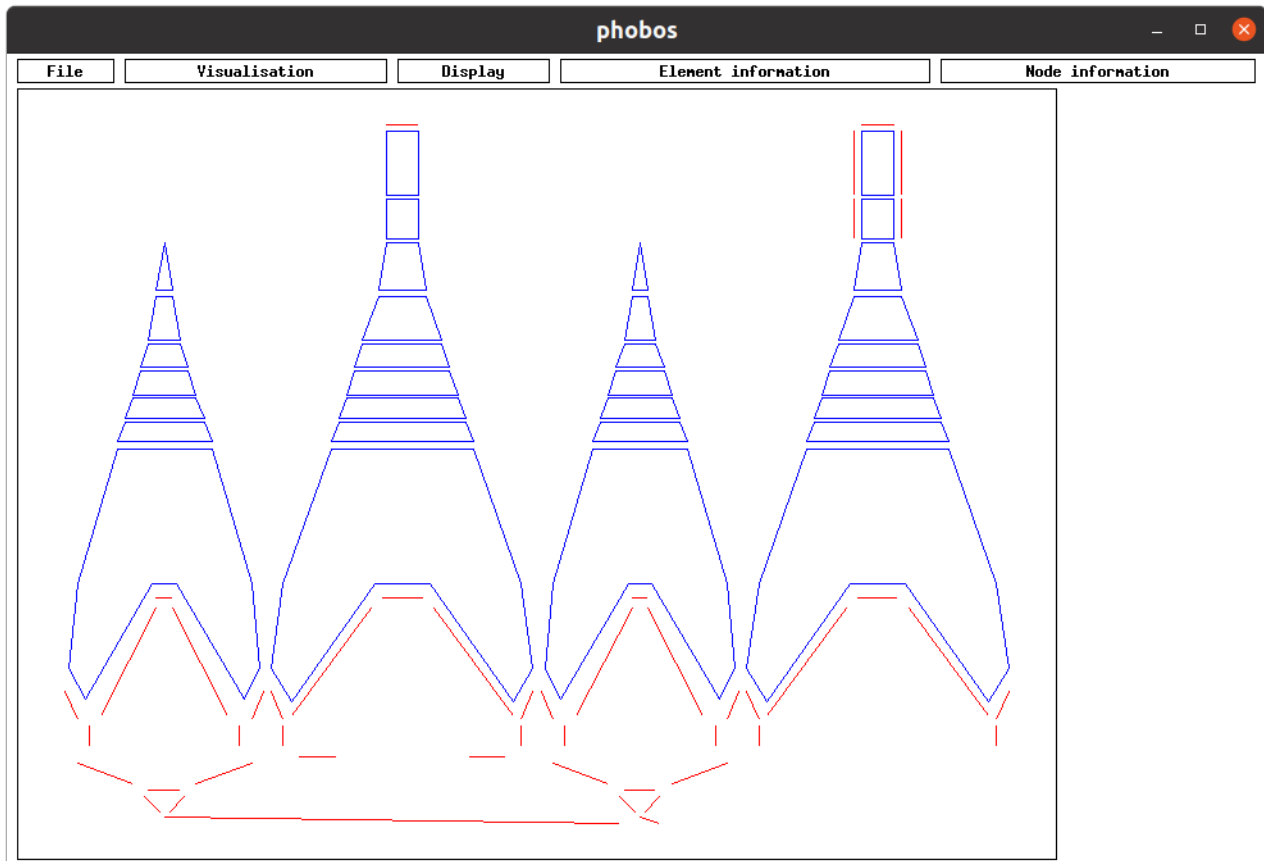


Figure 61: Design of the pelagic trawl `~/femnet/data_2001/readme/1pelagic_trawl/t1`. It is the same as `s1` (figure 1) except that here the symmetry plane is not taken into account: the whole trawl is designed.

If the symmetry plane is taken into account only half structure could be designed, as `s1`.

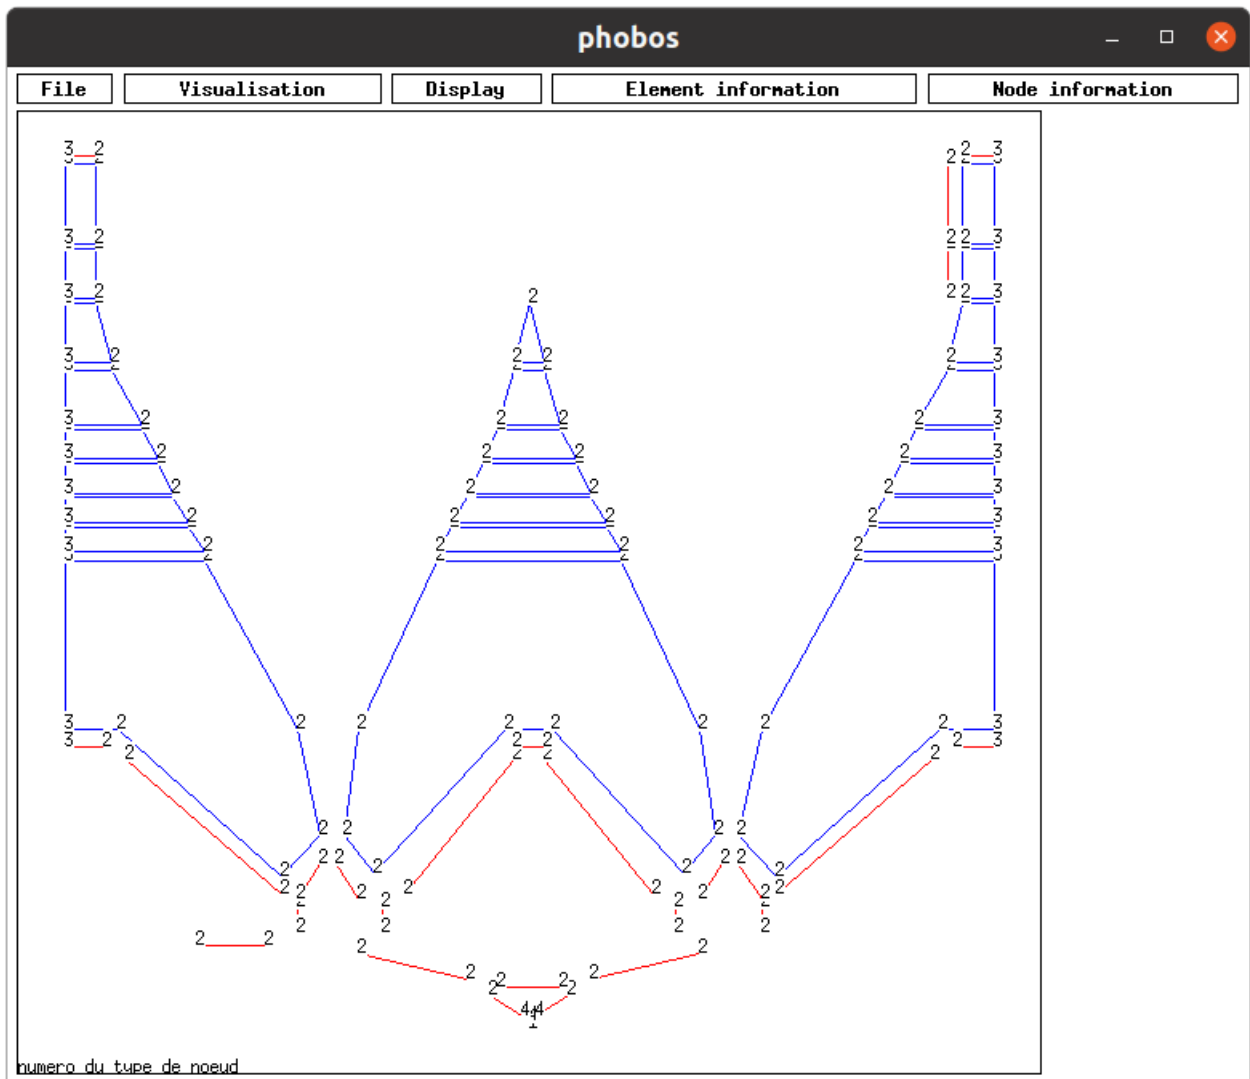


Figure 62: Design of `~/femnet/data_2001/readme/1pelagic_trawl/s1` with one symmetry plane. The nodes type are displayed. The nodes on the symmetry plane have a type 3.

To introduce a symmetry plane the nodes on the symmetry plane must have a type which define the symmetry, for example in `s1.don` the node type 3 has the following characteristics:


```
No du type :          3
Mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Added mass X,Y,Z (kg): 0.000000  0.000000  0.000000
Length X,Y,Z (m):     0.000000  0.000000  0.000000
Drag coefficient X,Y,Z: 1.200000  1.200000  1.200000
External forces X,Y,Z (N): 0.000000  0.000000  0.000000
Displacement X,Y,Z:    0  0  0
Limits X,Y,Z (m):      0.000000  0.000000  0.000000
Limits sens X,Y,Z:     0  0  0
Symmetry X,Y,Z:        0  1  0
```

It can be seen (last line) that there is a symmetry normal to axe Y, and the nodes with type 3, as visible on Figure 62, are on this symmetry plane.

The calculation of equilibrium of t1 (design on Figure 61 without using symmetry) is done with the following commands:

```
cd ~/femnet/programs  
./phobos ~/femnet/data_2001/readme/1pelagic_trawl/t1
```

This first part for calculated t1.mdg compatible with the calculation of equilibrium.

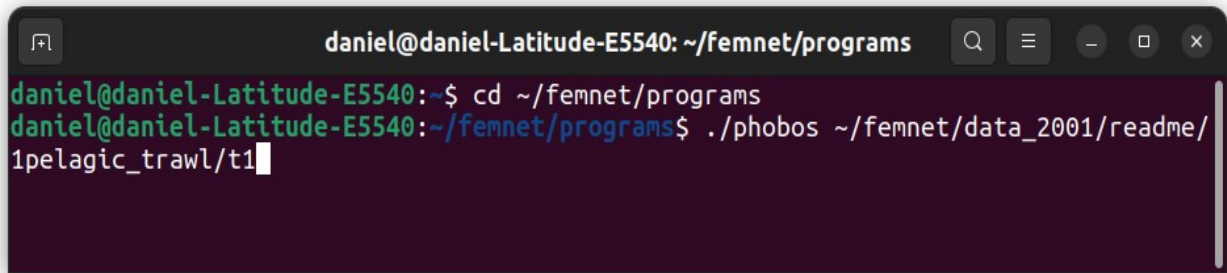
A terminal window titled 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs', which is followed by a new prompt 'daniel@daniel-Latitude-E5540:~/femnet/programs\$'. The second command entered is './phobos ~/femnet/data_2001/readme/1pelagic_trawl/t1', followed by a cursor.

```
daniel@daniel-Latitude-E5540:~/femnet/programs  
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs  
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/  
1pelagic_trawl/t1
```

Figure 63: Calculation of t1.mdg with phobos.

```
cd ~/femnet/programs  
./unix ~/femnet/data_2001/readme/1pelagic_trawl/t1
```

This second part for the calculation of the equilibrium of t1.

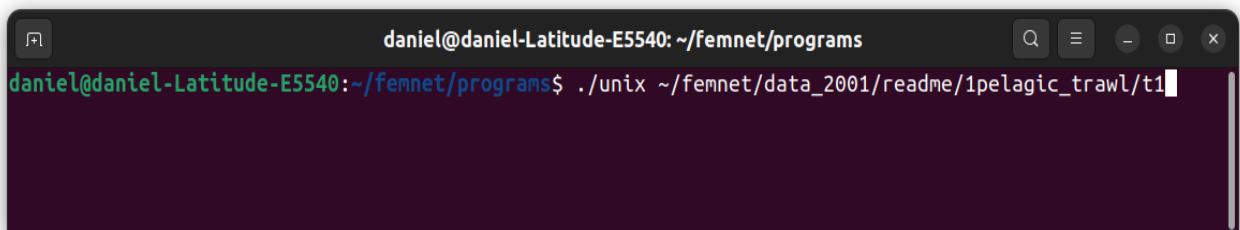A terminal window titled 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~/femnet/programs\$'. The command entered is './unix ~/femnet/data_2001/readme/1pelagic_trawl/t1', followed by a cursor.

```
daniel@daniel-Latitude-E5540:~/femnet/programs  
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/1pelagic_trawl/t1
```

Figure 64: Calculation of the equilibrium of t1.

The result is partly shown on Figure 65. It can be compared to those displayed on Figure 50 and Figure 59. Due to the symmetry, some figures are around the double on Figure 65 of those of Figure 50 and Figure 59 (boat Z force, Boat X force, bottom drag, catch drag, element drag, surface drag, total drag, forces on the structure, filtered surface).

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
1480      0.1061      0.00140      0.0245  0.00042      6e+01
1490      0.0519      0.00068      0.0108  0.00019      6e+01
1491      0.0483      0.00063      0.0099  0.00017      6e+01      1492

file /home/daniel/femnet/data_2001/readme/1pelagic_trawl/t1.sta
PELAGIC TRAWL      :      0
Boat to door starboard :      200.03
Boat to door port      :      200.03
Boat Z force (N):      -40756
Boat X force (N):      65781
Warp tension (N):      36226
Bottom bridle tension (N):      6379
Top bridle tension (N):      17228
Head line immersion (m):      -126.2
Bottom line immersion (m):      -133.4
Door immersion starboard (m):      -109.1
Door immersion port (m):      -109.1
bottom drag along X (N) :      0.0000
catch drag along X (N) :      0.0000
element drag along X (N) :      19036
surface drag along X (N) :      35545
total drag along X (N) :      54581
forces on the structure along X Y and Z (N) :      65781      63      -40756
maximal diameter of the catch (m) :      0.000
thickness of the catch (m) :      0.0000000
effective volume of the catch (m3) :      0.0000000
current amplitude (m/s) :      2.058
filtered surface (m2) :      196.99

daniel@daniel-Latitude-E5540:~/femnet/programs$

```

Figure 65: The calculation is carried out in 1491 iterations. The figures are comparable to those of s1 (Figure 50 and Figure 59).

The shape of the trawl is displayed on Figure 66.

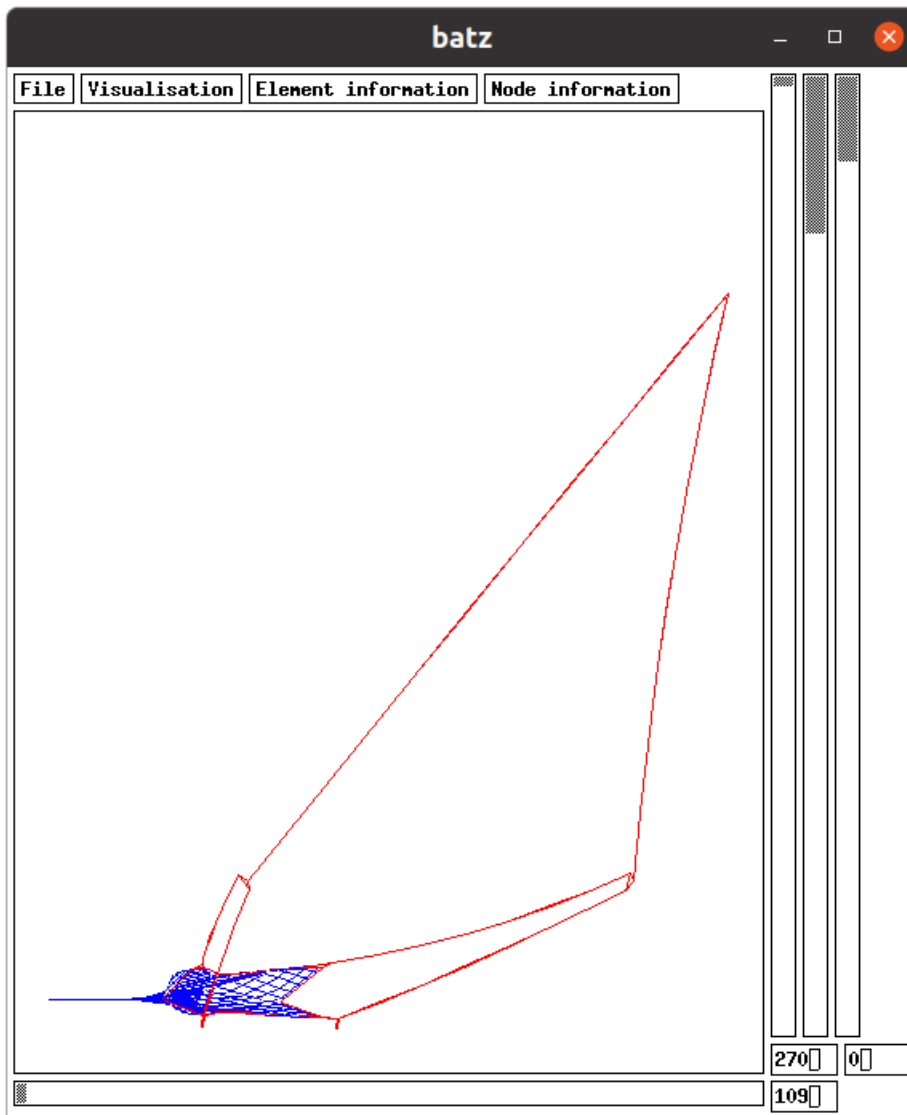


Figure 66: Shape of `~/femnet/data_2001/readme/1pelagic_trawl/t1`. The design of this trawl don't use the symmetry plane as `s1` (Figure 53).

Numerical twines

In order to model netting using numerical twines in place of triangular elements in a netting panel. The panel must be surrounded by ropes, even ropes are tiny. Use the following command, with **4** the netting panel, **10** the period of twines (numerical twines are 10 times larger than actual twines), **0.0** the position of the numerical U twines relatively to the period, **0.5** the position of the numerical V twines relatively to the period, **3** the accuracy (nodes closer than 3 meshes are merged), **2** the number of bar elements inside a full numerical twine:

```
input netting2ropes 4 10 0.0 0.5 3 2
```

Up to now, only numerical twines which are fully inside the netting panel or which cut the netting boundary once are taken into account. Numerical twines which cut two boundaries are not taken into account. Few examples are shown on the following figures.

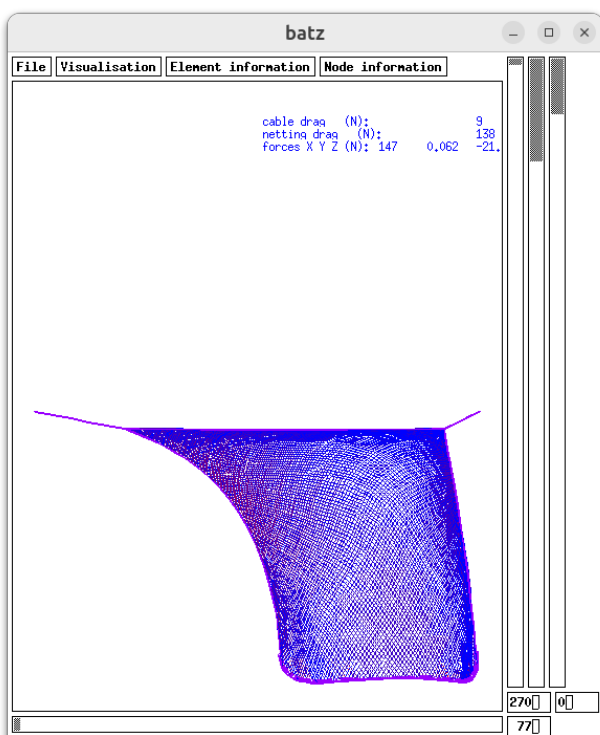


Figure 67: Piece of netting modelled with triangular elements. The twines are shown. The triangular elements are hidden. Here the command `input netting2ropes` is not used.

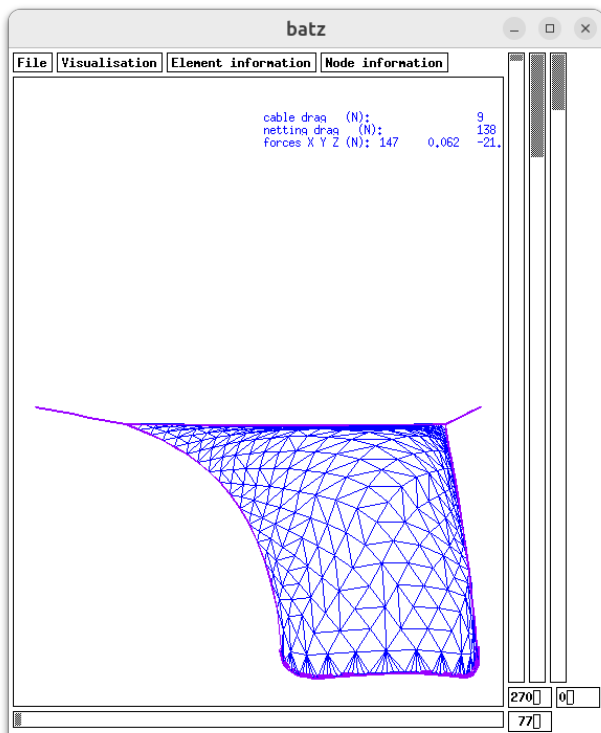


Figure 68: Same model. The triangular elements are shown. The twines are hidden. Here the command input `netting2ropes` is not used.

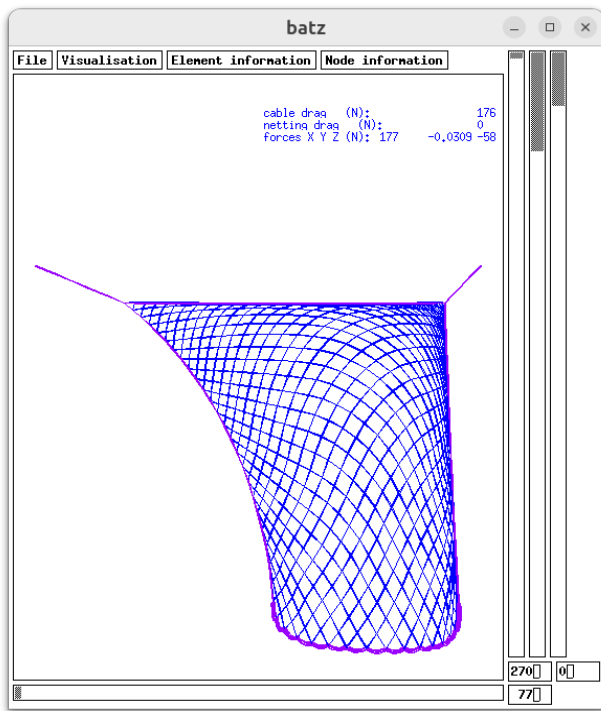


Figure 70: Same netting using input `netting2ropes 1 5 0.0 0.0 1 1`

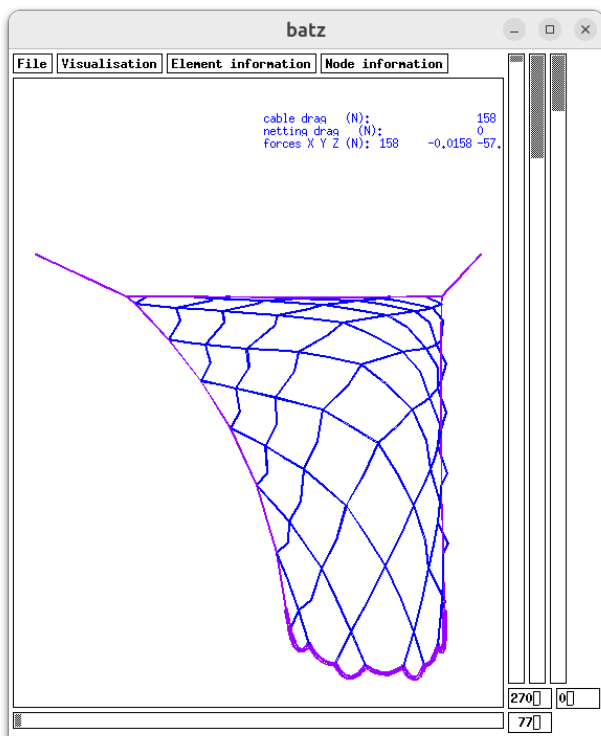


Figure 71: Same netting using input `netting2ropes input netting2ropes 1 20 0.25 0.25 3 2`

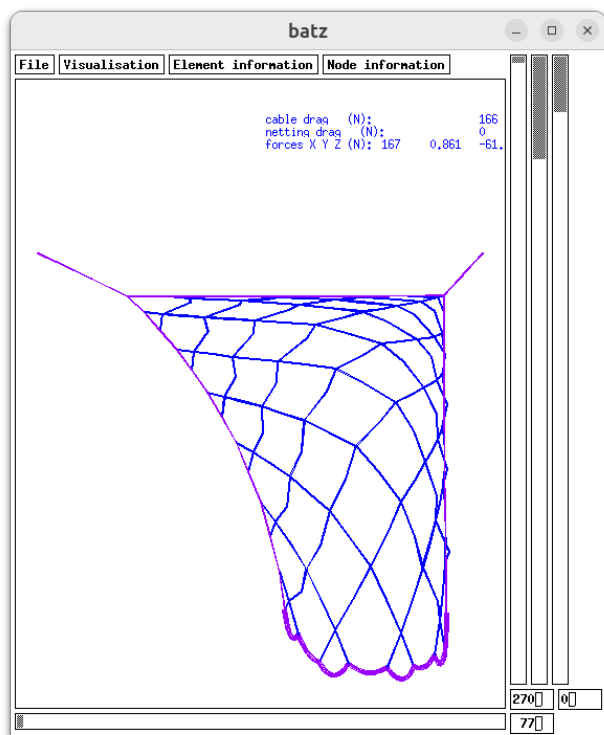


Figure 72: Same netting using input
 netting2ropes 1 20 0.5 0.0 3 2

Quasi-static examples

Bottom trawl

A structure which has a contact with the sea bottom has to be defined using specific types of nodes. For example a node which could be in contact with a bottom sea at -56m has a type such as the following (defined in *.don file):

```
No du type :                2
Mass X,Y,Z (kg):            0.000000  0.000000  0.000000
Added mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Length X,Y,Z (m):           0.000000  0.000000  0.000000
Drag coefficient X,Y,Z:      1.200000  1.200000  1.200000
External forces X,Y,Z (N):   0.000000  0.000000  0.000000
Displacement X,Y,Z:          0  0  0
Limits X,Y,Z (m):            0.000000  0.000000 -56.000000
                                                                    The z limit is -56m

Limits sense X,Y,Z:          0  0  1
                                                                    The z limit is a minimum (it is a floor not a ceiling)

Symmetry X,Y,Z:              0  0  0
.
.
.
BOTTOM SEA ENVIRONMENT
Wearing coefficient on the bottom:                1.000000
Stiffness of the insertion in the sea bottom (N/m): 5000000.000000
```

In this type of node, it can be seen that the limit along z axis is -56m and that the sense is positive (1). That means that if the node is above -56m there is no contact with the sea bottom and if the node is below -56m the node is in contact with the sea bottom.

If a node is below the sea bottom, there is a reaction of the bottom due to the elasticity of the bottom, as previously defined in *.don file (Stiffness of the insertion in the sea bottom (N/m): 5000000.000000). In case of wearing, there is consequently a friction force due to the wearing coefficient on the bottom, as previously defined in *.don file (Wearing coefficient on the bottom: 1.000000).

Such bottom trawl could be seen on Figure 73 .

In this case the boat is expected fixed and the towing speed is given by a water current. In order to take into account the wearing of the trawl on the sea bottom the command `input moving_bottom` is added at the end of the don file.

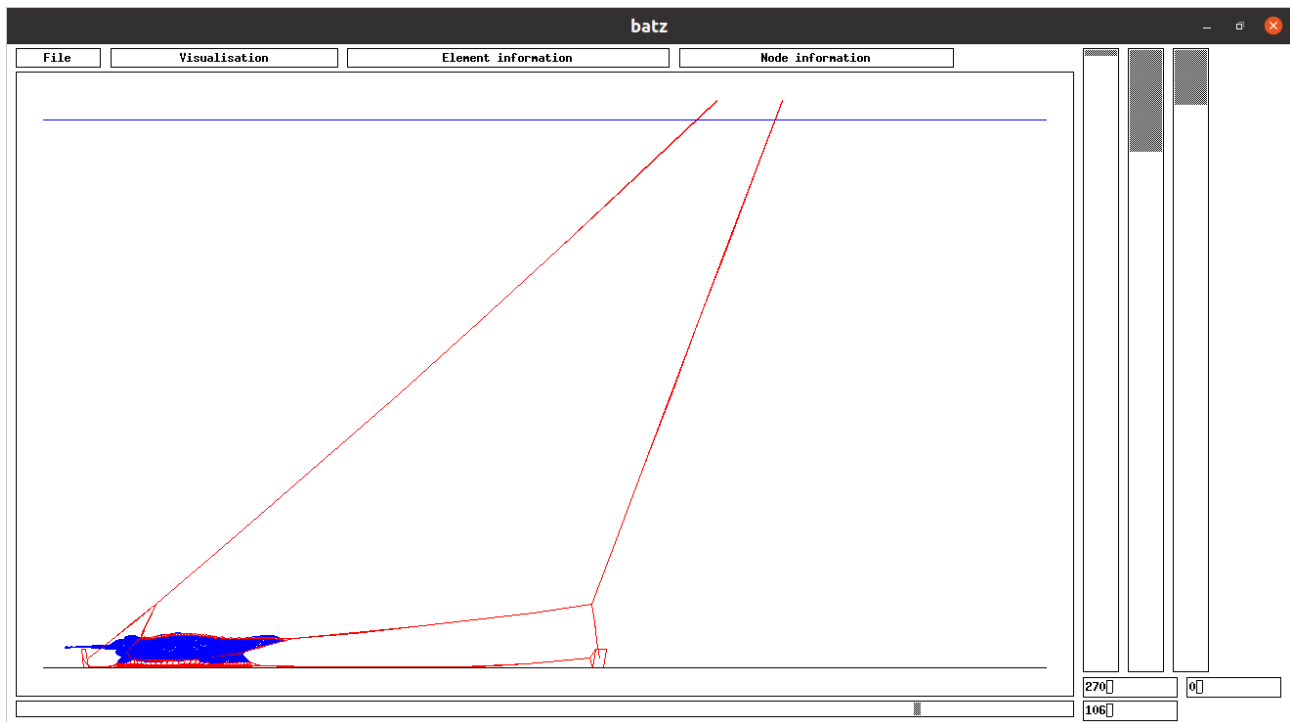


Figure 73: Bottom trawl `~/femnet/data_2001/readme/3bottom_trawl/b3`.

The design of this bottom trawl could be seen on Figure 74 .

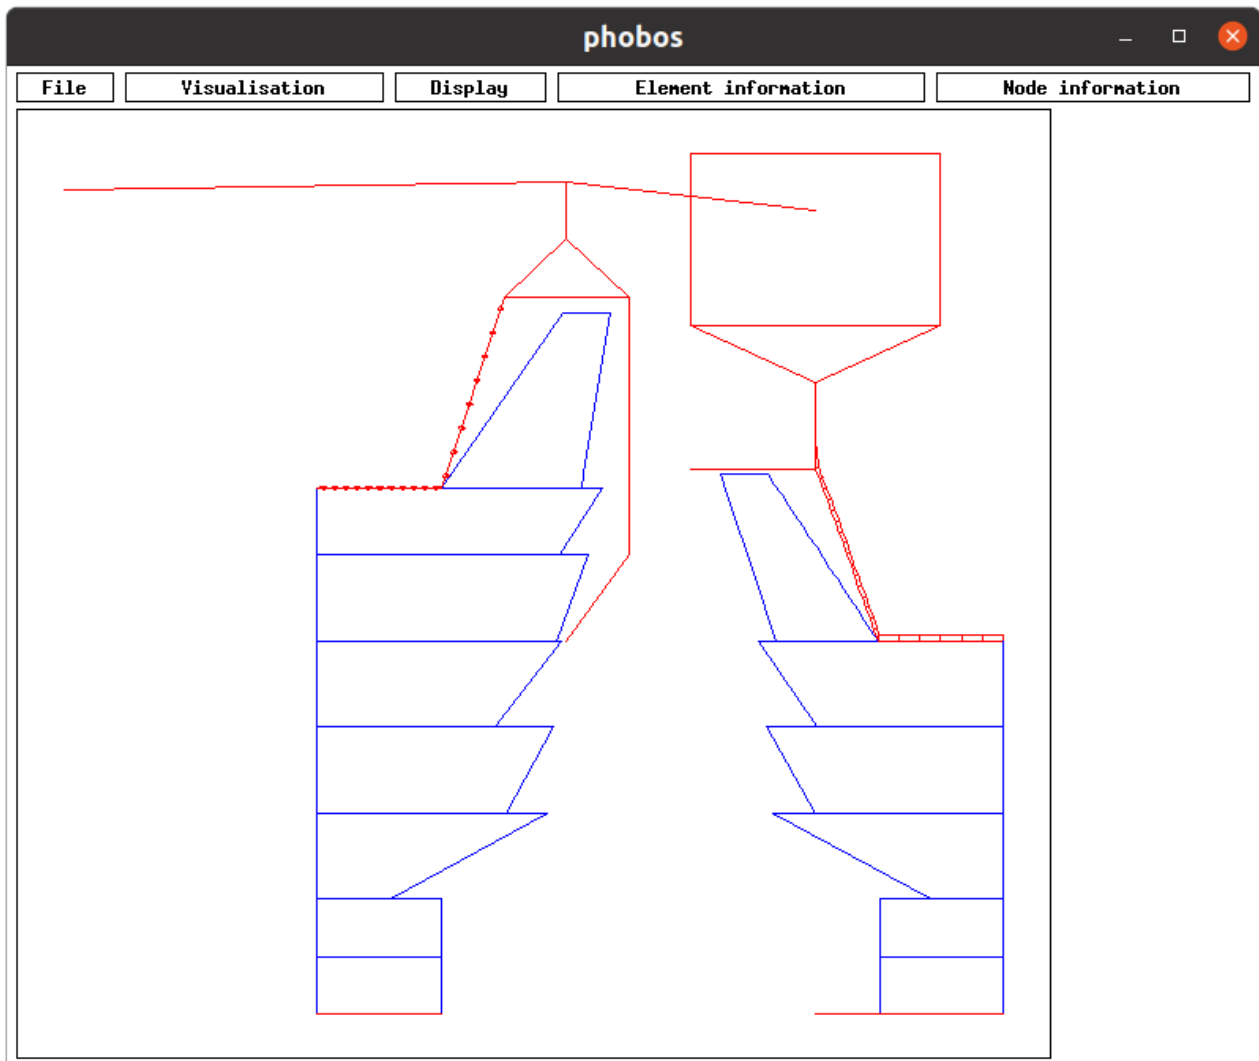


Figure 74: Design of the bottom trawl b3.


To reach this result, a first trawl defined in b1.don with a Meshing step (m): 3.000000 per panel is used, followed by b2.don with a Meshing step (m): 1.000000 per panel, and finally b3.don with a Meshing step (m): 0.500000 per panel.

The following commands are used to reach this result:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/3bottom_trawl/b1
./unix ~/femnet/data_2001/readme/3bottom_trawl/b1


cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/3bottom_trawl/b2
~/femnet/data_2001/readme/3bottom_trawl/b1
./unix ~/femnet/data_2001/readme/3bottom_trawl/b2
```

```
cd ~/femnet/programs  
./phobos ~/femnet/data_2001/readme/3bottom_trawl/b3  
~/femnet/data_2001/readme/3bottom_trawl/b2  
./unix ~/femnet/data_2001/readme/3bottom_trawl/b3
```

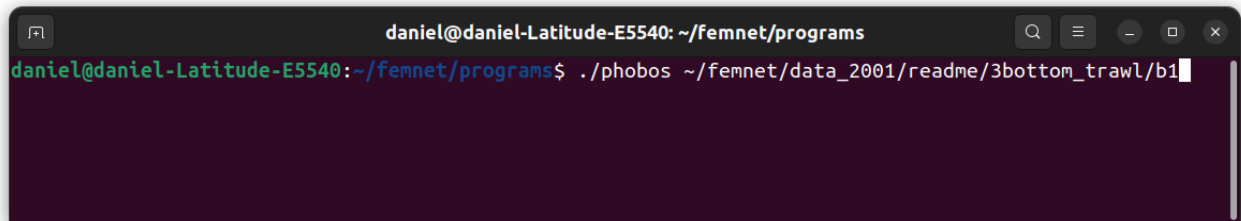A terminal window with a dark background and light text. The title bar reads "daniel@daniel-Latitude-E5540: ~/femnet/programs". The prompt is "daniel@daniel-Latitude-E5540:~/femnet/programs\$". The command entered is "./phobos ~/femnet/data_2001/readme/3bottom_trawl/b1".

```
daniel@daniel-Latitude-E5540: ~/femnet/programs  
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/3bottom_trawl/b1
```

Figure 75: Command to create *b1.mdg* from *b1.don*.

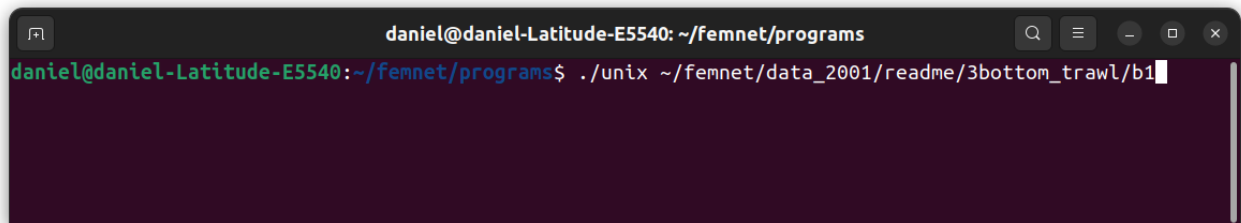A terminal window with a dark background and light text. The title bar reads "daniel@daniel-Latitude-E5540: ~/femnet/programs". The prompt is "daniel@daniel-Latitude-E5540:~/femnet/programs\$". The command entered is "./unix ~/femnet/data_2001/readme/3bottom_trawl/b1".

```
daniel@daniel-Latitude-E5540: ~/femnet/programs  
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/3bottom_trawl/b1
```

Figure 76: Command to calculate the equilibrium of *b1*, and consequently create *b1.sta*.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
4048      -1.0581      -0.00047      0.0940  0.00004      2e+03
file  /home/daniel/femnet/data_2001/readme/3bottom_trawl/b1.sta
Tension inf      (N):      5871
Tension sup      (N):      9814
Tension warp      (N):     20690
half doors distance      (m):      27.22
headline height      (m):     -53.08
bottom drag along X (N)      :      4833
element drag along X (N)      :      6342
surface drag along X (N)      :      9096
node drag along X (N)      :      0.0000
total drag along X (N)      :     20272
forces on the structure along X Y and Z (N)      :      28144      3787      -10944
current amplitude (m/s)      :      1.594
filtered surface (m2)      :      16.42
Drag of panels (N):
1 :      724
2 :      542
3 :      363
4 :      654
5 :      323
6 :      703
7 :      359
8 :      131

```

Figure 77. The calculation of equilibrium of bottom trawl b1, converges in 4048 iterations.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme
/3bottom_trawl/b2 ~/femnet/data_2001/readme/3bottom_trawl/b1

```

Figure 78: Command to create b2.mdg and calculate an approximation of equilibrium of b2 (recorded in b2.sta) by using b1.sta.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/3bottom_trawl/b2

```

Figure 79: Command to calculate the equilibrium of b2, and consequently create b2.sta.

```

82 daniel@daniel-Latitude-E5540:~$ cd ~/hexa/unix_2004
daniel@daniel-Latitude-E5540:~/hexa/unix_2004$ ./4ch19 ~/hexa/data_2001/readme/3bottom_trawl/b2

```

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
1250      36.9367      0.00095      0.2572 0.00042      3e+02
1260      0.2446      0.00091      0.1045 0.00039      3e+02
1266      0.2389      0.00090      0.0994 0.00037      3e+02      1266

file /home/daniel/femnet/data_2001/readme/3bottom_trawl/b2.sta
Tension inf (N): 5907
Tension sup (N): 9795
Tension warp (N): 20699
half doors distance (m): 27.11
headline height (m): -52.78
bottom drag along X (N) : 4802
element drag along X (N) : 6119
surface drag along X (N) : 9332
node drag along X (N) : 0.0000
total drag along X (N) : 20253
forces on the structure along X Y and Z (N) : 28129 3765 -10935

current amplitude (m/s) : 1.594
filtered surface (m2) : 16.67
Drag of panels (N):
1 : 781
2 : 591
3 : 368
4 : 704
5 : 309

```

Figure 80: The calculation of equilibrium of bottom trawl b2, converges in 1266 iterations.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs/
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/3bottom_trawl/b3 ~/femnet/data_2001/readme/3bottom_trawl/b2

```

Figure 81: Command to create b3.mdg and calculate a approximation of equilibrium of b3 (recorded in b3.sta) by using b2.sta.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/3bottom_trawl/b3

```

Figure 82: Command to calculate the equilibrium of b3, and consequently create b3.sta.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
1490      1.4656      -0.00221      0.1131  0.00028      4e+02
1500      0.8730       0.00209      0.1070  0.00027      4e+02
1510     -0.9163     -0.00172      0.1027  0.00019      5e+02
1520     -0.9623     -0.00137      0.0999  0.00014      7e+02
1520     -0.9623     -0.00137      0.0999  0.00014      7e+02

file /home/daniel/femnet/data_2001/readme/3bottom_trawl/b3.sta
Tension inf (N): 6002
Tension sup (N): 9642
Tension warp (N): 20766
half doors distance (m): 27.12
headline height (m): -52.73
bottom drag along X (N) : 4872
element drag along X (N) : 6145
surface drag along X (N) : 9319
node drag along X (N) : 0.0000
total drag along X (N) : 20336
forces on the structure along X Y and Z (N) : 28071 3767 -10918
current amplitude (m/s) : 1.594
filtered surface (m2) : 16.66
Drag of panels (N):
1 : 752
2 : 592

```

Figure 83: The calculation of equilibrium of bottom trawl b3, converges in 1520 iterations.

Several scientific papers used this possibility of FEMNET: [7], [8], [9], [10].

Catch

A catch in a netting, such as an amount of fish in a trawl cod-end, creates a pressure on the netting. The catch is limited by a surface normal to the current (the front) and the rear part of the netting. All the catch is behind this front. The volume behind this front is the fish catch but also water. This volume is used in *.don file. The volume is between the front and the netting.

In the following example (c2.don) the cod-end is made of 4 panels of netting which are closed by 4 ropes. Due to the symmetry only one panel and one rope are discretized (Figure 85). In order to see in ./batz only the discretized components add `output no_visible_symmetry` at the end of the *.don file (Figure 85).

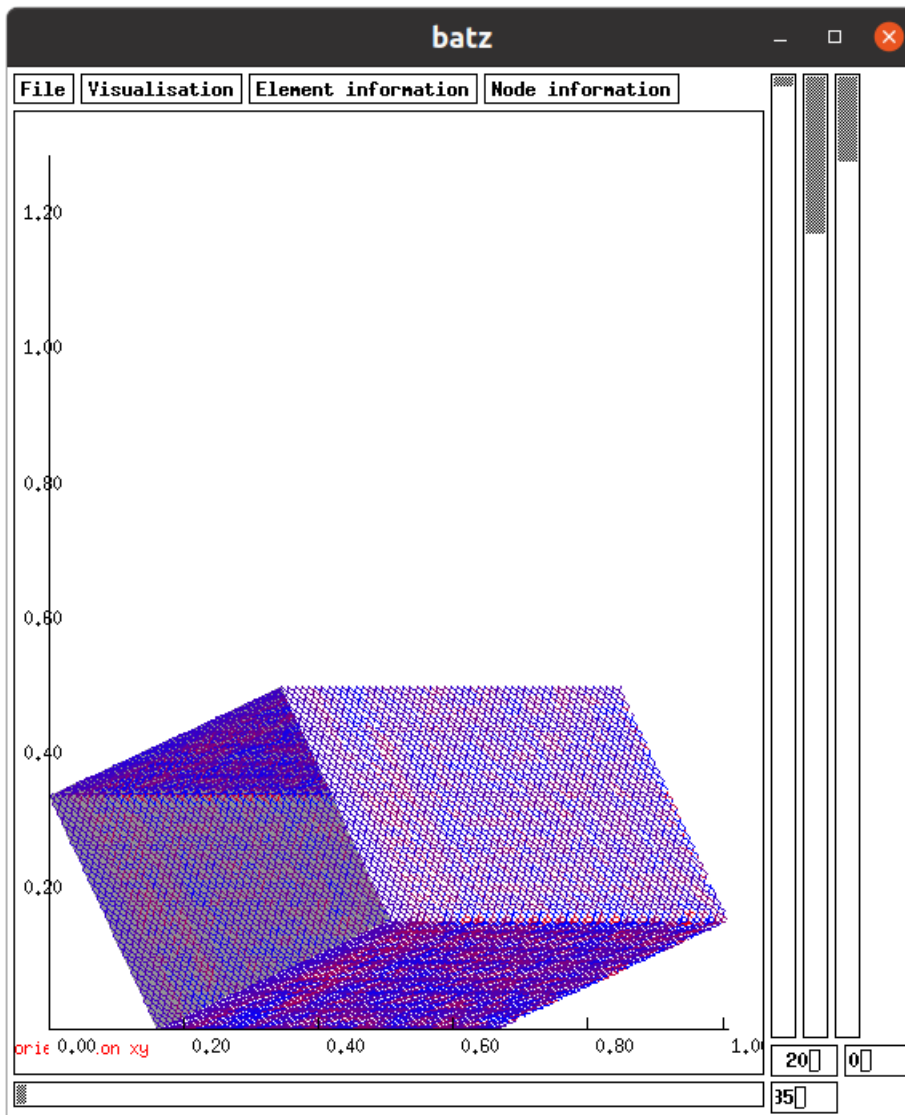


Figure 84: Initial position of the cod-end. To get this view do in ./batz File, load_initial_file. Here `output no_visible_symmetry` is not used in ~/femnet/data_2001/readme/5catch/c2.don.

The nodes at the entry are fixed along X axis, the nodes on the symmetry panels have to be declared as symmetric, as shown on Figure 85.

The pressure of the catch occurs on one side of the netting, the inner one. To verify that the inner and outer sides are well defined, it can be shown in ./batz using visualisation, orientation_xy. The grey surface is the inner side of the netting. If the orientation of a panel is not appropriated, replace V coordinates (V1, V2 ...) of the panel by the opposite (-V1, -V2 ...). It could be done also by replacing U coordinates par their opposite.

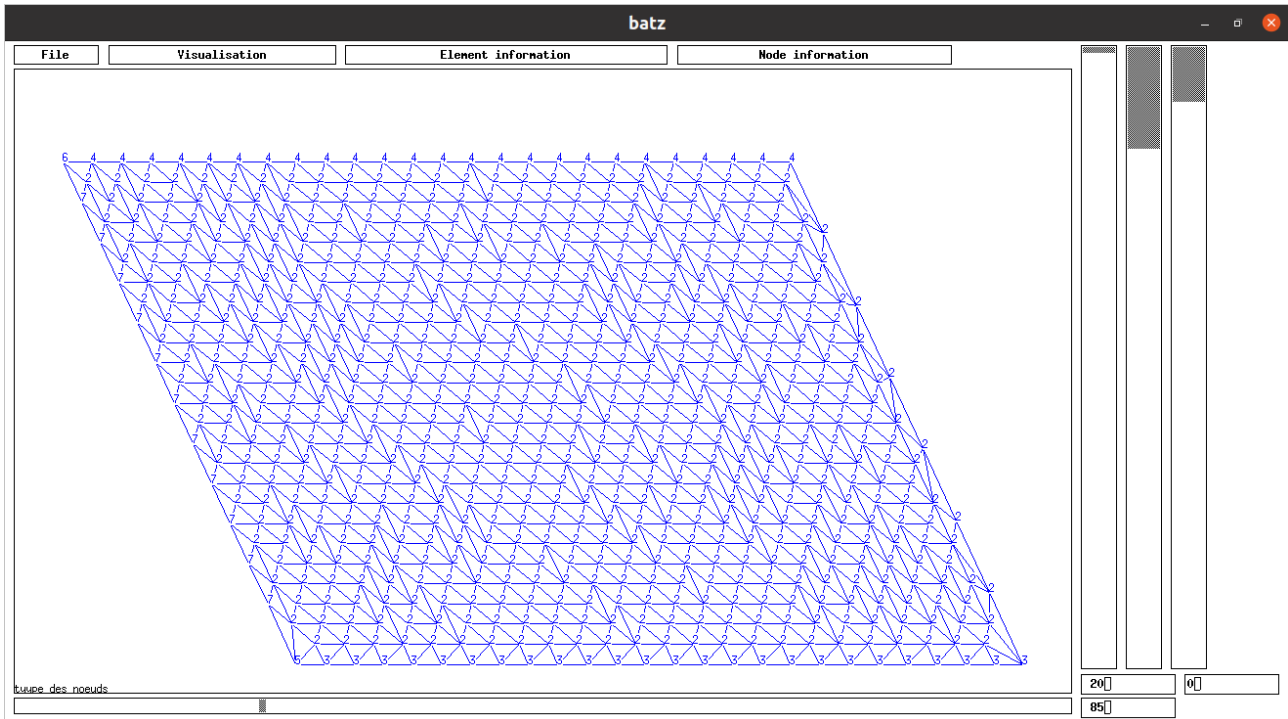
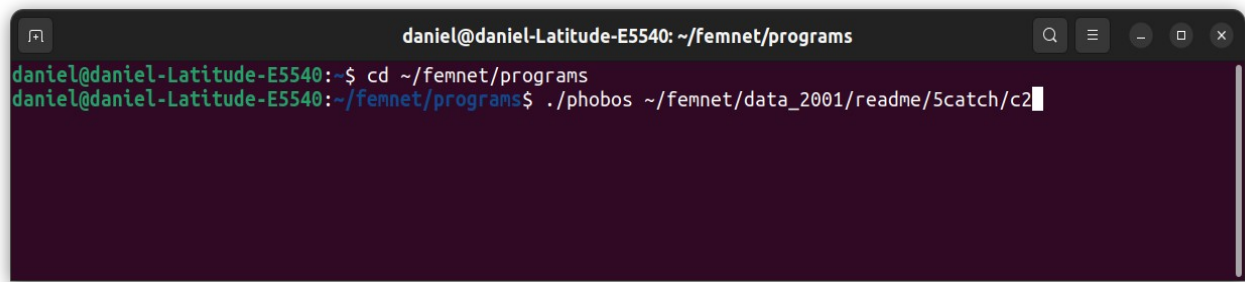


Figure 85: The discretized panel in triangular elements. The node types are displayed. The type 1 is not used. The type 2 refers to no constraint on node displacement. The type 3: symmetry along axe Y. The type 4: symmetry along axe Z. Type 5: constraint along axe X and symmetry along axe Y. Type 6: constraint along axe X and symmetry along axe Z. Type 7: constraint along axe X. Here *output no_visible_symmetry* is used in ~/femnet/data_2001/readme/5catch/c2.don.

The commands to create the c2.mdg file are (Figure 86) :

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/5catch/c2
```

A terminal window with a dark background and light green text. The window title is 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The first command entered is 'cd ~/femnet/programs', which changes the directory. The second command is './phobos ~/femnet/data_2001/readme/5catch/c2', which runs a program named 'phobos' with a specific path and filename as an argument. The cursor is at the end of the second command.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/5catch/c2
```

Figure 86: Commands to create the file *c2.mdg*.

The commands to calculate the equilibrium of *c2* and record the result in *c2.sta* are:

```
cd ~/femnet/programs
```

```
./unix ~/femnet/data_2001/readme/5catch/c2
```

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/Scatch/c2

```

Figure 87: Commands for the equilibrium calculation of c2.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs

```

Stiffness matrix width	after resolution	:	233				
Stiffness matrix width	on right after resolution	:	155				
Stiffness matrix width	on left after resolution	:	155				
nbiter	Max (N)	Max (m)	Mean (N)	Mean (m)	thick (m)	kadd (N/m)	
10	-64634.7784	-0.00571	2221.5743	0.00021	5.7206	1e+07	
20	-25219.7452	-0.00237	1278.2598	0.00012	5.6912	1e+07	
30	-14144.5173	-0.00134	832.9206	0.00008	5.6770	1e+07	
40	-8646.9131	-0.00083	591.9427	0.00006	5.6357	1e+07	
50	-5103.9769	-0.00089	435.1191	0.00008	5.6083	5e+06	
60	-2182.8851	-0.00052	291.1449	0.00007	5.5961	4e+06	
70	-1305.8249	-0.00032	231.7166	0.00006	5.5974	4e+06	
80	-898.6597	-0.00030	203.9857	0.00007	5.6014	3e+06	
90	-542.5468	-0.00039	178.6653	0.00013	5.6104	1e+06	
100	-381.1825	-0.00041	163.0356	0.00018	5.6213	9e+05	
110	-256.3505	-0.00047	143.7446	0.00027	5.6393	5e+05	
120	-189.1200	-0.00066	121.6168	0.00043	5.6414	3e+05	
130	-120.4457	-0.00070	81.9930	0.00048	5.6370	2e+05	
140	-62.5232	-0.00089	42.4373	0.00060	5.6322	6e+04	
150	-23.4926	-0.00034	16.1295	0.00023	5.6281	6e+04	
160	-13.6807	-0.00021	9.1021	0.00014	5.5995	6e+04	
170	-11.3287	-0.00024	7.6340	0.00016	5.5365	5e+04	
180	-8.5894	0.00037	7.2636	0.00033	5.4010	2e+04	

Figure 88: Beginning of the iterations of the calculation of the equilibrium of c2. The first column is the iteration, the second is the maximal disequilibrium (N) per coordinate, the third the maximal displacement (m) per coordinate, the fourth the mean disequilibrium (N) per node, the fifth the mean displacement (m) per node, the sixth the thickness of the catch (m, distance between the front of the catch and the rearrest part of the structure), the seventh the added stiffness (N/m) to the stiffness matrix in order to avoid singular stiffness matrix.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
740      -0.0315      -0.00014      0.0122  0.00005      0.6278      2e+02
750      -0.0172      -0.00008      0.0076  0.00003      0.6278      2e+02
760      -0.0105      -0.00005      0.0051  0.00002      0.6278      2e+02
770      -0.0065      -0.00005      0.0033  0.00002      0.6279      1e+02
780      -0.0024      -0.00003      0.0012  0.00002      0.6280      7e+01
790      -0.0007      -0.00001      0.0004  0.00000      0.6280      7e+01
800      -0.0002      -0.00000      0.0001  0.00000      0.6280      7e+01
801      -0.0002      -0.00000      0.0001  0.00000      0.6280      7e+01      801

file /home/daniel/femnet/data_2001/readme/5catch/c2.sta
catch drag along X (N) : 978
element drag along X (N) : 0.222
surface drag along X (N) : 268
total drag along X (N) : 1247
forces on the structure along X Y and Z (N) : 1247 0 0
maximal diameter of the catch (m) : 1.452
thickness of the catch (m) : 0.6280174
effective volume of the catch (m3) : 0.1999999
current amplitude (m/s) : 1.900
filtered surface (m2) : 0.02

daniel@daniel-Latitude-E5540:~/femnet/programs$

```

Figure 89: End of iteration. The calculation converges in 801 iteration, when the fourth column is less the convergence threshold (N). The thickness of the catch is 0.628m (sixth column).

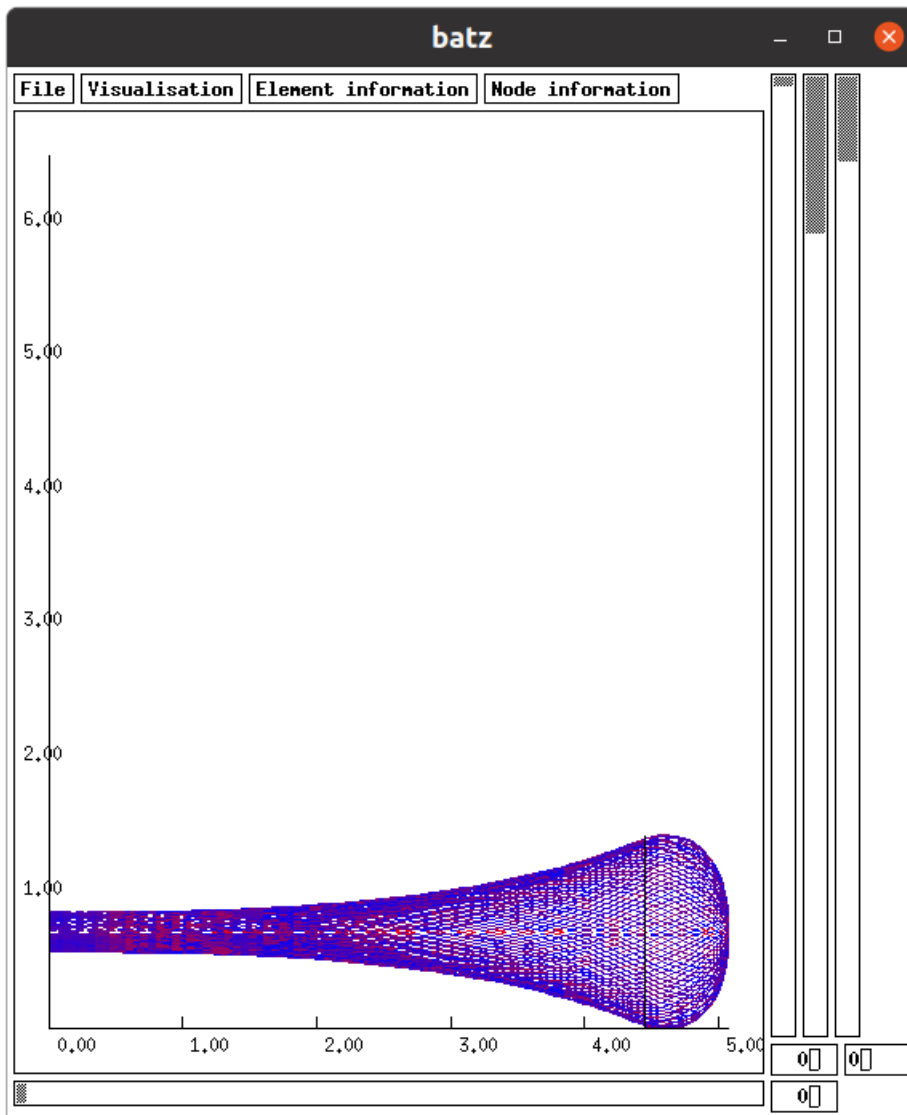


Figure 90: Equilibrium of the cod-end. The limit of the catch is visible (vertical black line): the catch is on the right of this limit. View of batz using `~/femnet/data_2001/readme/5catch/c2`.

If the catch is too small, there is a possibility of contact between knots of the netting in areas the meshes are very closed and if the size of the knots are large enough (Figure 91).

To display the contact do in batz: Element information, twines contact.

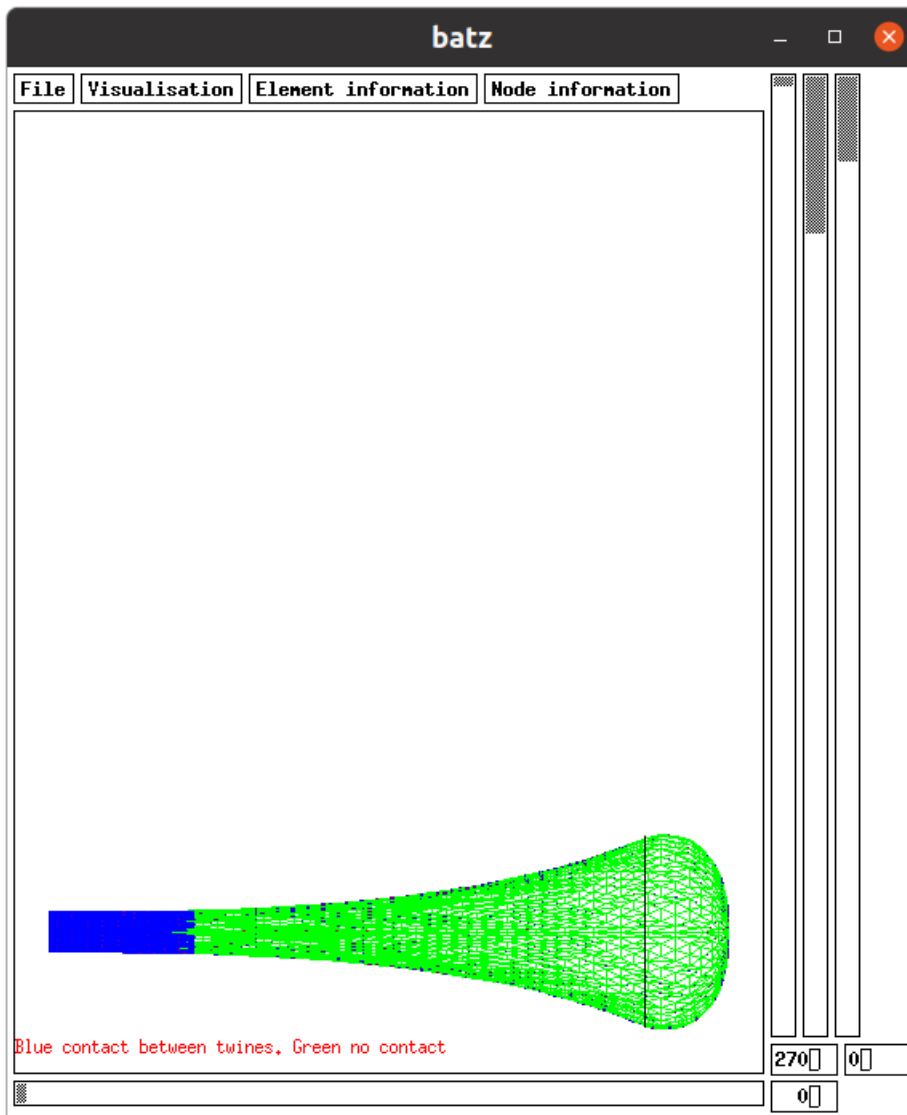


Figure 91: There is a contact between knots in the blue zone. This contact is due to the meshes which are closed and to the size of the knots of the netting. View of `~/femnet/data_2001/readme/5catch/c2`.

In case of small catch volume, there could be an unrealistic behaviour of the calculated netting. In the following example, the initial shape of the codend (Figure 92) has a width smaller than the previous one (Figure 84).

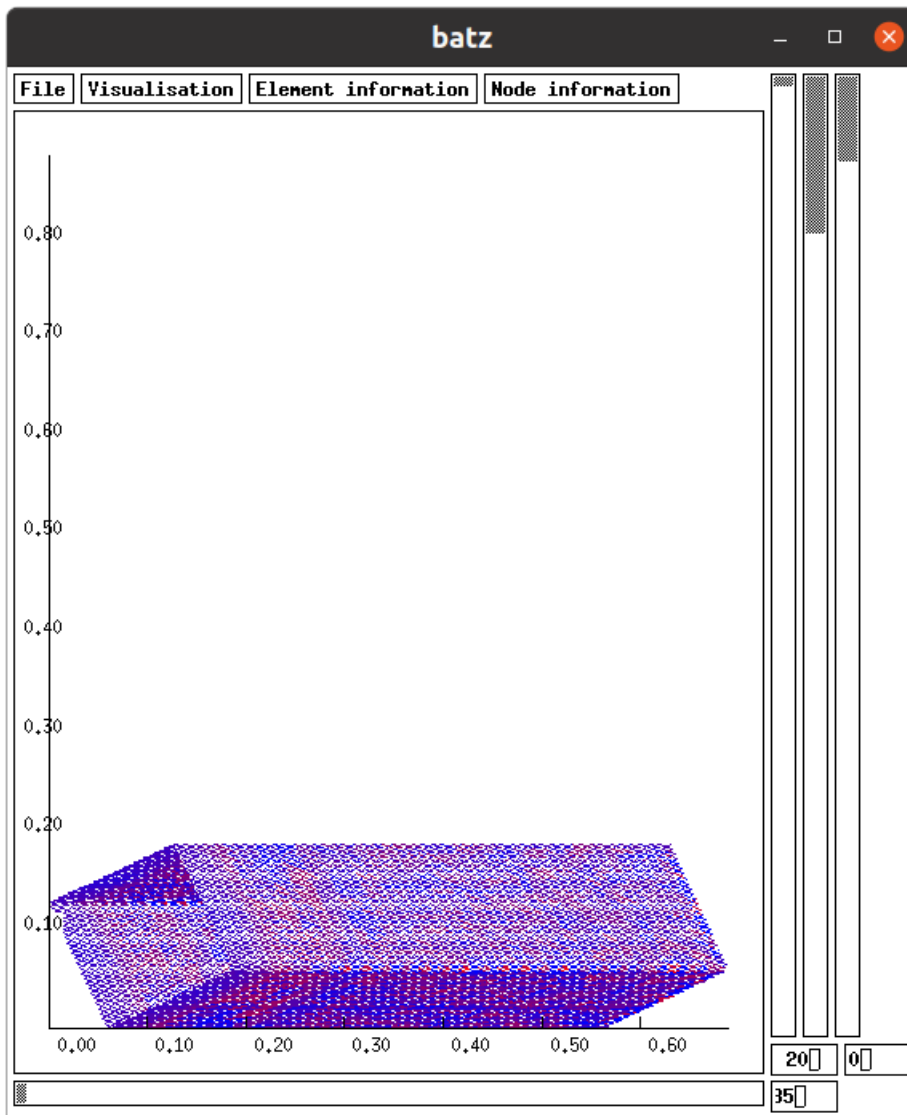


Figure 92: This codend (`~/femnet/data_2001/readme/5catch/d2`) is exactly the same as the previous, except its initial shape has a smaller width (see Figure 84).

The commands to get the equilibrium are:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/5catch/d2
./unix ~/femnet/data_2001/readme/5catch/d2
```

The twines of the structure is displayed on Figure 93. It can be seen the result is not as expected: the calculated shape is unrealistic.

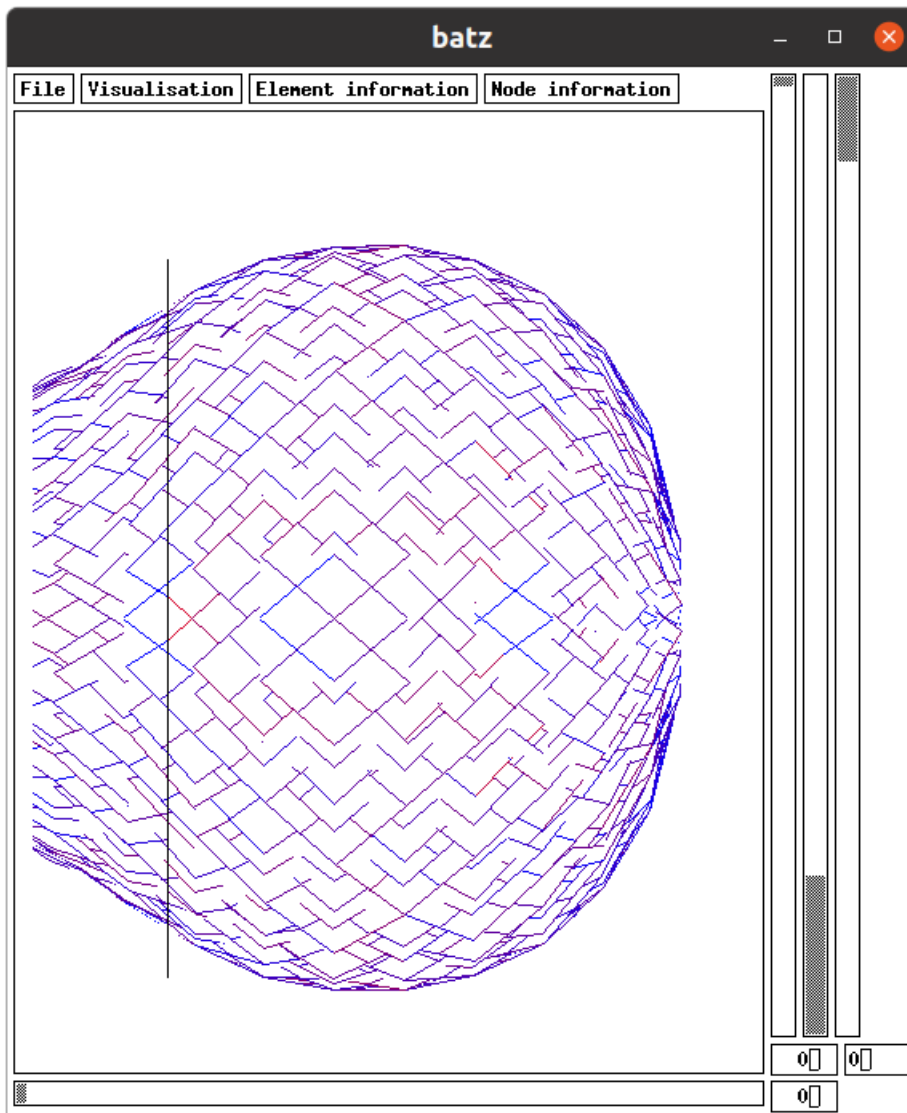


Figure 93: The calculated shape is unrealistic: the twines, which are displayed, are not as expected. The catch volume is 0.2m^3 . This unrealistic calculated shape is got probably because the initial shape of the codend is too far the equilibrium shape. View of `~/femnet/data_2001/readme/5catch/d2`.

In such cases, a solution is to momentarily increase a lot the catch. Generally speaking, larger is the catch volume easier is to reach a realistic calculated shape.

In the following example the volume has been increased from 0.2m^3 to 1m^3 (Figure 93 for d2.don and Figure 94 for d3.don). It can be seen on Figure 94 that a volume of 1m^3 gives a realistic calculated shape. The commands for carrying out the equilibrium of d3 are:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/5catch/d3
./unix ~/femnet/data_2001/readme/5catch/d3
```

The next steps are to decrease slowly the catch in order to get at each steps realistic calculated shapes. These following steps are here, first a catch volume of 0.4m^3 . The calculation starts with the shape got with the previous catch volume (1m^3). This calculation with 0.4m^3 gives a realistic calculated shape (Figure 96). The commands to get the equilibrium at 0.4m^3 (d4) are:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/5catch/d4
~/femnet/data_2001/readme/5catch/d3
./unix ~/femnet/data_2001/readme/5catch/d4
```

The following step is to reduce the catch volume to 0.2m^3 . This calculation starts from the previous shape (Figure 96) and reach a realistic calculated shape (Figure 98) which is similar to the one got an another initial shape (Figure 90). The commands to get the equilibrium at 0.2m^3 (d5) are:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/5catch/d5
~/femnet/data_2001/readme/5catch/d4
./unix ~/femnet/data_2001/readme/5catch/d5
```

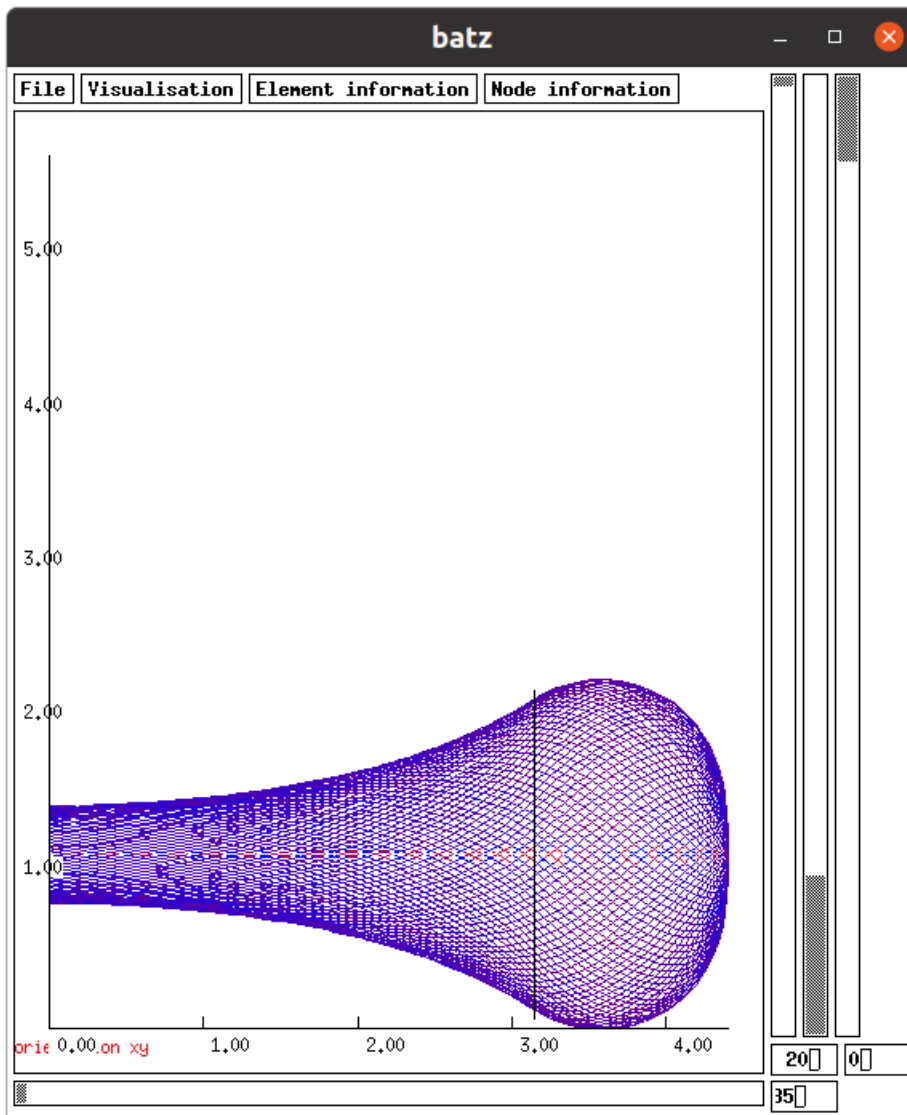


Figure 94: The volume of the catch is 1m^3 ($\sim\text{femnet}/\text{data_2001}/\text{readme}/5\text{catch}/\text{d3}$). The calculated shape is realistic.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
477      -0.0003      -0.00000      0.0001  0.00000      0.8329      1e+02
478      -0.0003      -0.00000      0.0001  0.00000      0.8329      1e+02
479      -0.0002      -0.00000      0.0001  0.00000      0.8329      1e+02
480      -0.0002      -0.00000      0.0001  0.00000      0.8329      1e+02
481      -0.0002      -0.00000      0.0001  0.00000      0.8329      1e+02
482      -0.0002      -0.00000      0.0001  0.00000      0.8329      1e+02
483      -0.0002      -0.00000      0.0001  0.00000      0.8329      1e+02
483      -0.0002      -0.00000      0.0001  0.00000      0.8329      1e+02

file  /home/daniel/femnet/data_2001/readme/5catch/d4.sta
catch drag along X (N)      :      1379
element drag along X (N)    :      0.222
surface drag along X (N)    :      280
total drag along X (N)      :      1660
forces on the structure along X Y and Z (N) :      1660      0      0
maximal diameter of the catch (m) :      1.770
thickness of the catch (m)   :      0.8328736
effective volume of the catch (m3) :      0.4000000
current amplitude (m/s)     :      1.900
filtered surface (m2)       :      0.02

daniel@daniel-Latitude-E5540:~/femnet/programs$
```

Figure 95: The volume of the catch is 0.4m³. The calculation converges in 483 iterations. The thickness of the catch is 0.8329m.

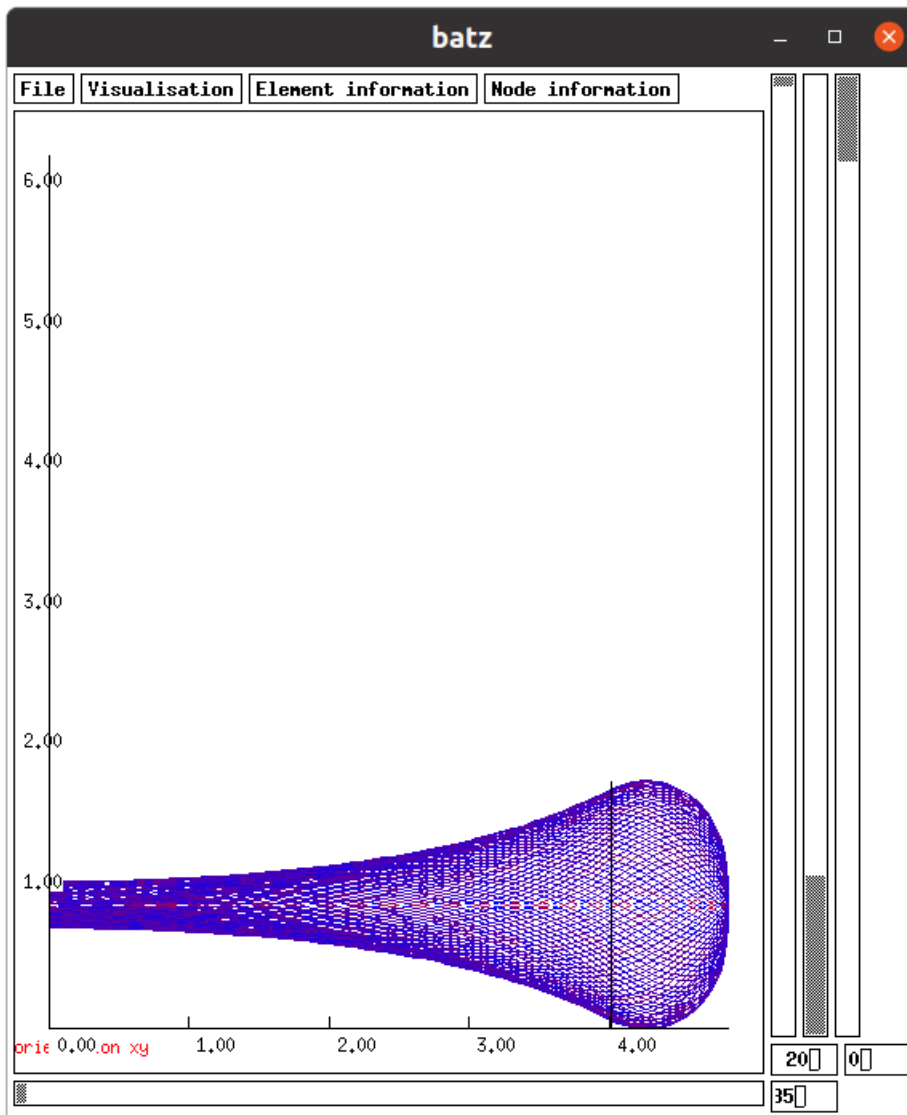


Figure 96: The calculated shape of the codend with a volume catch of 0.4m^3 is realistic (~femnet/data_2001/readme/5catch/d4 file).

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
357      -0.0004      -0.00000      0.0002  0.00000      0.6280      7e+01
358      -0.0003      -0.00000      0.0002  0.00000      0.6280      7e+01
359      -0.0004      -0.00000      0.0002  0.00000      0.6280      7e+01
360      -0.0003      -0.00000      0.0001  0.00000      0.6280      7e+01
361      -0.0002      -0.00000      0.0001  0.00000      0.6280      7e+01
362      -0.0002      -0.00000      0.0001  0.00000      0.6280      7e+01
363      -0.0002      -0.00000      0.0001  0.00000      0.6280      7e+01
363      -0.0002      -0.00000      0.0001  0.00000      0.6280      7e+01

file /home/daniel/femnet/data_2001/readme/5catch/d5.sta
catch drag along X (N)      :      978
element drag along X (N)    :      0.222
surface drag along X (N)    :      268
total drag along X (N)      :    1247
forces on the structure along X Y and Z (N) :      1247      0      0
maximal diameter of the catch (m) :      1.452
thickness of the catch (m)   :      0.6280174
effective volume of the catch (m3) :      0.1999999
current amplitude (m/s)     :      1.900
filtered surface (m2)       :      0.02

daniel@daniel-Latitude-E5540:~/femnet/programs$
```

Figure 97: The calculation for a catch of 0.2m^3 (d5) is done in 363 iterations. The catch thickness is 0.6280m (sixth column) , as it is on Figure 89.

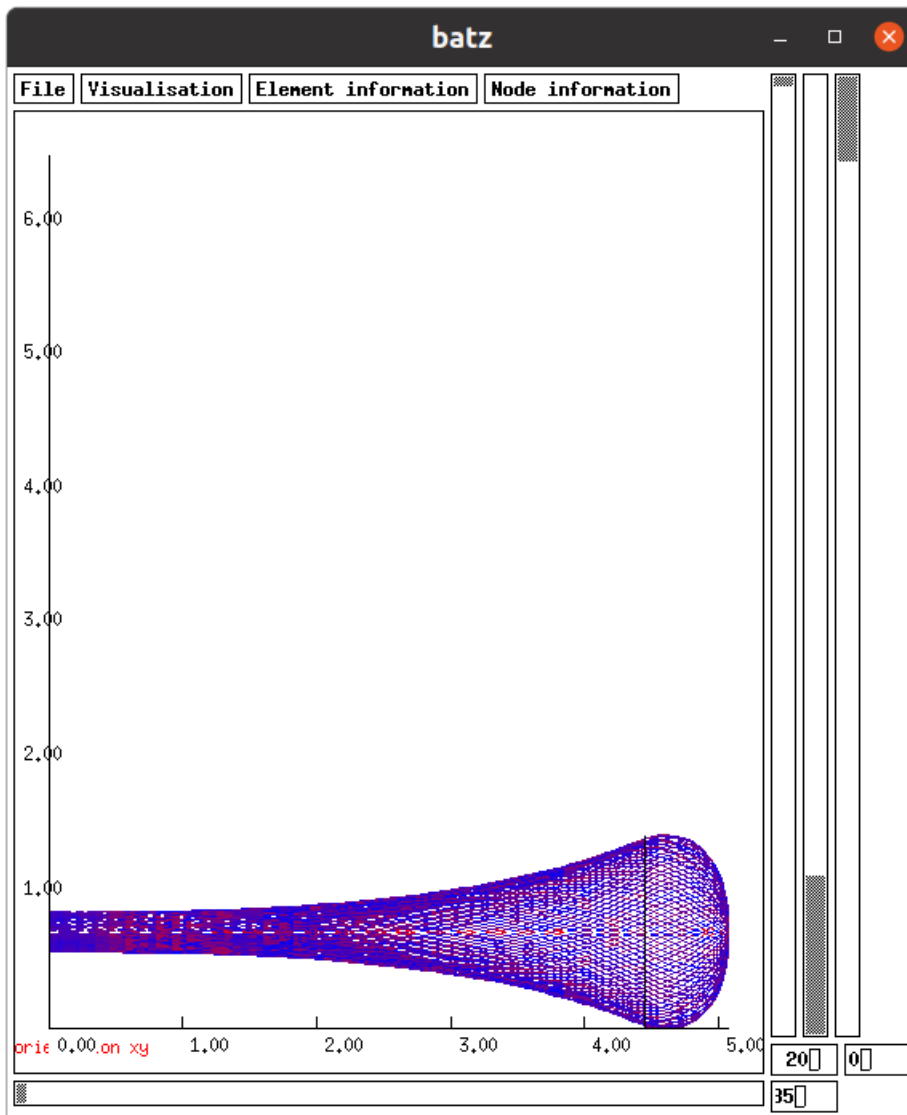


Figure 98: The calculation gives a realistic calculated shape (*~/femnet/data_2001/readme/5catch/d5*) and very similar to the one calculated with an another initial shape (Figure 90).

Several scientific papers used this possibility of FEMNET: [11], [12], [13].

Flexion

In case of flexion resistance in cables (twines, beams), this flexion resistance can be introduced.

Stiff netting

In the example of Figure 99, the twines of the netting have been discretized as cable with a flexion resistance. This flexion resistance is the product of Young modulus (E , N/m^2) by the moment of inertia of the section (I , m^4). This ability of FEMNET has been described in [14].

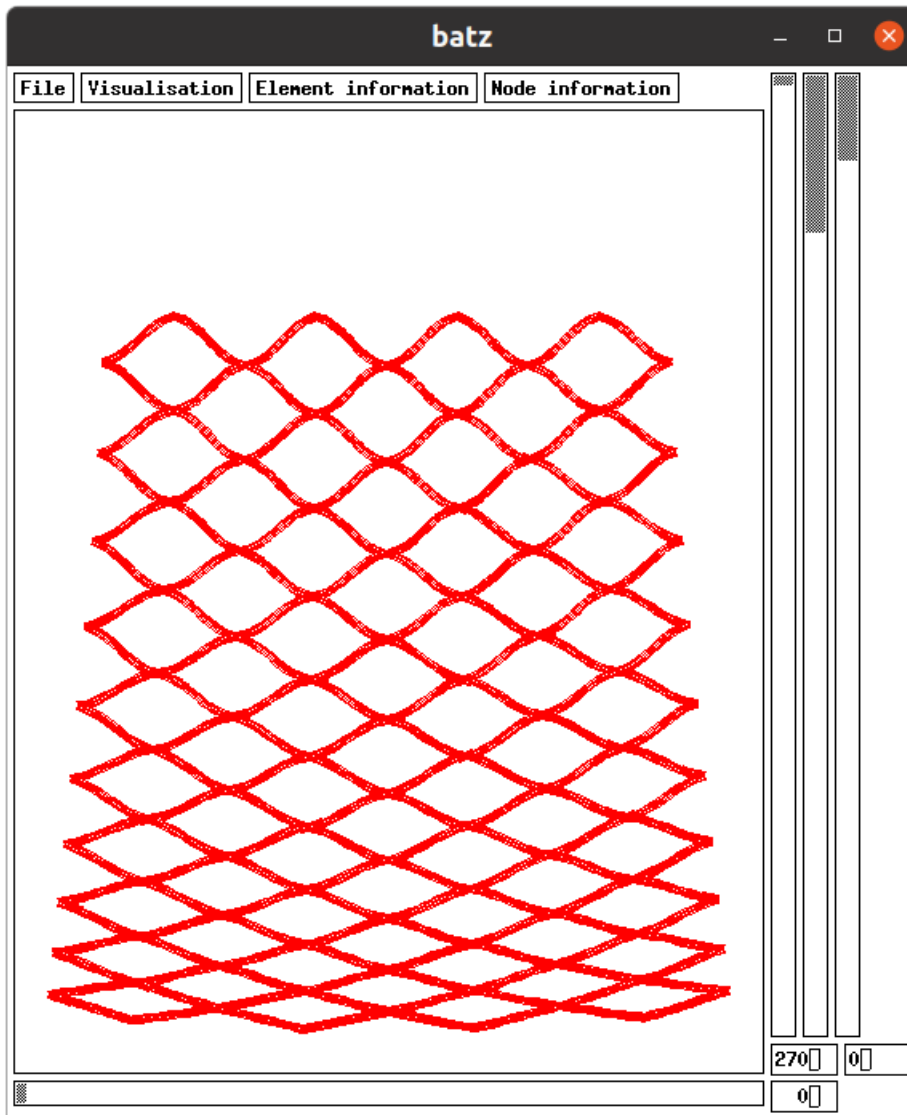


Figure 99: Small panel of suspended netting by its top boundary. The twines are modelled as cables with flexion resistance. View of batz using `~/femnet/data_2001/readme/6flexion/f1`.

The initial position of this panel of netting is visible in Figure 100. Another parameter has to be introduced, the neutral angle between the twines. This angle corresponds to the angle between twines when there is no couple between twines.

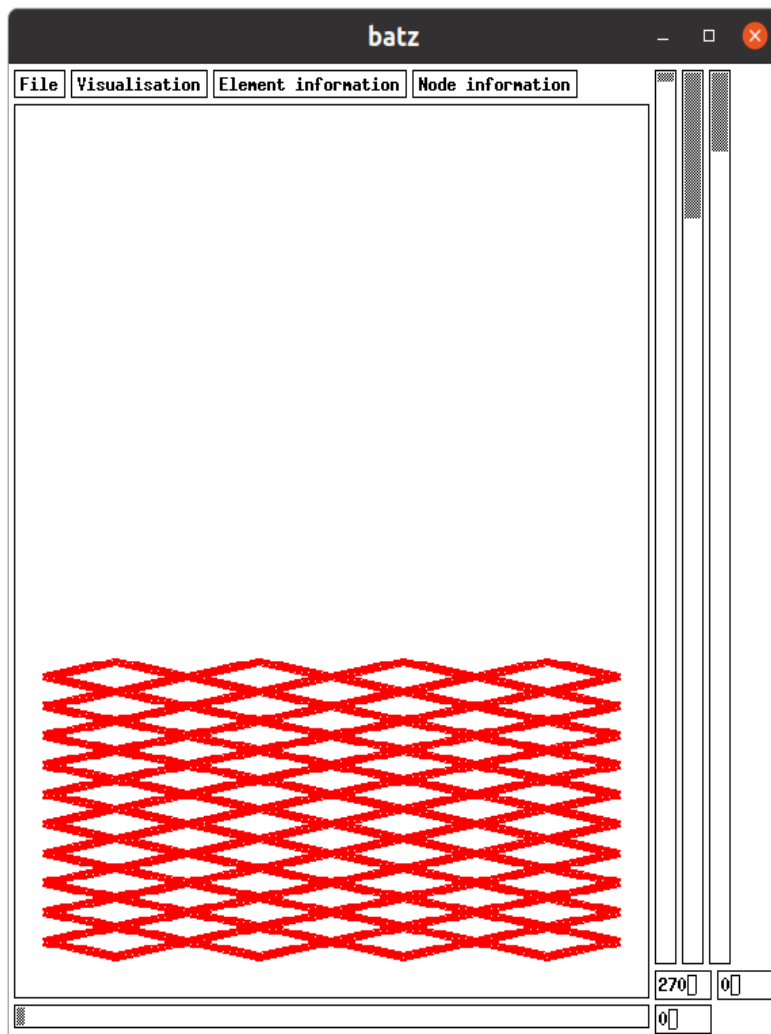


Figure 100: Initial position of the panel of netting. View of batz using `~/femnet/data_2001/readme/6flexion/f1`.

The flexion resistance is introduced in *.don file such as following in case of cable 9 ($EI = 0.00000269 \text{ N.m}^2$):


```
input EI_flexion_cable 9 0.00000269
```

The neutral angle between cables 9 and 10 is introduced as following (neutral angle = 21.155158 deg.):

```
input link_flexion_elem2 9 10 21.155128
```

The command to get the f1.mdg file is (Figure 101):

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/6flexion/f1
```

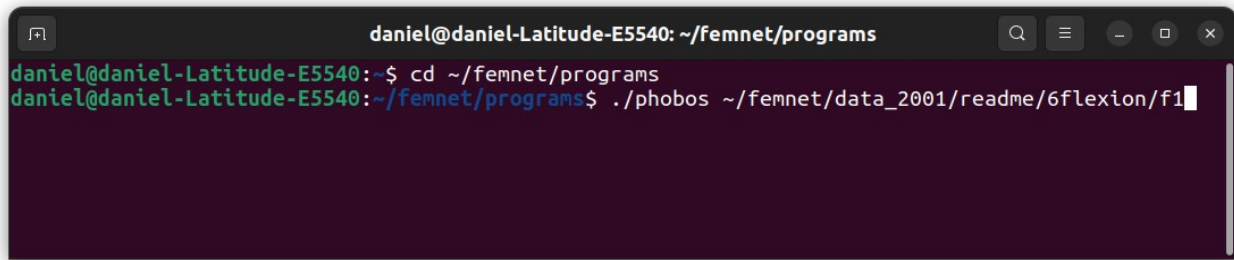
A terminal window with a dark purple background. The title bar reads 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs'. The second command is './phobos ~/femnet/data_2001/readme/6flexion/f1', with the cursor at the end of the line.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/6flexion/f1
```

Figure 101: Commands to get the f1.mdg.

The commands to reach the equilibrium are (Figure 102):

```
cd ~/femnet/programs
./unix ~/femnet/data_2001/readme/6flexion/f1
```

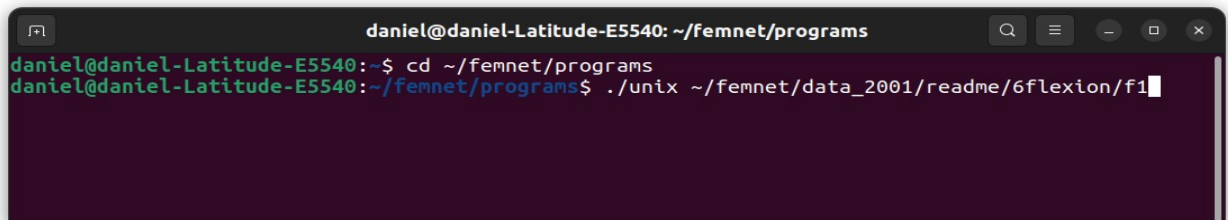A terminal window with a dark purple background. The title bar reads 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs'. The second command is './unix ~/femnet/data_2001/readme/6flexion/f1', with the cursor at the end of the line.

```
daniel@daniel-Latitude-E5540:~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/6flexion/f1
```

Figure 102: Commands to calculate the equilibrium.

cylindrical bar made of polyamide

A second example of flexion resistance is given, it is made of 4 cables (bars) with a flexion resistance ($EI = 300000 \text{ N.m}^2$, equivalent of resistance of cylinder of polyamide of 0.2m in diameter). This resistance is given in *.don file by:

```
input EI_flexion_cable 1 300000
input EI_flexion_cable 2 300000
input EI_flexion_cable 3 300000
input EI_flexion_cable 4 300000
```

The cables are aligned. This is given by:

```
input link_flexion_elem2 1 2 180.0
input link_flexion_elem2 2 3 180.0
input link_flexion_elem2 3 4 180.0
input link_flexion_elem2 4 1 180.0
```

That means that the cables 1 and 2 have an angle between them (without stress) of 180.0 deg.

The initial position of the 4 cables is given in Figure 103.

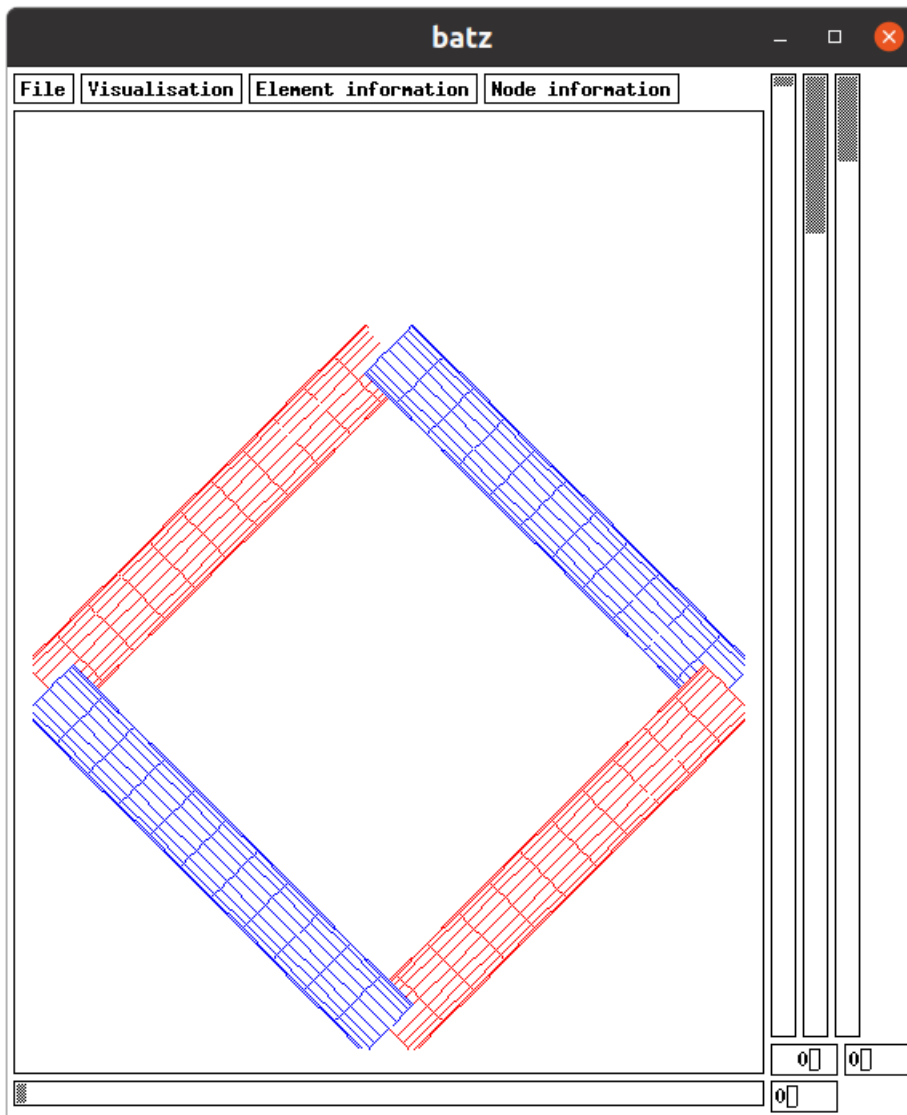


Figure 103: Initial position of 4 cables with a flexion resistance. View of batz using `~/femnet/data_2001/readme/6flexion/c1`.

The equilibrium is displayed in Figure 104.

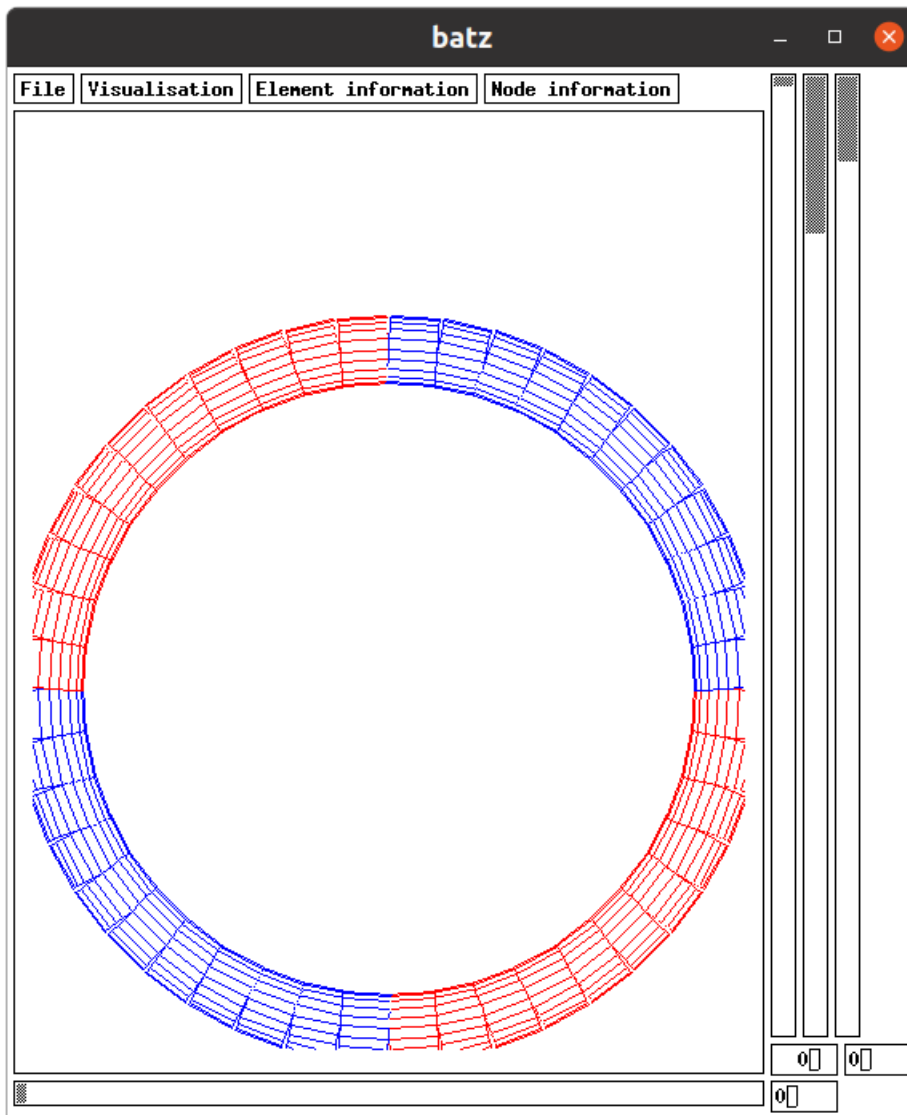
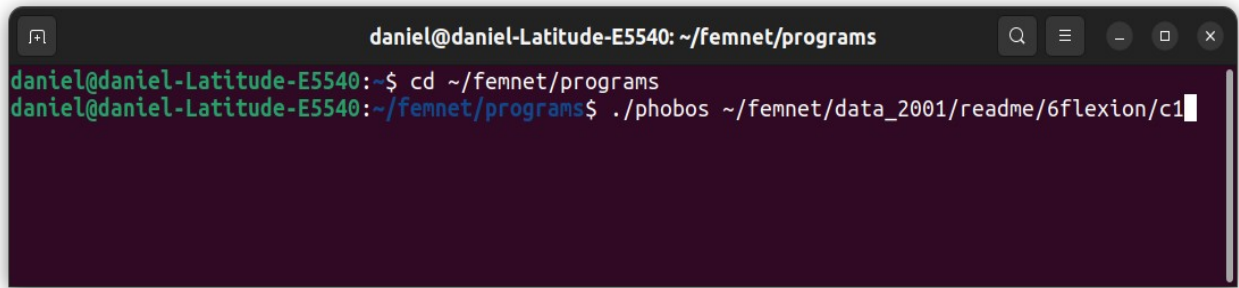


Figure 104: Final position (equilibrium) of the 4 cables with a flexion resistance. View of batz using `~/femnet/data_2001/readme/6flexion/c1`.

The command to get the c1.mdg file is:

```
cd ~/femnet/programs
```

```
./phobos ~/femnet/data_2001/readme/6flexion/c1
```

A terminal window with a dark background and light green text. The title bar reads 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs'. The second command is './phobos ~/femnet/data_2001/readme/6flexion/c1', with the cursor at the end of the line.

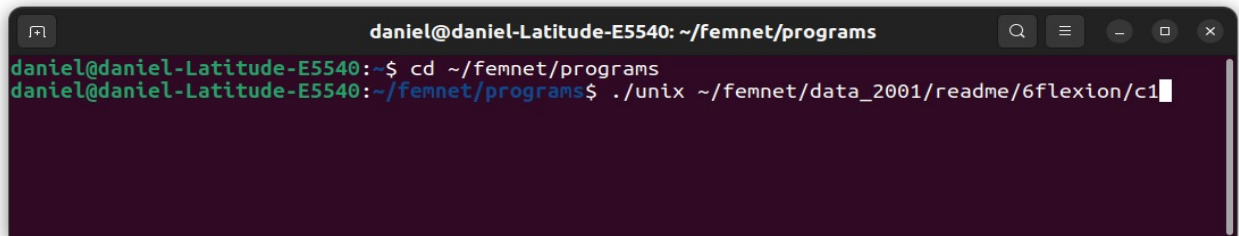
```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/6flexion/c1
```

Figure 105: Commands to get *c1.mdg*.

The commands to reach the equilibrium are:

`cd ~/femnet/programs`

`./unix ~/femnet/data_2001/readme/6flexion/c1`

A terminal window with a dark background and light green text. The title bar reads 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs'. The second command is './unix ~/femnet/data_2001/readme/6flexion/c1', with the cursor at the end of the line.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/6flexion/c1
```

Figure 106: Commands to reach the equilibrium (*c1.sta*).

The result of these commands is shown in Figure 107. That shows that the equilibrium is reached in 1396 iterations.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
830 83139372.0943 1.20966 17296593.1731 0.54304 1e+06
840 -110102555.7815 2.67305 16520149.4199 0.85153 1e+06
850 -40578168.0527 294.16356 15436244.8205 67.94791 1e+06
860 -2321199.2188 -1.62378 926172.0403 0.64767 1e+06
870 -94920.0079 -0.06373 35469.7622 0.02620 1e+06
880 -5184.9853 -0.00396 2361.5945 0.00183 1e+06
890 -371.6301 -0.00029 192.9600 0.00015 1e+06
900 -28.3918 -0.00002 16.2938 0.00001 1e+06
910 -2.2430 -0.00000 1.4016 0.00000 1e+06
920 -0.1817 -0.00000 0.1219 0.00000 1e+06
930 -0.0150 -0.00000 0.0107 0.00000 1e+06
940 -0.0013 -0.00000 0.0009 0.00000 1e+06
950 -0.0001 -0.00000 0.0001 0.00000 1e+06
959 -0.0000 -0.00000 0.0000 0.00000 1e+06 968

file /home/daniel/femnet/data_2001/readme/6flexion/c1.sta

daniel@daniel-Latitude-E5540:~/femnet/programs$
```

Figure 107: The equilibrium is reached in 959 iterations.

Gravity catch

A gravity catch is a catch which presses on the netting bag by its own weight. It is expected that the netting is not in water. The “catch” could be an amount of fish but also bags of water such as it is in [15].

The catch is limited by a horizontal surface. All the catch volume is below this surface. This volume is determined in *.don file.

In the following example (`~/femnet/data_2001/readme/13gravity_catch/g1.don`) the netting bag is made of 2 panels of netting which are closed at the bottom by 4 ropes and hold at the top by 4 rigid cables.

The view of the initial shape of the netting bag is on Figure 109 and Figure 108.

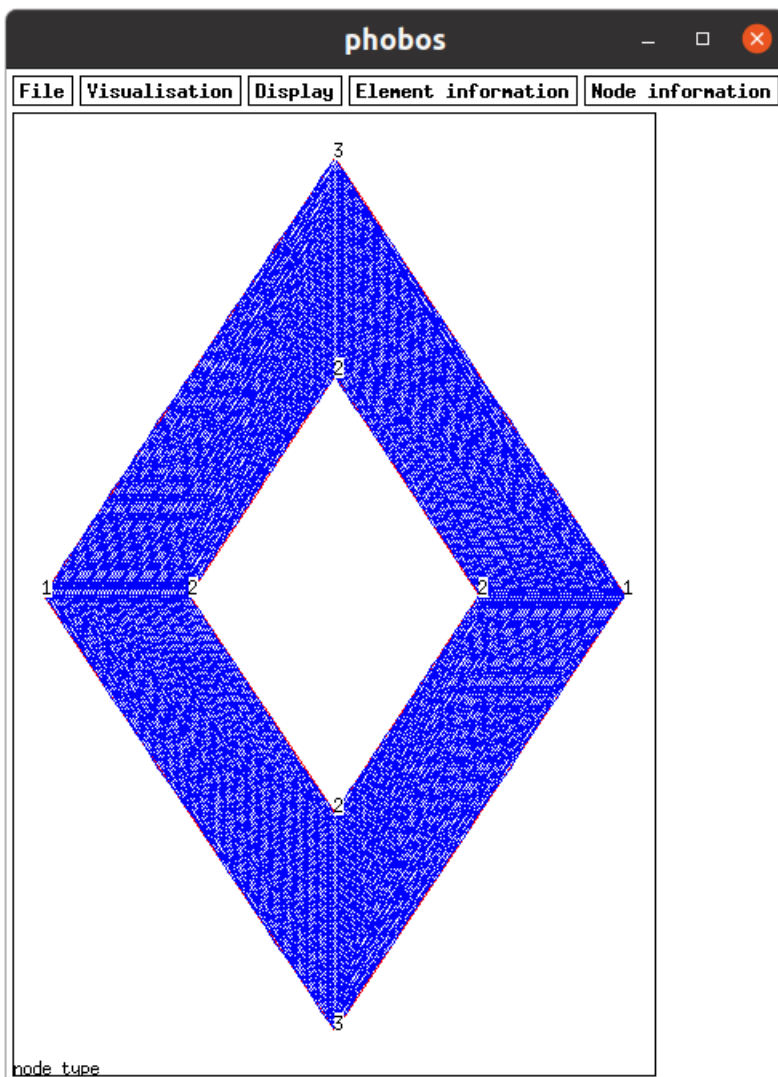


Figure 108: Top view of the initial shape of the netting bag. The nodes type are shown. View of phobos using `~/femnet/data_2001/readme/13gravity_catch/g1`.

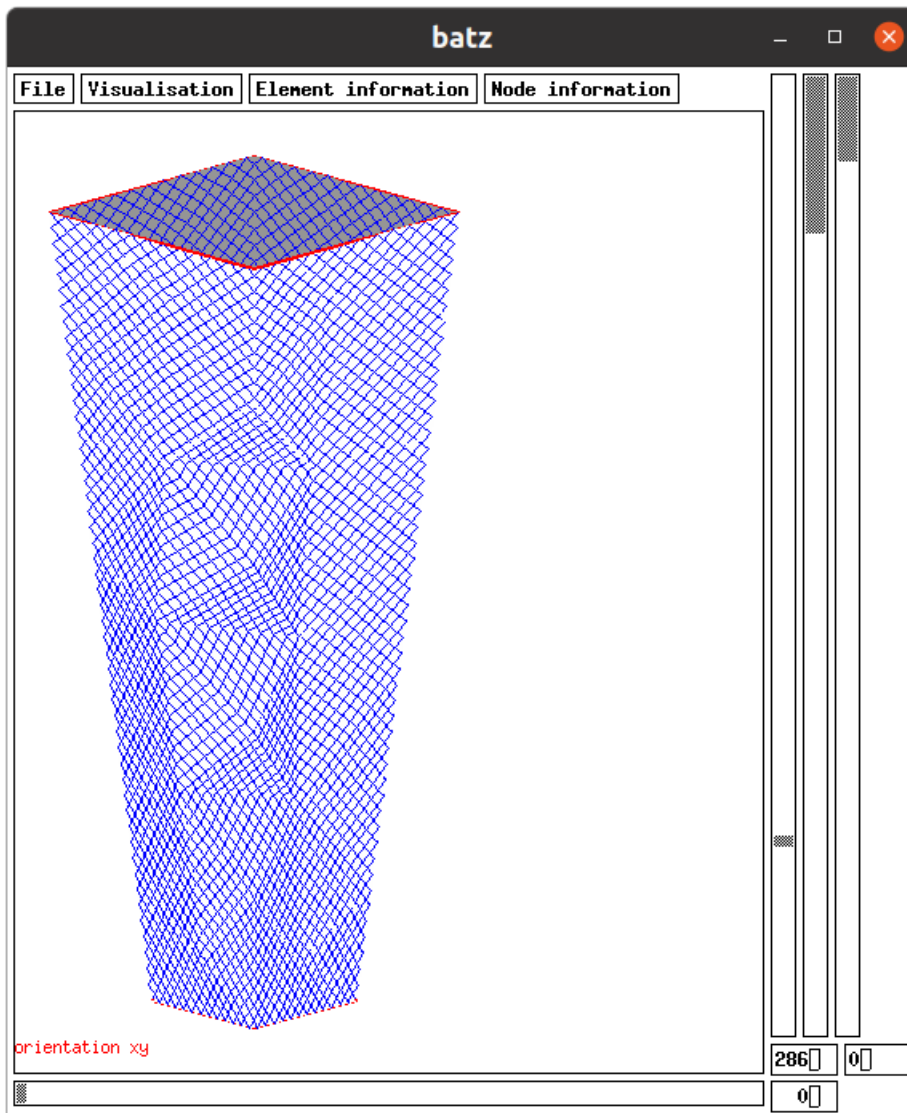


Figure 109: 3D view of the initial shape of the netting bag. The bag is closed at the bottom by 4 ropes and it is hold at the top by 4 rigid cables. View of batz using `~/femnet/data_2001/readme/13gravity_catch/g1`.

The nodes at the top are fixed along Z axis. The nodes of type 3 (Figure 108) are also fixed along X axis when the nodes of type 1 are also fixed along Y axis. The 4 cables at the top have a flexion rigidity of 1127 N.m². This rigidity is equivalent of a rigidity of a iron bar of 18mm of diameter.

The pressure of the catch occurs on one side of the netting, the inner one. To verify that the inner and outer sides are well defined, it can be shown in `./batz` using `vizualisation, orientation_xy` (Figure 109). The grey surface is the inner side of the netting. If the orientation of a panel is not appropriate, replace V coordinates (V1, V2 ...) of the panel by the opposite (-V1, -V2 ...). It could be done also by replacing U coordinates par their opposite.

The volume of the catch is determined in `g1.don`:

CATCH DESCRIPTION

Volume (m3): 0.026500

Accuracy on this volume (m3): 1e-07

The catch is subject to the gravity and not to the drag by (in g1.don):

```
input catch_gravity 1000
```

The four bars at the entry of the cod-end are subject to flexion rigidity ($EI = \text{N.m}^2$) by (in g1.don):

```
input EI_flexion_cable 5 1127
```

```
input EI_flexion_cable 6 1127
```

```
input EI_flexion_cable 7 1127
```

```
input EI_flexion_cable 8 1127
```

The four bars at the entry of the cod-end are welded together (the angle between them is 180deg.) by (in g1.don):

```
input link_flexion_elem2 5 6 180
```

```
input link_flexion_elem2 6 7 180
```

```
input link_flexion_elem2 7 8 180
```

```
input link_flexion_elem2 8 5 180
```

The commands to create the g1.mdg file are (Figure 110) :

```
cd ~/femnet/programs
```

```
./phobos ~/femnet/data_2001/readme/13gravity_catch/g1
```

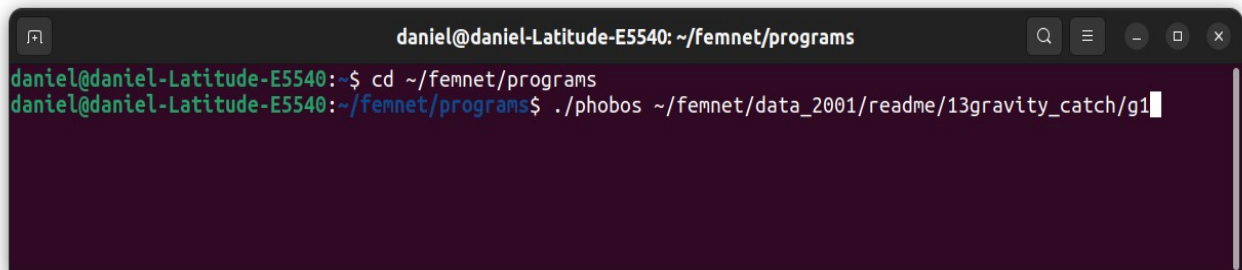


Figure 110: Commands to create the file g1.mdg.

The commands to calculate the equilibrium of g1 and record the result in g1.sta are (Figure 111):

```
cd ~/femnet/programs
```

```
./unix ~/femnet/data_2001/readme/13gravity_catch/g1
```

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/13gravity_catch/g1

```

Figure 111: Commands for the equilibrium calculation of g1.

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
Stiffness matrix width after resolution      : 127
Stiffness matrix width on right after resolution : 82
Stiffness matrix width on left after resolution : 82
nbiter      Max (N)      Max (m)      Mean (N) Mean (m)      thick (m)  kadd (N/m)
100         19289.4253    0.00097    4389.3143 0.00022    0.5776     2e+07
200         -240.9848     -0.00102    71.3289 0.00030    0.5626     2e+05
300         -38.4941      -0.00093    8.8830 0.00022    0.4230     4e+04
400         -15.1025      -0.00060    4.2249 0.00017    0.2821     3e+04
500         -375.2473     -0.00222    18.7663 0.00092    0.2995     5e+03
600         -6.3276      -0.00136    2.6967 0.00054    0.3737     5e+03
700          0.0300       -0.00004    0.0028 0.00000    0.4522     7e+02
800         -1.4105      -0.00041    0.0979 0.00003    0.4521     3e+01
900         -0.1401      -0.00015    0.0090 0.00000    0.4522     6e+01
1000        -0.0058       -0.00003    0.0004 0.00000    0.4522     1e+02
1085        -0.0001      -0.00000    0.0000 0.00000    0.4522      2    1202

file /home/daniel/femnet/data_2001/readme/13gravity_catch/g1.sta
density 1000 kg/m^3      :      0
maximal diameter of the catch (m) :      0.380
thickness of the catch (m) :      0.4521613
effective volume of the catch (m3) :      0.0265000

daniel@daniel-Latitude-E5540:~/femnet/programs$

```

Figure 112: Iterations of the calculation of the equilibrium of g1. The first column is the iteration, the second is the maximal disequilibrium (N) per coordinate, the third the maximal displacement (m) per coordinate, the fourth the mean disequilibrium (N) per node, the fifth the mean displacement (m) per node, the sixth the thickness of the catch (m, distance between the front of the catch and the rearrest part of the netting), the seventh the added stiffness (N/m) to the stiffness matrix in order to avoid singular stiffness matrix. The calculation converges in 1085 iteration, when the fourth column is less the convergence threshold (N). The thickness of the catch is 0.4522m (sixth column)

In order to have a finer discretization, the meshing step of netting panels is decreased to 0.0465m in g2.don in place of 0.186m in g1.don:

Meshing step (m): 0.0465

To get the equilibrium of g2, do (Figure 113, Figure 114, Figure 115):

`cd ~/femnet/programs`

```
./phobos ~/femnet/data_2001/readme/13gravity_catch/g2
~/femnet/data_2001/readme/13gravity_catch/g1
./unix ~/femnet/data_2001/readme/13gravity_catch/g2
```

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/13gravity_catch/g2 ~/fe
mnet/data_2001/readme/13gravity_catch/g1
```

Figure 113: Command to create g2.mdg and a first evaluation of g2.sta from g1.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
fin de lecture du fichier           /home/daniel/femnet/data_2001/readme/13gravity_catch/g1.mdg
lecture du fichier                  /home/daniel/femnet/data_2001/readme/13gravity_catch/g1.sta
fin de lecture du fichier           /home/daniel/femnet/data_2001/readme/13gravity_catch/g1.sta
ecriture de ce fichier              /home/daniel/femnet/data_2001/readme/13gravity_catch/g2.sta
fin d ecriture de ce fichier        /home/daniel/femnet/data_2001/readme/13gravity_catch/g2.sta
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/13gravity_catch/g2
```

Figure 114: Command for the calculation of the equilibrium of g2.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
Stiffness matrix width on left after resolution      : 230
nbiter      Max (N)      Max (m)      Mean (N) Mean (m)      thick (m)      kadd (N/m)
100          24.8869      0.00000      1.9207  0.00000      0.4618      5e+06
200           5.6810      0.00002      1.2180  0.00001      0.4580      2e+05
300           5.7525      0.00015      1.0513  0.00003      0.4397      4e+04
400          -14.3935      0.00004      0.9410  0.00001      0.3962      1e+05
500           4.4543      0.00007      0.8088  0.00001      0.3823      6e+04
600          -4.6744      -0.00003      0.7058  0.00000      0.3712      1e+05
700          -4.5161      -0.00002      0.6572  0.00000      0.3633      2e+05
800           4.3145      -0.00011      0.6140  0.00002      0.3560      4e+04
900           4.3641      0.00002      0.5608  0.00000      0.3505      2e+05
1000          4.3629      0.00006      0.5477  0.00001      0.3488      7e+04
1100          -4.4750      -0.00006      0.4794  0.00001      0.3431      8e+04
1200          -2.1145      -0.00012      0.4041  0.00003      0.3332      1e+04
1300          -0.6013      -0.00013      0.3370  0.00007      0.3238      4e+03
1400          -0.4221      -0.00018      0.3198  0.00013      0.3201      2e+03
1500          -18.0292      -0.00036      0.4569  0.00031      0.3237      1e+03
1600          -0.2974      -0.00015      0.1649  0.00008      0.3385      2e+03
1700          -0.1241      -0.00014      0.0040  0.00003      0.3787      7e+01
1800          -0.1249      -0.00007      0.0006  0.00000      0.3789      2e+01
1865          -0.0001      -0.00000      0.0000  0.00000      0.3789      2e+01      2095

file /home/daniel/femnet/data_2001/readme/13gravity_catch/g2.sta
density 1000 kg/m^3      :      0
maximal diameter of the catch (m)      :      0.352
thickness of the catch (m)      :      0.3788795
effective volume of the catch (m3)      :      0.0264999

daniel@daniel-Latitude-E5540:~/femnet/programs$
```

Figure 115: Calculation of the equilibrium of g2 in 1865 iterations stored in g2.sta.

The equilibrium is reached in 1859 iterations (Figure 115). The shape is displayed on Figure 116 using the command:

```
cd ~/femnet/programs
```

```
./batz
```

And doing:

- a) File, load_final_file, that loads the equilibrium shape of the structure.
- b) Visualisation, u_twines, v_twines, that displays the twines of the netting.
- c) Visualisation, catch_front_surface, that displays the limit of the catch.

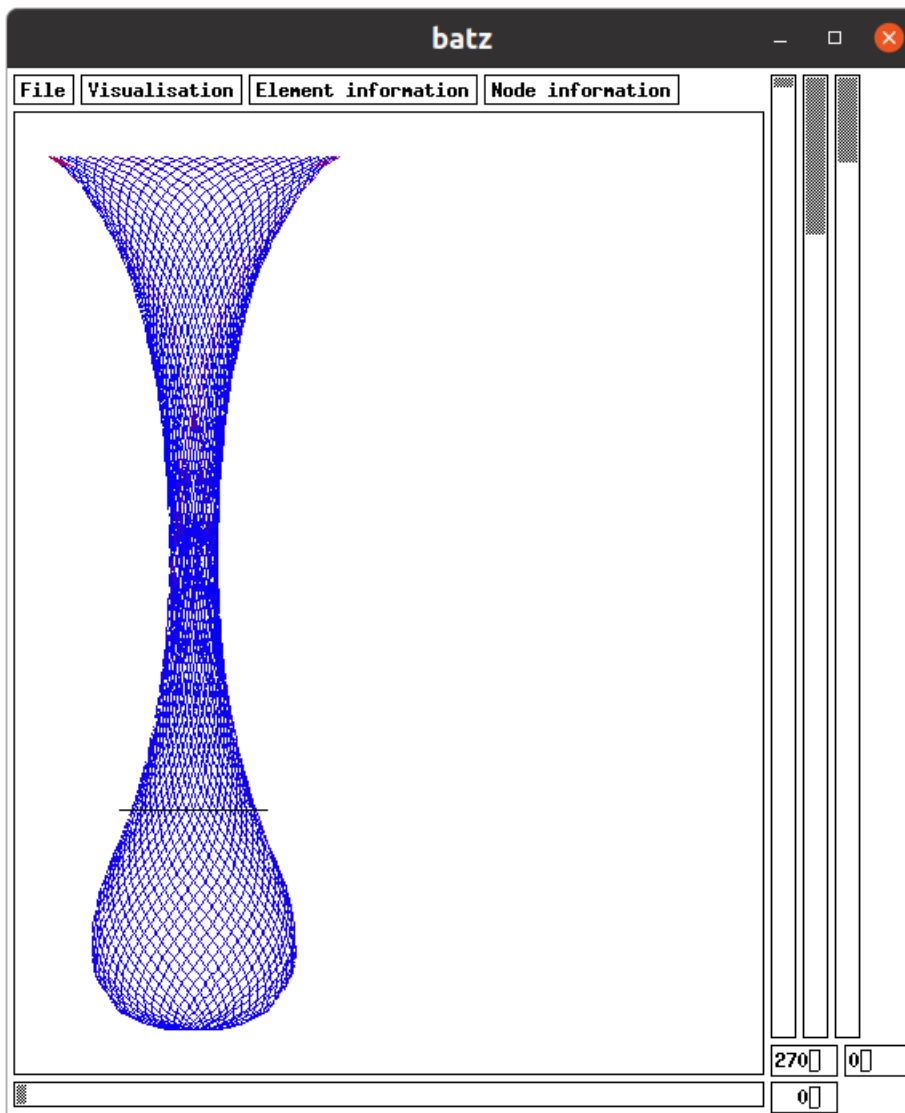


Figure 116: Equilibrium of the netting bag. The catch is below the horizontal line. View of batz using
~/femnet/data_2001/readme/13gravity_catch/g2.

Dynamic examples

FAD

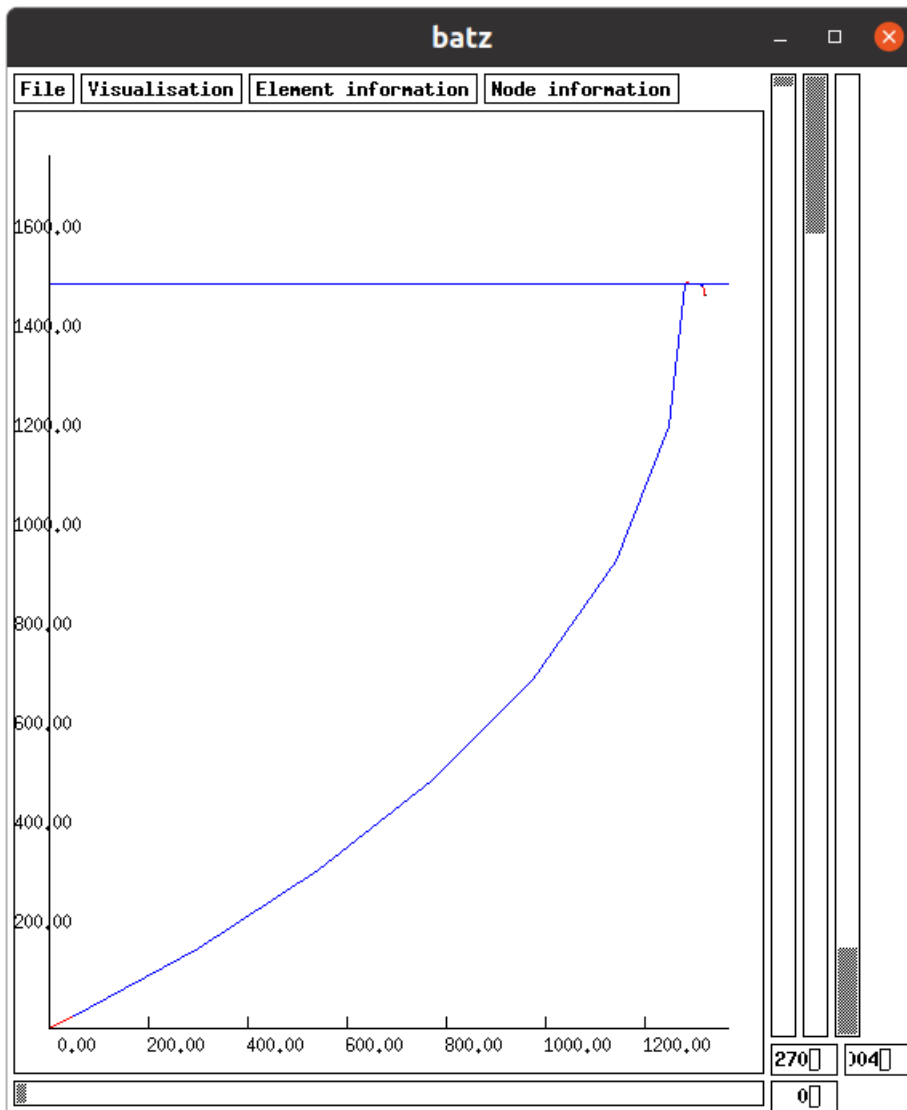


Figure 117: The FAD moored by 1500m deep waters and in current of 1.5m/s. View of batz using ~/femnet/data_2001/readme/7fad/g3.

The wave conditions are:

Wave period = 14s,

Wave height = 10 m,

Depth = 1500 m.

These conditions are displayed on Figure 118. It can be seen that the wave model of Stokes 2d order is adapted. To choose this wave model use in *.don file:

```
input wave_model 2
```

The Airy wave model ([input wave_model 1](#)) and wave model of Stokes 3d order in deep waters ([input wave_model 3](#)) can also be used, but here it is the wave model of Stokes 2d order which is adapted.

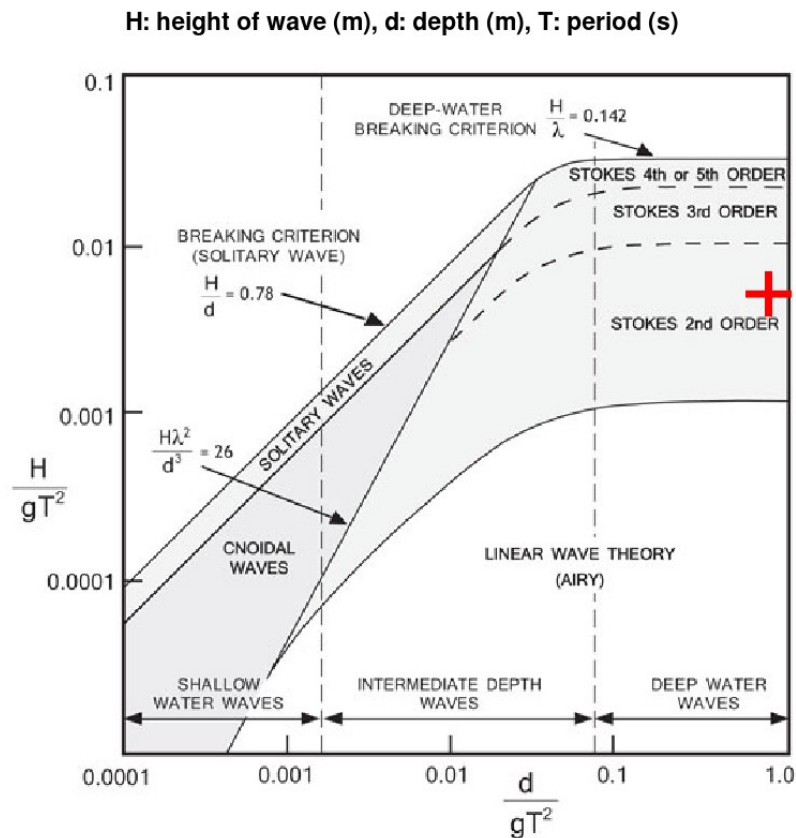


Figure 118: The wave conditions of the FAD are shown with the red cross. The wave model of Stokes 2d order is adapted to such wave conditions, in this case use [input wave_model 2](#) in the *.don file.

The result of calculation is shown on Figure 117 and Figure 119. On Figure 119 a zoom on the top is displayed. It can be seen the static position (mostly on the left) and the trajectories of nodes in wave (mostly on the right due to the drift).

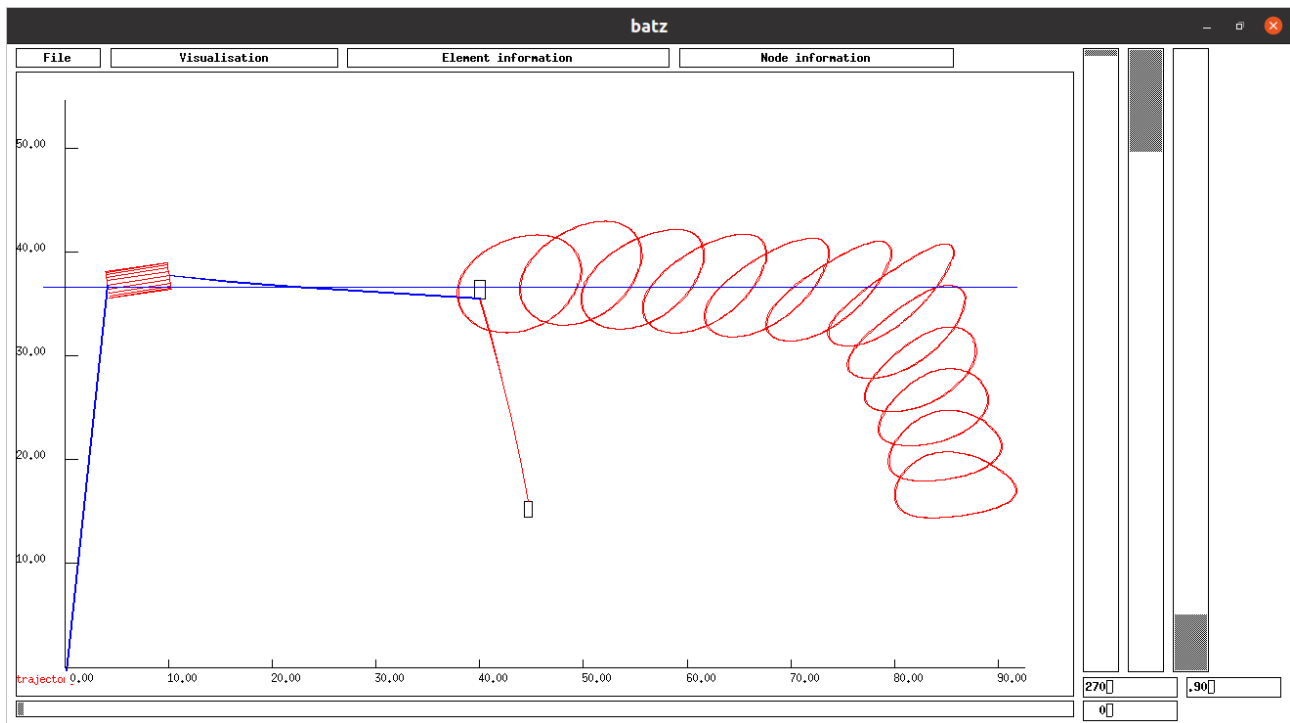


Figure 119: Static position (on the left) and nodes trajectories during the last wave period (on the right due to the wave drift) of the top of the FAD assessed with the Stokes 2d order wave model. View of batz using `~/femnet/data_2001/readme/7fad/g3`.

The commands to create mdg file are:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/7fad/g3
```

The commands to calculate the equilibrium in static conditions and to record this equilibrium in sta file are:

```
cd ~/femnet/programs
./unix ~/femnet/data_2001/readme/7fad/g3
```

The commands to calculate the equilibrium in dynamic conditions and to record this equilibrium in dyn file are:

```
cd ~/femnet/programs
./dyna ~/femnet/data_2001/readme/7fad/g3
```

Mussels longline

In the following example of mussels longline (8long_line/m1) there are 11 buoys (3 m³ at the extremities and 1.3m³ for the others) and 41 mussels lines (7m long and 0.29m width, Figure 120). The environmental conditions are a depth of 15m, a current of 0.5m/s and a wave of 9s for 4m high. The mooring lines are made of 2 ropes with an intermediate float. The fixations to the bottom sea are escaped of 210m.

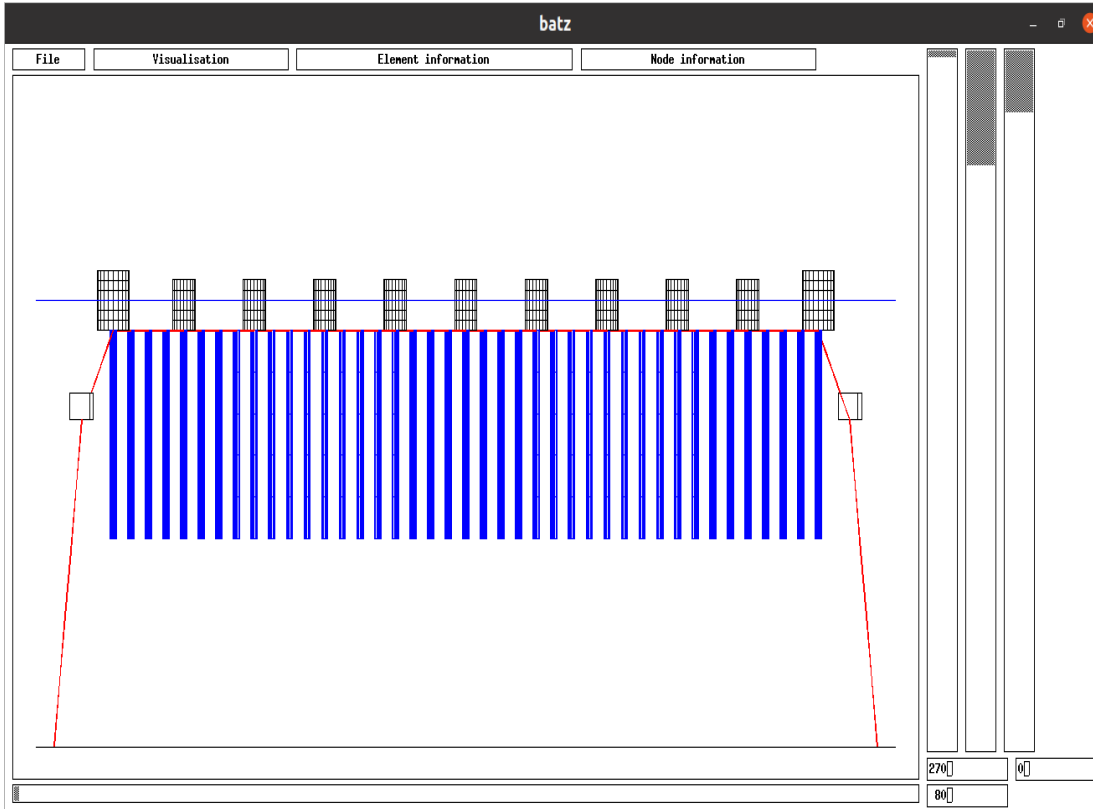


Figure 120: The longline is made of 11 floats (black), 41 mussels lines (blue), one headline (red) and 2 mooring lines at each extremity (red). For getting this view do `cd ~/femnet/programs, ./batz, File, load_initial_file, Visualisation, Cable/bar_contour, Visualisation, node_contour, Visualisation, free_surface`, turn the view of 270 degrees in the left vertical cursor and turn of 80 degrees in the horizontal cursor. View of batz using `~/femnet/data_2001/readme/8long_line/m1`.

The intermediate floats on the mooring line are defined as a specific type of node:

No du type :	3
Mass X,Y,Z (kg):	1.140000 1.140000 1.140000
Added mass X,Y,Z (kg):	1.140000 1.140000 1.140000
Length X,Y,Z (m):	0.900000 0.900000 0.900000
Drag coefficient X,Y,Z:	1.200000 1.200000 1.200000
External forces X,Y,Z (N):	0.000000 0.000000 0.000000
Displacement X,Y,Z:	0 0 0

```
Limits X,Y,Z (m):          0.000000  0.000000  0.000000
Limits sense X,Y,Z:        0  0  0
Symmetry X,Y,Z:            0  0  0
```

It can be seen that the mass of this node is 1.14Kg and this size is 0.900000m by 0.900000m by 0.900000m.

In order to ease to modelling of the structure in relation with the free surface (buoyancy, hydrodynamic drag which are dependant of the immersion in the water) the volume of the elements (bar element for cables and triangular element for nettings), is split between extremities of these elements. It can be seen on the right of Figure 121, a float modelled in 6 bar elements. The volume of the float is split between the 7 nodes and modelled by cubes (on the left of Figure 121).

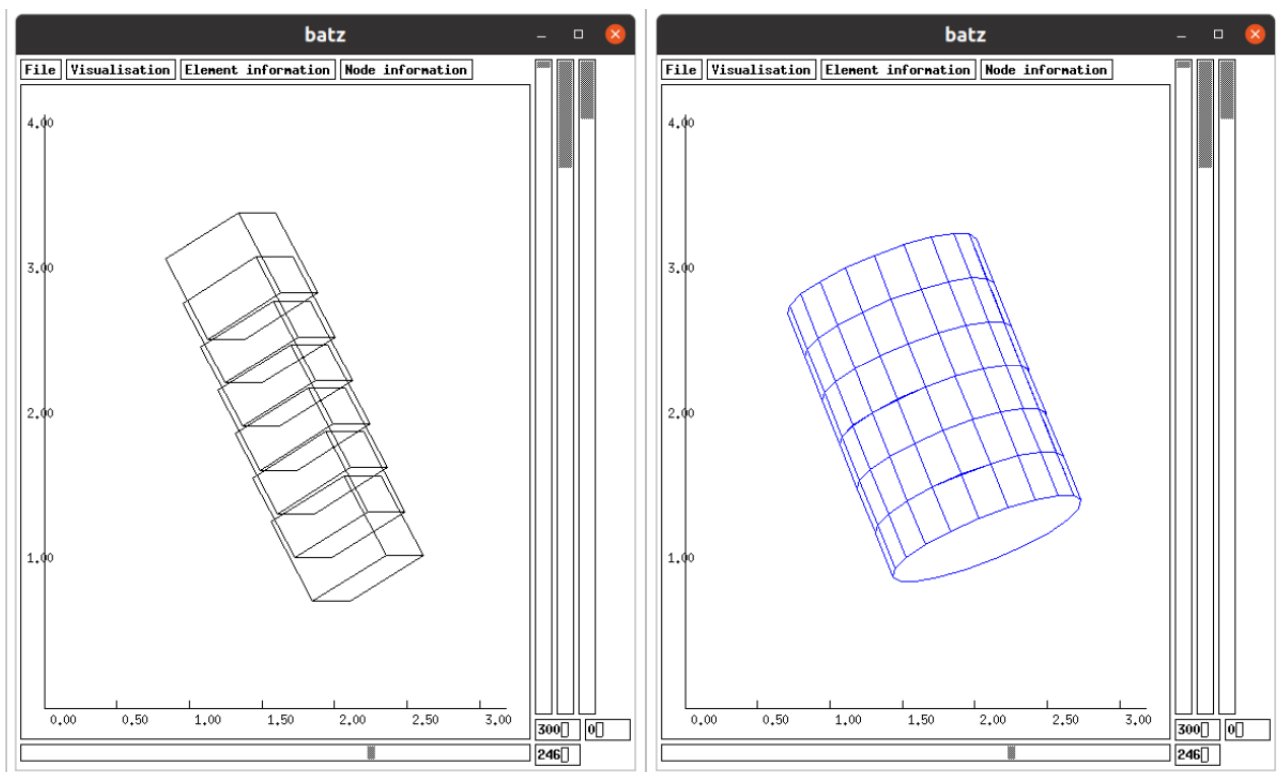


Figure 121: A float is modelled by 6 bar elements (on the right). The volumes of bar elements are split in cubes on bar element extremities (on the left). View of batz using `~/femnet/data_2001/readme/8long_line/m1`.

If the float is modelled in 1 bar element (left of Figure 122). The volume of the float is split between the 2 cubes (on the right of Figure 122). In this case, because the modelling is coarser than on Figure 121, the modelling is also coarser.

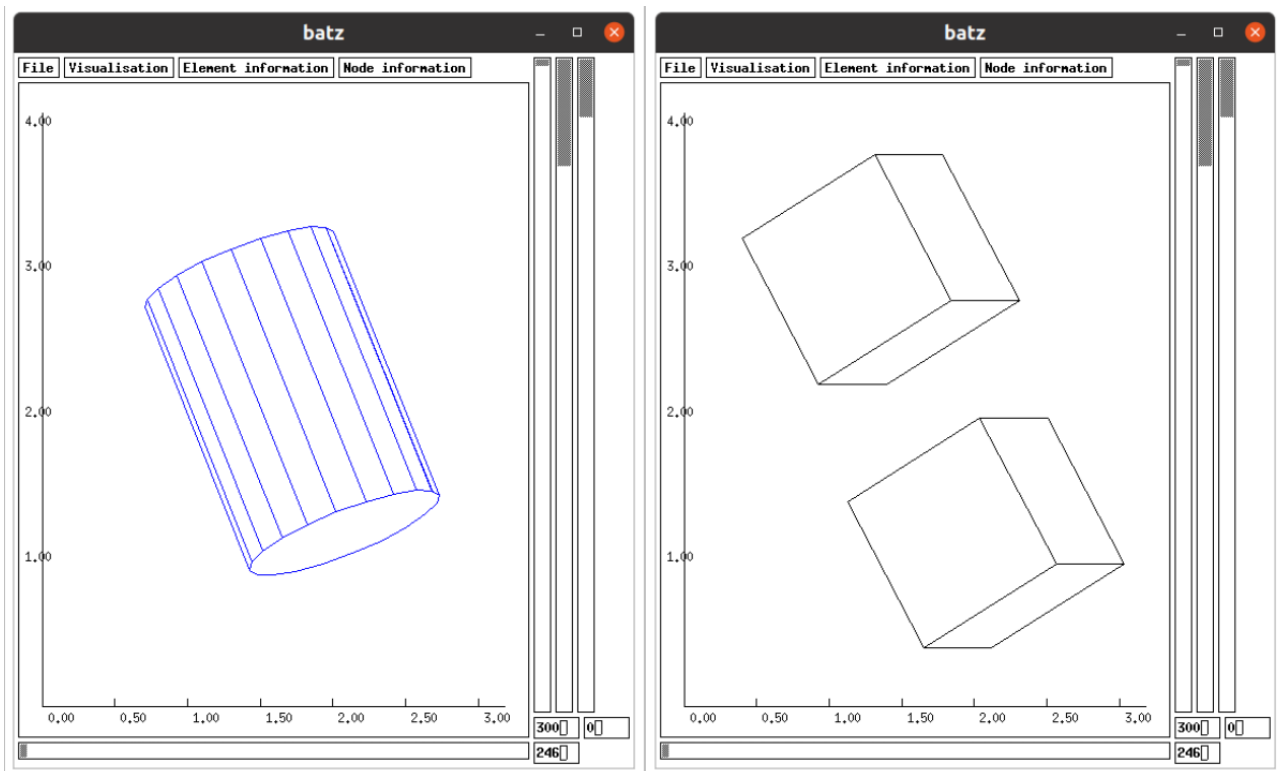


Figure 122: A float is modelled by 1 bar element (on the left). The volume of bar element is split in cubes on bar element extremities (on the right). This modelling is coarser than on Figure 121. View of batz using `~/femnet/data_2001/readme/8long_line/m2`.

Once the float is modelled in several bar elements (Figure 121), it must be introduced a resistance in flexion between these bar elements to avoid articulations between these bar elements. This resistance is introduced using the following line (in the case of cable/float 82) in the *.don file:

```
input EI_flexion_cable 82 10000
```

This line means that the cable (float) 82 has a flexion resistance (EI) of 10000N.m².

The m1.mdg file is got using:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/8long_line/m1
```

The static position (8long_line/m1.sta, without wave) is got using:

```
cd ~/femnet/programs
./unix ~/femnet/data_2001/readme/8long_line/m1
```

```

daniel@daniel-Latitude-E5540: ~/femnet/programs
Stiffness matrix width before renumerotation      : 345
Stiffness matrix width after renumerotation       : 36
Intermediate depth
G/2/PI*T2                                     = 126.466109 m
lambda Stokes 2d order intermediate depth        = 95.572087 m
Structure.openfoam: 0

Stiffness matrix width after resolution           : 107
Stiffness matrix width on right after resolution  : 62
Stiffness matrix width on left after resolution   : 62
nbiter      Max (N)      Max (m)      Mean (N) Mean (m)      kadd (N/m)
100      -156249.1853    -0.00011    1685.1635  0.00000    1e+09
200      -98980.2691     -0.00502    1596.5557  0.00008    2e+07
300      -2295.3059      -0.01199    424.4743   0.00222    2e+05
400      -331.1447       -0.05669    227.3535   0.03736    6e+03
500       766.2303        -0.05871    103.6176   0.02251    3e+03
600       55.8528         0.32902     50.0657    0.28936    2e+02
700      -852.1148        0.38924     11.7952    0.21545    2e+01
800       0.0257          0.00110     0.0208     0.00089    2e+01
814       0.0119          0.00051     0.0096     0.00041    2e+01      826

file /home/daniel/femnet/data_2001/readme/8long_line/m1.sta
mussels long line      : 0
Immersion extremity buoy (m) : -0.70
Immersion central buoy (m)  : -1.12
current amplitude (m/s)    : 0.500

daniel@daniel-Latitude-E5540:~/femnet/programs$

```

Figure 123: The static equilibrium of the mussels long line is reach in 814 iterations.

The shape of the long line in static conditions is displayed on Figure 124.

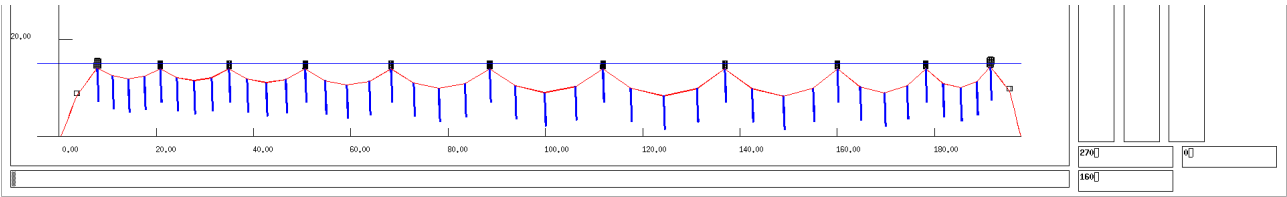


Figure 124: Static position of the mussels long line m1. View of batz using ~/femnet/data_2001/readme/8long_line/m1.

The wave conditions and the depth lead to use the Stokes 2d order wave model as it can be seen on Figure 125.

H: height of wave (m), d: depth (m), T: period (s)

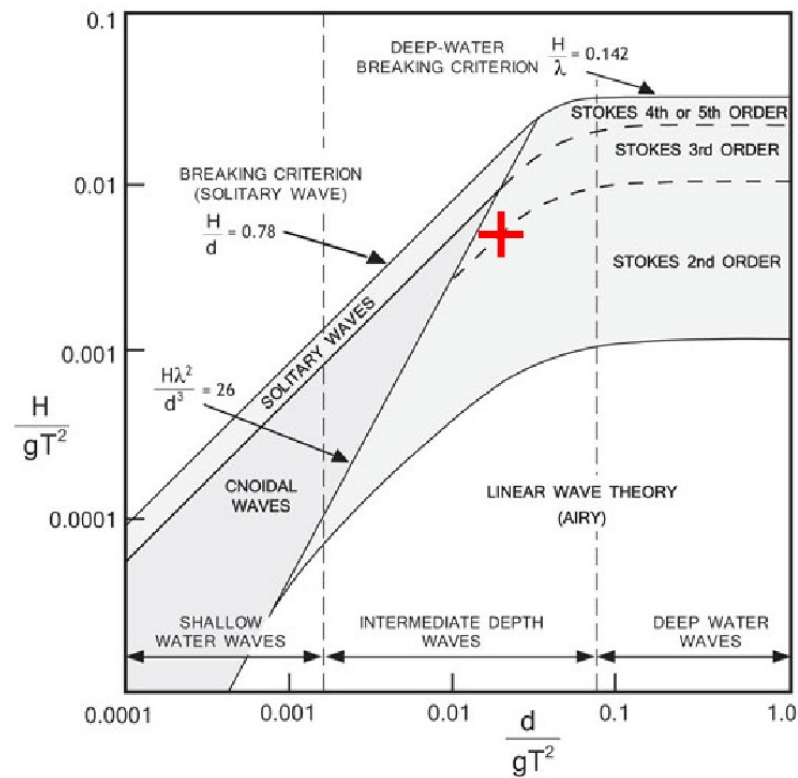


Figure 125: The wave conditions of the mussels long line are shown with the red cross. The wave model of Stokes 2d order is adapted to such wave conditions and depth.

The dynamic equilibrium is got using in a terminal:

```
cd ~/femnet/programs
./dyna ~/femnet/data_2001/readme/8long_line/m1
```

daniel@daniel-Latitude-E5540: ~/femnet/programs

Haul(W)	0	Bottom(W)	0	Cable(W)	19388	Netting(W)	0	Node(W)	2045	nb_iter	59	times/End	46.80 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	19511	Netting(W)	0	Node(W)	1742	nb_iter	87	times/End	46.90 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	19669	Netting(W)	0	Node(W)	1296	nb_iter	76	times/End	47.00 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	19790	Netting(W)	0	Node(W)	789	nb_iter	83	times/End	47.10 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	19847	Netting(W)	0	Node(W)	340	nb_iter	69	times/End	47.20 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	19906	Netting(W)	0	Node(W)	50	nb_iter	75	times/End	47.30 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	19884	Netting(W)	0	Node(W)	-85	nb_iter	40	times/End	47.40 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	19809	Netting(W)	0	Node(W)	-144	nb_iter	27	times/End	47.50 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	19531	Netting(W)	0	Node(W)	-167	nb_iter	25	times/End	47.60 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	18862	Netting(W)	0	Node(W)	-176	nb_iter	25	times/End	47.70 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	18098	Netting(W)	0	Node(W)	-187	nb_iter	24	times/End	47.80 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	17329	Netting(W)	0	Node(W)	-205	nb_iter	24	times/End	47.90 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	16578	Netting(W)	0	Node(W)	-227	nb_iter	24	times/End	48.00 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	15870	Netting(W)	0	Node(W)	-245	nb_iter	29	times/End	48.10 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	15190	Netting(W)	0	Node(W)	-257	nb_iter	39	times/End	48.20 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	14567	Netting(W)	0	Node(W)	-266	nb_iter	52	times/End	48.30 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	14015	Netting(W)	0	Node(W)	-280	nb_iter	69	times/End	48.40 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	13586	Netting(W)	0	Node(W)	-300	nb_iter	93	times/End	48.50 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	13325	Netting(W)	0	Node(W)	-319	nb_iter	41	times/End	48.60 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	13263	Netting(W)	0	Node(W)	-328	nb_iter	52	times/End	48.70 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	13363	Netting(W)	0	Node(W)	-322	nb_iter	60	times/End	48.80 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	13588	Netting(W)	0	Node(W)	-301	nb_iter	77	times/End	48.90 / 49.00
Haul(W)	0	Bottom(W)	0	Cable(W)	13878	Netting(W)	0	Node(W)	-269	nb_iter	77	times/End	49.00 / 49.00

daniel@daniel-Latitude-E5540: ~/femnet/programs\$

Figure 126: Dynamic calculation of the mussels line on 49s. The columns give the sum of scalar product of drag (N) by displacement (m). The unit of this scalar product is the Watt. Column Haul is used when hauling cables are used (it is not the case here). Bottom when there is a friction with the sea bottom (not the case here). Cable (Netting, Node) in case of drag and displacement of cables (nettings, nodes). Here the scalar product for node is not null due to the intermediate float on the 2 mooring lines. This float is described as a node with a lengths (m) along X, Y and Z which give sections (m²) and consequently a drag (N).

A dynamic position is got using,

- in a terminal `cd ~/femnet/programs` and `./batz`;
- File, load_final_file, choose `~/femnet/data_2001/readme/8long_line/m1`, Visualisation, cable/bar_contour, Visualisation, node_contour, Visualisation, free_surface, Visualisation, axes, choose view angles (bottom cursor and left vertical cursor), and drag the right vertical cursor to display the dynamic position (Figure 127).

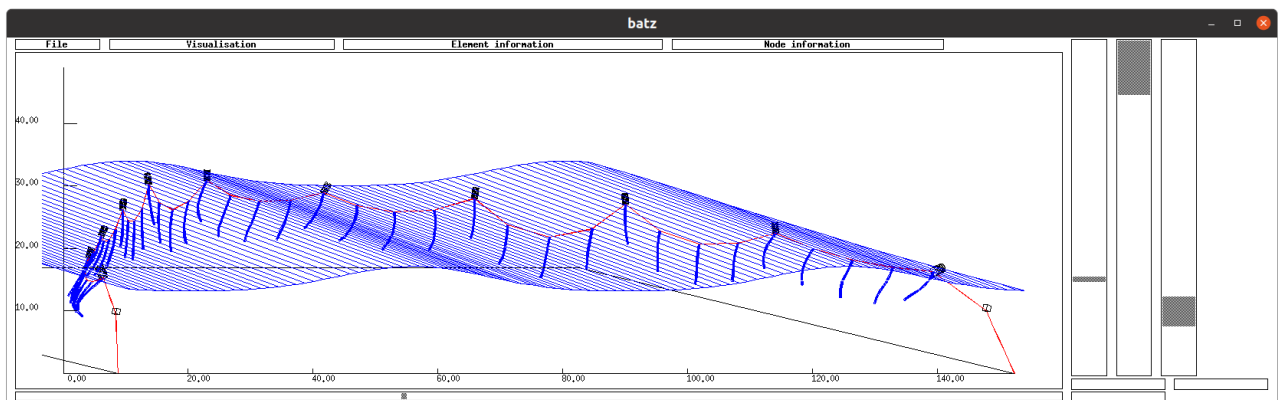


Figure 127: The dynamic position of the mussels long line in waves. View of batz using `~/femnet/data_2001/readme/8long_line/m1`.

Netting boom

Netting booms or gill nets are structures which are very long relatively to their width. In the case the variation of behaviour along the length is much smaller than along the width and to avoid to have too much numeric nodes issuing the discretisation process, it could be used a specific function in order to reduce the number of numeric nodes along, while the number of numeric nodes along the width remain large enough.

in order to create nodes along the diagonals of meshes and not along twines, in the following command, panel 1 is discretized each 200 meshes along U diagonal and each 3 meshes along V diagonal (h1.don). The best is to have ropes (cables) around the panel of netting with the same step of meshing along ropes as the panel and to begin the discretisation by the ropes. This following command is only available for panel with 4 corners.

```
input Meshing_UV 1 200 3
```

To verify the position of U diagonal and the V diagonal, do in a terminal:

```
cd ~/femnet/programs
./phobos
```

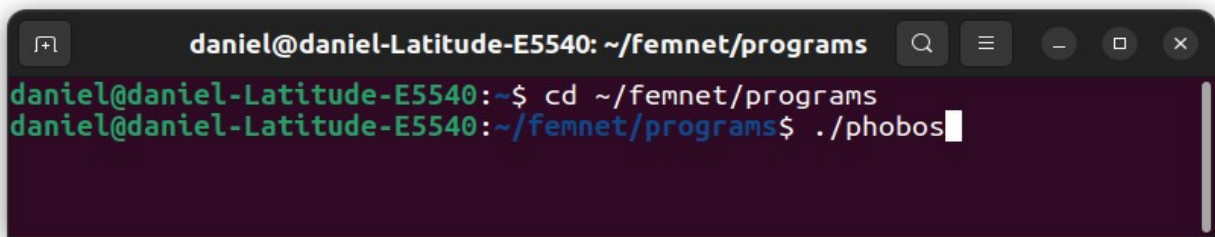


Figure 128: Command for graphic phobos.

In phobos, do: File, create_mdg_file. Choose ~/femnet/data_2001/readme/9gill_net/h1. Do: Visualisation, contour_diamond, Visualisation, UV_vectors, Visualisation, axes, Visualisation, twines_period, introduce 20. It can be seen that the V diagonal of meshes is along the width of the panel and the U diagonal is along the length of the panel. The command `input Meshing_UV 1 200 3` creates numeric nodes each 200 U diagonals and each 3 V diagonals.

To verify it can be done:

Firstly, Node information, node_global, Visualisation, twines_period, introduce 200. It can be seen that the length of 200 U diagonals is the distance between numeric nodes along axe Y.

And secondly, Node information, node_global, Visualisation, twines_period, introduce 3. It can be seen that the length of 3 V diagonals is the distance between numeric nodes along axe Z (Figure 129).

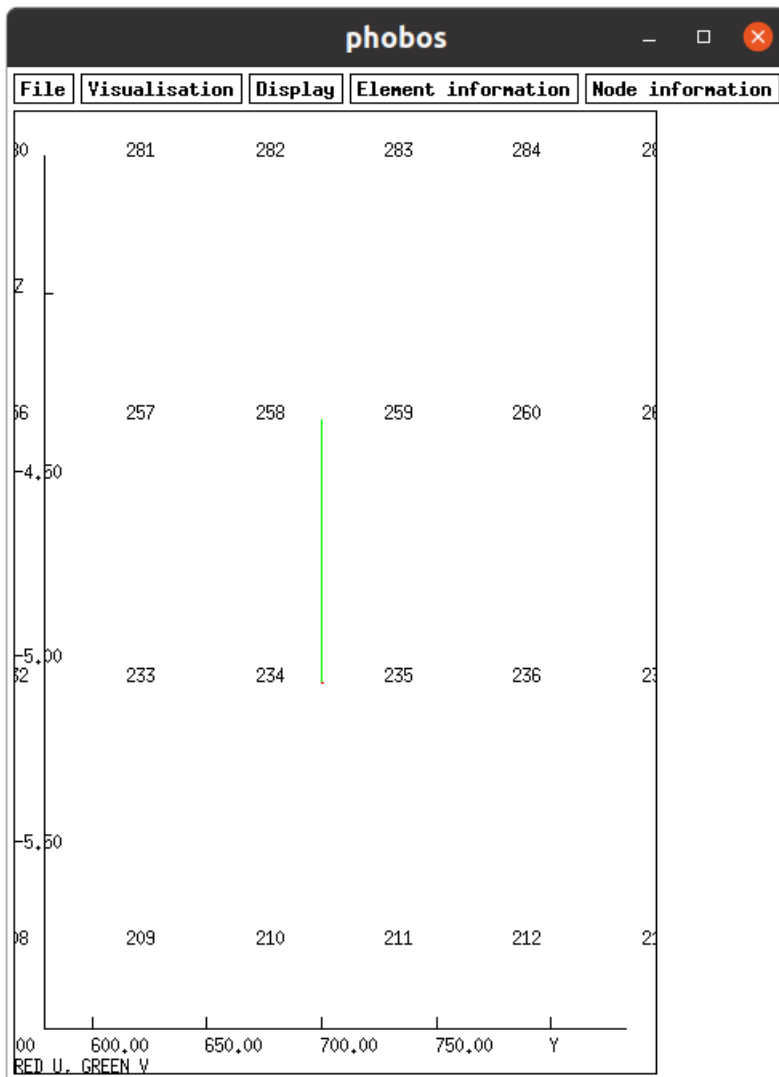


Figure 129: Phobos on `~/femnet/data_2001/readme/9gill_net/h1` file. The 3 V diagonals have the length identical as the distance between numeric nodes along Z axe.

Spheric floats are added on the head line with the following command:

```
input sphere_element 3 500 0.23 60.0
```

This command leads that these floats are uniformly added on cable **3**. There are **500** floats. The diameter of spheric floats is **0.23**m and the buoyancy of each float is **60**N. These floats are visible on the headline on Figure 130.

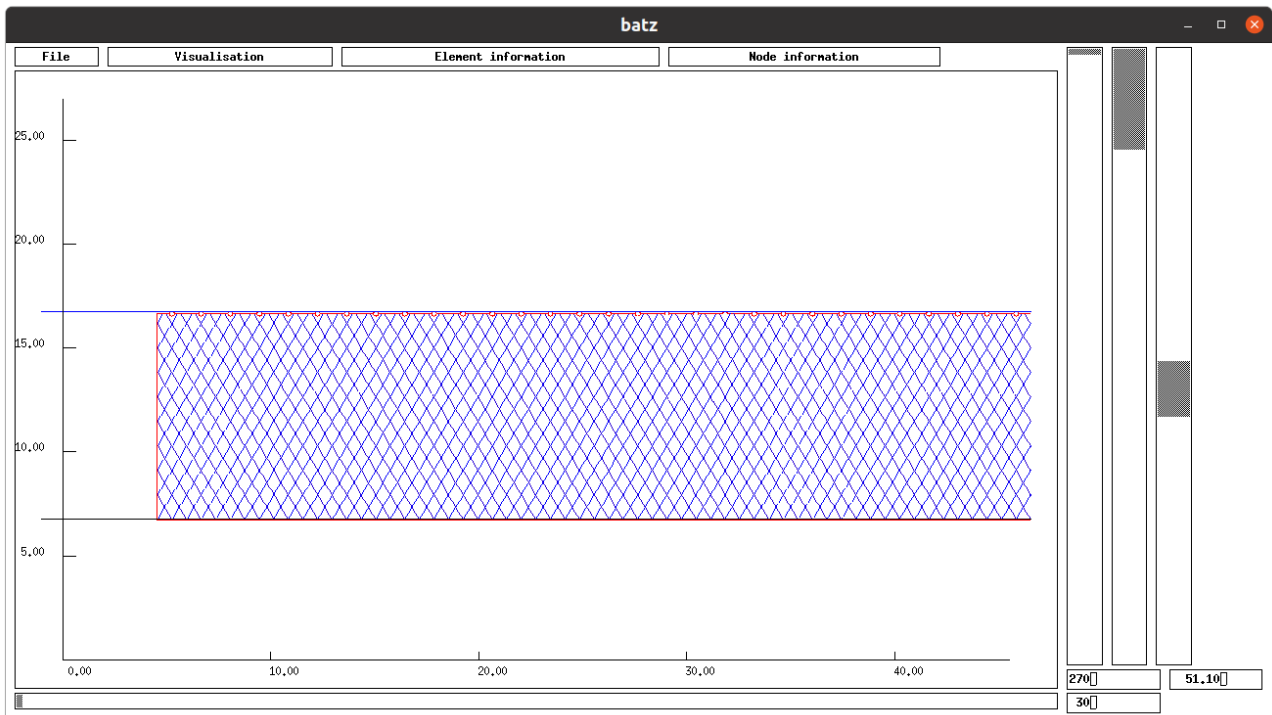


Figure 130: A zoom on an extremity of the boom. The twines are shown. The spheric floats are visible. View of batz using `~/femnet/data_2001/readme/9gill_net/h1`.


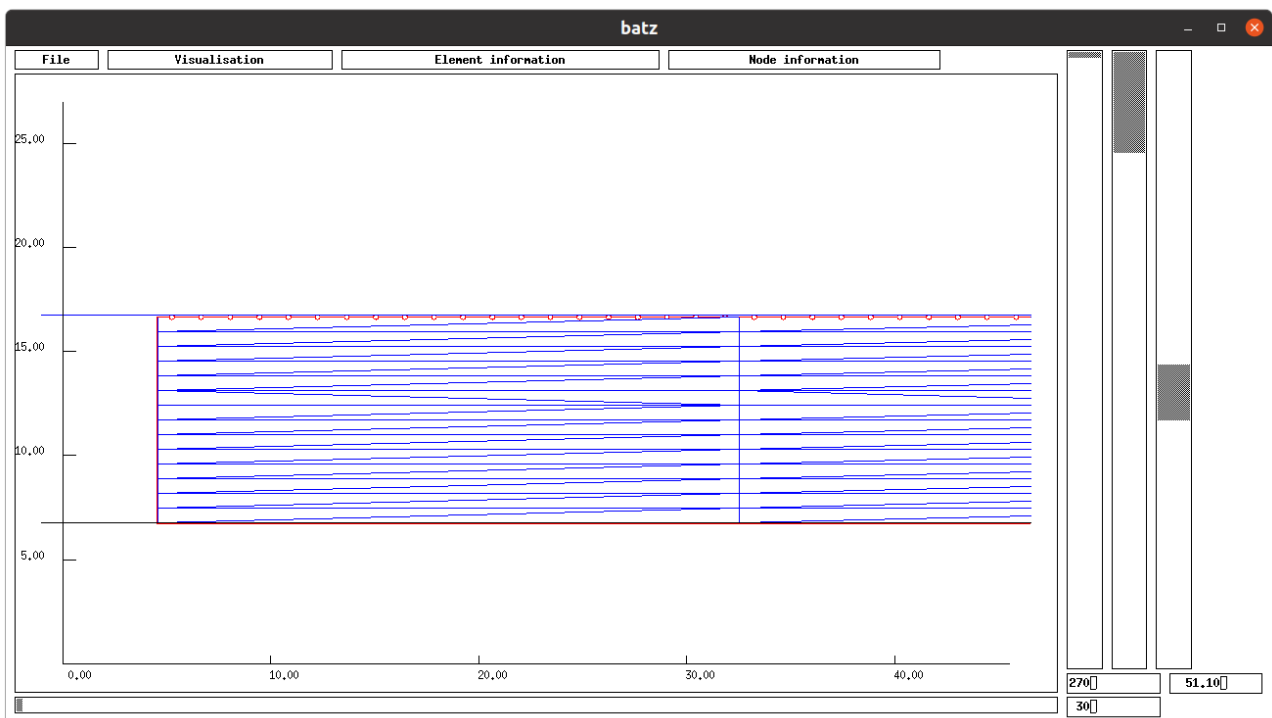


Figure 131: The same zoom on the boom as Figure 130, the twines are hidden, the triangular elements of netting are shown. These triangular elements are very long relatively to their width. View of batz using `~/femnet/data_2001/readme/9gill_net/h1`.

The calculation of the static equilibrium of h1 is got with the command:


```
cd ~/femnet/programs
```

```
./unix ~/femnet/data_2001/readme/9gill_net/h1
```

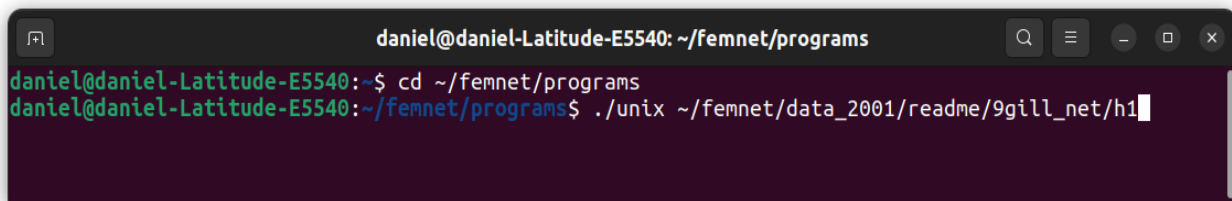

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/9gill_net/h1
```

Figure 132: Commands to calculate the static equilibrium of h1.

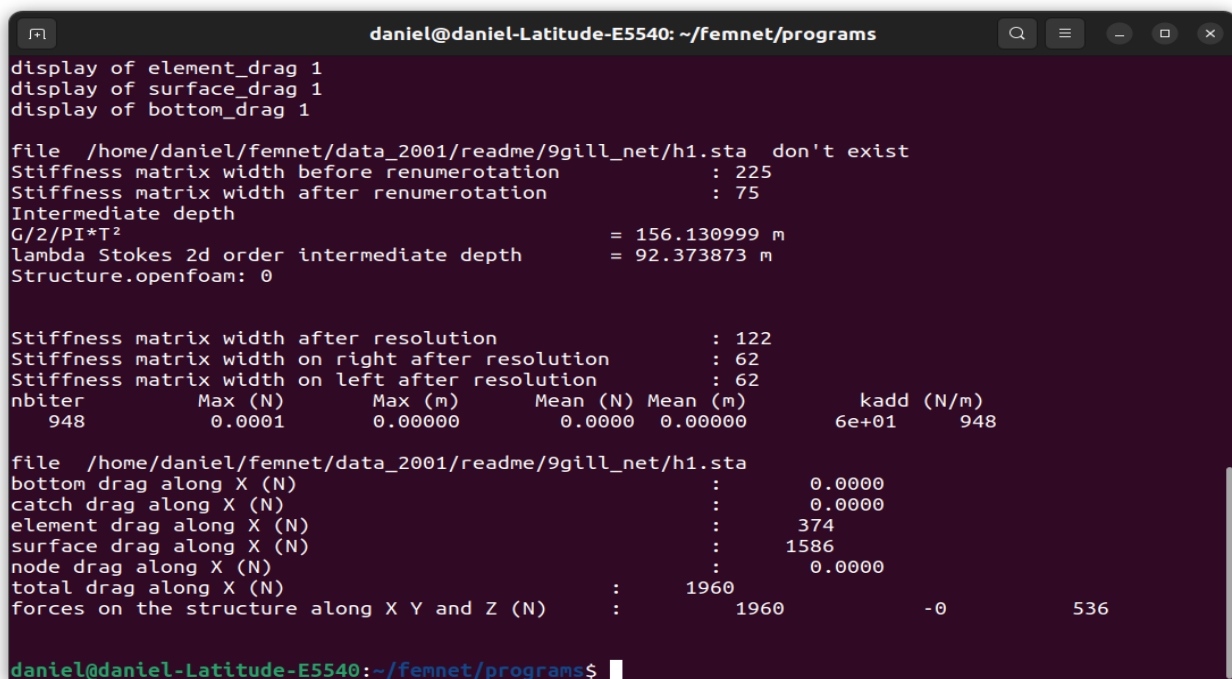

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
display of element_drag 1
display of surface_drag 1
display of bottom_drag 1

file /home/daniel/femnet/data_2001/readme/9gill_net/h1.sta don't exist
Stiffness matrix width before renumerotation : 225
Stiffness matrix width after renumerotation : 75
Intermediate depth
G/2/PI*T^2 = 156.130999 m
lambda Stokes 2d order intermediate depth = 92.373873 m
Structure.openfoam: 0

Stiffness matrix width after resolution : 122
Stiffness matrix width on right after resolution : 62
Stiffness matrix width on left after resolution : 62
nbiter      Max (N)      Max (m)      Mean (N) Mean (m)      kadd (N/m)
  948        0.0001       0.000000     0.0000   0.000000     6e+01    948

file /home/daniel/femnet/data_2001/readme/9gill_net/h1.sta
bottom drag along X (N) : 0.0000
catch drag along X (N) : 0.0000
element drag along X (N) : 374
surface drag along X (N) : 1586
node drag along X (N) : 0.0000
total drag along X (N) : 1960
forces on the structure along X Y and Z (N) : 1960 -0 536

daniel@daniel-Latitude-E5540:~/femnet/programs$
```

Figure 133: The static equilibrium of h1 is reached in 948 iterations.

The static position is displayed on Figure 134.

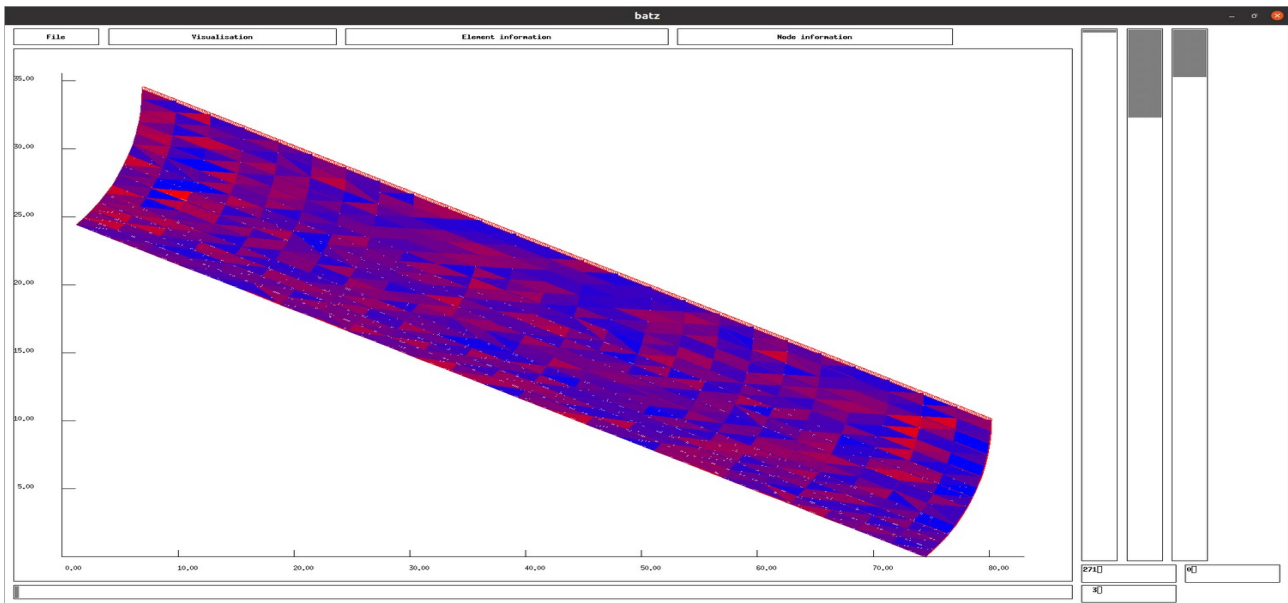


Figure 134: Static position of the boom in the current. View of batz using `~/femnet/data_2001/readme/9gill_net/h1`.

The dynamic position of the boom is got using the commands (Figure 135):

```
cd ~/femnet/programs
./dyna ~/femnet/data_2001/readme/9gill_net/h1
```

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./dyna ~/femnet/data_2001/readme/9gill_net/h1
```

Figure 135: Commands to get the dynamic equilibrium of h1.

daniel@daniel-Latitude-E5540: ~/femnet/programs											
Haul(W)	0	Bottom(W)	0	Cable(W)	898	Netting(W)	-17	Node(W)	0	nb_iter	150 times/End 57.50 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	924	Netting(W)	-17	Node(W)	0	nb_iter	157 times/End 57.60 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	819	Netting(W)	-18	Node(W)	0	nb_iter	161 times/End 57.70 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	748	Netting(W)	-18	Node(W)	0	nb_iter	135 times/End 57.80 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	816	Netting(W)	-16	Node(W)	0	nb_iter	155 times/End 57.90 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	889	Netting(W)	-16	Node(W)	0	nb_iter	144 times/End 58.00 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	921	Netting(W)	-16	Node(W)	0	nb_iter	156 times/End 58.10 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	901	Netting(W)	-16	Node(W)	0	nb_iter	146 times/End 58.20 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	827	Netting(W)	-17	Node(W)	0	nb_iter	123 times/End 58.30 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	944	Netting(W)	-16	Node(W)	0	nb_iter	129 times/End 58.40 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1068	Netting(W)	-15	Node(W)	0	nb_iter	130 times/End 58.50 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1143	Netting(W)	-15	Node(W)	0	nb_iter	150 times/End 58.60 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1161	Netting(W)	-15	Node(W)	0	nb_iter	165 times/End 58.70 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1008	Netting(W)	-16	Node(W)	0	nb_iter	161 times/End 58.80 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1016	Netting(W)	-15	Node(W)	0	nb_iter	146 times/End 58.90 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1076	Netting(W)	-14	Node(W)	0	nb_iter	125 times/End 59.00 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1111	Netting(W)	-14	Node(W)	0	nb_iter	161 times/End 59.10 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1076	Netting(W)	-14	Node(W)	0	nb_iter	122 times/End 59.20 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	908	Netting(W)	-17	Node(W)	0	nb_iter	153 times/End 59.30 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1023	Netting(W)	-17	Node(W)	0	nb_iter	147 times/End 59.40 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1238	Netting(W)	-16	Node(W)	0	nb_iter	143 times/End 59.50 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1362	Netting(W)	-16	Node(W)	0	nb_iter	116 times/End 59.60 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1408	Netting(W)	-16	Node(W)	0	nb_iter	158 times/End 59.70 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1289	Netting(W)	-16	Node(W)	0	nb_iter	135 times/End 59.80 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1158	Netting(W)	-16	Node(W)	0	nb_iter	148 times/End 59.90 / 60.00
Haul(W)	0	Bottom(W)	0	Cable(W)	1209	Netting(W)	-15	Node(W)	0	nb_iter	158 times/End 60.00 / 60.00
daniel@daniel-Latitude-E5540: ~/femnet/programs\$											

Figure 136: Dynamic calculation of the boom on 60s. The columns give the sum of scalar product of drag (N) by displacement (m). The unit of this scalar product is the Watt. Column Haul is used when hauling cables are used (it is not the case here). Bottom when there is a friction with the sea bottom (not the case here). Cable (Netting, Node) in case of drag and displacement of cables (nettings, nodes).

A Shape of the boom in wave is shown on Figure 137. This shape is got using the tool batz and the commands: File, load_final_file, Visualisation, Cable/bar_contour, Visualisation, u_twines, Visualisation, v_twines, , Visualisation, free_surface, Visualisation, axes. Finally the right vertical cursor is used to adjust the time step required.

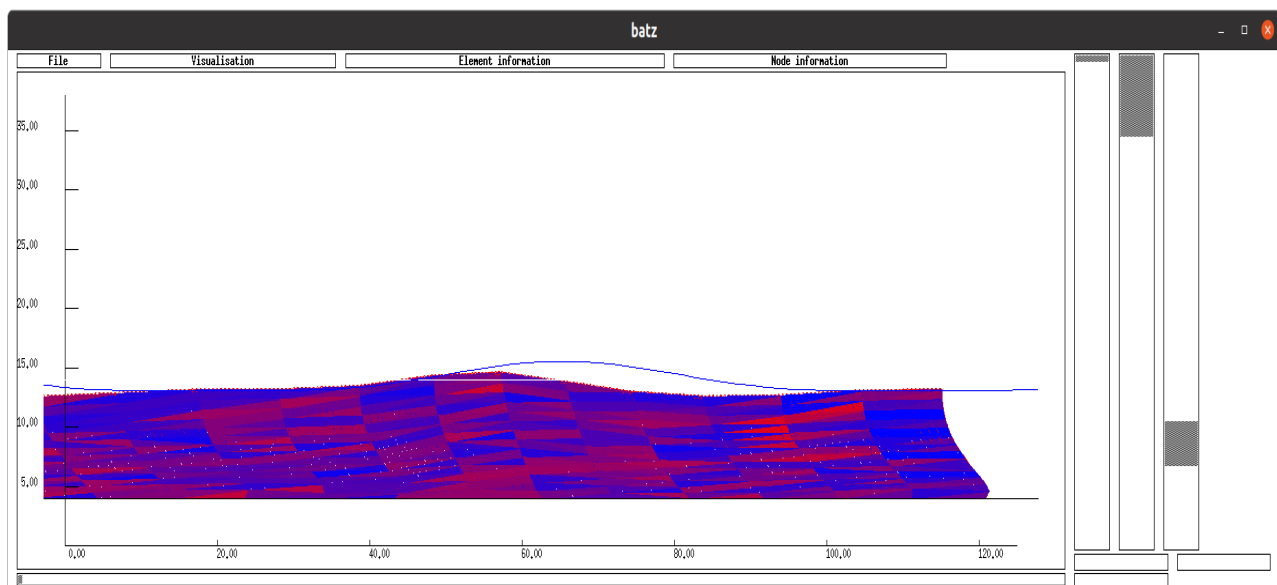


Figure 137: A dynamic position of the boom in wave. It can be seen that the headline don't always stay on the free surface (blue line). View of batz using ~/femnet/data_2001/readme/9gill_net/h1.

Fish cage

A fish cage using flexible polyethylene pipes as float, and moored with 3 lines ended by chains is described (Figure 138).

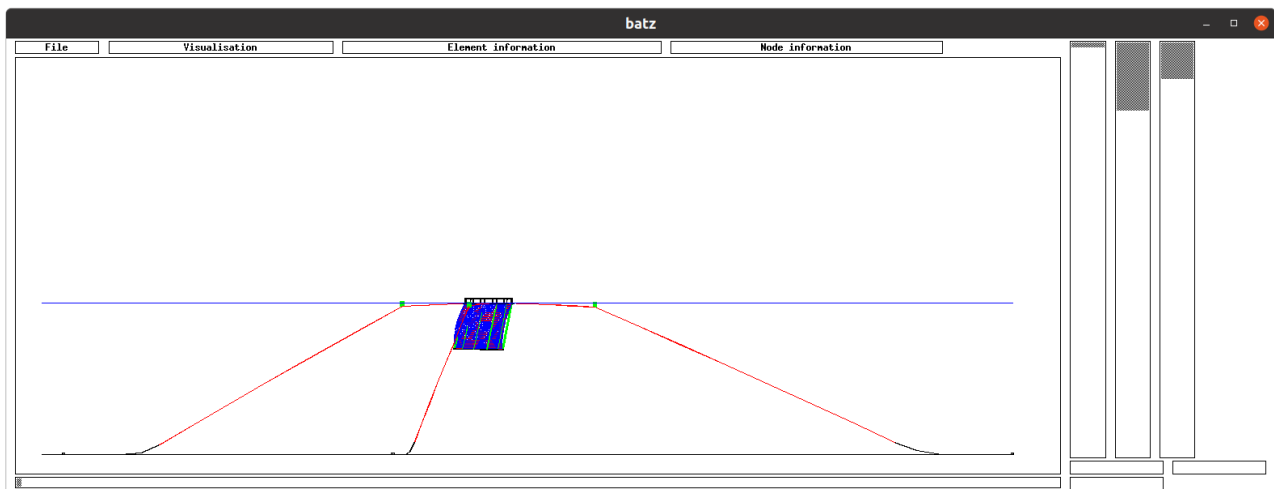


Figure 138: Fish cage in current. PE pipes are used as floats at the free surface. The mooring lines ends with chains. View of batz using `~/femnet/data_2001/readme/10fish_cage/f1`.

The *.don file is quite complex: it is made of 14 panels of netting, and 114 cables/bars. The netting here is divided in 12 lateral panels (Figure 139) and a top and bottom netting (Figure 140). The circular floating collar consists of two concentric PE pipes (Figure 141). The netting is taut with a circular dead weight (Figure 141). The dead weight is fixed to the floating collar by 12 ropes and fixed to the bottom of netting by 12 ropes (Figure 141).

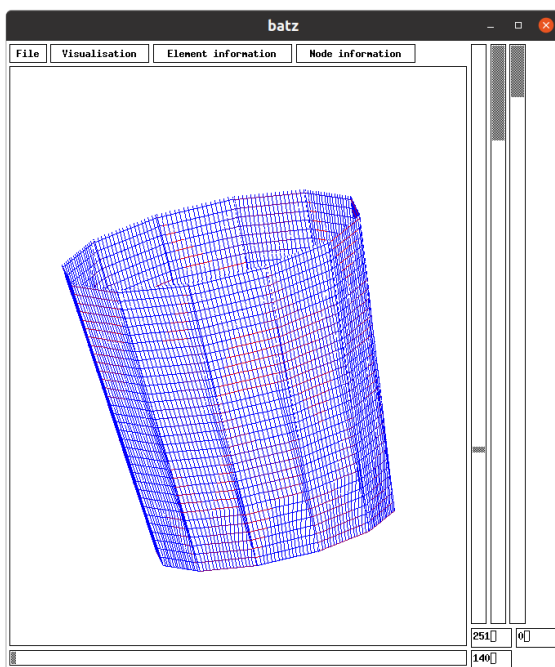


Figure 139: 12 lateral panels of netting. View of batz using `~/femnet/data_2001/readme/10fish_cage/f1`.

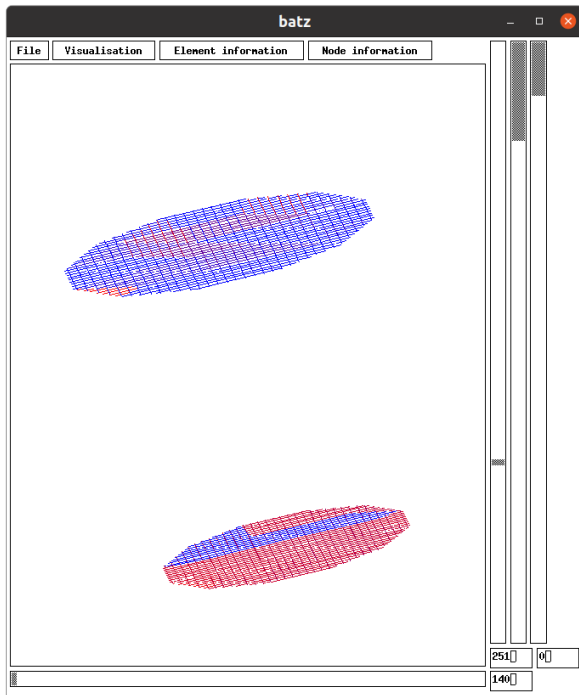


Figure 140: The top and bottom panel of netting. View of batz using `~/femnet/data_2001/readme/10fish_cage/f1`.

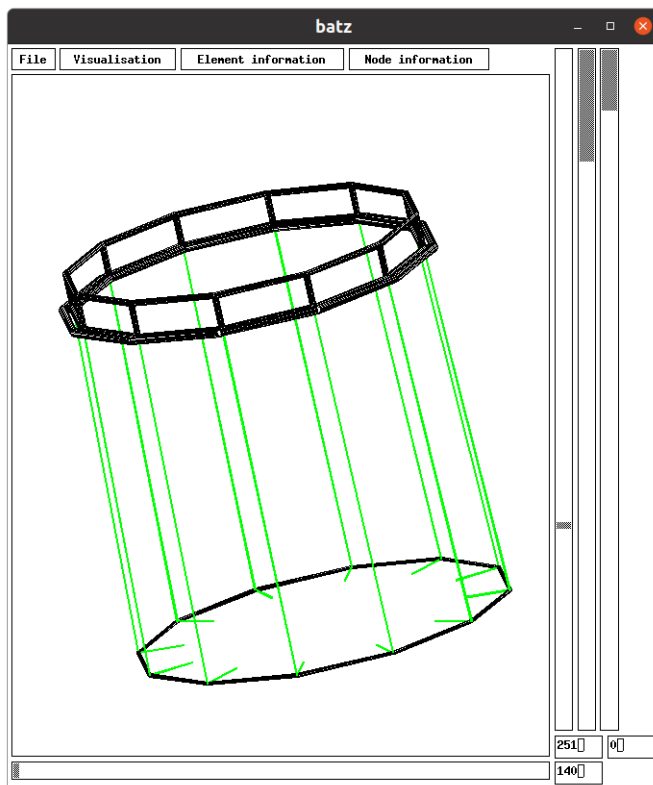


Figure 141: The float pipes (top) and the dead weight (bottom) are shown in black, when ropes of fixation of the dead weight and of the bottom of netting are in green. View of batz using `~/femnet/data_2001/readme/10fish_cage/f1`.

The fish cage is moored using 3 mooring lines (Figure 142) made of, from the sea bottom to the cage, a chain (black), a sub-surface rope (red), a buoy (green), a surface rope (blue) and 2 bridles (red). The bridles are fixed to the floating collar of the cage.

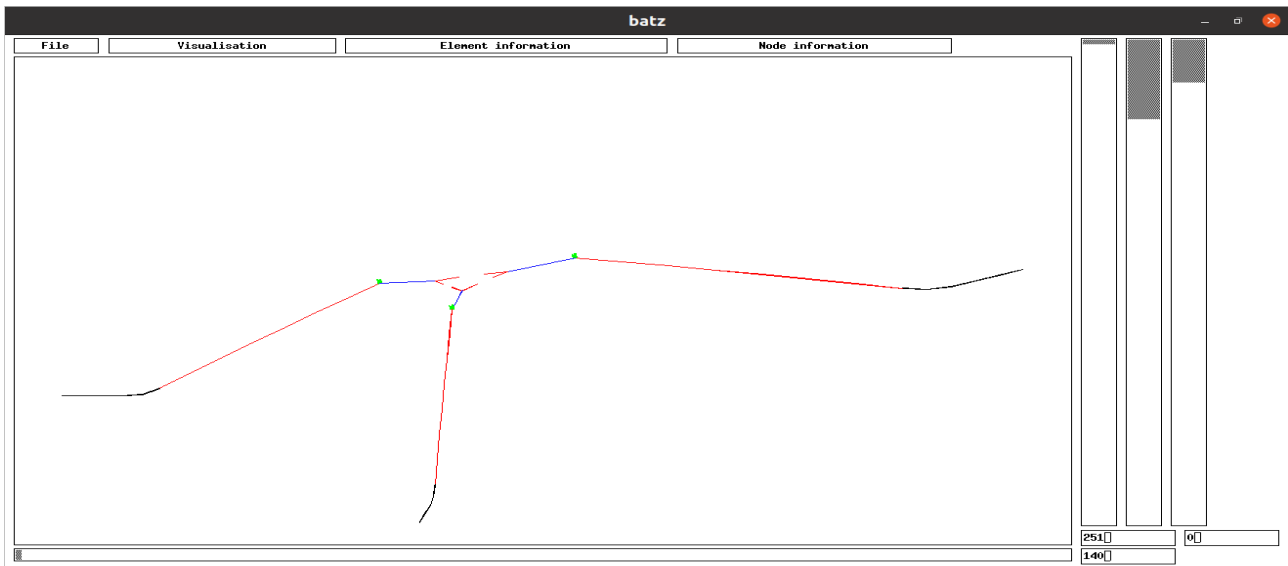


Figure 142: Each of the 3 mooring lines is made, from the bottom, of chain (black), sub-surface rope (red), buoy (green), surface rope (blue) and 2 bridles (red). View of batz using `~/femnet/data_2001/readme/10fish_cage/f1`.

It is recommended to use an help to create the *.don file (f1.don) due to the large number of components. It is proposed a spreadsheet in which each component are defined in a specific worksheet. Have a look at `~/femnet/data_2001/readme/10fish_cage/help_don.ods`: the gray zones of each worksheet are copied in the don file.


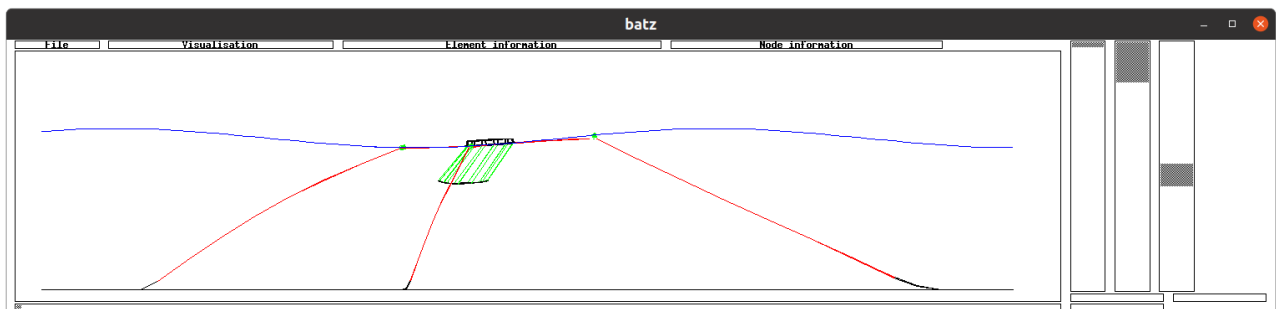


Figure 143: Fish cage in waves. View of batz using `~/femnet/data_2001/readme/10fish_cage/f1`.

Once f1.don is created, doing f1.mdg with the commands (Figure 144):

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/10fish_cage/f1
```

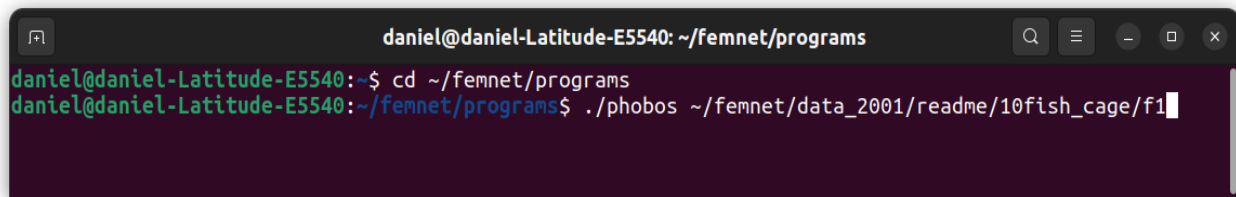


```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/10fish_cage/f1
```

Figure 144: Creation of f1.mdg using phobos.

The calculation of the static equilibrium of the cage described by f1.don is done using the commands (Figure 145):

```
cd ~/femnet/programs
./unix ~/femnet/data_2001/readme/10fish_cage/f1
```

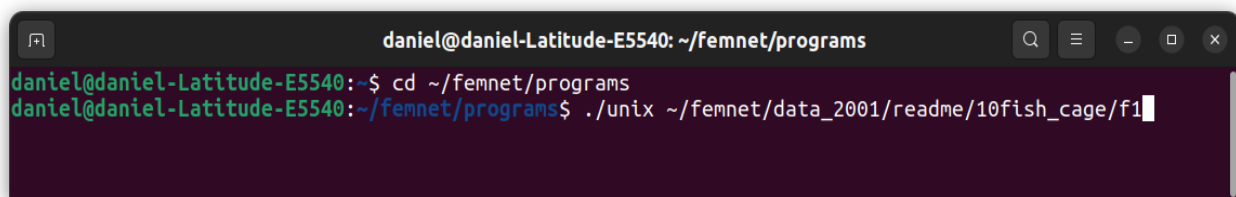

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/10fish_cage/f1
```

Figure 145: Commands used for the calculation of f1.sta.

In order to have a more detailed fish cage, f2.don is created. It is a copy of f1.don except that for each panel of netting the line:

Meshing step (m): 4

is replaced by:

Meshing step (m): 2

This replacement leads to create numeric nodes each 2m in place of each 4m.

In the description of cables 67 to 78, the number of bars is increases from 1 (in f1.don) to 3, 7 or 5 (in f2.don).


E : 67 ...Cd : 1.2 F : 0.08 Nb : 1 Ty : 2 in f1.don

E : 67 ...Cd : 1.2 F : 0.08 Nb : 3 Ty : 2 in f2.don

Once f2.don is created, doing f2.mdg with the commands (Figure 144):

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/10fish_cage/f2
~/femnet/data_2001/readme/10fish_cage/f1
```

This commands also creates an estimation of the static equilibrium of f2 (f2.sta) based on equilibrium of f1 (f1.sta).

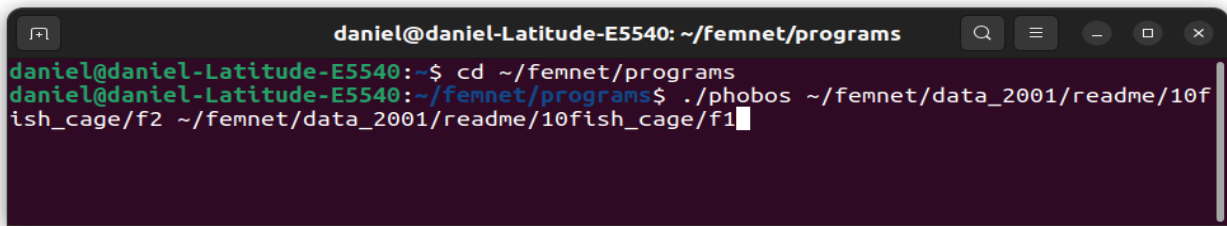
A terminal window with a dark background and light text. The title bar reads 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs'. The second command is './phobos ~/femnet/data_2001/readme/10fish_cage/f2 ~/femnet/data_2001/readme/10fish_cage/f1'.

```
daniel@daniel-Latitude-E5540: ~/femnet/programs
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./phobos ~/femnet/data_2001/readme/10fish_cage/f2 ~/femnet/data_2001/readme/10fish_cage/f1
```

Figure 146: Creation of *f2.mdg* using *phobos*. This commands estimates also *f2.sta* using *f1.sta*.

The commands to calculate the equilibrium in static conditions of *f2* are (Figure 147):

```
cd ~/femnet/programs
./unix ~/femnet/data_2001/readme/10fish_cage/f2
```

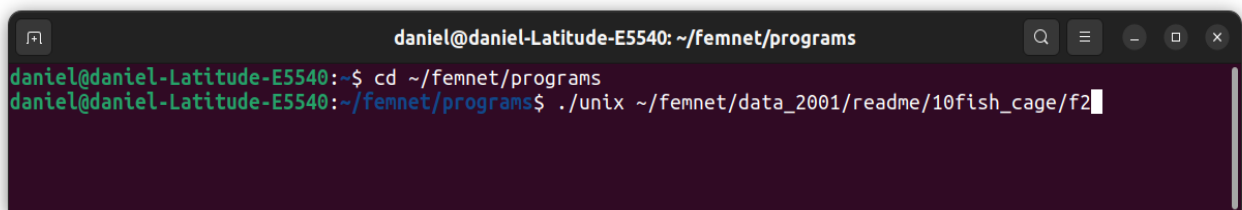
A terminal window with a dark background and light text. The title bar reads 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs'. The second command is './unix ~/femnet/data_2001/readme/10fish_cage/f2'.

```
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./unix ~/femnet/data_2001/readme/10fish_cage/f2
```

Figure 147: Commands for the calculation of the equilibrium in static conditions of *f2*.

The commands to calculate the equilibrium in dynamic conditions of *f2* are (Figure 148):

```
cd ~/femnet/programs
./dyna ~/femnet/data_2001/readme/10fish_cage/f2
```

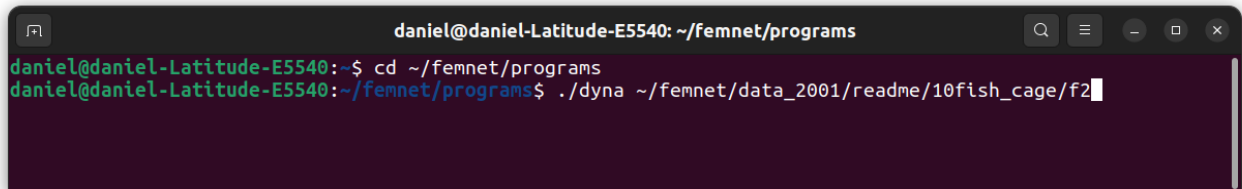A terminal window with a dark background and light text. The title bar reads 'daniel@daniel-Latitude-E5540: ~/femnet/programs'. The prompt is 'daniel@daniel-Latitude-E5540:~\$'. The first command entered is 'cd ~/femnet/programs'. The second command is './dyna ~/femnet/data_2001/readme/10fish_cage/f2'.

```
daniel@daniel-Latitude-E5540:~$ cd ~/femnet/programs
daniel@daniel-Latitude-E5540:~/femnet/programs$ ./dyna ~/femnet/data_2001/readme/10fish_cage/f2
```

Figure 148: Commands for the calculation of the equilibrium in dynamic conditions of *f2*.

A view of the cage (*f2*) in the wave is given Figure 149.

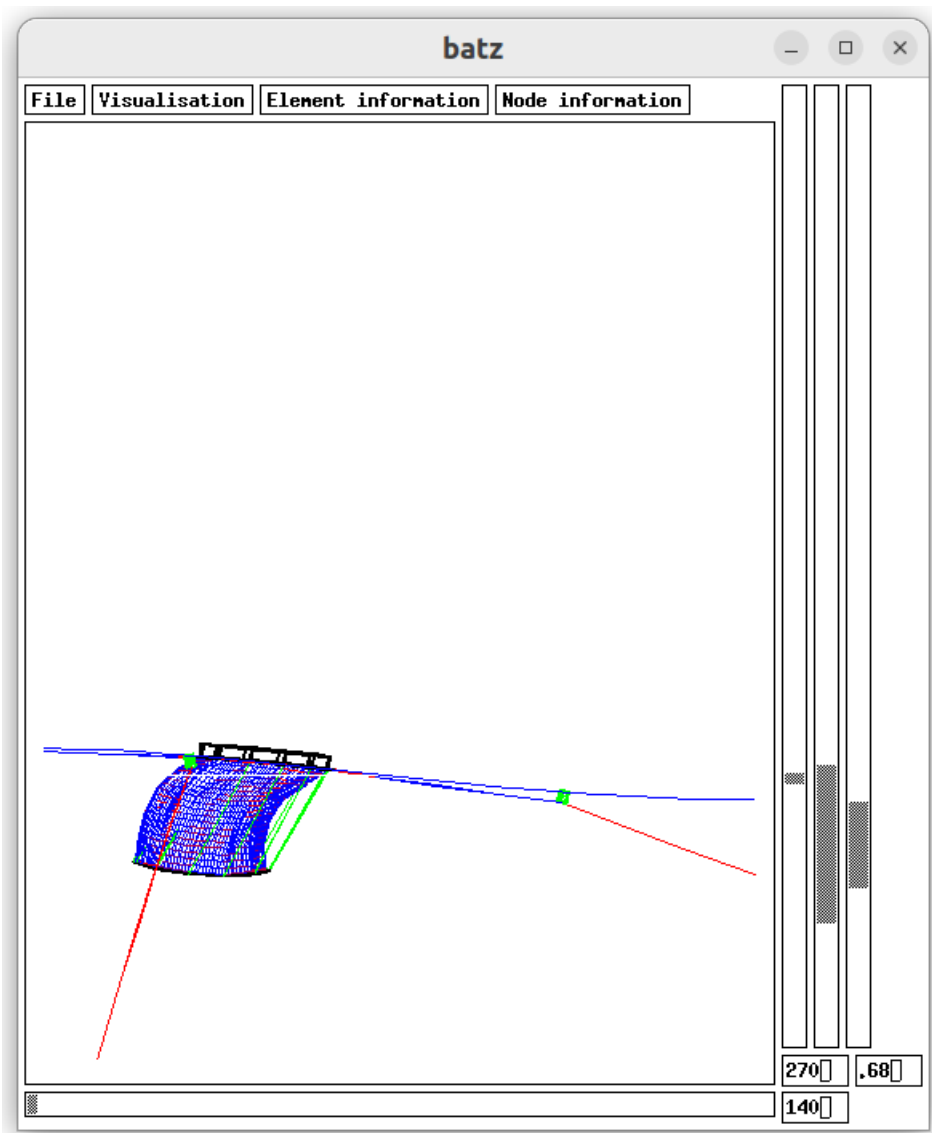


Figure 149: View of the cage in wave. View of batz using `~/femnet/data_2001/readme/10fish_cage/f2`. The vertical cursor is tuned at 270deg in order to have a side view. The horizontal cursor is tuned at 140deg in order to a view normal to wave propagation: 140deg is the complement of wave direction (40deg) to 180deg.

Bottom seine

The hauling back process of a bottom seine could be assessed with FEMNET [16].

The initial shape of the seine cables is almost square. One corner of the square is the boat, the opposite corner is the trawl, and the two other corners are the middle of the two cables (Figure 150). Note that the symmetry plane is taken into account (the vertical plane passing by the boat and the trawl).

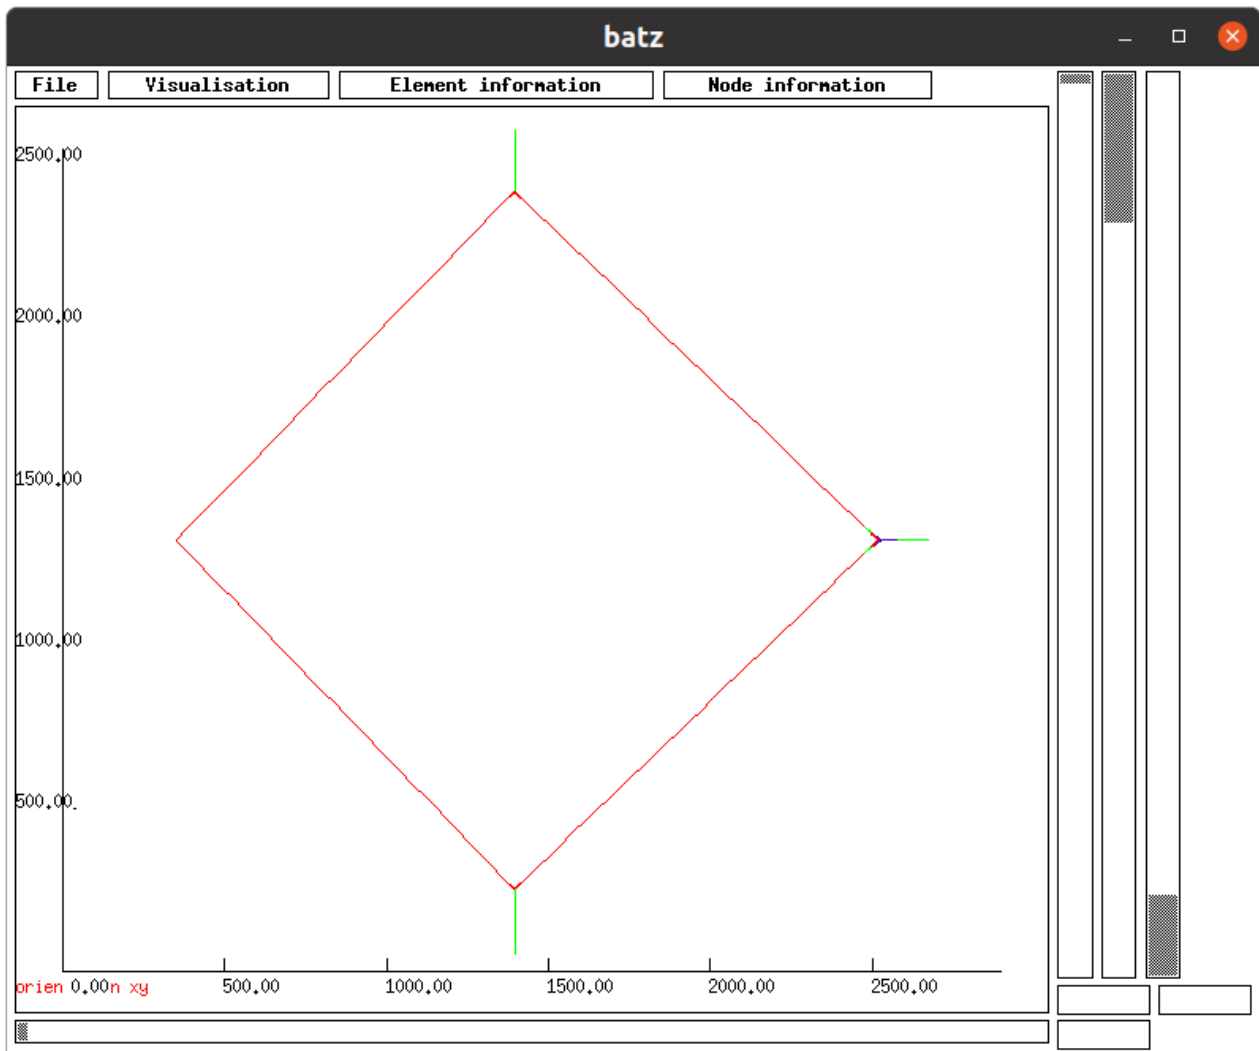


Figure 150: Initial shape of the seine (top view). It is almost square with one corner the boat (on the left) and the trawl at the opposite corner (on the right). The structure is symmetric around a vertical plane. The square is got using external forces (green lines). View of batz using `~/femnet/data_2001/readme/11bottom_seine/s1`.

Because the cable is defined as a line (Figure 151) in `s1.don`, it is necessary to deform this line in order to get a square.

To get this initial shape, this shape is calculated in static conditions applying forces on the middle of the 2 cables and on the trawl in order to reach an almost square shape. To apply these forces, 2 types

of node are created in s1.don: a first for the middle of the cables (type 4) and a second for the rear part of the trawl (type 5). These forces appear in green on Figure 150.

To create the type of node in the middle of the cable the following command is used in s1.don:

```
input type_noeud_XYZ_SUPINF 13 53.25 53.35 0.5 1.5 67.5 67.7 4
```

This command (the 13th of `type_noeud_XYZ_SUPINF`) defines a parallelepiped of coordinates $x > 53.25\text{m}$, $x < 53.35$, $y > 0.5\text{m}$, $y < 1.5\text{m}$, $z > 67.5$, $z < 67.7\text{m}$. All nodes inside this parallelepiped are affected of type 4. This type 4 of node can be seen on Figure 151 inside the red circle. The type 5 is also visible in two places.

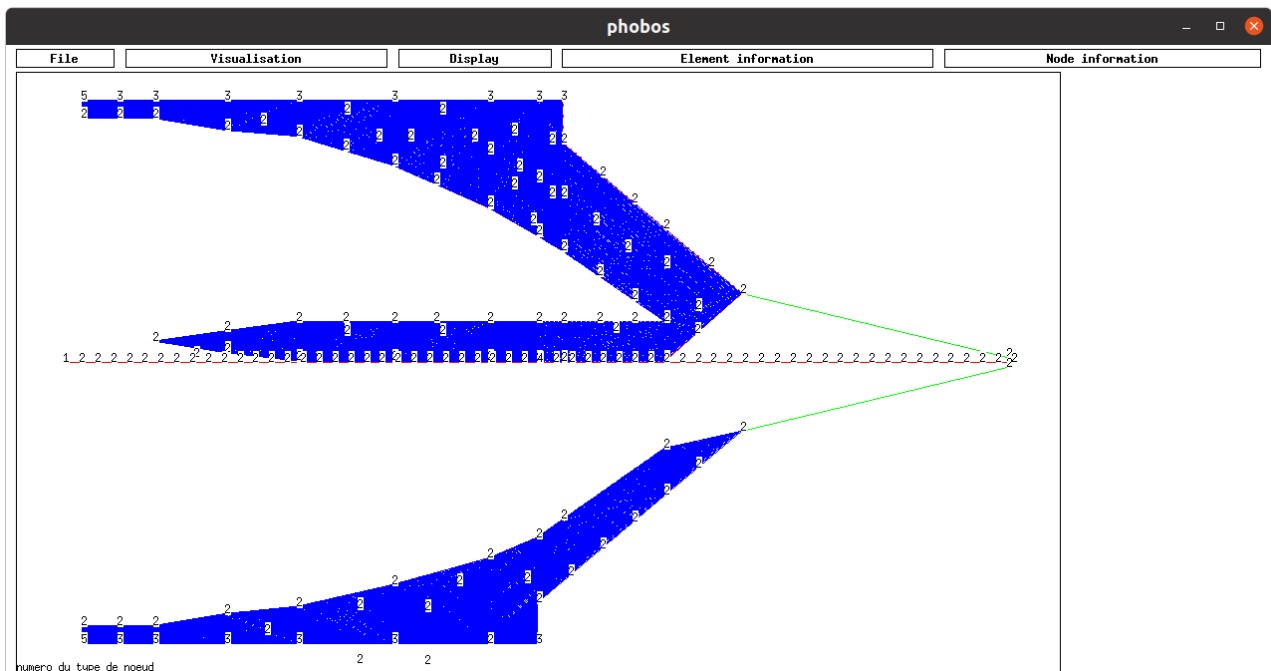


Figure 151: The creation of s1.mdg with phobos. The type of the nodes is displayed: it can be seen type 4 in the middle of the cable and two types 5 at the rear part of the trawl (inside the red circles). View of phobos using `~/femnet/data_2001/readme/11bottom_seine/s1`.

The external force on type 5 is 10000N along axe X and 20000N along axe Y for type 4 (middle of the cable):

```
No du type :          4
Mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Added mass X,Y,Z (kg): 0.000000  0.000000  0.000000
Length X,Y,Z (m):      0.000000  0.000000  0.000000
Drag coefficient X,Y,Z: 1.200000  1.200000  1.200000
External forces X,Y,Z (N): 0.000000  20000.000000  0.000000
Displacement X,Y,Z:     0  0  0
Limits X,Y,Z (m):       0.000000  0.000000  -30.000000
Limits sense X,Y,Z:     0  0  1
Symmetry X,Y,Z:         0  0  0
```

```

No du type :          5
Mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Added mass X,Y,Z (kg): 0.000000  0.000000  0.000000
Length X,Y,Z (m):      0.000000  0.000000  0.000000
Drag coefficient X,Y,Z: 1.200000  1.200000  1.200000
External forces X,Y,Z (N): 10000.000000  0.000000  0.000000
Displacement X,Y,Z:      0  0  0
Limits X,Y,Z (m):      0.000000  0.000000 -30.000000
Limits sense X,Y,Z:      0  0  1
Symmetry X,Y,Z:        0  1  0

```

The initial shape of the seine s1 is calculated using:

```

cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/11bottom_seine/s1
./unix ~/femnet/data_2001/readme/11bottom_seine/s1

```

Once s1.sta is calculated, copy s1.don in s2.don and decrease by 10 the external forces on type 4 and type 5 (2000N and 1000N). Theses types are:

```

No du type :          4
Mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Added mass X,Y,Z (kg): 0.000000  0.000000  0.000000
Length X,Y,Z (m):      0.000000  0.000000  0.000000
Drag coefficient X,Y,Z: 1.200000  1.200000  1.200000
External forces X,Y,Z (N): 0.000000 2000.000000  0.000000
Displacement X,Y,Z:      0  0  0
Limits X,Y,Z (m):      0.000000  0.000000 -30.000000
Limits sense X,Y,Z:      0  0  1
Symmetry X,Y,Z:        0  0  0

```

```

No du type :          5
Mass X,Y,Z (kg):      0.000000  0.000000  0.000000
Added mass X,Y,Z (kg): 0.000000  0.000000  0.000000
Length X,Y,Z (m):      0.000000  0.000000  0.000000
Drag coefficient X,Y,Z: 1.200000  1.200000  1.200000
External forces X,Y,Z (N): 1000.000000  0.000000  0.000000
Displacement X,Y,Z:      0  0  0
Limits X,Y,Z (m):      0.000000  0.000000 -30.000000
Limits sense X,Y,Z:      0  0  1
Symmetry X,Y,Z:        0  1  0

```

The initial shape of the seine s2 is calculated using:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/11bottom_seine/s2
~/femnet/data_2001/readme/11bottom_seine/s1
./unix ~/femnet/data_2001/readme/11bottom_seine/s2
```

Once again, copy s2.don in s3.don and decrease the forces by 10 on type 4 and type 5 (200N and 100N).

The initial shape of s3 is calculated using:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/11bottom_seine/s3
~/femnet/data_2001/readme/11bottom_seine/s2
./unix ~/femnet/data_2001/readme/11bottom_seine/s3
```

Finally, copy s3.don in s4.don and decrease the forces to 0.0N on type 4 and type 5 (0.0N and 0.0N)

The initial shape of s4 is calculated using:

```
cd ~/femnet/programs
./phobos ~/femnet/data_2001/readme/11bottom_seine/s4
~/femnet/data_2001/readme/11bottom_seine/s3
./unix ~/femnet/data_2001/readme/11bottom_seine/s4
```

At this step, s4.sta is static position of the seine just before the hauling back process: there are no remaining external forces on the cables and on the trawl, as expected. This static position is almost a square.

The hauling back of cables is defined using the command in s4.don:

```
input hauling_cable4 14 0.010 50.0 2
10      3010
1.0     1.0
2       2
```

That means that the cable which is hauled is the 14, the bar elements which discretize the cable have length which could vary between 0.010m and 50.0m. The time table has 2 components: The hauling back starts at 10s and ends at 3010s; the hauling speed varies between 1.0m/s at 10s and 1.0m/s at 3010s; the extremity by which the cable is hauled is 2 between 10s and 3010s and 2 after 3010s. To determine by which extremity the cable is hauled, do ./phobos, File, twines_surface, Node information, node_corner (Figure 152). The hauling speed varies linearly between times.

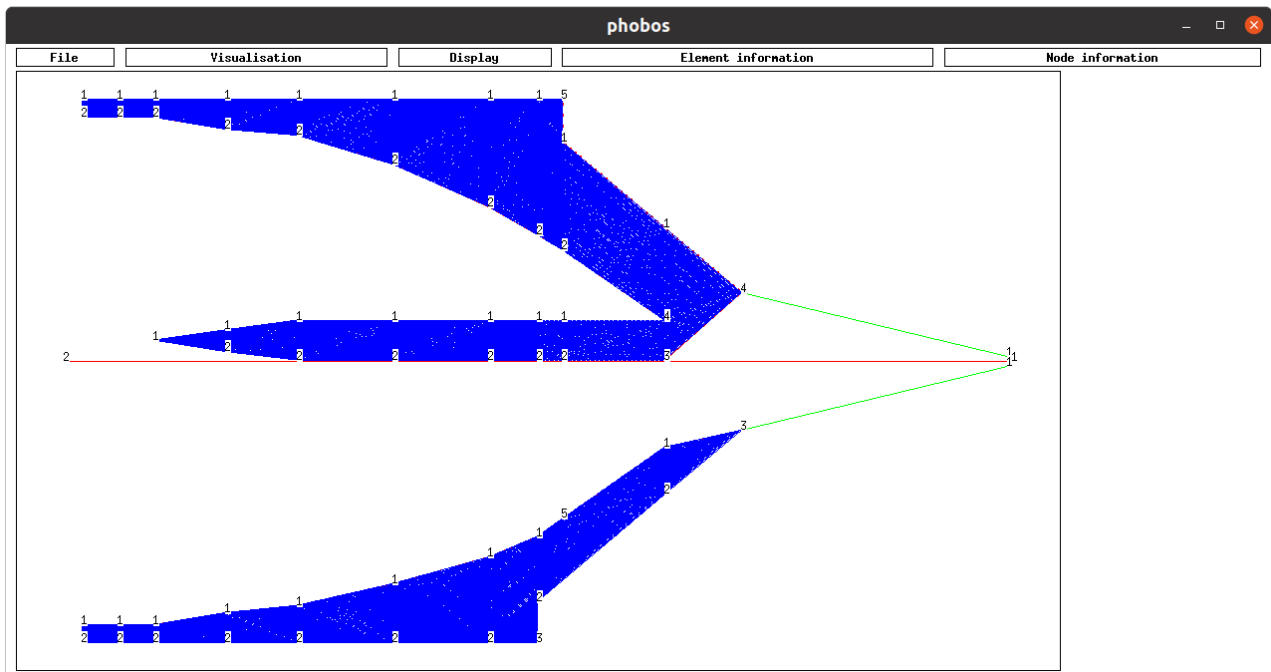


Figure 152: The cable is hauled back by extremity 2 (left end of the cable). To get this view, do in a terminal `cd ~/femnet/programs, ./phobos, File, triangle_contour, choose ~/femnet/data_2001/readme/11bottom_seine/s4, Visualisation, contour_cable_bar, Visualisation, twines_contour, Node_information, node_corner.`

In this example, the boat tows the seine. To introduce this towing use the following command in `s4.don`:

```
input speed_type_node2 1 2
1500 3020
0 -1
0 0
0 0
```

That means that the nodes of type 1 are affected by a towing speed. The speed is defined in a time table with 2 components: The towing starts at 1500s and ends at 3020s, the speed along X axis is 0m/s at 1500s and -1m/s at 3020s; the speed along Y axis is 0m/s at 1500s and 0m/s at 3020s; the speed along Z axis is 0m/s at 1500s and 0m/s at 3020s. The speeds vary linearly between times.

Be sure that the type (here 1) where the speed is affected has no limit. The type of node must have:

```
Limits sens X,Y,Z: 0 0 0
```

The dynamic positions of the seine (`s4.dyn`, Figure 153) is calculated using:

```
cd ~/femnet/programs
./dyna ~/femnet/data_2001/readme/11bottom_seine/s4
```

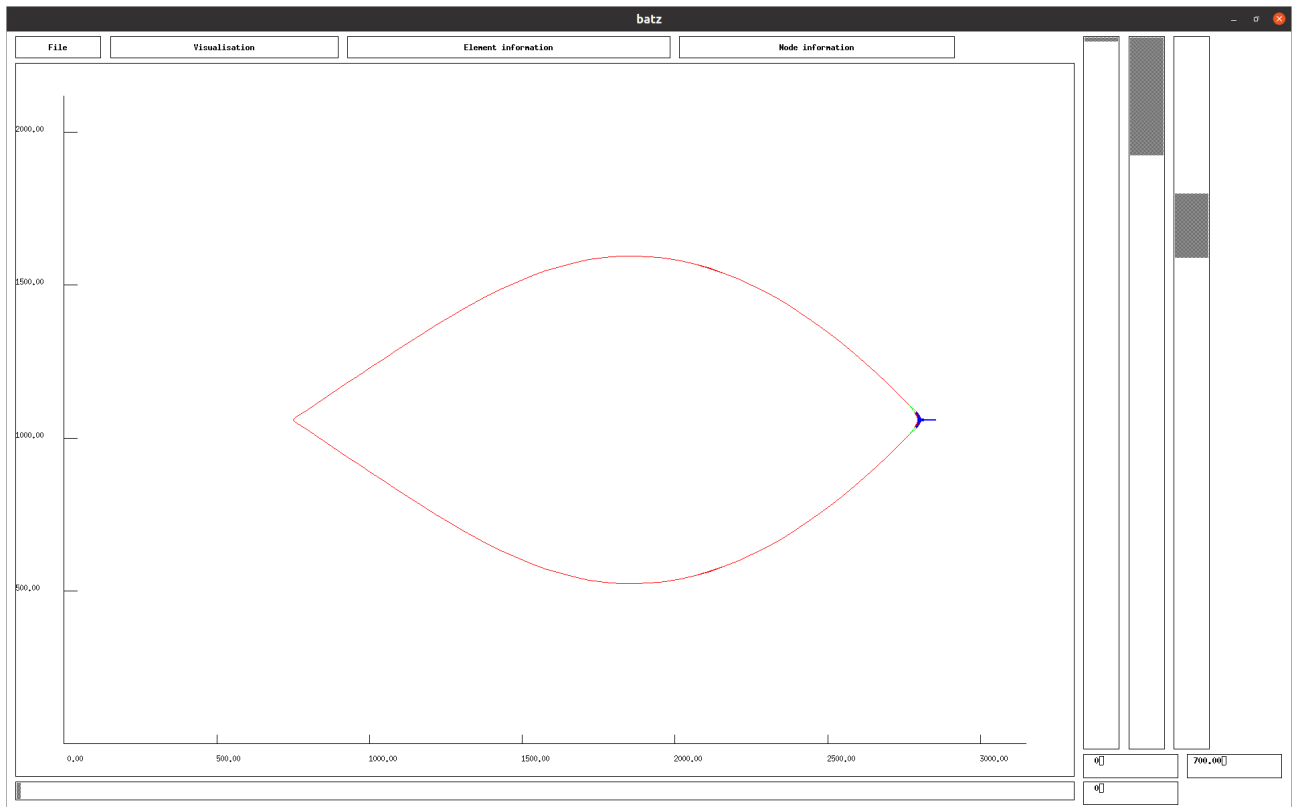


Figure 153: Shape of the bottom seine at 700s. View of batz using `~/femnet/data_2001/readme/11bottom_seine/s4`.

References

- 1 Priour D., 1999, Calculation of net shapes by the finite element method with triangular elements, *Commun. Numer. Meth. Engng*, 15, 757-765.
- 2 D.Priour, 2001, Introduction of mesh resistance to opening in a triangular element for calculation of nets by the finite element method, , 17, 229-237.
- 3 D.Priour, 2003, Analysis of nets with hexagonal mesh using triangular elements, , 56, 1721-1733.
- 4 D.Priour, 2013, A Finite Element Method for Netting, Application to fish cages and fishing gear, Springer
- 5 , 2004, Les panneaux de chalut, Caractéristiques et mise en oeuvre, Quae
- 6 Priour D. & Herrmann B., Catch shape in codend, 2005
- 7 R.Khaled, D.Priour & JY.Billard, 2012, Numerical optimization of trawl energy efficiency taking into account fish distribution, , 54, 34-45.
- 8 R.Khaled, D.Priour & JY.Billard, 2012, Cable length optimization for trawl fuel consumption reduction, , 58, 167-179.
- 9 A.de la Prada & D.Priour, 2014, The effect of the bottom boundary layer on trawl behaviour, , 101, 142-151.
- 10 D.Priour & A.de la Prada, 2015, An experimental/numerical study of the catch weight influence on trawl behavior, , 94, 94-102.
- 11 A.Sala, D. Priour, B. Herrmann, 2006, Experimental and theoretical study of red mullet (*Mullus barbatus*) selectivity in codends of Mediterranean bottom trawls, , 19, 317-327.
- 12 B. Herrmann, D. Priour, L. A. Krag, 2006, Theoretical study of the effect of round straps on the selectivity in a diamond mesh cod-end, , 80, 148-157.
- 13 B. Herrmann, D. Priour, L. A. Krag, 2007, Simulation-based study of the combined effect on cod-end size selection of turning meshes by 90° and reducing the number of meshes in the circumference for round fish, , 84, 222-232.
- 14 B.Morvan, D.Priour, Z.Guédé, G.Bles, 2016, Finite element model for the assessment of the mesh resistance to opening of fishing nets, , 123, 303-313.
- 15 FG.O'Neill FG & T.O'Donogue, 1997, The fluid dynamic on catch and the geometry of trawl cod-ends, , 453, 1631-1648.
- 16 Priour D., Billard J.-Y, 2019, Measurements and numerical modelling of the towing and hauling back phases of a bottom seine

Index

`input add_z_ele 180.0 79 152`: In case cables/bars are translated in the design. In this command the cables/bars are translated along **z** axis of **180.0m**. This translation is applied to cables/bars **79** to **152**. The same commands exist for translation along **x** and **y** axis (`input add_x_ele 180.0 79 152`, `input add_y_ele 180.0 79 152`).

`input add_z_pan 180.0 79 152`: In case netting panels are translated in the design. In this command the panels are translated along **z** axis of **180.0m**. This translation is applied to cables/bars **79** to **152**. The same commands exist for translation along **x** and **y** axis (`input add_x_pan 180.0 79 152`, `input add_y_pan 180.0 79 152`)

`input Auto_convergence`: In order to accelerate the convergence, by modifying the added stiffness. The added stiffness is initiated by a command such as `input convergence_parameters 1 10 100000000000` in *.don file; or, if this command is not defined, by the value in the file ~/femnet/programs/param.txt for static calculations or defined by the value in the file ~/femnet/programs/param.txt for dynamic calculations.

`input convergence_parameters 1 10 100000000000`: In order to have convergence parameters specifically for a file, add the previous command to have a relaxation of **1** a period display on the terminal of **10** and an added stiffness of **100000000000** N/m.

`input current_reduction 7 0.65`: This command reduces on netting panel **7** the current by **0.65**.

`input EI_flexion_cable 9 0.00000269`: The cable **9** has a flexion rigidity (EI) of **0.00000269** N.m²

```
input hauling_cable4 14 0.010 50.0 2
10      3010
1.0     1.0
2       2
```

: In order to haul or shoot a cable. For example the previous command reduce the length of cable **14**. The bar elements vary between **0.010m** and **50.0m** long. There are **2** time steps in the following table. The second line indicates the times (**10s** and **3010s**), the third the speed of reduction (**1.0m/s** and **1.0m/s**, to shoot the speed is < 0.0), the fourth line indicate the extremity by which the cable is reduced (**2** and **2**).

`input link 0.01`: Automatic creation of link between nodes if they are at a distance < a certain value. In the previous command all nodes with a distance < **0.01m** are linked.

`input link_flexion_elem2 9 10 21.155128`: The two cable **9** and **10** has a welding angle of **21.155128** degrees. If they are aligned the angle is 180 degrees. If they are perpendicular the angle is 90 degrees. EI of welding is the mean value of EI of cable 1 and EI of cable 2

`input Meshing_UV 1 200 3`: In order to create nodes along the diagonals of meshes and not along twines. In the previous command panel **1** is discretised each **200** meshes along U diagonal and each **3** meshes along V diagonal. The best is to have ropes around the panel of netting with the same step of meshing along ropes as the panel and to begin the meshing by the ropes. It is only available for panel with only 4 corners. The meshing step (m) of panel **1** is, in this case, not used

`input moving_bottom`: In case of towing structures, such as bottom trawl, they are modelled in current and the boat is fixed. If there is a wearing on the bottom, the bottom has the same speed of the current.

`input rot_z_ele 1.0 2.0 4.0 11 17`: In case cables/bars are turned in the design. In this command the cables/bars are turned around **z** axis and the centre of position x **1.0m** and y **2.0m**. The rotation is of $\pi/4.0$ and is applied on cables/bars **11** to **17**. The same commands exist for rotation around x and y axis (`input rot_x_ele 1.0 2.0 4.0 11 17`, `input rot_y_ele 1.0 2.0 4.0 11 17`).

`input rot_z_pan 3.0 2.0 2.0 3 8`: In case netting panels are turned. In this command the netting panels are turned around **z** axis and the centre of position x **3.0m** and y **2.0m**. The rotation is of $\pi/2.0$ and is applied on panels **3** to **8**. The same commands exist for rotation around x and y axis (`input rot_x_pan 3.0 2.0 2.0 3 8`, `input rot_y_pan 3.0 2.0 2.0 3 8`).

```
input speed_type_node2 1 2
1500    3020
0       -1
0        0
0        0
```

: In case of a movement speed is imposed to a node. Introduce a specific type to the node. In the previous command the speed of the node of type **1** is imposed using a time table. This table has **2** components: the times are **1500s** and **3020s**, with a speed along X axis of **0m/s** and **-1m/s**, with a speed along Y axis of **0m/s** and **0m/s**, with a speed along Z axis of **0m/s** and **0m/s**. The speed varies linearly between time steps.

`input sphere_element 3 500 0.23 60.0`: Add sphere floats along a cable element, the drag coefficient of sphere is expected to be 0.6. The previous command add on element **3**, **500** sphere floats of **0.23m** of diameter and **60.0N** of buoyancy. It is expected that, following the Archimedes' principle, the upward buoyant force due to the volume of the sphere ($4/3\pi R^3$) is less than the buoyancy (60.0N).

`input type_noeud_XYZ_SUPINF 1 14.0 1`: In order to change the type of nodes depending on their position: in the previous command, nodes with X value > **14.0m** has the type **1**.

`input type_noeud_XYZ_SUPINF 2 14.0 1`: In order to change the type of nodes depending on their position: in the previous command, nodes with X value < **14.0m** has the type **1**.

`input type_noeud_XYZ_SUPINF 3 14.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with Y value > 14.0m has the type 1.

`input type_noeud_XYZ_SUPINF 4 14.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with Y value < 14.0m has the type 1.

`input type_noeud_XYZ_SUPINF 5 14.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with Z value > 14.0m has the type 1.

`input type_noeud_XYZ_SUPINF 6 14.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with Z value < 14.0m has the type 1.

`input type_noeud_XYZ_SUPINF 7 14.0 15.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with X value > 14.0m and < 15.0m has the type 1.

`input type_noeud_XYZ_SUPINF 8 14.0 15.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with Y value > 14.0m and < 15.0m has the type 1.

`input type_noeud_XYZ_SUPINF 9 14.0 15.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with Z value > 14.0m and < 15.0m has the type 1.

`input type_noeud_XYZ_SUPINF 10 14.0 15.0 16.0 17.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with X value > 14.0m and < 15.0m and Y value > 16.0m and < 17.0m has the type 1.

`input type_noeud_XYZ_SUPINF 11 14.0 15.0 16.0 17.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with Y value > 14.0m and < 15.0m and Z value > 16.0m and < 17.0m has the type 1.

`input type_noeud_XYZ_SUPINF 12 14.0 15.0 16.0 17.0 1:` In order to change the type of nodes depending on their position: in the previous command, nodes with Z value > 14.0m and < 15.0m and X value > 16.0m and < 17.0m has the type 1.

`input type_noeud_XYZ_SUPINF 13 53.25 53.35 0.5 1.5 67.5 67.7 4:` In order to change the type of nodes depending on their position: in the previous command, nodes with X value > 53.25m and < 53.35m and Y value > 0.5m and < 1.5m and Z value > 67.5m and < 67.7m has the type 4.

`input water_density 1000:` The default water density is 1025Kg/m³. This command change this density to 1000Kg/m³.

`output no_visible_symmetry:` in case of symmetry, batz don't display the symmetric parts.

`input wave_model 1:` for using Airy intermediate depth.

`input wave_model 2`: for using Stokes 2d intermediate depth.

`input wave_model 3`: for using use Stokes 3d deep waters.

`output bottom_drag`: Display on the terminal and record in *.sta file the wearing on the bottom.

`output catch_drag`: Display on the terminal and record in *.sta file the drag of the catch.

`output color_element 8 4`: In order to have specific colour for element **8** in batz and phobos. **4** is for green. The other colours are :

0 : invisible

1 : black

2 : blue

3 : red

4 : green

5 : yellow

`output color_surface 8 4`: In order to have specific colour for diamond mesh panel **8** in batz and phobos. **4** is for green. The colour is applied when using Visualisation, triangle_contour in batz and Visualisation, contour-diamond in phobos. The other colours are :

0 : invisible

1 : black

2 : blue

3 : red

4 : green

5 : yellow

`output element_drag`: Display on the terminal and record in *.sta file the drag of the cables/bars.

`input foil 4 4.5 0.238 12.7 11.2 0.75 1.22 0.0`: In case of foil (trawl door for example). In this command the foil is modelled by node type **4**. The actual surface of the foil is **4.5**m². The surface of the model foil is **0.238** m². The mass of the model foil in air is **12.7**Kg. The mass of the model foil in water is **11.2**Kg. The cd is **0.75**. The cl is **1.22**. The cz (along Z) is **0.0**. See annex 3.

`input foil2 4 4.5 0.75 1.22 0.0`: In case of foil (trawl door for example). In this command the foil is modelled by node type **4**. The actual surface of the foil is **4.5**m². The cd is **0.75**. The cl is **1.22**. The cz (along Z) is **0.0**. See annex 3.

`output hydro_forces`: In order to create the file *.hyd file which contains the nodes positions along x y z and the hydrodynamic forces on these points along x y and z.

`input netting2ropes 4 10 0.0 0.5 3 2`: In order to model netting using numerical twines in place of triangular elements in a netting panel. The panel must be surrounded by ropes, even ropes are tiny.

Use the previous command, with 4 the netting panel, 10 the period of twines (numerical twines are 10 times larger than actual twines), 0.0 the position of the numerical U twines relatively to the period, 0.5 the position of the numerical V twines relatively to the period, 3 the accuracy (nodes closer than 3 are merged), 2 the number of bar elements inside a full numerical twine.

output node_drag: Display on the terminal and record in *.sta file the drag of the nodes. A drag on nodes appear only if the size of the node is not null.

output no_visible_element 4 9 10 11 12: This command leads to hide the 4 cables/bars 9, 10, 11 and 12.

output no_visible_surface 4 9 10 11 12: This command leads to hide the 4 netting panels 9, 10, 11 and 12.

output surface_drag: Display on the terminal and record in *.sta file the drag of the netting.

Annex 1: Stiffness of cables

Du to the braid, the nominal diameter of the cable is not fully made of the material: an usual ratio between mechanical diameter and nominal diameter is 0.66. The following table displays the stiffness of cables using a mean ratio between mechanical diameter and nominal diameter of 0.66.

	PA	PP	PE	Aramide	Iron XC18	Dyneema	carbon	glass
Young modulus GPa	6.00	6.00	14.00	60.00	200.00	90.00	300.00	80.00
Nominal diameter mm	Stiffness kN	Stiffness kN	Stiffness kN	Stiffness kN	Stiffness kN	Stiffness kN	Stiffness kN	Stiffness kN
0.52	0.548	0.548	1.28	5.48	18.3	8.2	27.4	7.3
1.00	2.03	2.03	4.73	20.3	68	30.4	101	27.0
1.20	2.92	2.92	6.8	29.2	97	43.8	146	38.9
1.40	3.97	3.97	9.3	39.7	132	59.6	199	53.0
1.60	5.19	5.19	12.1	51.9	173	78	259	69
1.80	6.6	6.6	15.3	66	219	98	328	88
2.00	8.1	8.1	18.9	81	270	122	405	108
2.20	9.8	9.8	22.9	98	327	147	490	131
2.40	11.7	11.7	27.2	117	389	175	584	156
2.60	13.7	13.7	32.0	137	457	205	685	183
2.80	15.9	15.9	37.1	159	530	238	794	212
3.00	18.2	18.2	42.6	182	608	274	912	243
3.20	20.7	20.7	48.4	207	692	311	1,037	277
3.60	26.3	26.3	61.3	263	875	394	1,313	350
4.00	32.4	32.4	76	324	1,081	486	1,621	432
5.00	50.7	50.7	118	507	1,689	760	2,533	675
6.00	73	73	170	729	2,432	1,094	3,647	973
7.00	99	99	232	993	3,310	1,489	4,965	1,324
8.00	130	130	303	1,297	4,323	1,945	6,484	1,729
10.00	203	203	473	2,026	6,754	3,039	10,132	2,702
12.00	292	292	681	2,918	9,726	4,377	14,590	3,891
14.00	397	397	927	3,972	13,239	5,957	19,858	5,295
16.00	519	519	1,210	5,187	17,291	7,781	25,937	6,917
18.00	657	657	1,532	6,565	21,884	9,848	32,827	8,754
20.00	811	811	1,891	8,105	27,018	12,158	40,527	10,807
22.00	981	981	2,288	9,807	32,691	14,711	49,037	13,077
24.00	1,167	1,167	2,723	11,672	38,905	17,507	58,358	15,562
26.00	1,370	1,370	3,196	13,698	45,660	20,547	68,490	18,264
28.00	1,589	1,589	3,707	15,886	52,955	23,830	79,432	21,182
30.00	1,824	1,824	4,255	18,237	60,790	27,355	91,185	24,316
32.00	2,075	2,075	4,842	20,750	69,165	31,124	103,748	27,666
36.00	2,626	2,626	6,128	26,261	87,537	39,392	131,306	35,015
40.00	3,242	3,242	7,565	32,421	108,071	48,632	162,106	43,228

Annex 2: Volumic mass of cables

Assessment using linear mass.

The volumic mass of cables (ρ_c) when under water, could be assessed using the diameter (D,m) and linear mass (k, kg/m) of the cable and volumic mass (ρ_m) of the cable material.

The total volume of 1 m of cable (material and sea water):

$$V_t = \pi \cdot D^2/4 \text{ (m}^3\text{)}$$

The volume of cable material in 1m of cable:

$$V_m = k/\rho_m \text{ (m}^3\text{)}$$

The volume of sea water in 1m of cable:

$$V_w = V_t - V_m \text{ (m}^3\text{)}$$

The mass of sea water inside 1m of cable (using 1025kg/m³ for the sea water density):

$$M_w = V_w \cdot 1025 \text{ (kg)}$$

The total mass of 1m of cable (material and sea water):

$$M_t = k + M_w \text{ (kg)}$$

The volumic mass of cables when under water:

$$\rho_c = M_t/V_t \text{ (kg/m}^3\text{)}$$

Assessment without linear mass

In case the linear mass of the cable is unknown, it could be worth to use the following table (proportion of 66% of material in the cable and 34% of sea water in the cable).

	PA	PP	PE	Aramide	Iron XC18	Dyneema	carbon	glass
Material density Kg/m ³	1140	910	920	1450	7874	970	2266	2400
Cable density Kg/m ³	1100	950	956	1304	5516	989	1839	1927

Rtex vs diameter of twine

<https://www.fao.org/4/ah827e/AH827E03.htm>

Annex 3: Foil

Flume tank model tests

In case of foil (trawl door for example), which has been modelled is tested (in flume tank for example). In the following command line (beginning by input), the foil is modelled by node type **4**. The actual surface of the foil is **4.5m²**.

The surface of the model foil (tested in flume tank) is **0.238m²**. The mass of the model foil in air is **12.7Kg**. The mass of the model foil in water is **11.2Kg**.

The c_d (the drag coefficient) is **0.75**. The c_l (the lift coefficient) is **1.22**. The c_z (along Z) is **0.0**.

```
input foil 4 4.5 0.238 12.7 11.2 0.75 1.22 0.0
```

This example is taken page Appendix IV-17 (Figure 154) of

https://www.seafish.org/media/1peahnrq/otterboard_performance_and_behaviour.pdf


The orientation is such that $F_d \wedge F_l / F_z$. For having F_l in opposite direction replace c_l by $-c_l$. With F_d the drag force, F_l the lift force and F_z a vertical force upward (WARNING, use only for current along X axis: Current direction (deg) in don file is 0.0).

With the previous command and a current of 1.56m/s along X axis, the following is got.

```
node_type 4
actual_foil_surface 4.500000 (m²)
model_foil_surface 0.238000 (m²)
model_mass_in_air 12.700000 (Kg) model_mass_in_water 11.200000 (Kg)
foil_cd 0.750000 foil_cl 1.220000 foil_cz 0.000000
TypeNoeud[4].mxyz (N)          1044.135967      1044.135967      1044.000000
TypeNoeud[4].majxyz (N)        1044.135967      1044.135967      1044.000000
TypeNoeud[4].lonxyz (m)        0.493674       0.493674       0.493674
TypeNoeud[4].cdxyz             0.000000       0.000000       0.000000
TypeNoeud[4].fextxyz (N)       4209.367500     6847.237800     0.000000
Fd (N)                          4209.367500     Fl (N)          6847.237800
```


Morgere Polyvalent Ovale

Cambered oval with one slot. Tested in upright condition.

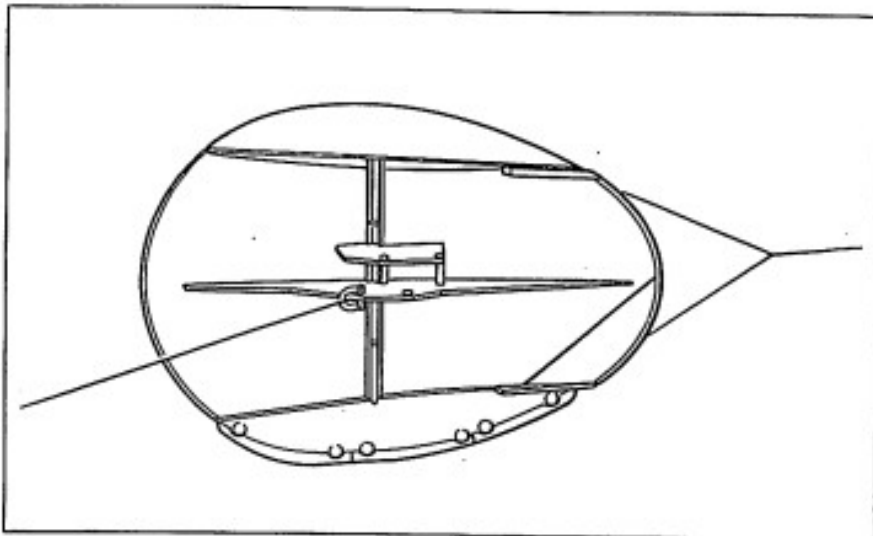

Model Specifications	
Length	0.660 m
Height	0.450 m
Projected Area	0.238 m ²
Aspect Ratio	0.68
Area Ratio	0.80
Weight in Air	12.7 kg
Weight in Water	11.2 kg

Angle of Attack	CL	CD	CL/CD
25 deg.	-	-	-
30 deg.	1.20	0.77	1.57
35 deg.	1.04	0.79	1.33
40 deg.	0.95	0.84	1.13
45 deg.	0.88	0.92	0.95
Maximum CL at 27 deg.	1.22	0.75	1.63

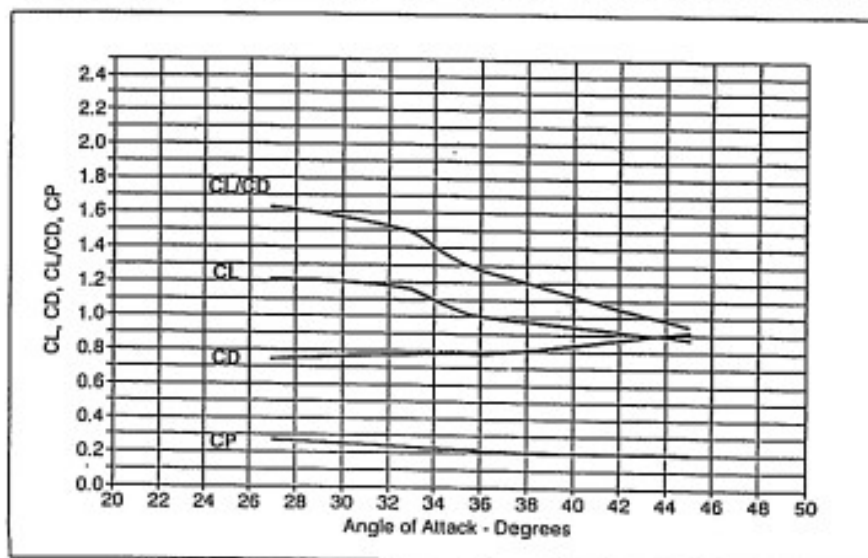

Appendix IV - 17

Figure 154: Appendix IV-17 of the document Otterboard Performance and Behaviour. Characteristics of trawl door model (surface, mass, cd and cl).

Foil determined by hydrodynamic coefficients and surface

In case of foil (trawl door for example), for which the surface is known and for which the hydrodynamic coefficients are known. In the following command line (beginning by input), the foil is modelled by node type 4, the actual surface of the foil is 4.5m², the drag coefficient is 0.75 (cd), the lift coefficient is 1.22 (cl) and the coefficient along the vertical is 0.0 (cz).

```
input foil2 4 4.5 0.75 1.22 0.0
```