

Technical Report

# Clustered Data ONTAP NFS Best Practice and Implementation Guide

Justin Parisi, NetApp July 2016 | TR-4067

# **Version History**

Version	Date	Document Version History
Version 1.0	June 2013	Initial release
Version 2.0	October 2013	Updated for ONTAP 8.2
Version 2.1	January 2014	Updated for ONTAP 8.2.1
Version 2.2	September 2014	Updated for ONTAP 8.2.2
Version 3.0	February 2015	Updated for ONTAP 8.3
Version 3.1	July 2015	Updated for ONTAP 8.3.1
Version 3.2	February 2016	Updated for ONTAP 8.3.2
Version 4.0	July 2016	Updated for ONTAP 9.0

# **TABLE OF CONTENTS**

rsion	History	2
ntrod	luction	7
1.1	Scope	7
1.2	Intended Audience and Assumptions	7
Ove	erview of Clustered Data ONTAP	<b>8</b>
2.1	Business Challenges with Traditional Storage	8
2.2	Clustered Data ONTAP	8
Arc	hitecture	ę
3.1	Important Components of Clustered Data ONTAP	ç
3.2	NFS Options Explained	10
3.3	Cluster Namespace	10
3.4	Steps to Bring Up a Clustered Data ONTAP NFS Server	11
3.5	Data LIF Best Practices with NAS Environments	11
3.6	Dynamic NAS TCP Autotuning	14
3.7	NAS Flowcontrol	15
3.8	Pseudo File Systems in Clustered Data ONTAP	17
3.9	Does Clustered Data ONTAP Support 32-Bit and 64-Bit File IDs?	25
Ехр	ort Policies and Rules in Clustered Data ONTAP	. 26
4.1	Export Policy Rule Options Explained	27
4.2	Export Policy Sharing and Rule Indexing	27
4.3	UNIX Users and Groups	28
4.4	The Anon User	29
	1.1 1.2 Ove 2.1 2.2 Arc 3.1 3.2 3.3 3.4 3.5 3.6 3.7 3.8 3.9 Exp 4.1 4.2 4.3	1.2 Intended Audience and Assumptions

	4.5	The Root User	30
	4.6	Limiting Access to the SVM Root Volume	37
	4.7	Volume-Based Multitenancy Using Export Policies and Rules	39
	4.8	Mapping All UIDs to a Single UID (squash_all)	44
	4.9	Umask	47
	4.10	Export Policy Rule Inheritance	49
	4.11	The Export Policy Rule Index	53
	4.12	2 Export Policy Rule Caching	54
	4.13	B Export Policy Rule Access Verification (exportfs -c)	56
5	Sho	owmount in Clustered Data ONTAP	57
	5.1	What Happens During Showmount?	58
	5.2	Showmount Plug-In for Clustered Data ONTAP	59
	5.3	Showmount for Clustered Data ONTAP 8.3	59
6	Nan	ne Services	60
	6.1	Name Services Best Practices	61
7	Nor	ndisruptive Operations (NDO) with NFS	62
	7.1	Replay Cache	62
	7.2	File Locking	62
	7.3	NFSv4.1 Sessions	63
	7.4	What Happens During LIF Migrations in NFSv4.x?	65
	7.5	General Best Practices for NDO with NFS in Clustered Data ONTAP	65
8	NFS	Sv3 in Clustered Data ONTAP	66
9	NFS	Sv4.x in Clustered Data ONTAP	73
	9.1	Advantages of Using NFSv4.x	73
	9.2	NFSv4.0	75
	NFS	Sv4 User ID Mapping	81
	9.3	NFSv4.1	105
	9.4	Mount Option Best Practices with NFS	109
10	NFS	S Auditing	112
	10.1	NFS Audit Setup	112
11	NFS	S on Nontraditional Operating Systems	114
	NFS	S Using Apple OS	117
12	Mul	Itiprotocol User Mapping	118

	12.1 Credential Caching in Clustered Data ONTAP	118
	12.2 User Name Mapping During Multiprotocol Access	121
13	Unified Security Style (Infinite Volumes)	131
	13.1 What Is Unified Security Style?	131
	13.2 UNIX, NTFS, and Mixed Security Styles	131
	13.3 Unified Security Style Behavior in Clustered Data ONTAP	135
	13.4 Unreachable Attributes	140
	13.5 Infinite Volume Export Policies	141
14	NFS Performance Monitoring and Data Gathering	144
Аp	pendix	156
	NFS Server Option List in Clustered Data ONTAP	156
	Export Policy Rule Option List	163
	NFSv3 Option Changes in Clustered Data ONTAP	165
	NFSv4 Option Changes in Clustered Data ONTAP	166
	NFSv3 Port Changes	168
Re	ferences	169

# **LIST OF BEST PRACTICES**

Best Practice 1: NFS Server Options Recommendation (See Best Practice 2)	10
Best Practice 2: NFS Block Size Changes (See Best Practice 3)	14
Best Practice 3: RPC Slot Maximum for RHEL 6.3 and Later (See Best Practice 4)	16
Best Practice 4: Export Policy Rule Requirement (See Best Practice 5)	26
Best Practice 5: Protocol Services Recommendation (See Best Practice 6)	29
Best Practice 6: Name Services Recommendation (See Best Practice 7)	29
Best Practice 7: Configuration Management (See Best Practice 8)	29
Best Practice 8: Hiding Snapshot Copies (See Best Practice 9)	43
Best Practice 9: Export Policy Rules: Parent Volumes (See Best Practice 10)	52
Best Practice 10: Export Policy Rule Index Maximum (See Best Practice 11)	53
Best Practice 11: Export Policy Rule Index Ordering (See Best Practice 12)	54
Best Practice 12: Showmount Permissions Considerations (See Best Practice 13)	59
Best Practice 13: Showmount Security Style Considerations (See Best Practice 14)	59
Best Practice 14: NFSv3 and File Locking (See Best Practice 15)	62
Best Practice 15: NDO Best Practices for NFS Environments (See Best Practice 16)	66
Best Practice 16: Version Recommendations with NFSv4.x (See Best Practice 17)	74
Best Practice 17: Use of v4-id-numerics (See Best Practice 18)	76
Best Practice 18: Choosing a Security Style (See Best Practice 19)	90
Best Practice 19: Using DENY ACEs (See Best Practice 20)	92
Best Practice 20: Data LIF Locality (See Best Practice 21)	102
Best Practice 21: pNFS Client Recommendation (See Best Practice 22)	106
Best Practice 22: NFSv4.x Version Recommendation (See Best Practice 23)	109
Best Practice 23: Audit ACE Recommendation (See Best Practice 24)	112
Best Practice 24: Name Mapping Recommendation (See Best Practice 25)	122
Best Practice 25: The Wheel Group (See Best Practice 26)	128
Best Practice 26: Primary GIDs (See Best Practice 27)	128
Best Practice 27: Local UNIX Users and Groups (See Best Practice 28)	128
Best Practice 28: Local UNIX Users and Group Limits (See Best Practice 1)	129
LIST OF TABLES	
Table 1) Benefits of a cluster namespace.	11
Table 2) Export examples	21
Table 3) Pros and cons for volume-based multitenancy based on design choice	41
Table 4) Directory tree structure for volume-based multitenancy.	41
Table 5) Export policy rule attributes.	45
Table 6) Supported authentication types for ro, rw, and superuser	46
Table 7) Octal values in umask	48
Table 8) Caches and time to live (TTL).	56

Table 9) Replay cache NDO behavior	62
Table 10) Lock state NDO behavior.	63
Table 11) 7-Mode NFS port defaults vs. clustered Data ONTAP port defaults	68
Table 12) NFSv4.x lock terminology	79
Table 13) NFS lease and grace periods	100
Table 14) Referrals versus migration versus pNFS	104
Table 15) NFSv4.1 delegation benefits.	108
Table 16) Limits on local users and groups in clustered Data ONTAP	128
Table 17) 7-Mode to clustered Data ONTAP mapping.	130
Table 18) Limitations of existing security styles	132
Table 19) Mixed versus unified security style	133
Table 20) Mixed mode versus unified security style.	137
Table 21) Common mount failures.	145
Table 22) Common access issues.	148
Table 23) Files written as "nobody" in NFSv4	149
Table 24) Stale file handle on NFS mount	150
Table 25) Virtual machine statistic masks.	154
Table 26) NFS options in clustered Data ONTAP.	156
Table 27) Export policy rule options.	163
Table 28) NFSv3 configuration options in clustered Data ONTAP.	165
LIST OF FIGURES	
Figure 1) Cluster namespace.	10
Figure 2) Client request to mount a file system in NFSv4	20
Figure 3) Server sends file handle to complete request.	21
Figure 4) Symlink example using vsroot	25
Figure 5) Volume-based multitenancy using junctioned volumes	39
Figure 6) Volume-based multitenancy using qtrees.	40
Figure 7) UNIX permissions.	47
Figure 8) RPC packet with 16 GIDs.	71
Figure 9) NFSv4.x read and write ops: no multiprocessor	74
Figure 10) NFSv4.x read and write ops: with multiprocessor.	74
Figure 11) pNFS data workflow.	107
Figure 12) Example of setting NFSv4 audit ACE	113
Figure 13) Multiprotocol user mapping	121
Figure 14) Mixed-style (left) and unified-style (right) mode bit display on Windows.	133
Figure 15) UNIX permission in an NTFS ACL in unified style	135

# 1 Introduction

As more and more data centers evolve from application-based silos to server virtualization and scale-out systems, storage systems have evolved to support this change. NetApp clustered Data ONTAP provides shared storage for enterprise and scale-out storage for various applications, including databases, server virtualization, and home directories. Clustered Data ONTAP provides a solution for emerging workload challenges in which data is growing in size and becoming more complex and unpredictable.

Clustered Data ONTAP is unified storage software that scales out to provide efficient performance and support of multitenancy and data mobility. This scale-out architecture provides large scalable containers to store petabytes of data. The architecture also upgrades, rebalances, replaces, and redistributes load without disruption, which means that the data is perpetually alive and active.

# 1.1 Scope

This document covers the following topics:

- Introduction to clustered Data ONTAP
- Architecture of clustered Data ONTAP
- Setting up an NFS server in clustered Data ONTAP
- Configuring export policies and rules
- 7-Mode and clustered Data ONTAP differences and similarities for NFS access-cache implementation
- Multiprotocol user mapping
- Mapping of NFS options in 7-Mode to clustered Data ONTAP
- Configuration of NFS v4 features in clustered Data ONTAP, such as user ID mapping, delegations, ACLs, and referrals

**Note:** This document is not intended to provide information about migration from 7-Mode to clustered Data ONTAP; it is specifically about NFSv3 and NFSv4 implementation in clustered Data ONTAP and the steps required to configure it.

# 1.2 Intended Audience and Assumptions

This technical report is for storage administrators, system administrators, and data center managers. It assumes basic familiarity with the following:

- NetApp FAS systems and the Data ONTAP operating system
- Network file sharing protocols (NFS in particular)

**Note:** This document contains advanced and diag-level commands. Exercise caution when using these commands. If there are questions or concerns about using these commands, contact NetApp Support for assistance.

# 2 Overview of Clustered Data ONTAP

# 2.1 Business Challenges with Traditional Storage

#### Capacity Scaling

Capacity expansion in traditional storage systems might require downtime, either during physical installation or when redistributing existing data across the newly installed capacity.

#### Performance Scaling

Standalone storage systems might lack the I/O throughput to meet the needs of large-scale enterprise applications.

#### Availability

Traditional storage systems often have single points of failure that can affect data availability.

#### Right-Sized SLAs

Not all enterprise data requires the same level of service (performance, resiliency, and so on). Traditional storage systems support a single class of service, which often results in poor utilization or unnecessary expense.

#### Cost

With rapid data growth, storage is consuming a larger and larger portion of shrinking IT budgets.

#### • Complicated Management

Discrete storage systems and their subsystems must be managed independently. Existing resource virtualization does not extend far enough in scope.

#### 2.2 Clustered Data ONTAP

Clustered Data ONTAP helps achieve results and get products to market faster by providing the throughput and scalability needed to meet the demanding requirements of high-performance computing and digital media content applications. Clustered Data ONTAP also facilitates high levels of performance, manageability, and reliability for large Linux, UNIX, and Microsoft Windows clusters.

Features of clustered Data ONTAP include:

- Scale-up, scale-out, and scale-down are possible with numerous nodes using a global namespace.
- Storage virtualization with storage virtual machines (SVMs) eliminates the physical boundaries of a single controller (memory, CPU, ports, disks, and so on).
- Nondisruptive operations (NDO) are available when you redistribute load or rebalance capacity combined with network load balancing options within the cluster for upgrading or expanding its nodes.
- NetApp storage efficiency features such as NetApp Snapshot<sup>®</sup> copies, thin provisioning, spaceefficient cloning, deduplication, data compression, and NetApp RAID DP<sup>®</sup> technology are also
  available.

You can address solutions for the previously mentioned business challenges by using the scale-out clustered Data ONTAP approach.

#### Scalable Capacity

Grow capacity incrementally, on demand, through the nondisruptive addition of storage shelves and growth of storage containers (pools, LUNs, file systems). Support nondisruptive redistribution of existing data to the newly provisioned capacity as needed using volume moves.

# Scalable Performance: Pay as You Grow

Grow performance incrementally, on demand and nondisruptively, through the addition of storage controllers in small, economical (pay-as-you-grow) units.

#### • High Availability

Leverage highly available pairs to provide continuous data availability in the face of individual component faults.

#### Flexible, Manageable Performance

Support different levels of service and provide the ability to dynamically modify the service characteristics associated with stored data. You can do so by nondisruptively migrating data to slower, less costly disks and/or by applying quality-of-service (QoS) criteria.

#### Scalable Storage Efficiency

Control costs through the use of scale-out architectures that employ commodity components. Grow capacity and performance on an as-needed (pay-as-you-go) basis. Increase utilization through thin provisioning and data deduplication.

#### • Unified Management

Provide a single point of management across the cluster. Leverage policy-based management to streamline configuration, provisioning, replication, and backup. Provide a flexible monitoring and reporting structure implementing an exception-based management model. Virtualize resources across numerous controllers so that volumes become simple-to-manage logical entities that span storage controllers for performance and dynamic redistribution of data.

## 3 Architecture

# 3.1 Important Components of Clustered Data ONTAP

# **Storage Virtual Machine (SVM)**

- An SVM is a logical file system namespace capable of spanning beyond the boundaries of physical nodes in a cluster.
  - Clients can access virtual servers from any node in the cluster, but only through the associated logical interfaces (LIFs).
  - Each SVM has a root volume under which additional volumes are mounted, extending the namespace.
  - It can span several physical nodes.
  - It is associated with one or more logical interfaces; clients access the data on the virtual server through the logical interfaces that can live on any node in the cluster.

# **Logical Interface (LIF)**

- A LIF is essentially an IP address with associated characteristics, such as a home port, a list of ports for failover, a firewall policy, a routing group, and so on.
  - Client network data access is through logical interfaces dedicated to the SVM.
  - An SVM can have more than one LIF. You can have many clients mounting one LIF or one client mounting several LIFs.
  - This means that IP addresses are no longer tied to a single physical interface.

#### **Aggregates**

- An aggregate is a RAID-level collection of disks; it can contain more than one RAID group.
  - Aggregates serve as resources for SVMs and are shared by all SVMs.

#### Flexible Volumes

- A volume is a logical unit of storage. The disk space that a volume occupies is provided by an aggregate.
  - Each volume is associated with one individual aggregate, and therefore with one physical node.
  - In clustered Data ONTAP, data volumes are owned by an SVM.
  - Volumes can be moved from aggregate to aggregate with the NetApp DataMotion<sup>™</sup> for Volumes feature, without loss of access to the client. This capability provides more flexibility to move volumes within a single namespace to address issues such as capacity management and load balancing.

# 3.2 NFS Options Explained

The <u>appendix contains a table</u> that covers the various options used for NFS servers, the version of clustered Data ONTAP in which they are available, the privilege level, and their use. All NFS server options can be viewed using the nfs server show command or through NetApp OnCommand<sup>®</sup> System Manager.

#### Best Practice 1: NFS Server Options Recommendation (See Best Practice 2)

The best practice for setting NFS server options is to evaluate each option's relevance in an environment on a case-by-case basis. The defaults are recommended in most cases, particularly in all NFSv3 environments. Some use cases might arise that require options to be modified, such as enabling NFSv4.0 to allow NFSv4 access. There is not a "one-size-fits-all" configuration for all scenarios, so each use case should be evaluated at the time of implementation.

# 3.3 Cluster Namespace

A cluster namespace is a collection of file systems hosted from different nodes in the cluster. Each SVM has a file namespace that consists of a single root volume. The SVM namespace consists of one or more volumes linked by means of junctions that connect from a named junction inode in one volume to the root directory of another volume. A cluster can have more than one SVM.

All the volumes belonging to the SVM are linked into the global namespace in that cluster. The cluster namespace is mounted at a single point in the cluster. The top directory of the cluster namespace within a cluster is a synthetic directory containing entries for the root directory of each SVM namespace in the cluster.

Figure 1) Cluster namespace.

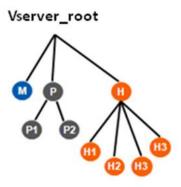


Table 1) Benefits of a cluster namespace.

Without a Cluster Namespace	With a Cluster Namespace
Many mount points per client: /mount/box1/volA /mount/box2/volB /mount/box8/volH	Single mount point per client: /mount/vserver_root
<ul> <li>Change mapping for thousands of clients when moving or adding data</li> <li>Difficult to manage</li> <li>Very complex to change</li> <li>Doesn't scale</li> </ul>	<ul> <li>Namespace unchanged as data moves</li> <li>Much easier to manage</li> <li>Much easier to change</li> <li>Seamlessly scales to petabytes</li> </ul>

# 3.4 Steps to Bring Up a Clustered Data ONTAP NFS Server

NetApp assumes that the following configuration steps were completed before you proceed with setting up a clustered Data ONTAP NFS server.

- Clustered Data ONTAP installation and configuration
- Aggregate creation
- SVM creation
- LIF creation
- Volume creation
- Valid NFS license applied

**Note:** NFS server creation and options are explained in detail in the "File Access and Protocols Management Guide" for the version of clustered Data ONTAP being used.

### 3.5 Data LIF Best Practices with NAS Environments

Clustered Data ONTAP 8.3 allows storage administrators to provide the following benefits:

- Seamless scale-out storage
- Multiprotocol unified access (NFS, CIFS, and SAN)
- Nondisruptive operations

This is done by way of a secure multitenant architecture with SVMs.

#### Why SVMs?

SVMs are logical storage containers that own storage resources such as flexible volumes, logical interfaces (LIFs), exports, CIFS shares, and so on. Think of them as a storage "blade center" in your cluster. These SVMs share physical hardware resources in the cluster with one another, such as network ports/VLANs, aggregates with physical disk, CPU, RAM, switches, and so on. As a result, load for SVMs can be balanced across a cluster for maximum performance and efficiency or to leverage SaaS functionality, among other benefits.

#### **Cluster Considerations**

A cluster can comprise several HA pairs of nodes (4 HA pairs/8 nodes with SAN, 12 HA pairs/24 nodes with NAS). Each node in the cluster has its own copy of a replicated database with the cluster and SVM configuration information. Additionally, each node has its own set of user space applications that handle cluster operations and node-specific caches, not to mention its own set of RAM, CPU, disks, and so on. So while a cluster operates as a single entity, it does have the underlying concept of individualized components. As a result, it makes sense to take under consideration the physical hardware in a cluster when implementing and designing.

#### **Data LIF Considerations**

<u>Data LIFs</u> can live on any physical port in a cluster that is added to a valid broadcast domain. These data LIFs are configured with SVM-aware routing mechanisms that allow the correct pathing of Ethernet traffic in an SVM, regardless of where a valid data LIF lives in the cluster. In versions earlier than 8.3, SVMs routed at a node level, so traffic could travel only through the node that owned a data LIF. In clustered Data ONTAP 8.3, traffic routes from the data LIF even if it is a nonlocal path. This capability is known as LIF sharing for outbound connections and is covered in detail in <u>TR-4182</u>: <u>Ethernet Storage Design Considerations and Best Practices for Clustered Data ONTAP Configurations</u>.

However, despite this enhancement in clustered Data ONTAP 8.3, it is still worth considering the original best practice recommendation for data LIFs participating in NAS operations, which is to have one data LIF per node, per SVM.

#### One Data LIF per Node per SVM

With the introduction of IP spaces in clustered Data ONTAP, the preceding recommendation is more of a reality, because storage administrators no longer have to use unique IP addresses in the cluster for SVMs. With IP spaces, IP addresses can be duplicated in the cluster on a per-SVM basis to allow true secure multitenancy architecture. For more information about IP spaces, see TR-4182.

#### **Data LIF Locality Recommendations**

If you use a 24-node cluster, using 24 data LIFs per SVM is ideal for the following reasons:

You have the ability to leverage data locality features: features such as NFS referrals, CIFS autolocation, and pNFS enable data locality for NAS traffic regardless of where the volumes live in a cluster. These features help balance load better, but also make use of local caches and fastpath mechanisms for NAS traffic.

#### Ability to reduce cluster network traffic

Although cluster network traffic is generally not an issue (you are more likely to peg the CPU or disk before you saturate a 10gb network), it is better to limit the amount of traffic on a cluster network as much as possible.

#### Ability to enable data locality in the event of a volume move

If you move a volume to another node, you can be certain you still have a local path to the data if every node has a data LIF for the SVM.

 Ability to spread the load across nodes and leverage all the available hardware (CPU, RAM, and so on)

If you load up all your NAS traffic on one node through one data LIF, you are not realizing the value of the other nodes in the cluster. Spreading network traffic enables all available physical entities to be used. Why pay for hardware you do not use?

Ability to balance network connections across multiple cluster nodes

Clusters are single entities, as are SVMs. But they do have underlying hardware that has its own maximums, such as number of connections and so on. For information about hardware maximums in clustered Data ONTAP, see the configuration information for your version of Data ONTAP.

Ability to reduce the impact of storage failover (SFO)/givebacks

Fewer clients are affected when SFO events happen, whether they are planned or unplanned.

Ability to leverage features such as on-box DNS

On-box DNS allows data LIFs to act as DNS servers and honor forwarded zone requests. After a zone request is received, the cluster determines the ideal node to service that request based on that node's CPU and throughput. This capability provides intelligent DNS load balancing (as opposed to round-robin DNS, which is a serial and unaware process). For more information regarding on-box DNS (and how to configure it), see TR-4523: DNS Load Balancing in ONTAP.

**Note:** Keep in mind that the preceding points are merely recommendations and not requirements unless you use data locality features such as pNFS.

# **Data LIF Considerations When Dealing with Mount Ports**

In environments with a large number of clients connecting through NFS, it is important to keep in mind that, by default, the number of mount and NFS ports are limited to 1,024. This number is controlled with the options:

```
mount-rootonly nfs-rootonly
```

In some circumstances, the number of ports used to mount or for NFS operations might be exhausted, which then causes subsequent mount and NFS operations to hang until a port is made available.

If an environment has thousands of clients that are mounted through NFS and generating I/O, it is possible to exhaust all ports. One such scenario was with ESX using NFS datastores, because some best practices would call for a data LIF/IP address per datastore. For the most recent best practices for ESX/NFS datastores, see TR-4333: VMware vSphere 5 on NetApp Clustered Data ONTAP.

This situation affects the source port (client-side) only: The mountd, portmapper, NFS, and nlm ports for the NFS server are designated by the server. In clustered Data ONTAP, they are controlled by the following options:

# Does rootonly Affect Security?

The short answer to that question is "Yes."

The rootonly options are added to avoid untrusted client access. Untrusted clients (those not part of the export rules) can potentially access data by <u>using SSH tunneling to trusted clients</u>. However, those requests would come from untrusted ports (ports greater than 1,024). This can provide a back door for clients not intended to have access.

Therefore, the enabling or disabling of the rootonly options hinges upon need. Does the environment require more ports to allow NFS to function properly? Or is it more important to prevent untrusted clients from accessing mounts?

One potential compromise is to make use of NFSv4.x and/or Kerberos authentication for a higher level of secured access to NFS exports. <u>TR-4073: Secure Unified Authentication</u> covers how to use NFSv4.x and Kerberos in detail.

In these scenarios, using the mount-rootonly and/or nfs-rootonly options can alleviate these issues.

To check port usage on the client:

```
# netstat -na | grep [IP address]
```

To check port usage on the cluster:

```
::> network connections active show -node [nodename] -vserver [vservername] -service nfs*
```

## **NFS Behind Network Address Translation (NAT)**

NFS maintains a reply cache to keep track of certain operations to make sure that they have been completed. This cache is based on the source port and source IP address. When NAT is used in NFS operations, the source IP or port may change in flight, which could lead to data resiliency issues. If NAT is used, static entries for the NFS server IP and port should be added to make sure that data remains consistent.

In addition, NAT could also lead to issues with NFS mounts hanging due to how NAT handles idle sessions. If using NAT, the configuration should take idle sessions into account and leave them open indefinitely to prevent issues. NAT can also create issues with NLM lock reclamation.

Ultimately, the best practice for NAT with NFS would be to avoid using it if possible and instead create a data LIF on the SVM. If NAT is necessary, work with the NAT vendor to configure it properly for NFS operations.

# 3.6 Dynamic NAS TCP Autotuning

Clustered Data ONTAP introduces dynamic NAS TCP autotuning, which enables the NAS protocol stack to adjust buffer sizes on the fly to the most optimal setting. This capability is needed because static methods to set TCP buffer sizes do not consider the dynamic nature of networks nor the range of different types of connections made to a system at one time. Autotuning is used to optimize the throughput of NAS TCP connections by computing the application data read rate and the rate of the data being received by the system to compute optimal buffer size. The feature is not configurable and only increases buffer sizes; buffers never decrease. The starting value for this is 32K. Autotuning applies to individual TCP connections, rather than on a global scale.

## **Best Practice 2: NFS Block Size Changes (See Best Practice 3)**

If these values are adjusted, they affect only new mounts. Existing mounts maintain the block size that was set at the time of the mount. If the sizes are changed, existing mounts can experience rejections of write operations or smaller responses for reads than requested.

Whenever you change block size options, make sure that clients are unmounted and remounted to reflect those changes. See <u>bug 962596</u> for more information.

These options are not the same as the max transfer size values included under the NFS server options:

```
-tcp-max-xfer-size
-v3-tcp-max-read-size
-v3-tcp-max-write-size
```

**Note:** The NFS TCP size settings can be modified (8.1 and later only), but NetApp generally does not recommend doing so.

# **Max Transfer Size Settings in ONTAP 9**

In NetApp ONTAP 9, -v3-tcp-max-read-size and -v3-tcp-max-write-size have been deprecated. The recommendation is to leverage the option -tcp-max-xfer-size instead. This change also allows TCP transfer sizes of 1MB for both reads and writes. ONTAP versions prior to ONTAP 9 only allowed 1MB for reads.

## Why Dynamic Window Size?

Most environments do not benefit from static TCP window sizes, because window sizes are generally considered in the context of a single host or connection. On a server, such as NFS running on clustered Data ONTAP, there are multiple connections to multiple hosts. Each connection has its own uniqueness and requires varying degrees of throughput. With a static window, a server becomes extremely limited in how it can handle the diversity of inbound connections. Participants in network infrastructures often change and rarely are static; thus the TCP stack needs to be able to handle those participants in an efficient and effective manner. Dynamic window sizes help prevent the caveats seen in static window environments, such as overutilizing a network and creating a throughput collapse or underutilizing a network and experiencing less operating efficiency over time.

#### 3.7 NAS Flowcontrol

Clustered Data ONTAP also adds NAS flowcontrol. This flowcontrol mechanism is separate from the TCP flowcontrol enabled on the NICs and switches of the data network. It is always on and implemented at the NAS protocol stack to prevent rogue clients from overloading a node in the cluster and creating a denial of service (DoS) scenario. This flowcontrol affects all NAS traffic (CIFS and NFS).

#### **How It Works**

When a client sends too many packets to a node, the flowcontrol adjusts the window size to 0 and tells the client to wait on sending any new NAS packets until the other packets are processed. If the client continues to send packets during this "zero window," then the NAS protocol stack flowcontrol mechanism sends a TCP reset to that client. The reset portion of the flowcontrol and the threshold for when a reset occurs are configurable per node as of clustered Data ONTAP 8.2 using the following commands:

```
cluster::> node run [nodename] options ip.tcp.fcreset_enable [on|off]
cluster::> node run [nodename] options ip.tcp.fcreset_thresh_high [numerical value]
```

**Note:** These values should be adjusted only if necessary and at the guidance of NetApp Support. "Necessary" in this case means "the option is causing production performance or disruption issues." In most cases, the option can be left unmodified.

# **Viewing NAS Flowcontrol Statistics**

To see how many packets have been affected by NAS flowcontrol and its reset mechanisms, use the netstat -p tcp command from nodeshell and look for the following (also known as "extreme flowcontrol"):

**Note:** The preceding output is not the complete output you would see from the command. The flowcontrol portions have been isolated.

Run the command in increments to see if the numbers increase. Seeing packets in extreme flowcontrol does not necessarily signify a problem. Contact NetApp Technical Support if you suspect a performance problem.

#### The Effect of nfs.ifc.rcv Values in Clustered Data ONTAP

In Data ONTAP operating in 7-Mode, there were occasions in which the NFS input flowcontrol mechanisms could erroneously cause NFS disconnects, timeouts, or performance issues under high workloads. The issue was that the values set as the default for the nfs.ifc.rcv.high and nfs.icf.rcv.low were not high enough (that is, they were too close to the nfs.tcp.receivewindowsize) in Data ONTAP releases operating in 7-Mode before 8.2.x.

Because of the implementation of dynamic window sizes and NFS flowcontrol autotuning, these values no longer apply in clustered Data ONTAP.

#### **RPC Slots Increased in RHEL 6.3 and Later**

In versions earlier than RHEL 6.3, the number of RPC requests was limited to a default of 16, with a maximum of 128 in-flight requests. In RHEL 6.3, RPC slots were changed to dynamically allocate, allowing a much greater number of RPC slots. As a result, clients running RHEL 6.3 and later potentially can overload a clustered Data ONTAP node's NAS flowcontrol mechanisms, causing potential outages on the node.

Best Practice 3: RPC Slot Maximum for RHEL 6.3 and Later (See Best Practice 4)

To avoid potentially causing denial of service on a cluster node, modify clients running RHEL 6.3 and later to use, at most, 128 RPC slots.

To do this, run the following on the NFS client (alternatively, edit the /etc/modprobe.d/sunrpc.conf file manually to use these values):

```
# echo "options sunrpc udp_slot_table_entries=64 tcp_slot_table_entries=128
tcp max slot table entries=128" >> /etc/modprobe.d/sunrpc.conf
```

# 3.8 Pseudo File Systems in Clustered Data ONTAP

The clustered Data ONTAP architecture has made it possible to have a true pseudofile system, which complies with the RFC 7530 NFSv4 standards.

Servers that limit NFS access to "shares" or "exported" file systems should provide a pseudo-file system into which the exported file systems can be integrated, so that clients can browse the server's namespace. The clients' view of a pseudo-file system will be limited to paths that lead to exported file systems.

#### And in section 7.3:

NFSv4 servers avoid this namespace inconsistency by presenting all the exports within the framework of a single-server namespace. An NFSv4 client uses LOOKUP and READDIR operations to browse seamlessly from one export to another. Portions of the server namespace that are not exported are bridged via a "pseudo-file system" that provides a view of exported directories only. A pseudo-file system has a unique fsid and behaves like a normal, read-only file system.

The reason for this is because clustered Data ONTAP has removed the /vol requirement for exported volumes and instead uses a more standardized approach to the pseudo-file system. Because of this, you can now seamlessly integrate an existing NFS infrastructure with NetApp storage because "/" is truly "/" and not a redirector to /vol/vol0, as it was in 7-Mode.

A pseudo file system applies only in clustered Data ONTAP if the permissions flow from more restrictive to less restrictive. For example, if the vsroot (mounted to /) has more restrictive permissions than a data volume (such as /volname) does, then pseudo file system concepts apply.

## **History of Pseudo File Systems in Data ONTAP**

Most client systems mount local disks or partitions on directories of the root file system. NFS exports are exported relative to root or "/." Early versions of Data ONTAP had only one volume, so directories were exported relative to root just like any other NFS server. As data requirements grew to the point that a single volume was no longer practical, the capability to create multiple volumes was added. Because users don't log directly into the NetApp storage system, there was no reason to mount volumes internally to the NetApp system.

To distinguish between volumes in 7-Mode, the /vol/volname syntax was created. To maintain compatibility, support was kept for directories within the root volume to be exported without any such prefix. So /home is equivalent to /vol/vol0/home, assuming that vol0 is the root volume, / is the physical root of the system, and /etc is for the configuration information.

NetApp storage systems running 7-Mode are among the few implementations, possibly the only one, that require a prefix such as "/vol" before every volume that is exported. In some implementations, this means that deployers can't simply drop the NetApp 7-Mode system into the place of an existing NFS server without changing the client mounts, depending on how things are implemented in /etc/vfstab or automounters. In NFSv3, if the complete path from /vol/vol0 is not used and <NetApp storage: /> is mounted, the mount point is NetApp storage:/vol/vol0. That is, if the path does not begin with /vol in NFSv3, then Data ONTAP assumes that /vol/vol0 is the beginning of the path and redirects the request. This does not get users into the desired areas of the NFS file system.

#### Pseudo File System Operations in Clustered Data ONTAP vs. 7-Mode

As previously mentioned, in clustered Data ONTAP, there is no concept of /vol/vol0. Volumes are junctioned below the root of the SVM, and nested junctions are supported. Therefore, in NFSv3, there is no need to modify anything when cutting over from an existing NFS server. It simply works.

In NFSv4, if the complete path from /vol/vol0 is not used and <NetApp storage:/> is mounted, that is considered the root of the pseudo file system and not /vol/vol0. Data ONTAP does not add /vol/vol0 to the beginning of the path, unlike NFSv3. Therefore, if <NetApp storage://n/NetApp

storage> is mounted using NFSv3 and the same mount is mounted using NFSv4, a different file system is mounted.

This is why Data ONTAP 7-Mode has the /vol prefix in the exported global namespace and that feature represents an instance of the NFSv4 pseudo file system namespace. The traversal from the pseudo file system namespace to those of actual exported volumes is marked by a change in file system ID (fsid). In the Data ONTAP implementation of the NFSv4 pseudo file system, the paths "/" and "/vol" are always present and form the common prefix of any reference into the pseudo file system. Any reference that does not begin with /vol is considered invalid in 7-Mode.

In clustered Data ONTAP, the notion of a pseudo file system integrates seamlessly with junction paths and the unified namespace, so no additional pathing considerations are needed when leveraging NFSv4.

The NFSv4 server has a known root file handle for the server's available exported file systems that are visible from this global server root by means of ordinary NFSv4 operations. For example, LOOKUP, GETATTTR is used within the pseudo file system. The mountd protocol is not used in NFSv4; it is replaced by PUTROOTFH, which represents ROOT all the time. PUTFH represents the location of the pointer in the directory tree under ROOT. When a request to mount a file system comes from the client, the request traverses the pseudo file system (/ and /vol) before it gets to the active file system. While it is traversing from the pseudo file system to the active file system, the FSID changes.

In clustered Data ONTAP, there is a diag-level option on the NFS server to enable preservation of the FSID in NFSv4. This is on by default and should not be changed in most cases.

```
cluster::> set diag
cluster::*> nfs server modify -vserver vs0 -v4-fsid-change
```

# Pseudo File System and -actual Support

Currently, the use of -actual as an export option is not supported in clustered Data ONTAP.

The lack of <code>-actual</code> support in clustered Data ONTAP can be problematic if storage administrators want to ambiguate mount paths to their clients. For instance, if /storage/vol1 is exported by the storage administrator, NFS clients have to mount /storage/vol1. If the intent is to mount clients to a pseudo path of /vol1, then the only currently available course of action is to mount the volume to /vol1 in the cluster namespace instead.

If you are making the transition from 7-Mode to clustered Data ONTAP, where <code>-actual</code> is present in the <code>/etc/exports</code> file and there are qtrees present, then you might need to architect the cluster to convert qtrees in 7-Mode to volumes to maintain the pseudo path. If this is the case, clusterwide volume limits must be considered. See limits documentation for details about clusterwide volume limits.

## What Happens During NFSv3 Mounts?

The following occurs when mounting a file system over NFSv3.

- 1. RPC is made to port 111 (portmapper) of the NFS server to attempt a TCP connection through the portmapper.
- 2. When the RPC call has been acknowledged, portmapper issues a GETPORT call to port 111 of the NFS server data LIF to obtain which port NFS is allowed on.
- 3. The NFS server returns the port 2049 (NFS) to the client.
- 4. The client then closes the connection to port 111.
- 5. A new RPC call is made to port 2049 of the NFS server data LIF.
- 6. The NFS server returns the call successfully, and the client sends an NFS NULL call to port 2049 of the NFS server's data LIF. This checks whether the parent volume allows access to the mount. In this case, the parent volume is mounted to /, or the SVM root.
- 7. The NFS NULL call is returned successfully, and the client proceeds with the mount attempt.
- 8. Portmapper sends a GETPORT call to the NFS server's data LIF asking for the mountd port and provides the credentials, NFS version number, and whether the mount uses TCP or UDP.
- 9. The cluster checks the NFS settings and verifies whether the credentials supplied are allowed to mount based on the export policy rules. This is done through an RPC call from the NAS blade to the SecD process. If SecD is not functioning properly, this check fails, and the mount gets access denied. If the NFS version or TCP/UDP is not allowed, the client reports the error.
- 10. The NFS server replies successfully if the version provided is supported and if the mount can use the specified TCP or UDP connection. It also replies if the AUTH security provider is supported (AUTH\_SYS or AUTH\_GSS, for example).
- 11. When the GETPORT call passes, the client issues a V3 MNT call to the junction path specified in the mount command through port 635 (mountd) of the NFS server data LIF.
- 12. The cluster uses the junction path provided by the client and searches for the path in the volume location database (vldb). If the entry exists, the cluster gathers the file handle information from the vldb.
- 13. The NFS server returns the file handle to the client, as well as replies which AUTH varieties are supported by the export policy rule. If the AUTH variety provided by the server matches what the client sent, the mount succeeds.
- 14. Portmapper from the client then sends another GETPORT call for NFS, this time providing the client's host name.
- 15. The NFS server replies with port 2049, and the call succeeds.
- 16. Another NFS NULL call is made from the client over port 2049 of the NFS data LIF and is acknowledged by the NFS server.
- 17. A series of NFS packets with FSINFO and PATHCONF information is traded between the client and the NFS server.

## What Happens During NFSv4.x Mounts?

The following occurs when mounting a file system over NFSv4 (see Figure 2 and Figure 3).

- 1. A request from the client (SETCLIENTID) is sent from the client to the server to establish its identity.
- 2. After the server acknowledges (ACK) and the client's identity is verified, the server checks whether there is a CALLBACK from the client using a CB\_NULL command. This is done to check whether the client is eligible to be granted a DELEGATION.
- 3. Then the client sends a COMPOUND operation that includes PUTROOTFH, LOOKUP of the path that is requested to be mounted and GETFH (get a file handle) as a batch process to the server.
- 4. The server sends a file handle (FH), and if the client has access to mount the export using the export rules, the mount process is complete. The COMPOUND operation reduces RPC calls during this mount operation.

Figure 2) Client request to mount a file system in NFSv4.


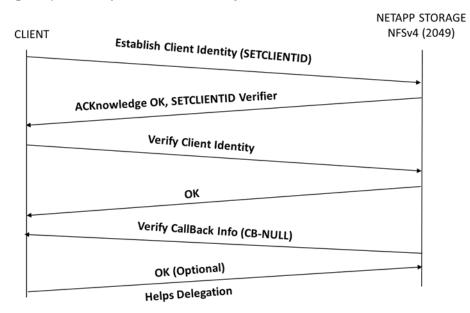


Figure 3) Server sends file handle to complete request.

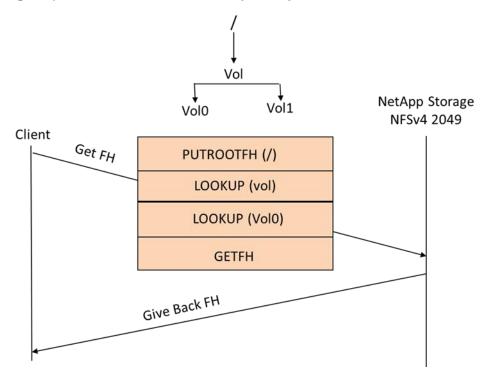

# Working Around Lack of -actual Support

In most cases, the <code>-actual</code> export option is not necessary in clustered Data ONTAP. The design of the OS allows natural pseudo file systems rather than those defined in export files. Everything is mounted beneath the SVM root volume, which is mounted to <code>/.</code> Exports can be set at the volume or qtree level, can be junctioned several levels deep, and can have names that do not reflect the actual volume names.

Table 2) Export examples.

Export Path	Exported Object
/vol1	volume named vol1
/NFSvol	volume named vol2
/vol1/NFSvol	volume named vol2 junctioned to volume named vol1
/vol1/qtree	Qtree named qtree with parent volume named vol1
/vol1/NFSvol/qtree1	Qtree named qtree1 with parent volume named NFSvol junctioned to volume named vol1

One use case for <code>-actual</code> that is not inherently covered by the clustered Data ONTAP NFS architecture is <code>-actual</code> for qtrees. For instance, if a storage administrator wants to export a qtree to a path such as <code>/qtree</code>, there is no way to do this natively using the NFS exports in the SVM.

#### Sample export from 7-Mode:

```
/qtree -actual=/vol/vol1/qtree,rw,sec=sys
```

In clustered Data ONTAP, the path for a qtree that NFS clients mount is the same path as the qtree is mounted to in the namespace. If this is not desirable, then the workaround is to leverage symlinks to mask the path to the qtree.

# What Is a Symlink?

Symlink is an abbreviation for "symbolic link." A symbolic link is a special type of file that contains a reference to another file or directory in the form of an absolute or relative path. Symbolic links operate transparently to clients and act as actual paths to data.

#### **Relative Paths Versus Absolute Paths**

Symlinks can leverage either relative or absolute paths. **Absolute paths** are paths that point to the same location on one file system regardless of the present <u>working directory</u> or combined paths. Relative paths are paths relative to the working directory.

For example, if a user is inside a directory at /directory and wants to go to /directory/user, that user can use a relative path:

```
# cd user/
# pwd
/directory/user
```

#### Or the user can use the absolute path:

```
# cd /directory/user
# pwd
/directory/user
```

When mounting a folder using NFS, it is better to use a relative path with symlinks, because there is no guarantee that every user mounts to the same mount point on every client. With relative paths, symlinks can be created that work regardless of what the absolute path is.

# **Using Symlinks to Simulate –actual Support**

In clustered Data ONTAP, symbolic links can be used to simulate the same behavior that the export option -actual provided in 7-Mode.

For example, if a qtree exists in the cluster, the path can look like this:

```
cluster::> qtree show -vserver flexvol -volume unix2 -qtree nfstree

Vserver Name: flexvol
Volume Name: unix2
Qtree Name: nfstree
Qtree Path: /vol/unix2/nfstree

Security Style: unix
Oplock Mode: enable
Unix Permissions: ---rwxr-xr-x
Qtree Id: 1
Qtree Status: normal
Export Policy: volume
Is Export Policy Inherited: true
```

The parent volume is unix2 (/unix/unix2), which is mounted to volume unix (/unix), which is mounted to vsroot (/).

The exported path would be <code>/parent\_volume\_path/qtree</code>, rather than the <code>/vol/parent\_volume\_path/qtree</code> seen earlier. The following is the output from a <code>showmount -e</code> command using the showmount plug-in tool available in the support tool chest:

```
/unix/unix2/nfstree (everyone)
```

Some storage administrators might not want to expose the entire path of /unix/unix2/nfstree, because it can allow clients to attempt to navigate other portions of the path. To allow the masking of that path to an NFS client, a symlink volume or folder can be created and mounted to a junction path. For example:

```
cluster::> vol create -vserver flexvol -volume symlinks -aggregate aggr1 -size 20m -state online
-security-style unix -junction-path /NFS_links
```

The volume size can be small (minimum of 20MB), but that depends on the number of symlinks in the volume. Each symlink is 4k in size. Alternatively, create a folder under vsroot for the symlinks.

After the volume or folder is created, mount the vsroot to an NFS client to create the symlink.

```
# mount -o nfsvers=3 10.63.3.68:/ /symlink
# mount | grep symlink
10.63.3.68:/ on /symlink type nfs (rw,nfsvers=3,addr=10.63.3.68)
```

**Note:** If using a directory under vsroot, mount vsroot and create the directory.

```
# mount -o nfsvers=3 10.63.3.68:/ /symlink
# mount | grep symlink
10.63.3.68:/ on /symlink type nfs (rw,nfsvers=3,addr=10.63.3.68)
# mkdir /symlink/symlinks
# ls -la /symlink | grep symlinks
drwxr-xr-x. 2 root root 4096 Apr 30 10:45 symlinks
```

To create a symlink to the qtree, use the -s option (s = symbolic). The link path needs to include a relative path that directs the symlink to the correct location without needing to specify the exact path. If the link is inside a folder that does not navigate to the desired path, then ../ needs to be added to the path.

For example, if a folder named NFS\_links is created under / and the volume unix is also mounted under /, then navigating to  $/NFS_links$  and creating a symlink cause the relative path to require a redirect to the parent folder.

#### Example of a symlink created in a symlink volume mounted to /NFS\_links:

```
# mount -o nfsvers=3 10.63.3.68://symlink/
# mount | grep symlink
10.63.3.68:/ on /symlink type nfs (rw,nfsvers=3,addr=10.63.3.68)
# cd /symlink/NFS links
# pwd
/symlink/NFS links
# ln -s ../unix/unix2/nfstree LINK
# ls -la /symlink/unix/unix2/nfstree/
total 8
drwxr-xr-x. 2 root root 4096 May 15 14:34 .
drwxr-xr-x. 3 root root 4096 Apr 29 16:47 ...
-rw-r--r-. 1 root root 0 May 15 14:34 you_are_here
# cd LINK
# ls -la
total 8
drwxr-xr-x. 2 root root 4096 May 15 14:34 .
drwxr-xr-x. 3 root root 4096 Apr 29 16:47 ..
-rw-r--r-. 1 root root 0 May 15 14:34 you_are_here
# pwd
/symlink/NFS links/LINK
```

Note that despite the fact that the symlink points to the actual path of /unix/unix2/nfstree, pwd returns the path of the symlink, which is /symlink/NFS\_links/LINK. The file you\_are\_here has the same date and timestamp across both paths.

**Note:** Because the path includes ../, this symlink cannot be directly mounted.

#### **Example of symlink created in vsroot:**

```
# mount -o nfsvers=3 10.63.3.68://symlink/
# mount | grep symlink
10.63.3.68:/ on /symlink type nfs (rw,nfsvers=3,addr=10.63.3.68)
# cd /symlink/
# pwd
/symlink
# ln -s unix/unix2/nfstree LINK1
# ls -la /symlink/unix/unix2/nfstree/
total 8
drwxr-xr-x. 2 root root 4096 May 15 14:34 .
drwxr-xr-x. 3 root root 4096 Apr 29 16:47 ..
-rw-r--r-. 1 root root 0 May 15 14:34 you are here
# cd LINK1
# ls -la
total 8
drwxr-xr-x. 2 root root 4096 May 15 14:34 .
drwxr-xr-x. 3 root root 4096 Apr 29 16:47 ..
-rw-r--r-. 1 root root 0 May 15 14:34 you_are_here
# pwd
/symlink/LINK1
```

Again, despite the fact that the actual path is /unix/unix2/nfstree, we see an ambiguated path of /symlink/LINK1. The file you\_are\_here has the same date and timestamp across both paths. Additionally, the symlink created can be mounted instead of the vsroot path, adding an extra level of ambiguity to the export path:


```
# mount -o nfsvers=3 10.63.3.68:/LINK1 /mnt
# mount | grep mnt
10.63.3.68:/LINK1 on /mnt type nfs (rw,nfsvers=3,addr=10.63.3.68
# cd /mnt
# pwd
/mnt
```

One use case for this setup is with automounters. Every client can mount the same path and never actually know where in the directory structure they are. If clients mount the SVM root volume (/), be sure to lock down the volume to nonadministrative clients.

For more information about locking down volumes to prevent listing of files and folders, see the section in this document on how to limit access to the SVM root volume.

The following figure shows a sample of how a namespace can be created to leverage symlinks to create ambiguation of paths for NAS operations.

Figure 4) Symlink example using vsroot.

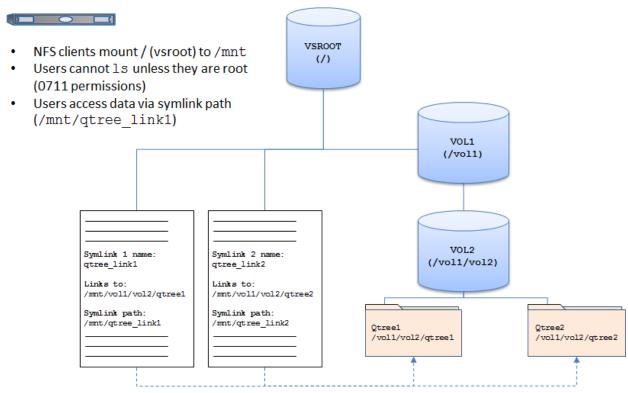

**Note:** Export policies and rules can be applied to volumes and qtrees, but not symlinks. This fact should be taken into consideration when creating symlinks for use as mount points. Symlinks instead inherit the export policy rules of the parent volume in which the symlink resides.

# 3.9 Does Clustered Data ONTAP Support 32-Bit and 64-Bit File IDs?

Some applications require that NFS servers offer support for legacy 32-bit file ID lengths. RFC-1813 requires that NFSv3 return 8 bytes for the file ID (aka inode number) because it's defined in the specification as uint64 (XDR unsigned hyper). All RFC-1813-compliant NFSv3 vendors return 8 bytes. In clustered Data ONTAP 8.3.x and prior, the operating system never returns anything in the upper 4 bytes of the NFSv3 file ID, so legacy 32-bit applications can operate normally. WAFL itself is still using 32-bit inode numbers. As for 64-bit applications, the 32-bit architecture still fits nicely. Thus, neither 32-bit nor 64-bit applications have issues with the current clustered Data ONTAP architecture.

#### **Enabling 64-Bit Identifiers**

In ONTAP 9, a new NFS server option, -v3-64bit-identifiers, has been added to offer the ability to use only 64-bit FSID and file IDs for NFSv3 operations. The option is disabled by default, so ONTAP 9 operates as previous releases did. If <u>disabling FSID changes in NFSv3</u>, be sure to enable this option to avoid file ID collisions.

This option can be found at the **advanced privilege** level.

[-v3-64bit-identifiers {enabled|disabled}] - Use 64 Bits for NFSv3 FSIDs and File IDs (privilege: advanced)

This optional parameter specifies whether Data ONTAP uses 64 bits (instead of 32 bits) for file system identifiers (FSIDs) and file identifiers (file IDs) that are returned to NFSv3 clients. If you change the value of this parameter, clients must remount any paths over which they are using NFSv3. When -v3-fsid-change is disabled, enable this parameter to avoid file ID collisions.

**Note:** Enabling this option is recommended with the ONTAP 9 feature FlexGroups.

# 4 Export Policies and Rules in Clustered Data ONTAP

Instead of the flat export files found in 7-Mode, clustered Data ONTAP offers export policies as containers for export policy rules to control security. These policies are stored in the replicated database, thus making exports available across every node in the cluster, rather than isolated to a single node. Volumes that are created without specifying the policy get assigned the default policy. For up-to-date limits information, including export policy and rules limits, see the clustered Data ONTAP limits information for your specific platform.

A newly created SVM contains an export policy called "default." This export policy cannot be deleted, although it can be renamed or modified. Each volume created in the SVM inherits the "default" export policy and the rules assigned to it. Because export policy rules are inherited by default, NetApp recommends opening all access to the root volume of the SVM (vsroot) when a rule is assigned. Setting any rules for the "default" export policy that restrict the vsroot denies access to the volumes created under that SVM. That is because vsroot is "/" in the path to "/junction" and factors into the ability to mount and traverse. To control access to read/write to vsroot, use the volume unix-permissions and/or ACLs. NetApp recommends restricting the ability for nonowners of the volume to write to vsroot (at most, 0755 permissions). In clustered Data ONTAP 8.2 and later, 0755 is the default UNIX security set on volumes. The default owner is UID 0 and the default group is GID 1. To control data volume access, separate export policies and rules can be set for every volume under the vsroot. For more information about configuring export policies and rules, as well as specific use cases for securing the vsroot volume, see the section in this document detailing those steps.

Each volume has only one export policy, although numerous volumes can use the same export policy. An export policy can contain several rules to allow granularity in access control. With this flexibility, a user can choose to balance workload across numerous volumes, yet can assign the same export policy to all volumes. **Export policies are simply containers for export policy rules.** 

#### **Best Practice 4: Export Policy Rule Requirement (See Best Practice 5)**

If a policy is created with no rule, that policy effectively denies access to everyone. Always create a rule with a policy to control access to a volume. Conversely, if you want to deny all access, remove the policy rule.

Export policy and export policy rule creation (including examples) is specified in detail in the "File Access and Protocols Management Guide" for the version of clustered Data ONTAP being used. This document and other documents can be found on the <a href="NetApp Support site">NetApp Support site</a>.

- Use the vserver export-policy commands to set up export rules; this is equivalent to the /etc/exports file in 7-Mode.
- All exports are persistent across system restarts, and this is why temporary exports cannot be defined.
- There is a global namespace per virtual server; this maps to the actual=path syntax in 7-Mode. In clustered Data ONTAP, a volume can have a designated junction path that is different from the volume name. Therefore, the -actual parameter found in the /etc/exports file is no longer applicable. This rule applies to both NFSv3 and NFSv4. For more information, see the section on pseudo file systems and -actual support in this document.
- In clustered Data ONTAP, an export rule has the granularity to provide different levels of access to a volume for a specific client or clients, which has the same effect as fencing in the case of 7-Mode.
- Export policy rules affect CIFS access in clustered Data ONTAP by default versions earlier than 8.2.
  In clustered Data ONTAP 8.2 and later, export policy rule application to CIFS operations is disabled
  by default. However, if upgrading from 8.1.x to 8.2, export policies and rules still apply to CIFS until it
  is disabled. For more information about how export policies can be applied to volumes hosting CIFS
  shares, see the "File Access and Protocols Management Guide" for the version of clustered Data
  ONTAP being used.

Refer to Table for NFSv3 config options that are modified in clustered Data ONTAP.

**Note:** Older Linux clients (such as Fedora 8) might not understand AUTH\_NULL as an authentication type for NFS mounts. Therefore, export policy rules must be configured using explicit authentication types, such as "sys," to enable access to these clients.

**Note:** If using Kerberos with NFSv3, the export policy rule must allow ro and rw access to sys in addition to krb5. This requirement is because of the need to allow NLM access to the export and the fact that NLM is not kerberized in krb5 mounts.

# 4.1 Export Policy Rule Options Explained

The <u>appendix of this document offers a table</u> that lists the various options used for export policy rules and what they are used for. Most export policy rule options can be viewed using the <code>export-policy rule</code> show command or using OnCommand System Manager.

# 4.2 Export Policy Sharing and Rule Indexing

Clustered Data ONTAP exports do not follow the 7-Mode model of file-based access definition, in which the file system path ID is described first and then the clients who want to access the file system path are specified. Clustered Data ONTAP export policies are sets of rules that describe access to a volume. Exports are applied at the volume level, rather than to explicit paths as in 7-Mode.

Policies can be associated with one or more volumes.

For example, in 7-Mode, exports could look like this:

```
/vol/test_vol -sec=sys,rw=172.17.44.42,root=172.17.44.42
/vol/datastorel_sata -sec=sys,rw,nosuid
```

#### In clustered Data ONTAP, export rules would look like this:

Vserver	Name	Policy Index	Rule Protocol	Access Match	Client Rule	RO
vs1_nfs3 vs2_nfs4	nfs3_policy1 nfs4_policy1	1 1	any any	0.0.0.0/0	any any	

7-Mode supports subvolume or nested exports; Data ONTAP supports exporting /vol/volX and /vol/volX/dir. Clustered Data ONTAP currently does not support subvolume or nested exports. The concept of subvolume exports does not exist because the export path applicable for a particular client's access is specified at mount time based on the mount path.

Clustered Data ONTAP did not support qtree exports earlier than 8.2.1. In previous releases, a qtree could not be a junction in the namespace independent of its containing volume because the "export permissions" were not specified separately for each qtree. The export policy and rules of the qtree's parent volume were used for all the qtrees contained within it. This implementation is different from the 7-Mode qtree implementation, in which each qtree is a point in the namespace where export policies can be specified.

In 8.2.1 and later versions of clustered Data ONTAP 8.2.x, qtree exports are available for NFSv3 exports only. Qtree exports in clustered Data ONTAP 8.3 support NFSv4.x. The export policy can be specified at the qtree level or inherited from the parent volume. By default, the export policy is inherited from the parent volume, so if it is not modified, the qtree behaves in the same way as the parent volume. Qtree export policies and rules work exactly the way volume export policies and rules work.

# 4.3 UNIX Users and Groups

The UID and GID that a cluster leverages depend on how the SVM has been configured with regard to name mapping and name switch. In clustered Data ONTAP 8.2 and earlier, the name service switch (nsswitch) option for SVMs specifies the source or sources that are searched for network information and the order in which they are searched. Possible values include nis, file, and Idap. This parameter provides the functionality of the /etc/nsswitch.conf file on UNIX systems. The name mapping switch (nm-switch) option for SVMs specifies the sources that are searched for name mapping information and the order in which they are searched. Possible values include file and Idap.

In clustered Data ONTAP 8.3 and later, the ns-switch and nm-switch parameters have been moved under the vserver services name-service command set:

```
cluster ::vserver services name-service>
dns ldap netgroup nis-domain ns-switch unix-group unix-user
```

For more information about the new name services' functionality, see the section in this document regarding <u>name-service changes</u>, <u>TR-4379</u>: <u>Name Service Best Practice Guide</u>, and/or <u>TR-4073</u>: <u>Secure Unified Authentication</u>.

If NIS or LDAP is specified for name services and/or name mapping, then the cluster contacts the specified servers for UID and GID information. Connectivity to NIS and LDAP attempts to use a data LIF in the SVM by default. Therefore, data LIFs must be routable to name service servers in 8.2.x and earlier. Versions of clustered Data ONTAP 8.3 and later introduce improved SecD routing logic, so it is no longer necessary to have a LIF that routes to name services on every node. SecD figures out the data LIF to use and passes traffic over the cluster network to the data LIF. Management LIFs are used in the event a data LIF is not available to service a request. If data LIFs are not able to communicate with name service servers, then there might be some latency in authentication requests that manifests as latency in data access.

If desired, name service and name mapping communication can be forced over the management network by default. This can be useful in environments in which an SVM does not have access to name service and name mapping servers.

To force all authentication requests over the management network in **clustered Data ONTAP 8.2.x and earlier only**:

```
cluster::> set diag cluster::> vserver modify -vserver vs0 -protocol-services-use-data-lifs false
```

**Note:** This option is no longer available in clustered Data ONTAP 8.3 and later.

#### Best Practice 5: Protocol Services Recommendation (See Best Practice 6)

NetApp recommends leaving this option as "true" because management networks are often more bandwidth-limited than data networks (1Gb versus 10Gb), which can result in authentication latency in some cases.

If local files are used, then the cluster leverages the unix-user and unix-group tables created for the specified SVM. Because no remote servers are being used, there is little to no authentication latency. However, in large environments, managing large lists of unix-users and groups can be daunting and mistake prone.

#### **Best Practice 6: Name Services Recommendation (See Best Practice 7)**

NetApp recommends leveraging either NIS or LDAP (preferably LDAP) for name services in larger environments for scalability considerations.

UNIX users and groups are not created by default when creating an SVM using the vserver create command. However, using System Manager or the vserver setup command creates the default users of root (0), pcuser (65534), and nobody (65535) and default groups of daemon (1), root (0), pcuser (65534), and nobody (65535).

#### Example:

	User		Group	Full
Vserver	Name	ID	ID	Name
vs0	nobody	65535	65535	-
vs0	pcuser	65534	65534	_
vs0	root	0	1	-
cluster::>	ınix-group show		s0	
(vserver	services unix-g	roup show)		
(vserver : Vserver	services unix-g Name	roup show) ID		
	_	-		-
Vserver	Name	ID 1	535	_
Vserver nfs	Name daemon	ID 1 65		-

# **Best Practice 7: Configuration Management (See Best Practice 8)**

NetApp recommends using OnCommand System Manager when possible to avoid configuration mistakes when creating new SVMs.

# 4.4 The Anon User

The "anon" (anonymous) user ID specifies a UNIX user ID or user name that is mapped to client requests that arrive without valid NFS credentials. This can include the root user. Clustered Data ONTAP determines a user's file access permissions by checking the user's effective UID against the SVM's specified name-mapping and name-switch methods. After the effective UID is determined, the export policy rule is leveraged to determine the access that UID has.

The <code>-anon</code> option in export policy rules allows specification of a UNIX user ID or user name that is mapped to client requests that arrive without valid NFS credentials (including the root user). The default value of <code>-anon</code>, if not specified in export policy rule creation, is 65534. This UID is normally associated with the user name "nobody" or "nfsnobody" in Linux environments. NetApp appliances use 65534 as the user "pcuser," which is generally used for multiprotocol operations, Because of this difference, if using local files and NFSv4, the name string for users mapped to 65534 might not match. This discrepancy might cause files to be written as the user specified in the <code>/etc/idmapd.conf</code> file on the client (Linux) or <code>/etc/default/nfs</code> file (Solaris), particularly when using multiprotocol (CIFS and NFS) on the same datasets.

#### 4.5 The Root User

The "root" user must be explicitly configured in clustered Data ONTAP to specify which machine has "root" access to a share, or else "anon=0" must be specified. Alternatively, the -superuser option can be used if more granular control over root access is desired. If these settings are not configured properly, "permission denied" might be encountered when accessing an NFS share as the "root" user (0). If the - anon option is not specified in export policy rule creation, the root user ID is mapped to the "nobody" user (65534). There are several ways to configure root access to an NFS share.

# **AUTH Types**

When an NFS client authenticates, an AUTH type is sent. An AUTH type specifies how the client is attempting to authenticate to the server and depends on client-side configuration. Supported AUTH types include:

#### AUTH\_NONE/AUTH\_NULL

This AUTH type specifies that the request coming in has no identity (NONE or NULL) and is mapped to the anon user. See <a href="http://www.ietf.org/rfc/rfc1050.txt">http://www.ietf.org/rfc/rfc1050.txt</a> and <a href="http://www.ietf.org/rfc/rfc2623.txt">http://www.ietf.org/rfc/rfc1050.txt</a> and <a href="http://www.ietf.org/rfc/rfc2623.txt">http://www.ietf.org/rfc/rfc1050.txt</a> and <a href="http://www.ietf.org/rfc/rfc2623.txt">http://www.ietf.org/rfc/rfc1050.txt</a> and <a href="http://www.ietf.org/rfc/rfc2623.txt">http://www.ietf.org/rfc/rfc1050.txt</a> and <a href="http://www.ietf.org/rfc/rfc2623.txt">http://www.ietf.org/rfc/rfc2623.txt</a> for details.

#### AUTH SYS/AUTH UNIX

This AUTH type specifies that the user is authenticated at the client (or system) and comes in as an identified user. See http://www.ietf.org/rfc/rfc1050.txt and http://www.ietf.org/rfc/rfc2623.txt for details.

#### AUTH RPCGSS

This is kerberized NFS authentication.

# **Squashing Root**

The following examples show how to squash root to anon in various configuration scenarios.

# Example 1: Root is squashed to the anon user using superuser for all NFS clients using sec=sys; other sec types are denied access.

```
cluster::> vserver export-policy rule show -policyname root squash -instance
  (vserver export-policy rule show)
                                          Vserver: vs0
                                     Policy Name: root squash
                                      Rule Index: 1
                                 Access Protocol: nfs
                                                          ← only NFS is allowed (NFSv3 and v4)
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0 \leftarrow all clients
                                 RO Access Rule: sys  

RW Access Rule: sys  

only AUTH_SYS is allowed  

only AUTH_SYS is allowed
User ID To Which Anonymous Users Are Mapped: 65534 ← mapped to 65534
                    Superuser Security Types: none ← superuser (root) squashed to anon user
                 Honor SetUID Bits in SETATTR: true
                    Allow Creation of Devices: true
cluster::> volume show -vserver vs0 -volume nfsvol -fields policy
vserver volume policy
-----
        nfsvol root squash
[root@nfsclient /]# mount -o nfsvers=3 cluster:/nfsvol /mnt
[root@nfsclient /]# cd /mnt
[root@nfsclient mnt] # touch root squash
[root@nfsclient mnt]# ls -la
total 116
drwxrwxrwx. 3 root root 106496 Apr 24 2013.
dr-xr-xr-x. 26 root root 4096 Apr 24 11:24 ...
drwxr-xr-x. 2 root daemon 4096 Apr 18 12:54 junction -rw-r--r. 1 nobody nobody 0 Apr 24 11:33 root_square
                                     0 Apr 24 11:33 root_squash
[root@nfsclient mnt]# ls -lan
drwxrwxrwx. 3 0 0 106496 Apr 24 2013 .
dr-xr-xr-x. 26 0 0 4096 Apr 24 11:24 ..
drwxrwxrwx. 12 0 0 4096 Apr 24 11:05 .snapshot
drwxr-xr-x. 2 0 1 4096 Apr 18 12:54 junction
-rw-r--r-. 1 65534 65534 0 Apr 24 2013 root_squas
                                   0 Apr 24 2013 root squash
[root@nfsclient /]# mount -o sec=krb5 cluster:/nfsvol /mnt
mount.nfs: access denied by server while mounting cluster:/nfsvol
```

# Example 2: Root is squashed to the anon user using superuser for a specific client; sec=sys and sec=none are allowed.

```
cluster::> vserver export-policy rule show -policyname root_squash client -instance
   (vserver export-policy rule show)
                                             Vserver: vs0
                                        Policy Name: root_squash_client
                                         Rule Index: 1
                                   Client Match Hostname, IP Address, Netgroup, or Domain: 10.10.100.25 ← just this client
                                    RO Access Rule: sys, none 

RW Access Rule: sys, none 

AUTH SYS and AUTH NONE are allowed 
AUTH SYS and AUTH NONE are allowed
User ID To Which Anonymous Users Are Mapped: 65534 \leftarrow mapped to 65534
                     Superuser Security Types: none \leftarrow superuser (root) squashed to anon user
                   Honor SetUID Bits in SETATTR: true
                      Allow Creation of Devices: true
cluster::> volume show -vserver vs0 -volume nfsvol -fields policy
vserver volume policy
_____
vs0 nfsvol root squash client
[root@nfsclient /]# mount -o nfsvers=3 cluster:/nfsvol /mnt
[root@nfsclient /]# cd /mnt
[root@nfsclient mnt]# touch root squash client
[root@nfsclient mnt]# ls -la
drwxrwxrwx. 3 root root 106496 Apr 24 2013 .
dr-xr-xr-x. 26 root root 4096 Apr 24 11:24 ..
drwxr-xr-x. 2 root daemon 4096 Apr 18 12:54 junction
-rw-r--r-. 1 nfsnobody nfsnobody 0 Apr 24 2013 root_squash_client
[root@nfsclient mnt]# ls -lan
drwxrwxrwx. 3 0 0 106496 Apr 24 2013 .
dr-xr-xr-x. 26 0 0 4096 Apr 24 11:24 ..
drwxrwxrwx. 12 0 0 4096 Apr 24 11:05 .snapshot
drwxr-xr-x. 2 0 1 4096 Apr 18 12:54 junction
-rw-r--r-. 1 65534 65534 0 Apr 24 2013 root_squash_client
```

# Example 3: Root is squashed to the anon user using superuser for a specific set of clients using sec=krb5 (Kerberos) and only NFSv4 and CIFS are allowed.

```
cluster::> vserver export-policy rule show -policyname root squash krb5 -instance
  (vserver export-policy rule show)
                                 Vserver: vs0
                             Policy Name: root_squash_krb5
                              Rule Index: 1
                          Access Protocol: nfs4,cifs ← only NFSv4 and CIFS are allowed
Client Match Hostname, IP Address, Netgroup, or Domain: 10.10.100.0/24 ← just clients with
an IP address of 10.10.100.X
                          RO Access Rule: krb5 	← only AUTH RPCGSSD is allowed
                           User ID To Which Anonymous Users Are Mapped: 65534 \leftarrow mapped to 65534
                 Honor SetUID Bits in SETATTR: true
                Allow Creation of Devices: true
cluster::> volume show -vserver vs0 -volume nfsvol -fields policy
vserver volume policy
-----
      nfsvol root squash
vs0
[root@nfsclient /]# mount -o nfsvers=3 cluster:/nfsvol /mnt
mount.nfs: access denied by server while mounting cluster:/nfsvol
[root@nfsclient /]# mount -t nfs4 cluster:/nfsvol /mnt
mount.nfs4: Operation not permitted
[root@nfsclient /]# mount -t nfs4 -o sec=krb5 krbsn:/nfsvol /mnt
[root@nfsclient /]# cd /mnt
[root@nfsclient mnt]# touch root squash krb5
[root@nfsclient mnt]# ls -la
drwxrwxrwx. 3 root root 106496 Apr 24 2013 .
dr-xr-xr-x. 26 root root 4096 Apr 24 11:24 ...
drwxr-xr-x. 2 root daemon 4096 Apr 18 12:54 junction
-rw-r--r-. 1 nobody nobody 0 Apr 24 11:50 root_squash_krb5
[root@nfsclient mnt] # ls -lan
drwxrwxrwx. 3 0 0 106496 Apr 24 2013 .
dr-xr-xr-x. 26 0 0 4096 Apr 24 11:24 .. drwxr-xr-x. 2 0 1 4096 Apr 18 12:54 junction
-rw-r--r--. 1 99 99
                      0 Apr 24 11:50 root squash krb5
```

**Note:** The UID of 99 in this example occurs in NFSv4 when the user name cannot map into the NFSv4 domain. A look at /var/log/messages confirms this:

```
Apr 23 10:54:23 nfsclient nfsidmap[1810]: nss_getpwnam: name 'pcuser' not found in domain nfsv4domain.netapp.com'
```

In the preceding examples, when the root user requests access to a mount, it maps to the anon UID. In this case, the UID is 65534. This mapping prevents unwanted root access from specified clients to the NFS share. Because "sys" is specified as the rw and ro access rules in the first two examples, only clients using sec=sys gain access. The third example shows a possible configuration using Kerberized NFS authentication. Setting the access protocol to NFS allows only NFS access to the share (including NFSv3 and NFSv4). If multiprotocol access is desired, then the access protocol must be set to allow NFS and CIFS. NFS access can be limited to only NFSv3 or NFSv4 here as well.

# Root Is Root (no\_root\_squash)

The following examples show how to enable the root user to come into an NFS share as the root user. This is also known as "no\_root\_squash."

Example 1: Root is allowed access as root using superuser for all clients only for sec=sys; sec=none and sec=sys are allowed rw and ro access; all other anon access is mapped to 65534.

```
cluster::> vserver export-policy rule show -policyname root_allow_anon_squash -instance
  (vserver export-policy rule show)
                                           Vserver: vs0
                                      Policy Name: root_allow_anon_squash
                                      Rule Index: 1
                                Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0 ← all clients
                                RO Access Rule: sys, none

RW Access Rule: sys, none

CAUTH_SYS and AUTH_NONE allowed

CAUTH_SYS and AUTH_NONE allowed
User ID To Which Anonymous Users Are Mapped: 65534 ← mapped to 65534 ← superuser for AUTH_SYS only
                 Honor SetUID Bits in SETATTR: true
cluster::> volume show -vserver vs0 -volume nfsvol -fields policy
vserver volume policy
        nfsvol root allow anon squash
[root@nfsclient /]# mount -o nfsvers=3 cluster:/nfsvol /mnt
[root@nfsclient /]# cd /mnt
[root@nfsclient mnt]# touch root_allow_anon_squash_nfsv3
[root@nfsclient mnt]# ls -la
drwxrwxrwx. 3 root root 106496 Apr 24 2013 .
dr-xr-xr-x. 26 root root 4096 Apr 24 11:24 ..
drwxrwxrwx. 12 root root 4096 Apr 24 11:05 .snapshot
drwxr-xr-x. 2 root bin 4096 Apr 18 12:54 junction
-rw-r--r-. 1 root root 0 Apr 24 2013 root_allow_anon_squash_nfsv3
[root@nfsclient mnt]# ls -lan
drwxrwxrwx. 3 0 0 106496 Apr 24 2013.
dr-xr-xr-x. 26 0 0 4096 Apr 24 11:24 ..
drwxr-xr-x. 2 0 1 4096 Apr 18 12:54 junction -rw-r--r. 1 0 0 0 Apr 24 11:56 root_allow_anon_squash_nfsv3
```

# Example 2: Root is allowed access as root using superuser for sec=krb5 only; anon access is mapped to 65534; sec=sys and sec=krb5 are allowed, but only using NFSv4.

```
cluster::> vserver export-policy rule show -policyname root allow krb5 only -instance
  (vserver export-policy rule show)
                                   Vserver: vs0
                               Policy Name: root_allow_krb5_only
                                Rule Index: 1
                           Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0 ← all clients
                            User ID To Which Anonymous Users Are Mapped: 65534 ← mapped to 65534
                 Honor SetUID Bits in SETATTR: true
cluster::> volume show -vserver vs0 -volume nfsvol -fields policy
vserver volume policy
_____
vs0 nfsvol root_allow_krb5_only
[root@nfsclient /]# mount -o nfsvers=3 cluster:/nfsvol /mnt
mount.nfs: access denied by server while mounting cluster:/nfsvol
[root@nfsclient /]# mount -t nfs4 cluster:/nfsvol /mnt
[root@nfsclient /]# cd /mnt
[root@nfsclient mnt]# touch root allow krb5 only notkrb5
[root@nfsclient mnt]# ls -la
drwxrwxrwx. 3 root \, root \, 106496 Apr 24 \, 2013 .
[root@nfsclient mnt]# ls -lan
drwxrwxrwx. 3 0 0 106496 Apr 24 2013 .
dr-xr-xr-x. 26 0 0 4096 Apr 24 11:24 ..
drwxr-xr-x. 2 0 1 4096 Apr 18 12:54 junction
-rw-r--r. 1 99 99 0 Apr 24 2013 root_allow_krb5_only_notkrb5
NOTE: Again, the UID of an unmapped user in NFSv4 is 99. This is controlled via /etc/idmapd.conf
in Linux and /etc/default/nfs in Solaris.
[{\tt root@nfsclient}\ /] \#\ {\tt mount}\ -{\tt t}\ {\tt nfs4}\ -{\tt o}\ {\tt sec=krb5}\ {\tt cluster:/nfsvol}\ /{\tt mnt}
[root@nfsclient /]# kinit
Password for root@KRB5DOMAIN.NETAPP.COM:
[root@nfsclient /]# cd /mnt
[root@nfsclient mnt]# touch root allow krb5 only krb5mount
[root@nfsclient mnt]# ls -la
drwxrwxrwx. 3 root root 106496 Apr 24 2013 .
dr-xr-xr-x. 26 root root 4096 Apr 24 11:24 ...
drwxr-xr-x. 2 root daemon 4096 Apr 18 12:54 junction -rw-r--r. 1 root daemon 0 Apr 24 2013 root allo
                               0 Apr 24 2013 root_allow_krb5_only_krb5mount
[root@nfsclient mnt]# ls -lan
drwxrwxrwx. 3 0 0 106496 Apr 24 2013 .
dr-xr-xr-x. 26 0 0 4096 Apr 24 11:24 ..

drwxr-xr-x. 2 0 1 4096 Apr 18 12:54 junction

-rw-r--r-. 1 0 1 0 Apr 24 2013 root_allow_krb5_only_krb5mount
```

# Example 3: Root and all anonymous users are allowed access as root using anon=0, but only for sec=sys and sec=krb5 over NFSv4.

```
cluster::> vserver export-policy rule show -policyname root allow anon0 -instance
  (vserver export-policy rule show)
                                      Vserver: vs0
                                 Policy Name: root allow_anon0
                                  Rule Index: 1
                             Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0 ← all clients
                              RO Access Rule: krb5, sys  

RW Access Rule: krb5, sys  

AUTH SYS and AUTH RPCGSS allowed  

AUTH SYS and AUTH RPCGSS allowed
User ID To Which Anonymous Users Are Mapped: 0 ← mapped to 0
                  Superuser Security Types: none \leftarrow superuser (root) squashed to anon user
               Honor SetUID Bits in SETATTR: true
                  Allow Creation of Devices: true
cluster::> volume show -vserver vs0 -volume nfsvol -fields policy
vserver volume policy
-----
vs0 nfsvol root allow anon0
[root@nfsclient /]# mount -o nfsvers=3 cluster:/nfsvol /mnt
mount.nfs: access denied by server while mounting cluster:/nfsvol
[root@nfsclient /]# mount -t nfs4 cluster:/nfsvol /mnt
[root@nfsclient /]# cd /mnt
[root@nfsclient mnt]# touch root_allow_anon0
[root@nfsclient mnt]# ls -la
drwxrwxrwx. 3 root root 106496 Apr 24 2013 .
dr-xr-xr-x. 26 root root 4096 Apr 24 11:24 ..
[root@nfsclient mnt]# ls -lan
drwxrwxrwx. 3 0 0 106496 Apr 24 2013 .
dr-xr-xr-x. 26 0 0 4096 Apr 24 11:24 ..
drwxr-xr-x. 2 0 1 4096 Apr 18 12:54 junction
-rw-r--r-. 1 0 1 0 Apr 24 2013 root_allow_anon0
[root@nfsclient /]# mount -t nfs4 -o sec=krb5 cluster:/nfsvol /mnt
[root@nfsclient /]# cd /mnt
[root@nfsclient mnt]# touch root_allow_anon0_krb5
[root@nfsclient mnt]# ls -la
drwxrwxrwx. 3 root root 106496 Apr 24 2013 .
dr-xr-xr-x. 26 root root 4096 Apr 24 11:24 ..
drwxr-xr-x. 2 root daemon 4096 Apr 18 12:54 junction -rw-r--r. 1 root daemon 0 Apr 24 2013 root_allow_anon0_krb5
[root@nfsclient mnt]# ls -lan
drwxrwxrwx. 3 0 0 106496 Apr 24 2013 .
dr-xr-xr-x. 26 0 0 4096 Apr 24 11:24 ..
drwxr-xr-x. 2 0 1 4096 Apr 18 12:54 junction -rw-r--r. 1 0 1 0 Apr 24 2013 root_allow_anon0_krb5
```

## 4.6 Limiting Access to the SVM Root Volume

By default, when an SVM is created, the root volume is configured with 755 permissions and owner:group of root (0): root (0). This means that:

- The user root (0) has effective permissions of "7," or "Full Control."
- The "group" and "others" permission levels are set to "5," which is "Read & Execute."

When this is configured, everyone who accesses the SVM root volume can list and read junctions mounted below the SVM root volume, which is always mounted to "/" as a junction-path. In addition, the default export policy rule that is created when an SVM is configured using System Manager or vserver setup commands permits user access to the SVM root.

### Example of the default export policy rule created by vserver setup:

In the preceding export policy rule, all clients have "any" RO and RW access. Root is squashed to anon, which is set to 65534.

For example, if an SVM has three data volumes, all would be mounted under "/" and could be listed with a basic ls command by any user accessing the mount.

```
# mount | grep /mnt
10.63.3.68:/ on /mnt type nfs (rw,nfsvers=3,addr=10.63.3.68)
# cd /mnt
# ls
nfs4 ntfs unix
```

In some environments, this behavior might be undesirable, because storage administrators might want to limit visibility to data volumes to specific groups of users. Although read and write access to the volumes themselves can be limited on a per-data-volume basis using permissions and export policy rules, users can still see other paths using the default policy rules and volume permissions.

To limit the ability to users to be able to list SVM root volume contents (and subsequent data volume paths) but still allow the traversal of the junction paths for data access, the SVM root volume can be modified to allow only root users to list folders in SVM root. To do this, change the UNIX permissions on the SVM root volume to 0711 using the volume modify command:

```
cluster::> volume modify -vserver nfs_svm -volume rootvol -unix-permissions 0711
```

After this is done, root still has "Full Control" using the "7" permissions, because it is the owner. "Group" and "others" get "Execute" permissions as per the "1" mode bit, which only allows them to traverse the paths using cd.

When a user who is not the root user attempts an ls, that user has access denied:

```
sh-4.1$ ls
ls: cannot open directory .: Permission denied
```

In many cases, NFS clients log into their workstations as the root user. With the default export policy rule created by System Manager and vserver setup, root access is limited:

```
# id
uid=0(root) gid=0(root) groups=0(root) context=unconfined_u:unconfined_r:unconfined_t:s0-
s0:c0.c1023
# ls -la
ls: cannot open directory .: Permission denied
```

This is because the export policy rule attribute "superuser" is set to "none." If root access is desired by certain clients, this can be controlled by adding export policy rules to the policy and specifying the host IP, name, netgroup, or subnet in the "clientmatch" field. When creating this rule, list it ahead of any rule that might override it, such as a clientmatch of 0.0.0.0/0, which is "all hosts."

## Example of adding an administrative host rule to a policy:

```
cluster::> export-policy rule create -vserver nfs svm -policyname default -clientmatch
10.228.225.140 -rorule any -rwrule any -superuser any -ruleindex 1
cluster::> export-policy rule show -vserver nfs svm -policyname default -ruleindex 1
  (vserver export-policy rule show)
                                     Vserver: nfs svm
                                 Policy Name: default
                                 Rule Index: 1
                            Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 10.228.225.140
                           RO Access Rule: any
                             RW Access Rule: anv
User ID To Which Anonymous Users Are Mapped: 65534
                  Superuser Security Types: any
               Honor SetUID Bits in SETATTR: true
                  Allow Creation of Devices: true
cluster::> export-policy rule show -vserver nfs svm -policyname default
  (vserver export-policy rule show)
Policy Rule Access Client
Vserver Name Index Protocol Match
Vserver
                                                                      Rule
nfs_svm default 1 any 10.228.225.140 any
nfs_svm default 2 any 0.0.0.0/0 any
2 entries were displayed.
```

#### Now the client is able to see the directories as the root user:

### Other clients are not able to list contents as root:

For more information about export policy rules and their effect on the root user, review the "Root User" section of this document.

For more information about mode bits, see the following link: <a href="http://www.zzee.com/solutions/unix-permissions.shtml">http://www.zzee.com/solutions/unix-permissions.shtml</a>.

## 4.7 Volume-Based Multitenancy Using Export Policies and Rules

In some cases, storage administrators might want to limit access to all users in a data volume to only being able to mount and access specific volumes or qtrees. Use cases for this would be for volume-based multitenancy, limiting access to .snapshot directories or more granular control over access to specific folders.

Doing so can be done by either junctioned volumes or qtrees. The following diagram shows an example of two volume-based multitenancy designs, one using volumes mounted under volumes and one using qtrees. Each design would limit read access to all users to only the volumes or qtrees under the main data volume (/data) and allow only the owner to have full access.

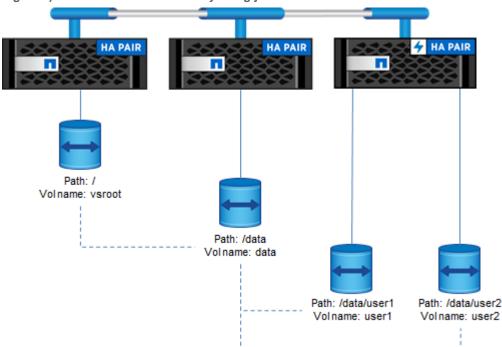


Figure 5) Volume-based multitenancy using junctioned volumes.

Path: /data/user1

Path: /data/user2

Figure 6) Volume-based multitenancy using qtrees.

Qtree name: user1

Each method of locking down a data volume to users presents pros and cons. The following table illustrates the pros and cons for each.

Qtree name: user2

Table 3) Pros and cons for volume-based multitenancy based on design choice.

	Pros	Cons
Using junctioned volumes	Data mobility by way of volume moves.	Volume limits per node are much lower than qtree limits.
	Ability to apply export policies to CIFS if desired.	
	Ability to spread data volumes across multiple nodes.	
	Ability to create qtrees inside volumes and provide even more security granularity using export policy rules.	
Using qtrees	Ability to create many more qtrees than volumes in a cluster.	Volume moves move entire directory structure; no qtree- based moves.
	Ability to apply granular security at the qtree level.	<ul> <li>Cannot spread data across nodes when using qtrees; node-limited.</li> </ul>
		No CIFS export policy support.
		NFSv4 export policy support only in 8.3 and later.

# **Export Policy Rules**

For clients to be able to mount, a volume or qtree must at least allow read only (ro) access using the export policy rule. If an export policy rule sets rorule to "never," then no one is allowed to mount the volume or contents below the volume. This includes gtrees and junctioned volumes.

**Note:** Export policies and rules cannot currently be applied to subdirectories.

Therefore, every volume in the directory tree must allow read access using export policy rules to the client to allow the client to mount anything in the tree. However, only the export policy rule at the volume or qtree level being mounted applies to the client.

Table 4) Directory tree structure for volume-based multitenancy.

Object	Export Policy
Vsroot = /	allow_readonly
Data volume = /data	allow_readonly
<pre>Qtree = /data/qtree</pre>	allow_access

In the preceding structure, a data volume is mounted under / and a qtree is mounted below the data volume. The vsroot and data volumes have export policies assigned to allow readonly access. The qtree allows normal access upon mount.

After the data volume is mounted, the client is restricted to file-level permissions. Even though the "allow\_access" policy says that the client has read-write (rw) access, if the file-level permissions disallow write access, then the file-level permissions override the export policy rule.

The following export policy rule examples show how to accomplish this. In addition to allowing only read access, the rule also disallows the root user from being seen by the storage as "root" on the storage objects where access is limited. Thus, while "root" users are allowed to mount the storage objects, the file-level permissions are set to disallow those users to access anything, because they are squashed to the anonymous UID set in the export policy rule. Squashing root is covered in detail in this document.

## Export policy rule examples for volume-based multitenancy: read access on mounts only:

```
Vserver: SVM
Policy Name: allow_readonly
Rule Index: 1
Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
RO Access Rule: sys
RW Access Rule: never
User ID To Which Anonymous Users Are Mapped: 65534
Superuser Security Types: none
Honor SetUID Bits in SETATTR: true
Allow Creation of Devices: true
```

## Export policy rule examples for volume-based multitenancy: root is root; read/write access:

```
Vserver: SVM
Policy Name: allow_access
Rule Index: 1
Access Protocol: nfs
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
RO Access Rule: any
RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 65534
Superuser Security Types: any
Honor SetUID Bits in SETATTR: true
Allow Creation of Devices: true
```

### **File-Level Permissions**

When mounting a typical NFS export, a mount occurs at either the vsroot (/) or a data volume (/data). Therefore, file-level permissions would have to allow users to at least traverse the volume. If read or write access were required, then additional mode bits would have to be granted to the volume. If access to these volumes requires that all users be denied all access, then the mode bit could be set to no access ("0" access), provided the mount point is at a level that does not require the user to traverse. Thus, the vsroot volume (/) and data volume hosting the multitenant folders (/data) could both be set to 700 to allow only the owner of the volume access to do anything in the directory. Multitenant clients could then access only their specified volumes or qtrees based on export policy rules and file-level permissions.

## **Locking Down the .snapshot Directory**

Clustered Data ONTAP currently does not support the option of hiding the .snapshot directory (that is, options nfs.hide\_snapshot) when using NFS. Additionally, by design, the .snapshot directory inherits the file-level permissions of the volume that hosts it. As a result, if access is allowed to a data volume, then all users with access to the volume have access to the .snapshot directory.

If using qtrees for volume-based multitenancy, the .snapshot directory is not a factor if the parent volumes are locked down properly, because the .snapshot directory appears only for the qtree.

Additionally, if using volumes in volume-based multitenancy, the subvolumes have access to only their own .snapshot directories.

### **Best Practice 8: Hiding Snapshot Copies (See Best Practice 9)**

Currently the only way to hide Snapshot copies for NFS clients is to set the volume-level option -snapdir-access to false.

## **Volume-Based Multitenancy in Action**

The following example shows a scenario in which:

- Root can mount all objects in an export path.
- Root does not have access to volumes it should not have access to.
- Root cannot access the .snapshot directory.
- Root gets the proper access when mounting the proper export path.
- Other users get granted/denied access based on file-level permissions.

Note: The design used in this example is gtree-based.

## **Example of Volume-Based Multitenancy**

### Root and data volume permissions and paths:

## **Qtree permissions and path:**

```
cluster::> qtree show -vserver SVM -volume noaccess -fields export-policy,unix-permissions vserver volume qtree unix-permissions export-policy

SVM noaccess "" ---rwx----- allow_readonly
SVM noaccess qtree ---rwxrwxrwx wideopen
2 entries were displayed.
```

#### Client behavior when mounting the SVM root volume:

```
[root@centos64 /]# mount -o nfsvers=3 10.63.3.68:/ /cdot
[root@centos64 /]# cd /cdot
-bash: cd: /cdot: Permission denied
[root@centos64 /]# cd /cdot/.snapshot
-bash: cd: /cdot/.snapshot: Permission denied
[root@centos64 /]# cd /cdot/noaccess/qtree
-bash: cd: /cdot/noaccess/qtree: Permission denied
[root@centos64 /]# su test
sh-4.1$ cd /cdot
sh: cd: /cdot: Permission denied
```

### Client behavior when mounting the SVM data volume:

```
[root@centos64 /]# mount -o nfsvers=3 10.63.3.68:/noaccess /cdot
[root@centos64 /]# cd /cdot
-bash: cd: /cdot: Permission denied
[root@centos64 /]# cd /cdot/.snapshot
-bash: cd: /cdot/.snapshot: Permission denied
[root@centos64 /]# cd /cdot/qtree
-bash: cd: /cdot/qtree: Permission denied
[root@centos64 /]# su test
sh-4.1$ cd /cdot
sh: cd: /cdot: Permission denied
```

### Client behavior when mounting the specified qtree:

```
[root@centos64 /] # mount -o nfsvers=3 10.63.3.68:/noaccess/gtree /cdot
[root@centos64 /]# cd /cdot
[root@centos64 cdot]# ls -la
total 12
drwxrwxrwx. 2 root root 4096 Jul 29 14:14 . dr-xr-xr-x. 43 root root 4096 Jul 22 13:47 ...
-rw-r--r-. 1 test domain users 0 Jul 25 10:06 file
-rw-r--r-. 1 root root 0 Jul 29 14:14 qtree_file
drwxrwxrwx. 11 root root 4096 Jul 29 15:05 .snapshot
[root@centos64 cdot]# cd .snapshot
[root@centos64 .snapshot]# ls
daily.2014-07-28 0010 hourly.2014-07-29 1005 hourly.2014-07-29 1205 hourly.2014-07-29 1405
weekly.2014-07-27 0015
daily.2014-07-29 0010 hourly.2014-07-29 1105 hourly.2014-07-29 1305 hourly.2014-07-29 1505
[root@centos64 .snapshot] # cd daily.2014-07-28 0010/
[root@centos64 daily.2014-07-28 0010]# ls
file
[root@centos64 /]# su test
sh-4.1$ cd /cdot
sh-4.1$ ls -la
total 12
-rw-r--r-. 1 test domain users 0 Jul 25 10:06 file
-rw-r--r-. 1 root root 0 Jul 29 14:14 qtree_file
drwxrwxrwx. 11 root root 4096 Jul 29 15:05 .snapshot
```

# 4.8 Mapping All UIDs to a Single UID (squash\_all)

In some cases, storage administrators may want to control which UID (such as root) some or all users map to when coming in through NFS to a UNIX-security-style volume. If a volume has NTFS security style, doing so is as simple as setting a default Windows user in the NFS server options. However, when the volume is UNIX security style, no name mapping takes place when coming in from NFS clients. To control this situation, you can create an export policy rule.

Recall that export policy rules have the attributes listed in Table 5 in admin mode.

Table 5) Export policy rule attributes.

<b>Export Policy Rule Attribute</b>	What It Does
Rule index	Controls the order in which an export policy rule is applied
Access protocol	Controls the allowed access protocols. Options include any, nfs, nfs3, nfs4, cifs.
Client match	Controls who can access. Valid entries include host names, IP addresses, IP subnets, netgroups, domains.
RO access	Controls which authentication types can access the export in a read- only capacity. Valid entries include any, none, never, krb5, ntlm, sys.
RW access	Controls which authentication types can access the export in a readwrite capacity. Valid entries include any, none, never, krb5, ntlm, sys.
Anon UID	The UID that anonymous users are mapped to.
Superuser	Controls which authentication types can access the export with root access. Valid entries include any, none, krb5, ntlm, sys.
Honor SetUID Bits in SETATTR	This parameter specifies whether set user ID (suid) and set group ID (sgid) access is enabled by the export rule. The default setting is true.
Allow creation of devices	This parameter specifies whether the creation of devices is enabled by the export rule. The default setting is true.

For authentication types that are allowed to access the export, the following are used.

Table 6) Supported authentication types for ro, rw, and superuser.

Authentication Type	What It Does
None	Squashes the user to anonymous (anon).
Never (ro and rw only)	Disallows access. Note: RO=never means that RW is disallowed as well, regardless of RW setting, because the mount fails. Superuser does not use this value.
Sys	Allows AUTH_SYS or AUTH_UNIX only.
Krb5	Allows AUTH_GSS only. Applies to CIFS clients as well, provided the CIFS server options are configured to use export policies.
NTLM	Allows NTLM authentication only. Applies to CIFS clients only, provided the CIFS server options are configured to use export policies.
Any	Allows all supported authentication types.

With these values, storage administrators can apply specific combinations to their export policy rules to control access to clients on a granular level.

# Squashing All UIDs to 65534 (squash\_all)

The following export policy rule example shows how to force all UIDs (including root) coming into the system from a specific subnet to use the 65534 UID. This rule can be used to create "guest" access policies for users to limit access. This is done with the RO, RW, and superuser authentication type of "none," anon value of "65534," and the clientmatch value specifying the subnet:

```
Vserver: nfs_svm
Policy Name: default
Rule Index: 1
Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 10.228.225.0/24
RO Access Rule: none
RW Access Rule: none
User ID To Which Anonymous Users Are Mapped: 65534
Superuser Security Types: none
Honor SetUID Bits in SETATTR: true
Allow Creation of Devices: true
```

## Making All UIDs Root

The following export policy rule example shows how to force all UIDs (including root) coming into the system from a specific subnet to use the UID associated with root (0). This rule can be used to allow full access to users in a specific subnet to avoid overhead on permissions management. This access is enabled with the RO and RW authentication type of "none," superuser value of "none," anon value of "0," and the clientmatch value specifying the subnet.

## **Example:**

```
Vserver: nfs_svm
Policy Name: default
Rule Index: 1
Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 10.228.225.0/24
RO Access Rule: none
RW Access Rule: none
User ID To Which Anonymous Users Are Mapped: 0
Superuser Security Types: none
Honor SetUID Bits in SETATTR: true
Allow Creation of Devices: true
```

## 4.9 Umask

In NFS operations, permissions can be controlled through mode bits, which leverage numerical attributes to determine file and folder access. These mode bits determine read, write, execute, and special attributes. Numerically, these are represented as:

- Execute = 1
- Read = 2
- Write = 4

Total permissions are determined by adding or subtracting a combination of the preceding.

### For example:

```
4 + 2 + 1 = 7 (can do everything)

4 + 2 = 6 (rw) and so on...
```

Mode bits are set up as in the following figure and table.

Figure 7) UNIX permissions.

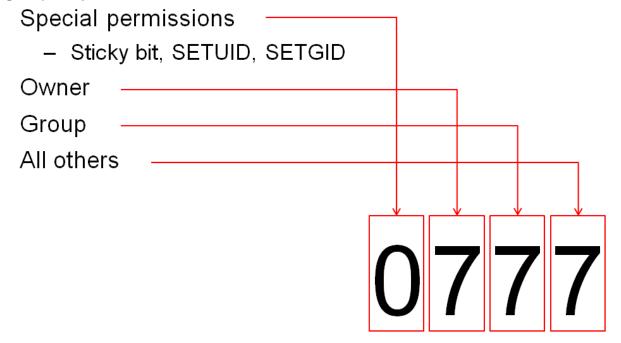


Table 7) Octal values in umask.

Octal Value in Umask	Prevents
7	Read/write/execute
6	Read and write
5	Read and execute
4	Read
3	Write and execute
2	Write
1	Execute
0	No permissions

For more information about UNIX permissions, visit the following link: <a href="http://www.zzee.com/solutions/unix-permissions.shtml">http://www.zzee.com/solutions/unix-permissions.shtml</a>.

Umask is a functionality that allows an admin to restrict the level of permissions allowed to a client. By default, the umask for most clients is set to 0022, which means that files created from that client are assigned that umask. The umask is subtracted from the base permissions of the object. If a volume has 0777 permissions and is mounted using NFS to a client with a umask of 0022, objects written from the client to that volume have 0755 access (0777 - 0022).

```
# umask
0022
# umask -S
u=rwx,g=rx,o=rx
```

However, many operating systems do not allow files to be created with execute permissions, but they do allow folders to have the correct permissions. Thus, files created with a umask of 0022 might end up with permissions of 0644.

The following is an example using RHEL 6.5:

```
# umask
0022
# cd /cdot
# mkdir umask_dir
# ls -la | grep umask_dir
drwxr-xr-x. 2 root root 4096 Apr 23 14:39 umask_dir

# touch umask_file
# ls -la | grep umask_file
-rw-r--r-. 1 root root 0 Apr 23 14:39 umask_file
```

## 4.10 Export Policy Rule Inheritance

In clustered Data ONTAP, export policy rules affect only the volumes and qtrees they are applied to. For example, if the SVM root volume has a restrictive export policy rule that limits root access to a specific client or subset of clients, the data volumes that exist under the SVM root volume (which is mounted at "/")honor only the export policies applied to them.

In the following example, the SVM root volume has limited superuser access only to the client 10.228.225.140. When the root user attempts to access a mount from a client other than 10.228.225.140, it squashes to the anon user, which is 65534:

```
cluster::> vol show -vserver nfs svm -volume rootvol -fields policy
  (volume show)
vserver volume policy
nfs svm rootvol default
cluster::> export-policy rule show -vserver nfs svm -policyname default -instance
  (vserver export-policy rule show)
                                   Vserver: nfs svm
                              Policy Name: default
                                Rule Index: 1
                           Access Protocol: anv
Client Match Hostname, IP Address, Netgroup, or Domain: 10.228.225.140
                            RO Access Rule: any
                            RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 65534
                  Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                 Allow Creation of Devices: true
                                   Vserver: nfs svm
                               Policy Name: default
                                Rule Index: 2
                           Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
                            RO Access Rule: any
                            RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 65534
                 Superuser Security Types: none
              Honor SetUID Bits in SETATTR: true
                 Allow Creation of Devices: true
2 entries were displayed.
```

As per the example in the section "Limiting Access to the SVM Root Volume," root would not be able to list the contents of the SVM root based on the volume permissions (711) and the existing export policy rules on any hosts other than 10.228.225.140.

If the data volumes in the SVM also are set to this export policy, they use the same rules, and only the client set to have root access is able to log in as root.

If root access is desired to the data volumes, then a new export policy can be created and root access can be specified for all hosts or a subset of hosts through subnet, netgroup, or multiple rules with individual client IP addresses or host names.

The same concept applies to the other export policy rule attributes, such as RW.

For example, if the default export policy rule is changed to disallow write access to all clients except 10.228.225.140 and to allow superuser, then even root is disallowed write access to volumes with that export policy applied:

```
cluster::> export-policy rule modify -vserver nfs svm -policyname default -ruleindex 2 -rwrule
never -superuser any
cluster::> export-policy rule show -vserver nfs svm -policyname default -instance
  (vserver export-policy rule show)
                                  Vserver: nfs svm
                              Policy Name: default
                               Rule Index: 1
                          Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 10.228.225.140
                           RO Access Rule: any
                            RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 65534
                 Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                 Allow Creation of Devices: true
                                   Vserver: nfs svm
                               Policy Name: default
                                Rule Index: 2
                           Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
                            RO Access Rule: any
                           RW Access Rule: never
User ID To Which Anonymous Users Are Mapped: 65534
                 Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                Allow Creation of Devices: true
2 entries were displayed.
# ifconfig | grep "inet addr"
         inet addr:10.228.225.141 Bcast:10.228.225.255 Mask:255.255.255.0
         inet addr:127.0.0.1 Mask:255.0.0.0
# id
uid=0 (root) gid=0 (root) groups=0 (root) context=unconfined u:unconfined t:s0-
s0:c0.c1023
# mount | grep mnt
10.63.3.68:/ on /mnt type nfs (rw,nfsvers=3,addr=10.63.3.68)
# cd /mnt
# touch rootfile
touch: cannot touch `rootfile': Read-only file system
```

When a new policy and rule are created and applied to the data volume, the same user is allowed to write to the data volume mounted below the SVM root volume. This is the case despite the export policy rule at the SVM root volume disallowing write access.

### **Example:**

```
cluster::> export-policy create -vserver nfs svm -policyname volume
cluster::> export-policy rule create -vserver nfs_svm -policyname volume -clientmatch 0.0.0.0/0 -
rorule any -rwrule any -allow-suid true -allow-dev true -ntfs-unix-security-ops fail -chown-mode
restricted -superuser any -protocol any -ruleindex 1 -anon 65534
cluster::> export-policy rule show -vserver nfs_svm -policyname volume -instance
  (vserver export-policy rule show)
                                   Vserver: nfs_svm
                               Policy Name: volume
                                Rule Index: 1
                           Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
                            RO Access Rule: any
                            RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 65534
                  Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                 Allow Creation of Devices: true
::> volume modify -vserver flexvol -volume unix -policy volume
```

#### From the client:

```
# ifconfig | grep "inet addr"
         inet addr:10.228.225.141 Bcast:10.228.225.255 Mask:255.255.255.0
         inet addr:127.0.0.1 Mask:255.0.0.0
# id
uid=0(root) gid=0(root) groups=0(root) context=unconfined u:unconfined t:s0-
s0:c0.c1023
# cd /mnt/unix
[root@linux-client unix]# ls
file
[root@linux-client unix]# touch rootfile
[root@linux-client unix]# ls -la | grep rootfile
-rw-r--r--. 1 root root
                         0 Apr 1 2014 rootfile
# cd ..
# 1s
nfs4 ntfs unix
# touch rootdir
touch: cannot touch `rootdir': Read-only file system
```

However, the read-only attribute for the export policy rules needs to allow read access from the parent to allow mounts to occur. Setting rorule to "never" or not setting an export policy rule in the parent volume's export policy (empty policy) disallows mounts to volumes underneath that parent.

In the following example, the vsroot volume has an export policy that has rorule and rwrule set to "never," while the data volume has an export policy with a rule that is wide open:

```
cluster::> export-policy rule show -vserver nfs -policyname wideopen -instance
  (vserver export-policy rule show)
                                  Vserver: nfs
                              Policy Name: wideopen
                              Rule Index: 1
                          Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
                          RO Access Rule: any
                           RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 0
                Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                Allow Creation of Devices: true
cluster ::> export-policy rule show -vserver nfs -policyname deny -instance
  (vserver export-policy rule show)
                                  Vserver: nfs
                              Policy Name: deny
                              Rule Index: 1
                         Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
                           RO Access Rule: never
                           RW Access Rule: never
User ID To Which Anonymous Users Are Mapped: 65534
                Superuser Security Types: sys
             Honor SetUID Bits in SETATTR: true
                Allow Creation of Devices: true
cluster::> volume show -vserver nfs -volume rootvol -fields policy,unix-permissions
vserver volume policy unix-permissions
nfs rootvol deny ---rwx--x-x
cluster::> volume show -vserver nfs -volume unix -fields policy,unix-permissions
vserver volume policy unix-permissions
_____
    unix wideopen ---rwxrwxrwx
```

#### When a mount of the volume unix is attempted, access is denied:

```
# mount -o nfsvers=3 10.63.3.68:/unix /cdot
mount.nfs: access denied by server while mounting 10.63.3.68:/unix
```

#### When the "deny" policy is changed to allow read-only access, mounting is allowed:

```
cluster ::> export-policy rule modify -vserver nfs -policyname deny -rorule any -ruleindex 1
# mount -o nfsvers=3 10.63.3.68:/unix /cdot
# mount | grep unix
10.63.3.68:/unix on /cdot type nfs (rw,nfsvers=3,addr=10.63.3.68)
```

As a result, storage administrators can have complete and granular control over what users see and access file systems using export policies, rules, and volume permissions.

## Best Practice 9: Export Policy Rules: Parent Volumes (See Best Practice 10)

Parent volumes (such as vsroot) should always allow at least read access in the export policy rule. Parent volumes should also traverse access in the UNIX permissions to enable mounts and I/O access to be allowed at the desired level.

# 4.11 The Export Policy Rule Index

In clustered Data ONTAP, it is possible to set the priority for export policy rules so that they are honored in a specific order. The policy is evaluated when access is attempted and the rules are read in order from 0 to 999999999.

### Best Practice 10: Export Policy Rule Index Maximum (See Best Practice 11)

Keep in mind the export policy rule limits when creating export policies and rules. A rule index of 999999999 is an absolute maximum, but NetApp does not recommend it. Use more sensible numbers for the index. In the following examples, 1 and 99 are used.

If a rule index with a higher number (such as 1) is read and has allowed access for a subnet but later a host that is in that subnet is denied access through a rule at a lower index (such as 99), then that host is granted access based on the rule that allows access being read earlier in the policy.

Conversely, if a client is denied access through an export policy rule at a higher index and then allowed access through a global export policy rule later in the policy (such as 0.0.0.0/0 client match), then that client is denied access.

In the following example, a client with the IP address of 10.228.225.140 (host name of centos64) has been denied access to read a volume while all other clients are allowed access. However, the client rule is below the "all access" rule, so mount and read are allowed.

### Example:

```
cluster::> export-policy rule show -vserver NAS -policyname allow all
Policy Rule Access Client RO
Vserver Name Index Protocol Match Ru
                                                                 Rule
 ----- -----
NAS allow_all 1 any 0.0.0.0/0
NAS allow_all 99 any 10.228.225.140
                                                           anv
                                                                 never
2 entries were displayed.
cluster::> vol show -vserver NAS -volume unix -fields policy
vserver volume policy
----- ----- -----
       unix allow all
[root@centos64 ~] # mount -o nfsvers=3 10.63.9.69:/vol/nfs /7mode
[root@centos64 ~] # mount 10.63.21.9:/unix /mnt
[root@centos64 ~] # cd /mnt
[root@centos64 mnt]# ls -la
total 12
drwxrwxrwx. 3 root root 4096 Dec 10 14:49 .
dr-xr-xr-x. 46 root root 4096 Dec 10 14:57 ...
drwxrwx---. 2 root root 4096 Dec 10 15:00 file
```

If those rules are flipped, the client is denied access despite the rule allowing access to everyone being in the policy. Rule index numbers can be modified with the export-policy rule setindex command. In the following example, rule #1 has been changed to rule #99. Rule #99 gets moved to #98 by default.

```
cluster::> export-policy cache flush -vserver NAS -cache all

Warning: You are about to flush the "all (but showmount)" cache for Vserver "NAS" on node

"node2", which will result in increased traffic to the name servers. Do you want to proceed with

flushing the cache? {y|n}: y

[root@centos64 /]# mount 10.63.21.9:/unix /mnt
mount.nfs: access denied by server while mounting 10.63.21.9:/unix
```

**Note:** Export-policy cache flush is a new command in clustered Data ONTAP 8.3. See Export Policy Rule Caching for more information regarding this command.

It is important to consider the order of the export policy rules when determining the access that is and is not allowed for clients in clustered Data ONTAP.

```
Best Practice 11: Export Policy Rule Index Ordering (See Best Practice 12)
```

If you use multiple export policy rules, be sure that rules that deny or allow access to a broad range of clients do not step on rules that deny or allow access to those same clients. Rule index ordering factors in when rules are read; higher-number rules override lower-number rules in the index.

## 4.12 Export Policy Rule Caching

In 7-Mode, export policy rules were cached based on the following nfs options:

```
nfs.export.harvest.timeout
nfs.export.neg.timeout
nfs.export.pos.timeout
nfs.export.resolve.timeout
```

These options do not currently exist in clustered Data ONTAP at the node level as they did in 7-Mode. However, new commands are available to control these values at **advanced privilege** level:

```
cluster::*> export-policy access-cache config show -vserver SVM

Vserver: SVM

TTL For Positive Entries (Secs): 3600

TTL For Negative Entries (Secs): 3600

Harvest Timeout (Secs): 86400
```

The caches can also be flushed manually.

Additionally, at **diag privilege** level, there are commands to control export cache configurations from mgwd and the NAS layer.

**Note:** Keep in mind that diag-level commands should be used with caution.

The following shows the entries for the NAS layer export caches:

The NAS layer access cache can also be queried for existing entries. This helps isolate mount issues for clients on specific volumes/gtrees.

```
cluster::*> diag exports nblade access-cache show -node node2 -vserver SVM -policy nfs-full -
address 10.228.225.140
                                       Node:node2
                                   Vserver: SVM
                                Policy Name: nfs-full
                                 IP Address: 10.228.225.140
                   Access Cache Entry Flags: has-usable-data
                               Result Code: 0
                First Unresolved Rule Index: -
                     Unresolved Clientmatch:
             Number of Matched Policy Rules: 1
        List of Matched Policy Rule Indexes: 1
                               Age of Entry: 82s
                Access Cache Entry Polarity: positive
Time Elapsed since Last Use for Access Check: 7s
     Time Elapsed since Last Update Attempt: 82s
              Result of Last Update Attempt: 0
               List of Client Match Strings: 0.0.0.0/0
```

MGWD caches host name to IP information, as well as netgroup membership information. To view the attributes for these caches:

These caches can be modified and flushed if necessary, but this should only be done at the guidance of NetApp Technical Support, and only if the caches are causing a problem in your environment.

### **Exportfs Support**

7-Mode allowed <code>exportfs</code> commands to be used to clear export caches. In clustered Data ONTAP, <code>exportfs</code> currently does not exist, but caches are flushed each time an export policy rule is updated. In versions of clustered Data ONTAP prior to 8.2.3, these caches would be flushed for an entire policy. Versions after 8.2.3 now only flush the individual rules. See <a href="bugg 932333">bugg 932333</a> for details. The cache is stored at the NAS layer and ages out every 5 minutes if no export rule changes are made. The management gateway in clustered Data ONTAP caches host name to IP resolution (1-minute TTL) and resolved netgroups (15-minute TTL). Clustered Data ONTAP 8.3 and later introduced a command to manually flush the export policy caches as well as other related caches.

### Flushing Export Policy Caches (and Other NFS-Related Caches)

In versions earlier than clustered Data ONTAP 8.3, export policy caches could be flushed only by making changes to export policy rules. Now, clustered Data ONTAP offers a set of commands to allow manual flushing of export caches without needing to change existing policies. This command set is similar to exportfs -f, available in Data ONTAP operating in 7-Mode, and is performed on a per-node, per-SVM basis.

```
cluster::> vserver export-policy cache flush -vserver vs0 -node node1 -cache all access host id name netgroup showmount
```

Table 8 lists the different caches and their time to live (TTL).

Table 8) Caches and time to live (TTL).

Cache Name	Type of Information	TTL (in Minutes)
Access	All export policy rules	5
Name	Name to UID	1
ID	ID to name	1
Host	Host to IP	1
Netgroup	Netgroup to IP	15
Showmount	Export paths	5

## 4.13 Export Policy Rule Access Verification (exportfs -c)

Starting in clustered Data ONTAP 8.3, the ability to check access to specific clients has been added. This functionality in 7-Mode was known as exportfs -c.

In clustered Data ONTAP, that command is now vserver export-policy check-access:

vserver export-policy check-... Data ONTAP 8.3 vserver export-policy check-...

#### NAME

vserver export-policy check-access -- Given a Volume And/or a Qtree, Check to See If the Client Is Allowed Access

#### AVAILABILITY

This command is available to cluster and Vserver administrators at the admin privilege level.

#### DESCRIPTION

The vserver export-policy check-access command checks whether a specific client is allowed access to a specific export path. This enables you to test export policies to ensure they work as intended and to troubleshoot client access issues.

The command takes the volume name (and optionally the qtree name) as input and computes the export path for the volume/qtree. It evaluates the export policy rules that apply for each path component and displays the policy name, policy owner, policy rule index and access rights for that path component. If no export policy rule matches the specified client IP address access is denied and the policy rule index will be set to 0. The output gives a clear view on how the export policy rules are evaluated and helps narrow down the policy and (where applicable) the specific rule in the policy that grants or denies access. This command is not supported on Infinite Volumes.

#### Example of export-policy check-access:

cluster1::\*> vserver export-policy check-access -vserver vs1 -client-ip 1.2.3.4 -volume flex\_vol
-authentication-method sys -protocol nfs3 -access-type read

Path	Policy	Policy Owner	Policy Owner Type	Rule Index	Access
/ /dir1		vs1_root vs1 root			read read
/dir1/dir2	default	vs1_root	volume	1	read
/dir1/dir2/flex1 4 entries were displayed.	data	flex_vol	volume	10	read

## 5 Showmount in Clustered Data ONTAP

Clustered Data ONTAP earlier than 8.3 does not support the showmount command from NFS clients. This limitation results from performance considerations. Clusters can potentially have thousands of export rules, so a query for all exports can be process intensive. Additionally, exports are not in flat files and are applied to volumes as rules, so the export path and export rules would live in two different places.

### Example of showmount -e in 7-Mode:

```
[root@nfsclient /] # showmount -e 10.61.84.240
Export list for 10.61.84.240:
/vol/unix (everyone)
/vol/Test (everyone)
/vol/vol0/home (everyone)
/vol/vol0 (everyone)
/vol/Test2 (everyone)
/vol/mixed 10.61.179.164
```

## Example of showmount -e in clustered Data ONTAP:

```
[root@nfsclient /]# showmount -e 10.61.92.34
Export list for 10.61.92.34:
    / (everyone)
```

When running a showmount in clustered Data ONTAP, the NFS server would be an SVM IP. The SVM has a vsroot volume mounted to /, which is the volume returned in the showmount. All other volumes are mounted below that mount point. In the preceding example, / is shown as allowing everyone. This is the export policy rule for / in the SVM being queried:

```
cluster::> vol show -vserver vs0 -volume vsroot -fields policy
 (volume show)
vserver volume
                  policy
       vsroot default
cluster::> export-policy rule show -vserver vs0 -policyname default -instance
  (vserver export-policy rule show)
                                   Vserver: vs0
                               Policy Name: default
                               Rule Index: 1
                           Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
                            RO Access Rule: any
                            RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 65534
                 Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                 Allow Creation of Devices: true
```

If the export policy rule is changed to allow just a host, the showmount -e output does not change:

```
cluster::> export-policy rule modify -vserver vs0 -policyname default -ruleindex 1 -clientmatch
10.61.179.164
  (vserver export-policy rule modify)
cluster::> export-policy rule show -vserver vs0 -policyname default -instance
  (vserver export-policy rule show)
                                   Vserver: vs0
                                Policy Name: default
                                Rule Index: 1
                           Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 10.61.179.164
                            RO Access Rule: any
                            RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 65534
                  Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                 Allow Creation of Devices: true
[root@nfsclient /] # showmount -e 10.61.92.34
Export list for 10.61.92.34:
/ (everyone)
```

Thus, for clustered Data ONTAP, showmount is not really useful in some cases, especially for troubleshooting access issues. To get similar functionality to showmount, leverage SSH or the Data ONTAP SDK to extract the desired information. The fields to extract are:

- Junction-path from the volume show command/ZAPI
- Policy from the volume show command/ZAPI
- Any desired fields from the export policy rule set in the policy assigned to the volume

# 5.1 What Happens During Showmount?

Showmount leverages the MOUNT protocol in NFSv3 to issue an EXPORT query to the NFS server. If the mount port is not listening or blocked by a firewall, or if NFSv3 is disabled on the NFS server, showmount queries fail:

```
# showmount -e 10.63.21.9
mount clntudp_create: RPC: Program not registered
```

The following shows output from a packet trace of the showmount command being run against a data LIF in clustered Data ONTAP 8.3:

```
16 1.337459 10.228.225.140 10.63.21.9 MOUNT 170 V3 EXPORT Call (Reply In 17)
Mount Service
Program Version: 3
V3 Procedure: EXPORT (5)

17 1.340234 10.63.21.9 10.228.225.140 MOUNT 202 V3 EXPORT Reply (Call In 16)
Mount Service
Export List Entry: /unix ->
```

Note that the trace shows that the server returns /unix ->. However, this export path has a specific client in the rule set:

### In 7-Mode, if a client was specified in an export, the server would return that client:

```
88 1.754728 10.228.225.145 10.61.83.141 MOUNT 194 V3 EXPORT Call (Reply In 89)
89 1.755175 10.61.83.141 10.228.225.145 MOUNT 198 V3 EXPORT Reply (Call In 88)
Export List Entry: /vol/unix -> 10.228.225.141
```

If client match is required in showmount functionality, the showmount utility <u>in the toolchest</u> provides that functionality.

### **Best Practice 12: Showmount Permissions Considerations (See Best Practice 13)**

To use showmount in clustered Data ONTAP, the parent volume (including vsroot, or /) needs to allow read or traverse access to the client/user attempting to run showmount.

# 5.2 Showmount Plug-In for Clustered Data ONTAP

The support tool chest now contains a <u>showmount plug-in for clustered Data ONTAP</u>. This plug-in has limited support and should be used only in situations in which showmount is required, such as with Oracle OVM.

### 5.3 Showmount for Clustered Data ONTAP 8.3

Clustered Data ONTAP 8.3 introduced support for showmount queries from clients. This functionality is disabled by default. It can be enabled with the following command:

```
cluster ::> nfs server modify -vserver NFS83 -showmount enabled disabled
```

After this functionality is enabled, clients can query data LIFs for export paths. However, the clientmatch (access from clients, netgroups, and so on) information is not available. Instead, each path reflects "everyone" as having access, even if clients are specified in export policy rule sets.

## **Best Practice 13: Showmount Security Style Considerations (See Best Practice 14)**

To use showmount in clustered Data ONTAP, the vsroot volume (/) needs to use UNIX security style. NTFS security style is currently not supported. See <u>bug 907608</u> for details.

### Sample output of showmount in clustered Data ONTAP 8.3:

```
# showmount -e 10.63.21.9
Export list for 10.63.21.9:
/unix (everyone)
/unix/unix1 (everyone)
/unix/unix2 (everyone)
/ (everyone)
```

## **Showmount Caching**

When showmount is run from a client, it requests information from the NFS server on the cluster. Because export lists can be large, the cluster maintains a cache of this information.

When a volume is unmounted from the cluster using the volume unmount command or from OnCommand System Manager, the cache does not update, so the exported path remains in cache until it expires or is flushed.

To flush the showmount cache:

```
cluster::> export-policy cache flush -vserver SVM -cache showmount
```

**Note:** The cache only flushes on the node you are logged in to. For example, if you are logged in to node1's management LIF, then the cache on node1 flushes. This means that only clients connecting to data LIFs local to node1 benefit from the cache flush. To flush the cache on other nodes, log into the node management LIF on those nodes. The node that is flushing is displayed when running the command.

```
cluster::> export-policy cache flush -vserver SVM -cache showmount

Warning: You are about to flush the "showmount" cache for Vserver "SVM" on node "node1", which will result in increased traffic to the name servers. Do you want to proceed with flushing the cache? {y|n}: y
```

### 6 Name Services

In clustered Data ONTAP versions earlier than 8.2.x, name services (DNS, NIS, LDAP, and so on) were all handled by the authentication process called secd, which is the security daemon. Configuration for nsswitch.conf-type functionality was done under SVM options.

Note: If using name services in clustered Data ONTAP, the recommended version is 8.2.3 or later.

In clustered Data ONTAP 8.3 and later, LDAP and NIS authentication is still handled by secd, but DNS is moved to its own userspace process. Configuration of name-services functionality has been moved to its own command set, called vserver services name-service and leverages libc.

```
cluster::> vserver services name-service
dns ldap netgroup nis-domain ns-switch unix-group unix-user
```

### Additional commands, such as getxxbyyy, exist at the advanced privilege level:

### To view the current ns-switch configuration:

cluster ::vs	server services r	name-service*> r	ns-switch show -v Source
Vserver	Database	Enabled	Order
NFS83	hosts	true	files, dns
NFS83	group	true	files, ldap
NFS83	passwd	true	files, ldap
NFS83	netgroup	true	files, ldap
NFS83	namemap	true	files, ldap
5 entries we	ere displayed.		

Note that in the preceding, support for granular control over passwd, group, netgroup, and so on has been added. Doing so makes the ns-switch functionality in clustered Data ONTAP 8.3 and later more comparable to standard nsswitch.conf files.

In addition to ns-switch functionality, other new features have been added to name services:

- DNS and NIS statistics
- getxxbyyy support
- Improved NIS troubleshooting tools (tracing and showing bound servers)
- Name service queue status
- Name service configuration mirroring and repair

### 6.1 Name Services Best Practices

Large and complex name service environments can be challenged to deliver quick responses to file servers such as NetApp FAS systems running clustered Data ONTAP. NetApp continues to enhance name service algorithms to minimize the impact of external name service servers. However, in some cases, environmental issues can affect name service resolution, which in turn can affect file service authentication and mounting. The following recommendations can help reduce environmental issues. For information about best practices for name services in clustered Data ONTAP, see <a href="https://recommendations.org/linearized-name">TR-4379: Name</a> Services Best Practices.

# 7 Nondisruptive Operations (NDO) with NFS

This section covers NDO with NFS in clustered Data ONTAP and scenarios with NDO behavior for NFS clients. In some cases, even NFSv3 can be disrupted by specific planned and unplanned events. The reason for this happening is that, even though NFSv3 is a stateless protocol, there are still underlying mechanisms such as locking and NFS server-side caches that can come into play during disruptive events.

# 7.1 Replay Cache

The replay cache in clustered Data ONTAP is crucial to preventing NFS requests from trying nonidempotent requests twice. This cache is stored at the data layer with the volumes. When this cache is lost, CREATE operations can fail with EEXIST and REMOVE operations can fail with ENOENT. If a locking mechanism is not in place, data can be at risk when the replay cache is lost. The following table shows different scenarios in which replay cache is kept or lost in clustered Data ONTAP 8.2.x and later.

Table 9) Replay cache NDO behavior.

Operation	NFSv3	NFSv4.x	
Volume move	Replay cache is moved with volume.	Replay cache is moved with volume.	
Aggregate relocation or storage giveback operation	Replay cache is lost.	Replay cache is lost.	
LIF migrate (same node)	Replay cache remains intact.	Replay cache remains intact.	
LIF migrate (different node)	Replay cache is lost.	Replay cache is lost.	
Unplanned takeover	Replay cache is lost.	Replay cache is lost.	
Planned takeover	Replay cache is lost.	Replay cache is lost.	

# 7.2 File Locking

File locking mechanisms were created to prevent a file from being accessed for write operations by more than one user or application at a time. NFS leverages file locking either using the NLM process in NFSv3 or by leasing and locking, which is built in to the NFSv4.x protocols. Not all applications leverage file locking, however; for example, the application "vi" does not lock files. Instead, it uses a file swap method to save changes to a file.

When an NFS client requests a lock, the client interacts with the clustered Data ONTAP system to save the lock state. Where the lock state is stored depends on the NFS version being used. In NFSv3, the lock state is stored at the data layer. In NFSv4.x, the lock states are stored in the NAS protocol stack.

Best Practice 14: NFSv3 and File Locking (See Best Practice 15)

Use file locking using the NLM protocol when possible with NFSv3.

To view or remove file locks in an SVM, use the following commands in advanced privilege:

```
cluster::> set advanced
cluster::*> vserver locks
   break show
```

When potentially disruptive operations occur, lock states do not transfer in some instances. As a result, delays in NFS operations can occur as the locks are reclaimed by the clients and reestablished with their new locations. The following table covers the scenarios in which locks are kept or lost in clustered Data ONTAP 8.2.x and later.

Table 10) Lock state NDO behavior.

Operation	NFSv3	NFSv4.x
Volume move	Lock state is moved with volume.	Lock state is moved with volume.
Aggregate relocation or storage giveback operation	Lock state is not moved (same behavior as in 7-Mode); up to 45s outage.	Lock state is not moved (same behavior as in 7-Mode); up to 90s outage.
LIF migrate (same node)	Lock state is not stored in NAS protocol stack; no disruption.	Lock state remains intact; still on local node; no disruption.
LIF migrate (different node)	Lock state is not stored in NAS protocol stack; nothing to move; no disruption.	Lock state is not moved (same behavior as in 7-Mode); up to 90s outage.
Unplanned takeover	Lock state is not moved (same behavior as in 7-Mode); up to 45s outage.	Lock state is not moved (same behavior as 7-Mode); up to 90s outage.
Planned takeover	Lock state is not moved (same behavior as in 7-Mode); up to 45s outage.	Lock state is not moved (same behavior as in 7-Mode); up to 90s outage.

### 7.3 NFSv4.1 Sessions

In clustered Data ONTAP, NFSv4.1 sessions are supported. With NFSv4.1 sessions, LIF migrations can be disruptive to NFSv4.1 operations, but they are less disruptive than with NFSv4.0.

### From RFC 5661:

After an event like a server restart, the client may have lost its connections. The client assumes for the moment that the session has not been lost. It reconnects, and if it specified connection association enforcement when the session was created, it invokes BIND\_CONN\_TO\_SESSION using the session ID. Otherwise, it invokes SEQUENCE. If BIND\_CONN\_TO\_SESSION or SEQUENCE returns NFS4ERR\_BADSESSION, the client knows the session is not available to it when communicating with that network address. If the connection survives session loss, then the next SEQUENCE operation the client sends over the connection will get back NFS4ERR\_BADSESSION. The client again knows the session was lost.

Here is one suggested algorithm for the client when it gets

NFS4ERR\_BADSESSION. It is not obligatory in that, if a client does not want to take advantage of such features as trunking, it may omit parts of it. However, it is a useful example that draws attention to various possible recovery issues:

- If the client has other connections to other server network addresses associated with the same session, attempt a COMPOUND with a single operation, SEQUENCE, on each of the other connections.
- 2. If the attempts succeed, the session is still alive, and this is a strong indicator that the server's network address has moved. The client might send an EXCHANGE\_ID on the connection that returned NFS4ERR\_BADSESSION to see if there are opportunities for client ID trunking (i.e., the same client ID and so\_major are returned). The client might use DNS to see if the moved network address was replaced with another, so that the performance and availability benefits of session trunking can continue.
- 3. If the SEQUENCE requests fail with NFS4ERR BADSESSION, then the session no longer exists on any of the server network addresses for which the client has connections associated with that session ID. It is possible the session is still alive and available on other network addresses. The client sends an EXCHANGE ID on all the connections to see if the server owner is still listening on those network addresses. If the same server owner is returned but a new client ID is returned, this is a strong indicator of a server restart. If both the same server owner and same client ID are returned, then this is a strong indication that the server did delete the session, and the client will need to send a CREATE SESSION if it has no other sessions for that client ID. If a different server owner is returned, the client can use DNS to find other network addresses. If it does not, or if DNS does not find any other addresses for the server, then the client will be unable to provide NFSv4.1 service, and fatal errors should be returned to processes that were using the server. If the client is using a "mount" paradigm, unmounting the server is advised.
- 4. If the client knows of no other connections associated with the session ID and server network addresses that are, or have been, associated with the session ID, then the client can use DNS to find other network addresses. If it does not, or if DNS does not find any other addresses for the server, then the client will be unable to provide NFSv4.1 service, and fatal errors should be returned to processes that were using the server. If the client is using a "mount" paradigm, unmounting the server is advised.

If there is a reconfiguration event that results in the same network address being assigned to servers where the eir server scope value is different, it cannot be guaranteed that a session ID generated by the first will be recognized as invalid by the first. Therefore, in managing server reconfigurations among servers with different server scope values, it is necessary to make sure that all clients have disconnected from the first server before effecting the reconfiguration. Nonetheless, clients should not assume that servers will always adhere to this requirement; clients MUST be prepared to deal with unexpected effects of server reconfigurations. Even where a session ID is inappropriately recognized as valid, it is likely either that the connection will not be recognized as valid or that a sequence value for a slot will not be correct. Therefore, when a client receives results indicating such unexpected errors, the use of EXCHANGE ID to determine the current server configuration is RECOMMENDED.

A variation on the above is that after a server's network address moves, there is no NFSv4.1 server listening, e.g., no listener on port 2049. In this example, one of the following occur: the NFSv4 server returns NFS4ERR MINOR VERS MISMATCH, the NFS server returns a PROG\_MISMATCH error, the RPC listener on 2049 returns PROG\_UNVAIL, or attempts to reconnect to the network address timeout. These SHOULD

be treated as equivalent to SEQUENCE returning NFS4ERR\_BADSESSION for these purposes.

When the client detects session loss, it needs to call CREATE\_SESSION to recover. Any non-idempotent operations that were in progress might have been performed on the server at the time of session loss. The client has no general way to recover from this.

For more information about NFSv4.1 sessions, see the corresponding section in this document.

## 7.4 What Happens During LIF Migrations in NFSv4.x?

When a data LIF hosting NFSv4.x traffic is migrated in clustered Data ONTAP, existing NFSv4.x traffic must be quiesced until a safe point in the process to move the LIF. After the NFS server is determined "safe" to allow the migration, the LIF is then moved to the new location and lock states are reclaimed by NFS clients. Lock state reclamation is controlled by the NFS option <code>-v4-grace-seconds</code> (45 seconds by default). With NFSv4.1 sessions, this grace period is not needed, because the lock states are stored in the NFSv4.1 session. Busier systems cause longer latency in LIF migrations, because the system has to wait longer for the operations to quiesce and the LIF waits longer to migrate. However, disruptions occur only during the lock reclamation process.

### 7.5 General Best Practices for NDO with NFS in Clustered Data ONTAP

Storage administrators have a lot of control over planned maintenance of their clusters, but not a lot of control over unplanned events. Therefore, the best that can be done to avoid issues when experiencing outages is to consider NDO when architecting a clustered Data ONTAP platform. This section covers only general best practices and does not detail specific environmental considerations. For more information about detailed best practices, see the list of technical reports in the <a href="Planned Outages">Planned Outages</a> section, next.

## There are two types of outages:

- Planned, Upgrades, hardware replacements, planned reboots, and so on
- Unplanned, Storage failovers, network blips/changes, external server issues, power/environmental, bugs

## **Planned Outages**

With planned outages, clustered Data ONTAP has a number of mechanisms to help maintain uptime, such as volume moves, LIF migrations, rolling upgrades, and so on. For more information about NDO features and functionality, see the following technical reports:

- TR-4075: DataMotion for Volumes in Clustered Data ONTAP Overview and Best Practices
- TR-4100: Nondisruptive Operations and SMB File Shares for Clustered Data ONTAP
- TR-4146: Aggregate Relocate Overview and Best Practices for Clustered Data ONTAP
- TR-4186: Nondisruptive Operations (NDO) Overview
- TR-4277: Nondisruptively Replace a Complete Disk Shelf Stack with Clustered Data ONTAP

### **Unplanned Outages**

Unplanned outages are considerably trickier to handle because of the nature of their being unplanned. Therefore, for maximum NDO functionality with NFS and multiprotocol implementations, the following set of NAS-specific best practices are worth consideration.

#### Best Practice 15: NDO Best Practices for NFS Environments (See Best Practice 16)

- Make sure that every node in the cluster has a <u>data LIF</u> that can be routed to external name services.
- If using name service servers (DNS, LDAP, NIS, and so on), make sure that there are multiple servers for redundancy and that those servers are on a fast connection and configured for use with the SVM as a client.
- Configure data LIFs properly as per <u>TR-4182</u>: <u>Ethernet Storage Design Considerations and Best Practices for Clustered Data ONTAP Configurations</u>.
- Configure automatic giveback for HA pairs in clustered Data ONTAP clusters.
- Spread data volumes across multiple nodes to avoid hardware bottlenecks.
- Use NFSv4.x (4.1 if possible) when appropriate to take advantage of stateful connections, integrated locking, and session functionality.
- Make sure that a DR copy of NAS data and configuration exists at a remote site through DP NetApp SnapMirror<sup>®</sup> and SVM peering. See <u>TR-4015: SnapMirror Configuration and Best</u> <u>Practices Guide for Clustered Data ONTAP</u> for details.

## 8 NFSv3 in Clustered Data ONTAP

NFSv3 is fully supported in clustered Data ONTAP. Its functionality follows the <u>RFC 1813</u> specifications, just as in 7-Mode, so any NFSv3 client that follows RFC 1813 is supported. There are some changes in overall functionality in clustered Data ONTAP as opposed to 7-Mode, however. They are:

- Junction paths replace /vol/volname logic
- No support for -actual pathnames
- Showmount functionality change
- Different default ports for NFSv3
- Ability to enable/disable FSID changes in NFSv3
- Increased maximum auxiliary groups for AUTH\_SYS and AUTH\_GSS in 8.3 (1024 for both)
- Increased default maximum TCP read and write size (from 32K to 64K)

## Default Ports for NFSv3 in 7-Mode

The following are the default ports for NFSv3 operations in 7-Mode. NFS always uses port 2049.

```
filer> options rpc
rpc.mountd.tcp.port
                             4046
rpc.mountd.udp.port
                             4046
rpc.nlm.tcp.port
                             4045
rpc.nlm.udp.port
                             4045
                             4047
rpc.nsm.tcp.port
                             4047
rpc.nsm.udp.port
                             4048
rpc.pcnfsd.tcp.port
rpc.pcnfsd.udp.port
                             4048
rpc.rquotad.udp.port
                             4049
```

### **Default Ports for NFSv3 in Clustered Data ONTAP**

In clustered Data ONTAP 8.3, the ability to change ports for NFSv3-specific operations was added. These are the defaults that were the defaults in versions earlier than 8.3 as well. NFS always uses port 2049.

## **Using rpcinfo to View Open Ports**

To view ports from a client, run rpcinfo -p against a data LIF IP address.

Table 11) 7-Mode NFS port defaults vs. clustered Data ONTAP port defaults.

NFS Service	7-Mode Port	Clustered Data ONTAP Port	Option to Change the Port
Mountd	4046	635	7-Mode: rpc.mountd.tcp.port rpc.mountd.udp.port  Clustered Data ONTAP: -mountd-port
Portmapper	111	111	N/A – Cannot be changed
NLM	4045	4045	7-Mode: rpc.nlm.tcp.port rpc.nlm.udp.port  Clustered Data ONTAP: -nlm-port
NSM	4047	4046	7-Mode: rpc.nsm.tcp.port rpc.nsm.udp.port  Clustered Data ONTAP: -nsm-port
NFS	2049	2049	N/A: cannot be changed
PC NFS	4048	N/A	7-Mode: rpc.pcnfsd.tcp.port rpc.pcnfsd.udp.port
Rquota	4049	4049	7-Mode: rpc.rquotad.udp.port  Clustered Data ONTAP: -rquotad-port

## Why Some Ports Changed Between 7-Mode and Clustered Data ONTAP

As seen in Table 11, a few of the ports changed between Data ONTAP operating in 7-Mode and clustered Data ONTAP. In particular, the mountd port changed from 4046 to 635. This is because of the notion of "rootonly ports," where ports outside the range of 1 through 1024 can be considered insecure by security teams and need special firewall rules. Because mountd is a critical port for NFSv3 operations (whereas NLM, rquotad, and NSM are less critical), the port was changed to be within the range. Other ports were removed, such as PC NFS, because they are no longer supported in clustered Data ONTAP, and others cannot be changed at all (NFS, portmapper) because they are considered port standards.

## Effects of File System ID (FSID) Changes in Clustered Data ONTAP

NFS makes use of a file system ID (FSID) when interacting between client and server. This FSID lets the NFS client know where data lives in the NFS server's file system. Because clustered Data ONTAP can span multiple file systems across multiple nodes by way of junction paths, this FSID can change depending on where data lives. Some older Linux clients can have problems differentiating these FSID changes, resulting in failures during basic attribute operations, such as chown, chmod, and so on.

An example of this issue can be found in <u>bug 671319</u>. If disabling the FSID change with NFSv3, be sure to enable the <u>new -v3-64bit-identifiers option</u> in ONTAP 9, but keep in mind that this option could affect older legacy applications that require 32-bit file IDs.

FSID changes in NFS versions 3/4 can be controlled with the following options in advanced privilege:

```
-v3-fsid-change
-v4-fsid-change
```

**Note:** NetApp does not recommend changing this option unless directed by support. If this option is changed with clients mounted to the NFS server, data corruption can take place.

## **How FSIDs Operate with Snapshot Copies**

When a Snapshot copy of a volume is taken, a copy of a file's inodes is preserved in the file system for access later. The file theoretically exists in two locations.

With NFSv3, even though there are two copies of essentially the same file, the FSIDs of those files are not identical. FSIDs of files are formulated using a combination of NetApp WAFL® (Write Anywhere File Layout) inode numbers, volume identifiers, and Snapshot IDs. Because every Snapshot copy has a different ID, every Snapshot copy of a file has a different FSID in NFSv3, regardless of the setting of the option -v3-fsid-change. The NFS RFC spec does not require that FSIDs for a file are identical across file versions.

With NFSv4, however, the FSID of a file across versions is identical if the option -v4-fsid-change is enabled. That option makes sure that the WAFL inode number is returned as the FSID of a file instead of a FSID created using Snapshot IDs. See <u>bug 933937</u> for more information.

If your application requires that file versions maintain identical FSIDs, use NFSv4 and the -v4-fsid-change option.

## **FSID Changes with Storage Virtual Machine Disaster Recover (SVM DR)**

Clustered Data ONTAP 8.3.1 introduced a new feature to enable disaster recovery for entire SVMs called SVM DR. This feature is covered in TR-4015: SnapMirror Configuration and Best Practices Guide.

When SVM DR is used with NFS exports in versions prior to ONTAP 9.0, the FSID of those exports changes, and clients have to remount the exports on the destination system. Otherwise, the clients show "stale" for NFS operations on those mounts. If the mount's FSID should be preserved by the SVM DR relationship, then the destination SVM would need to be created with the <code>-is-msid-preserve</code> option set to "true" in **diag privilege** mode. When this option is set, SnapMirror relationships used in SVM DR show <code>-msid-preserve</code> as "true" in their <code>snapmirror</code> show output. This should be used with caution, because SVM DR updates are asynchronous. The source SVM should be confirmed as down before attempting to write to the destination SVM with the same FSID.

## Increased Maximums for AUTH\_SYS and AUTH\_GSS Groups

RPC has a specific limitation for the maximum number of auxiliary GIDs that can be honored in a single NFS request. The maximum for <u>AUTH\_SYS/AUTH\_UNIX is 16</u>, and for AUTH\_GSS (Kerberos) it is 32. This is a protocol limitation that affects many NFS servers. Before clustered Data ONTAP 8.3, there was no way to increase the maximum number of GIDs allowed by NFS operations. Clustered Data ONTAP 8.3 introduced the following options to set per NFS server to address this limitation:

auth-sys-extended-groups
extended-groups-limit

#### **How It Works**

The options to extend the group limitation work just the way that the manage-gids option for other NFS servers works. Basically, rather than dumping the entire list of auxiliary GIDs a user belongs to, the option does a lookup for the GID on the file or folder and returns that value instead.

From the man page for mountd:

```
-g or --manage-gids
```

Accept requests from the kernel to map user id numbers into lists of group id numbers for use in access control. An NFS request will normally except when using Kerberos or other cryptographic authentication) contains a user-id and a list of group-ids. Due to a limitation in the NFS protocol, at most 16 groups ids can be listed. If you use the -g flag, then the list of group ids received from the client will be replaced by a list of group ids determined by an appropriate lookup on the server.

In 7-Mode, the maximum number of GIDs supported was 256. In clustered Data ONTAP 8.3, that maximum is increased (and configurable) to 1,024 for both AUTH\_SYS and AUTH\_GSS.

When an access request is made, only 16 GIDs are passed in the RPC portion of the packet.

### Performance Impact of Extended GIDs

Extended groups have a minimal performance penalty, generally in the low single digit percentages. Higher metadata NFS workloads would likely have more impact, particularly on the system's caches. Performance can also be impacted by the speed and workload of the name service servers. Overloaded name service servers are slower to respond, causing delays in prefetching the GID.

For more information regarding name services, see <u>TR-4379: Name Service Best Practices</u>.

#### Figure 8) RPC packet with 16 GIDs.

```
Credentials
 Flavor: AUTH_UNIX (1)
 Length: 116
 Stamp: 0x0069465b
UID: 2000
 GID: 513
□ Auxiliary GIDs (16) [513, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015]
   GID: 513
GID: 2001
   GID: 2002
   GID: 2003
   GID: 2004
   GID: 2005
   GID: 2006
   GID: 2007
   GID: 2008
   GID: 2009
   GID: 2010
   GID: 2011
   GID: 2012
   GID: 2013
   GID: 2014
```

Any GID past the limit of 16 is dropped by the protocol. With the extended GID option in clustered Data ONTAP 8.3, when an NFS request comes in, the SecD process requests information about the user's group membership by way of a new function called <code>secd\_rpc\_auth\_user\_id\_to\_unix\_ext\_creds</code>. Extended GIDs can be used with external name services, or locally on the cluster if the users and groups are configured properly. To make sure that a local UNIX user is a member of multiple groups, use the <code>unix-group</code> <code>adduser(s)</code> command:

```
COMMANDS

adduser - Add a user to a local UNIX group

addusers - Add a list of users to a local UNIX group
```

### Considerations for Active Directory LDAP

By default, in Microsoft Active Directory LDAP servers, the MaxPageSize attribute is set to a default of 1000. That means groups beyond 1000 would get truncated in LDAP queries. To enable full support with the 1024 value for extended groups, the MaxPageSize attribute must be modified to reflect the 1024 value. For information about how to change that value, see the following Microsoft TechNet article:

How to view and set LDAP policy in Active Directory by using Ntdsutil.exe

Contact Microsoft support for concerns with modifying this value, as well as reviewing the following TechNet library article:

https://technet.microsoft.com/en-us/library/aa998536(v=exchg.80).aspx

### A Detailed Look

This function uses a LibC library call to do a credential lookup from the name service (for example, LDAP) before the cluster replies to the NFS request with access denied or allowed. When the credentials are fetched from the name service, then SecD populates the NAS credential cache with the appropriate group membership for that user up to the extended group limit. The cluster then replies to the NFS request and allows or denies access based on what is in the credential cache and not what was in the RPC packet.

Because of this, latency to the name services from the cluster should be low to enable the credential caches to always be accurate. Otherwise, access results could vary from expected behaviors.

The following example shows the results of the same NFS request as seen earlier. Note how 18 GIDs are discovered, as opposed to the 16 in the RPC packet.

### **Example of NAS Credential Cache with Extended GIDs Enabled**

```
::*> diag nblade credentials show -node node2 -vserver NAS -unix-user-name seventeengids
Getting credential handles.
1 handles found....
Getting cred 0 for user.
         Global Virtual Server: 5
         Cred Store Uniquifier: 1
Cifs SuperUser Table Generation: 0
             Locked Ref Count: 0
                   Info Flags: 1
         Alternative Key Count: 0
       Additional Buffer Count: 0
               Creation Time: 4853460910 ms
       Time Since Last Refresh: 492530 ms
Windows Creds:
       Flags: 0
       Primary Group: S-0-0
Unix Creds:
       Flags: 1
       Domain ID: 0
       Uid: 2000
       Gid: 513
       Additional Gids:
               Gid 0: 513
               Gid 1: 2001
               Gid 2: 2002
               Gid 3: 2003
               Gid 4: 2004
               Gid 5: 2005
               Gid 6: 2006
               Gid 7: 2007
               Gid 8: 2008
               Gid 9: 2009
               Gid 10: 2010
               Gid 11: 2011
               Gid 12: 2012
               Gid 13: 2013
               Gid 14: 2014
               Gid 15: 2015
               Gid 16: 2016
               Gid 17: 2017
                Gid 18: 10005
```

For more information about <u>name services best practices</u>, see the section in this document covering that subject. For more information about LDAP in clustered Data ONTAP, see  $\frac{TR-4073}{2}$ .

# 9 NFSv4.x in Clustered Data ONTAP

NFSv4.0 and NFSv4.1 were introduced in clustered Data ONTAP starting with Data ONTAP 8.1.

# 9.1 Advantages of Using NFSv4.x

The following are some advantages to using NFSv4.x in your environment. However, it is important that you treat every specific use case differently. NFSv4.x is not ideal for all workload types. Be sure to test for desired functionality and performance before rolling out NFSv4.x en masse.

- Firewall-friendly because NFSv4 uses only a single port (2049) for its operations
- Advanced and aggressive cache management, like delegations in NFSv4.x
- Strong RPC security choices that employ cryptography
- Internationalization
- Compound operations
- Works only with TCP
- Stateful protocol (not stateless like NFSv3)
- Kerberos configuration for efficient authentication mechanisms
  - Support for 3DES for encryption in clustered Data ONTAP 8.2.x and earlier
  - AES support in 8.3 and later.
- No NFSv4 replication support (see <u>RFC 7530, section 8.4.1</u> for details)
- Migration (for dNFS) using referrals
- Support of access control that is compatible with UNIX and Windows
- String-based user and group identifiers
- Parallel access to data through pNFS (does not apply for NFSv4.0)

# Performance Enhancements for NFSv4.x Operations

Clustered Data ONTAP 8.2.x and later introduced some major performance enhancements for NFSv4.x operations. The following section covers these enhancements.

# NFSv4.x Fastpath in Clustered Data ONTAP 8.2.x

Starting in clustered Data ONTAP 8.2, NFS fastpath was introduced to potentially improve NFSv4 performance for READs and WRITES. This improvement is made by bypassing the internal processing of NFSv4 packets into clustered Data ONTAP centric packets when the data request is made on a LIF that is local to the node hosting the volume. When combined with other features such as pNFS or referrals, localized data can be guaranteed for each READ and WRITE request, thus allowing consistent use of the NFSv4 fastpath. NFSv3 has always had an NFS fastpath concept. NFS fastpath is enabled by default.

# NFSv4.x Multithreaded Operations in Clustered Data ONTAP 8.2.x

In clustered Data ONTAP 8.2 and later, multiprocessor support was added for NFSv4.x read and write operations. Metadata operations, however, still use a single threaded approach. In previous releases, NFSv4.x read and write operations were single threaded, thus allowing a potential bottleneck at the CPU for the protocol domain. Using multiple processors for read and write operations can greatly increase throughput on NetApp systems that contain more than one CPU for NFSv4.x workloads that are read and write heavy.

**Note:** NFSv3 has always used multiple processors for reads and writes. NFSv3 also uses multiple processors for metadata operations.

#### Best Practice 16: Version Recommendations with NFSv4.x (See Best Practice 17)

For NFSv4.x workloads, be sure to upgrade the cluster to the latest patched GA version of clustered Data ONTAP 8.2.x or 8.3 and upgrade NFS clients to the latest patched release of the kernel.

The following diagrams illustrate the effect that a multiprocessor can have on NFSv4.x operations.

Figure 9) NFSv4.x read and write ops: no multiprocessor.

# NFSv4.x Read and Write Ops prior to clustered Data ONTAP 8.2:


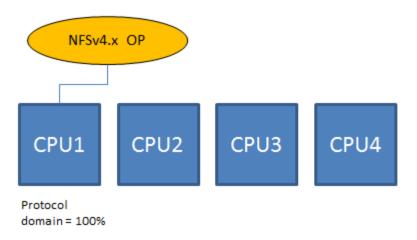


Figure 10) NFSv4.x read and write ops: with multiprocessor.

# NFSv4.x Read and Write Ops in clustered Data ONTAP 8.2:

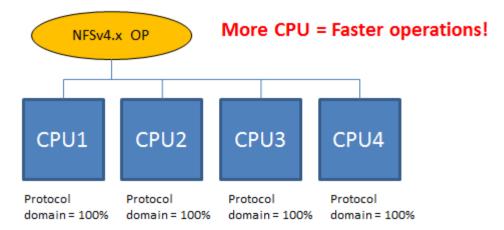

#### 9.2 NFSv4.0

NetApp Data ONTAP NFSv4.x implementation (clustered and 7-Mode) provides the following.

#### **Write Order**

The implementation provides the capability to write data blocks to shared storage in the same order as they occur in the data buffer.

## **Synchronous Write Persistence**

Upon return from a synchronous write call, Data ONTAP (clustered and 7-Mode) guarantees that all the data has been written to durable, persistent storage.

#### **Distributed File Locking**

The implementation provides the capability to request and obtain an exclusive lock on the shared storage, without assigning the locks to two servers simultaneously.

#### **Unique Write Ownership**

Data ONTAP (clustered and 7-Mode) guarantees that the file lock is the only server process that can write to the file. After Data ONTAP transfers the lock to another server, pending writes queued by the previous owner fail.

# Transitioning from NFSv3 to NFSv4.x: Considerations

The following section covers some considerations that need to be addressed when migrating from NFSv3 to NFSv4.x. When choosing to use NFSv4.x after using NFSv3, you cannot simply turn it on and have it work as expected. There are specific items to address, such as:

- Domain strings/ID mapping
- Storage failover considerations
- Name services
- Firewall considerations
- Export policy rule considerations
- Client support
- NFSv4.x features and functionality

For an in-depth look at the NFSv4.x protocol, including information about NFSv4.2, see the <u>SNIA</u> overview of NFSv4.

Note: Clustered Data ONTAP currently supports only NFS versions 3 to 4.1.

# **ID Domain Mapping**

While customers prepare to migrate their existing setup and infrastructure from NFSv3 to NFSv4, some environmental changes must be made before moving to NFSv4. One of them is "id domain mapping."

In clustered Data ONTAP 8.1, a new option called v4-id-numerics was added. With this option enabled, even if the client does not have access to the name mappings, numeric IDs can be sent in the user name and group name fields. The server accepts them and treats them as representing the same user as would be represented by a v2/v3 UID or GID having the corresponding numeric value.

Essentially, this approach makes NFSv4.x behave more like NFSv3. This approach also removes the security enhancement of forcing ID domain resolution for NFSv4.x name strings; whenever possible, keep this option as the default of disabled. If a name mapping for the user is present, however, the name string is sent across the wire rather than the UID/GID. The intent of this option is to prevent the server from sending "nobody" as a response to credential queries in NFS requests.

**Note:** To access this command in versions earlier than clustered Data ONTAP 8.3, you must be in diag mode. Commands related to diag mode should be used with caution.

#### **Best Practice 17: Use of v4-id-numerics (See Best Practice 18)**

Although it is possible to allow the NFSv4.x server to return numeric IDs for NFS requests, it is best to make sure that user names have appropriate name mappings on the client and server so that the security feature of NFSv4.x is leveraged. This is easiest to accomplish when using name service servers such as LDAP to connect to both client and server.

Some production environments have the challenge to build new naming service infrastructures like NIS or LDAP for string-based name mapping to be functional in order to move to NFSv4. With the new numeric\_id option, setting name services does not become an absolute requirement. The numeric\_id feature must be supported and enabled on the server as well as on the client. With this option enabled, the user and groups exchange UIDs/GIDs between the client and server just as with NFSv3. However, for this option to be enabled and functional, NetApp recommends having a supported version of the client and the server. For client versions that support numeric IDs with NFSv4, contact the OS vendor.

**Note:** Note that -v4-id-numerics should be enabled only if the client supports it.

Configuration step 1) Enabling numeric ID support for NFSv4 in clustered Data ONTAP.

Category	Commands
Enable	
NFSv4.0.	<pre>cluster::&gt; vserver nfs modify -vserver test_vs1 -access true -v4.0 enabled -tcp enabled</pre>
	Verification
	cluster::> vserver nfs show -vserver test_vs1
	Vserver: test_vs1 General NFS Access: true NFS v3: enabled NFS v4.0: enabled UDP Protocol: enabled TCP Protocol: enabled Spin Authentication: disabled Default Windows User: NFSv4.0 ACL Support: disabled NFSv4.0 Read Delegation Support: disabled NFSv4.0 Write Delegation Support: disabled NFSv4.1 Minor Version Support: disabled Rquota Enable: disabled NFSv4.1 Parallel NFS Support: enabled NFSv4.1 ACL Support: disabled NFSv4.1 ACL Support: disabled
	NFS vStorage Support: disabled
Set up NFSv4 user ID mapping.	Note:
ттарріпу.	On a clustered Data ONTAP system, the command to turn on the v4-id-numerics option follows.

```
cluster::> set diag Warning: These diagnostic commands are for use by NetApp personnel only. Do you want to continue? \{y|n\}: y cluster::> vserver nfs modify -vserver testvs1 -v4-numeric-ids enabled
```

#### Verification

```
cluster::> vserver nfs show -vserver testvs1 -fields v4-numeric-ids
Vserver v4-numeric-ids
-----
testvs1 enabled
```

If the v4-id-numerics option is disabled, the server accepts only the user name/group name of the form user@domain or group@domain.

The NFSv4 domain name is a pseudodomain name that both the client and storage controller must agree upon before they can execute NFSv4 operations. The NFSv4 domain name might or might not be equal to the NIS or DNS domain name, but it must be a string that both the NFSv4 client and server understand.

This is a two-step process in which the Linux client and the clustered Data ONTAP system are configured with the NFSv4 domain name.

#### On the clustered Data ONTAP system:

The default value of the NFS option -v4-id-domain is defaultv4iddomain.com.

```
cluster::> vserver nfs modify -vserver test_vs1 -v4-id-domain
nfsv4domain.netapp.com
```

## Verification

```
cluster::> vserver nfs show -vserver test_vs1 -fields v4-id-domain

Vserver v4-id-domain
------
test_vs1 nfsv4domain.netapp.com
```

This section describes how the domain name can be changed on the client.

**Solaris.** Edit the /etc/default/nfs file and change NFSMAPID\_DOMAIN to that set for the server. Reboot the client for the change to take effect.

**Linux.** Make the necessary adjustments to /etc/idmapd.conf. Restart the idmapd process to have the change take effect. Note: Restarting idmapd varies per client. Rebooting the server is an option as well.

```
[root@nfsclient /]# vi /etc/idmapd.conf
[General]

Verbosity = 0
Pipefs-Directory = /var/lib/nfs/rpc_pipefs
Domain = nfsv4domain.netapp.com
[mapping]

Nobody-User = nobody
Nobody-Group = nobody
```

	[Translation] Method = nsswitch		
Create a UNIX group with GID 1 and assign it to the SVM.	NFSv3 ignores this, whereas NFSv4 is sensitive to the UID and GID mapping. If GID 1 was		
	<pre>cluster::&gt; vserver services unix-group create -vserver test_vs1 -name daemon -i 1</pre>		
	Verification		
	cluster::> vserver services unix-group show -vserver test_vs1		
	Vserver Name ID		
	test_vsl daemon 1 test_vsl root 0 2 entries were displayed.		
Mount the client over NFSv4.	On the client:		
	<pre>[root@nfsclient /]# mkdir -p /home/root/mnt/nfs4/ [root@nfsclient /]# mount 172.17.37.135:/path01 /home/root/mnt/nfs4/</pre>		
	Verification		
<pre>[root@nfsclient /]# mount 172.17.37.135:/path01 on /home/root/mnt/test_vs1 type nfs (rw,vers=3,addr=172.17.37.135) 172.17.37.135:/path01 on /home/root/mnt/ nfs4 type nfs (rw,vers=4,addr=172.17.37.135,clientaddr=172.17.44.42)</pre>			
	Note: Linux clients must mount the file system from the NetApp storage with a -t nfs4 option. However, RHEL 6.0 and later mount NFSv4 by default. Solaris 10 clients mount the file system over NFSv4 by default when NFSv4 is enabled on the NetApp storage appliance. For mounting over NFSv3, "vers=3" must be explicitly specified on the mounts.  Note: A volume can be mounted using NFSv3 and NFSv4.		

# **Storage Failover Considerations**

NFSv4.x uses a completely different locking model than NFSv3. Locking in NFSv4.x is a lease-based model that is integrated into the protocol rather than separated as it is in NFSv3 (NLM). From the Data ONTAP documentation:

In accordance with RFC 3530, Data ONTAP "defines a single lease period for all state held by an NFS client. If the client does not renew its lease within the defined period, all states associated with the client's lease may be released by the server." The client can renew its lease explicitly or implicitly by performing an operation, such as reading a file. Furthermore, Data ONTAP defines a grace period, which is a period of special processing in which clients attempt to reclaim their locking state during a server recovery.

Table 12) NFSv4.x lock terminology.

Term	Definition (per RFC 3530)
Lease	The time period in which Data ONTAP irrevocably grants a lock to a client
Grace period	The time period in which clients attempt to reclaim their locking state from Data ONTAP during server recovery
Lock	Refers to both record (byte-range) locks as well as file (share) locks unless specifically stated otherwise

For more information about locking, see the section in this document on <a href="NFSv4.x">NFSv4.x</a> locking. Because of this new locking methodology, as well as the statefulness of the NFSv4.x protocol, storage failover operates differently as compared to NFSv3. For more information, see the section in this document about nondisruptive operations with NFS in clustered Data ONTAP.

#### Name Services

When deciding to use NFSv4.x, it is a best practice to centralize the NFSv4.x users in name services such as LDAP or NIS. Doing so allows all clients and clustered Data ONTAP NFS servers to leverage the same resources and guarantees that all names, UIDs, and GIDs are consistent across the implementation. For more information about name services, see <a href="https://example.com/resources-name="https://example.com/resources

#### **Firewall Considerations**

NFSv3 required several ports to be opened for ancillary protocols such as NLM, NSM, and so on in addition to port 2049. NFSv4.x requires only port 2049. If you want to use NFSv3 and NFSv4.x in the same environment, open all relevant NFS ports. These ports are referenced in this document.

# **Volume Language Considerations**

In NetApp Data ONTAP, volumes can have specific languages set. This capability is intended to be used for internationalization of file names for languages that use characters not common to English, such as Japanese, Chinese, German, and so on. When using NFSv4.x, <u>RFC 3530</u> states that UTF-8 is recommended.

The primary issue in which NFS version 4 needs to deal with internationalization, or I18N, is with respect to file names and other strings as used within the protocol. The choice of string representation must allow reasonable name/string access to clients which use various languages. The UTF-8 encoding of the UCS as defined by [ISO10646] allows for this type of access and follows the policy described in "IETF Policy on Character Sets and Languages", [RFC2277].

If you intend to migrate to clustered Data ONTAP from a 7-Mode system and use NFSv4.x, use some form of UTF-8 language support, such as C.UTF-8 (which is the default language of volumes in clustered Data ONTAP). If the 7-Mode system does not already use a UTF-8 language, then it should be converted before you transition to clustered Data ONTAP or when you intend to transition from NFSv3 to NFSv4. The exact UTF-8 language specified depends on the specific requirements of the native language to make sure of proper display of character sets.

Data ONTAP operating in 7-Mode allowed volumes that hosted NFSv4.x data to use C language types. Clustered Data ONTAP does not do so, because it honors the RFC standard recommendation of UTF-8. TR-4160: Secure Multitenancy Considerations covers language recommendations in clustered Data ONTAP. When changing a volume's language, every file in the volume must be accessed after the change to make sure that they all reflect the language change. Use a simple ls -lR to access a recursive listing of files.

For more information about transitioning to clustered Data ONTAP, see <u>TR-4052</u>: <u>Successfully Transitioning to Clustered Data ONTAP</u>.

#### Potential Issues with UTF-8 Characters

In some instances, UTF-8 file names with character representation containing 0x80 (octal \0200) are not able to be managed using NFS mounts. Many of these characters occur in the  $\underline{\text{Unicode General}}$   $\underline{\text{Punctuation}}$  block. For example, the name 'test•file' is encoded as 'test\xe2\x80\xa2file' and that name might be affected because it contains 0x80 in the UTF-8 sequence. See  $\underline{\text{bug 998468}}$  for details.

This issue only affects the following versions of ONTAP:

- For 7-Mode 8.2x or clustered Data ONTAP 8.2x, files created before 8.2.4P2
- For clustered Data ONTAP 8.3x, files created before 8.3.2

In clustered Data ONTAP, the new option -v3-search-unconverted-filename has been added in ONTAP 9 to avoid this issue.

 $[-v3-search-unconverted-filename {enabled|disabled}]$  - Lookup for the filename in unconverted language if converted language lookup fails (privilege: advanced) This optional parameter specifies whether to continue the search with unconverted name while doing lookup in a directory.

# **Export Policy Rules**

In clustered Data ONTAP, it is possible to specify which version of NFS is supported for an exported file system. If an environment was configured for NFSv3 and the export policy rule option <code>-protocol</code> was limited to allow NFSv3 only, then the option needs to be modified to allow NFSv4. Additionally, policy rules could be configured to allow access only to NFSv4.x clients.

#### **Example:**

```
cluster::> export-policy rule modify -policy default -vserver NAS -protocol nfs4
```

For more information, consult the product documentation for your specific version of clustered Data ONTAP.

#### **Client Considerations**

When you use NFSv4.x, clients are as important to consider as the NFS server. Follow the client considerations below when implementing NFSv4.x. Other considerations might be necessary. Contact the OS vendor for specific questions about NFSv4.x configuration.

- NFSv4.x is supported.
- The fstab file and NFS configuration files are configured properly. When mounting, the client
  negotiates the highest NFS version available with the NFS server. If NFSv4.x is not allowed by the
  client or fstab specifies NFSv3, then NFSv4.x is not used at mount.
- The idmapd.conf file is configured with the proper settings.
- The client either contains identical users and UID/GID (including case sensitivity) or uses the same name service server as the NFS server/clustered Data ONTAP SVM.
- If using name services on the client, the client is configured properly for name services (nsswitch.conf, Idap.conf, sssd.conf, and so on) and the appropriate services are started, running, and configured to start at boot.
- The NFSv4.x service is started, running, and configured to start at boot.

**Note:** TR-4073: Secure Unified Authentication covers some NFSv4.x and name service considerations as they pertain to clients.

# NFSv4.x Features and Functionality

NFSv4.x is the next evolution of the NFS protocol and enhances NFSv3 with new features and functionality, such as <u>referrals</u>, <u>delegations</u>, <u>pNFS</u>, and so on. These features are covered throughout this document and should be factored in to any design decisions for NFSv4.x implementations.

# NFSv4 User ID Mapping

Clustered Data ONTAP supports "numeric-ids," which can be enabled using the following command at the SVM level.

```
cluster::> set diag
cluster::*> vserver nfs modify -vserver vs0 -v4-numeric-ids enabled
cluster::*> vserver nfs show -vserver vs0 -fields v4-numeric-ids
vserver v4-numeric-ids
------
vs0 enabled
```

# Disabling and Verifying ID Mapping on the Client

```
[root@localhost /]# cat /etc/idmapd.conf
[General]
#Verbosity = 0
# The following should be set to the local NFSv4 domain name
# The default is the host's DNS domain name.
Domain = local.domain.edu

[root@localhost /]# cat /sys/module/nfs/parameters/nfs4_disable_idmapping
Y

[root@localhost /]# mount -t nfs -o nfsvers=4 10.63.17.87:/vol/nfs /mnt/nfsv4
[root@localhost /]# cd /mnt/nfsv4
[root@localhost nfsv4]# ls -al
total 12
drwxrwxrwt 2 nobody bin 4096 Nov 10 17:27 .
drwxr-xr-x 5 root root 4096 Nov 9 21:01 ..
```

Following are two test cases in which the users "test" and "mock-build," creating files without using ID domain mapping just by using UID/GID.

```
[test@localhost ~]$ id
uid=500(test) gid=500(test) groups=500(test)
[test@localhost ~]$ cd /mnt/nfsv4
[test@localhost nfsv4]$ ls -al
total 12
drwxrwxrwt 2 nobody bin 4096 Nov 11 20:20 .
drwxr-xr-x 5 root root 4096 Nov 9 21:01 ..
[test@localhost nfsv4]$ touch 1231
[test@localhost_nfsv4]$ ls -al
total 12
drwxrwxrwt 2 nobody bin 4096 Nov 11 20:21 .
drwxr-xr-x 5 root root 4096 Nov 9 21:01 .
-rw-rw-r-- 1 test test 0 Nov 11 20:21 1
                                 0 Nov 11 20:21 1231
[root@localhost nfsv4]# su - mockbuild
[mockbuild@localhost ~]$ cd /mnt/nfsv4
[mockbuild@localhost nfsv4]$ touch mockbird
[mockbuild@localhost nfsv4]$ ls -al
total 12
drwxrwxrwt 2 nobody bin 4096 Nov 11 20:22 .
drwxr-xr-x 5 root root 4096 Nov 9 21:01 ..
-rw-rw-r-- 1 test test 0 Nov 11 20:21 1231
-rw-rw-r-- 1 mockbuild mockbuild 0 Nov 11 20:22 mockbird
```

Because ID domain mapping is not used, the ID mapping falls back to classic UID/GID-style mapping, eliminating the need for an NFSv4 ID domain. However, in large environments, NetApp recommends a centralized name repository for NFSv4.x.

# **Configure UID and GID Name Mappings**

Use any of three ways of modifying file/nis/ldap. The order of mapping is specified using the commands shown below.

# Configuration step 2) Configuring UID and GID mapping.

Category	Commands
Configure name-	
mapping methodologies.	cluster::> vserver modify -vserver test_vs1 -ns-switch nis,ldap -nm-switch file
Configure LDAP.	Create an LDAP client.
	cluster::> vserver services ldap client show This table is currently empty.
	LDAP using Active Directory:
	cluster::> vserver services ldap client create -client-config AD_LDAP -servers 10.10.10.10 -ad-domain domain.netapp.com -bind-as-cifs-server true -schema AD-IDMU -port 389 -query-timeout 3 -min-bind-level sasl -base-dn DC=domain,DC=netapp,DC=com -base-scope subtree -preferred-ad-servers 10.10.10.100
	Non–Active Directory LDAP (such as OpenLDAP):
	cluster::> vserver services ldap client create -client-config OPENLDAP -schema RFC-2307 -servers 10.10.10.101 -port 389 -query-timeout 3 -min-bind-level simple -base-dn DC=openldap,DC=netapp,DC=com -base-scope subtree
	Verification
	LDAP using Active Directory:
	cluster::> vserver services ldap client show -instance  Client Configuration Name: AD_LDAP  LDAP Server List: 10.10.10.100  Active Directory Domain: domain.netapp.com  Preferred Active Directory Servers: 10.10.10.100  Bind Using the Vserver's CIFS Credentials: true  Schema Template: AD-IDMU
	LDAP Server Port: 389 Query Timeout (sec): 3 Minimum Bind Authentication Level: sasl Bind DN (User): - Base DN:DC=domain,DC=netapp, DC=com Base Search Scope: subtree
	Non–Active Directory LDAP (such as OpenLDAP):
	cluster::> vserver services ldap client show -instance
	Bind Using the Vserver's CIFS Credentials: false Schema Template: RFC-2307 LDAP Server Port: 389 Query Timeout (sec): 3

Minimum Bind Authentication Level: sasl Bind DN (User): -Base DN:DC=openldap,DC=netapp, DC=com Base Search Scope: subtree Create an LDAP server. cluster::> vserver services ldap show This table is currently empty. cluster::> vserver services ldap create -vserver test vs1 -client-config ldapclient1 -client-enabled true Verification cluster::> vserver services ldap show Client Client
Vserver Configuration Enabled test\_vs1 ldapclient1 true Configure NIS. cluster::> vserver services nis-domain create -vserver test vs1 -domain nisdom.netapp.com -active true -servers 10.10.10.110 Verification cluster::> vserver services nis-domain show NIS Vserver Domain Active Server \_\_\_\_\_\_ 

# **Viewing Active NFS Connections in the Cluster**

In clustered Data ONTAP, it is possible to view active NFS connections across all SVMs and nodes in the cluster using the <code>network connections</code> active show command. This command allows filtering of IPs, services, and other features to provide more useful and granular information. The command can be used in place of classic <code>netstat</code> commands found in 7-Mode.

#### **Example:**

Additionally, it is possible to view network connections in a LISTEN state with network connections listening show.

# Example:

Vserver Name	Interface Name:Local Port	Protocol/Service	
Node: node2			
NAS	data1:40001	TCP/cifs-msrpc	
NAS	data1:135	TCP/cifs-msrpc	
NAS	data1:137	UDP/cifs-nam	
NAS	data1:139	TCP/cifs-srv	
NAS	data1:445	TCP/cifs-srv	
NAS	data1:4049	UDP/unknown	
NAS	data1:2050	TCP/fcache	
NAS	data1:111	TCP/port-map	
NAS	data1:111	UDP/port-map	
NAS	data1:4046	TCP/sm	
NAS	data1:4046	UDP/sm	
NAS	data1:4045	TCP/nlm-v4	
NAS	data1:4045	UDP/nlm-v4	
NAS	data1:2049	TCP/nfs	
NAS	data1:2049	UDP/nfs	
NAS	data1:635	TCP/mount	
NAS	data1:635	UDP/mount	
NAS	data2:40001	TCP/cifs-msrpc	
NAS	data2:135	TCP/cifs-msrpc	
NAS	data2:137	UDP/cifs-nam	
NAS	data2:139	TCP/cifs-srv	
NAS	data2:445	TCP/cifs-srv	
NAS	data2:4049	UDP/unknown	
NAS	data2:2050	TCP/fcache	
NAS	data2:111	TCP/port-map	
NAS	data2:111	UDP/port-map	
NAS	data2:4046	TCP/sm	
NAS	data2:4046	UDP/sm	
NAS	data2:4045	TCP/nlm-v4	
NAS	data2:4045	UDP/nlm-v4	
NAS	data2:2049	TCP/nfs	
NAS	data2:2049	UDP/nfs	
NAS	data2:635	TCP/mount	
NAS	data2:635	UDP/mount	
34 entries wer	e displayed.		

# **Viewing NFS Usage**

In clustered Data ONTAP 8.3.x and later, you can see how many RPC calls have been issued per NFS version on a local node. The values are persistent and clear only when the node reboots. This command is available only from diagnostic privilege level and must be issued on the local node.

```
cluster::> set diag
cluster::*> diag nblade nfs usage show
Node: node2
v3: 120
v4: 2076
```

# **NFSv4 Access Control Lists (ACLs)**

The NFSv4 protocol can provide access control in the form of NFSv4 Access Control Lists (ACLs), which are similar in concept to those found in CIFS. An NFSv4 ACL consists of individual Access Control Entries (ACEs), each of which provides an access control directive to the server. Clustered Data ONTAP 8.2 and later support a maximum of 1,024 ACEs.

# Benefits of Enabling NFSv4 ACLs

The benefits of enabling NFSv4 ACLs include the following:

- Granular control of user access to files and directories
- Better NFS security
- Improved interoperability with CIFS
- Removal of the NFS limitation of 16 groups per user with AUTH\_SYS security
  - ACLs bypass the need for GID resolution, which effectively removes the GID limit.

#### Compatibility Between NFSv4 ACLs and Windows (NTFS) ACLs

NFSv4 ACLs are different from Windows file-level ACLs (NTFS ACLs), but Data ONTAP can map NFSv4 ACLs to Windows ACLs for viewing on Windows platforms.

Note: Currently this works only for Infinite Volumes and Unified security styles.

Permissions displayed to NFS clients for files that have Windows ACLs are "display" permissions, and the permissions used for checking file access are those of the Windows ACL.

Note: Data ONTAP does not support POSIX ACLs.

#### **How NFSv4 ACLs Work**

When a client sets an NFSv4 ACL on a file during a SETATTR operation, the NetApp storage system sets that ACL on the object, replacing any existing ACL. If there is no ACL on a file, then the mode permissions on the file are calculated from OWNER@, GROUP@, and EVERYONE@. If there are any existing SUID/SGID/STICKY bits on the file, they are not affected.

When a client gets an NFSv4 ACL on a file during the course of a GETATTR operation, the NetApp system reads the NFSV4 ACL associated with the object, constructs a list of ACEs, and returns the list to the client. If the file has an NT ACL or mode bits, then an ACL is constructed from mode bits and is returned to the client.

Access is denied if a DENY ACE is present in the ACL; access is granted if an ALLOW ACE exists. However, access is also denied if neither of the ACEs is present in the ACL.

A security descriptor consists of a Security ACL (SACL) and a Discretionary ACL (DACL). When NFSv4 interoperates with CIFS, the DACL is one-to-one mapped with NFSv4 and CIFS. The DACL consists of the ALLOW and the DENY ACEs.

# Configuration step 3) Enabling NFSv4 access control lists.

Category	Commands
Modify the NFSv4 server to enable ACLs by enabling the - v4.0-acl option.	<pre>cluster::&gt; vserver nfs modify -vserver test_vs1 -v4.0-acl enabled</pre>
	Verification
	cluster::> vserver nfs show -vserver test_vs1 -fields v4.0-acl,v4.0 Vserver v4.0 v4.0-acl
	test_vs1 enabled enabled
On a Linux client	<b>Note:</b> After you enable ACLs on the server, the nfs4_setfacl and nfs4_getfacl commands are required on the Linux client to set or get NFSv4 ACLs on a file or directory, respectively. To avoid problems with earlier implementations, use RHEL 5.8 or RHEL 6.2 and later for using NFSv4 ACLs in clustered Data ONTAP. The following example illustrates the use of the -e option to set the ACLs on the file or directory from the client. To learn more about the types of ACEs that can be used, refer to the following links:
	www.linuxcertif.com/man/1/nfs4_setfact/145707/
	http://linux.die.net/man/5/nfs4_acl
	<pre>[root@nfsclient /]# mount 172.17.37.135:/path01 /home/root/mnt/nfs4/ [root@nfsclient /]# mount 172.17.37.135:/path01 on /home/root/mnt/ nfs4 type nfs (rw,vers=4,addr=172.17.37.135,clientaddr=172.17.44.42)</pre>
	<pre>[root@nfsclient /]# cd /home/root/mnt/nfs4 [root@nfsclient nfs4]# ls -al total 8</pre>
	drwxr-xr-x. 2 root root 4096 Jul 27 12:56 ./ drwxr-xr-x. 3 root root 4096 Jul 27 12:56/
	[root@linux nfs4] # touch aa [root@linux nfs4] # nfs4_setfacl -e aa
	## Editing NFSv4 ACL for file: /home/root/mnt/ nfs4/aa:
	A::OWNER@:rwatTnNcCy D::OWNER@:x A:g:GROUP@:rtncy D:g:GROUP@:waxTC
	A::EVERYONE@:rtncCy D::EVERYONE@:waxT
	Verification
	<pre>[root@nfsclient nfs4] # nfs4_getfacl aa A::OWNER@:rwatTnNcCy D::OWNER@:x A:g:GROUP@:rtncy</pre>
	D:g:GROUP@:waxTC A::EVERYONE@:rtncCy
	D::EVERYONE@:waxT

A client using NFSv4 ACLs can set and view ACLs for files and directories on the system. When a new file or subdirectory is created in a directory that has an ACL, the new file or subdirectory inherits all ACEs in the ACL that have been tagged with the appropriate <u>inheritance flags</u>. For access checking, CIFS users are mapped to UNIX users. The mapped UNIX user and that user's group membership are checked against the ACL.

If a file or directory has an ACL, that ACL is used to control access no matter which protocol—NFSv3, NFSv4, or CIFS—is used to access the file or directory. The ACL is also used even if NFSv4 is no longer enabled on the system.

Files and directories inherit ACEs from NFSv4 ACLs on parent directories (possibly with appropriate modifications) as long as the ACEs have been tagged with the correct inheritance flags. This process can be controlled using the following command:

```
cluster::> nfs server modify -vserver vs0 -v4-acl-max-aces [number up to 1024]
```

In versions earlier than clustered Data ONTAP 8.2, the maximum ACE limit was 400. If reverting to a version of Data ONTAP earlier than 8.2, files or directories with more than 400 ACEs have their ACLs dropped, and the security reverts to mode-bit style.

When a file or directory is created as the result of an NFSv4 request, the ACL on the resulting file or directory depends on whether the file creation request includes an ACL or only standard UNIX file access permissions. The ACL also depends on whether the parent directory has an ACL.

- If the request includes an ACL, that ACL is used.
- If the request includes only standard UNIX file access permissions and the parent directory does not have an ACL, the client file mode is used to set standard UNIX file access permissions.
- If the request includes only standard UNIX file access permissions and the parent directory has a
  noninheritable ACL, a default ACL based on the mode bits passed into the request is set on the new
  object.
- If the request includes only standard UNIX file access permissions but the parent directory has an ACL, the ACEs in the parent directory's ACL are inherited by the new file or directory as long as the ACEs have been tagged with the appropriate inheritance flags.

**Note:** A parent ACL is inherited even if -v4.0-acl is set to off.

#### NFSv4 ACL Behavior with umask and ACL Inheritance

NFSv4 ACLs provide the ability to offer ACL inheritance. ACL inheritance means that files or folders created beneath objects with NFSv4 ACLs set can inherit the ACLs based on the configuration of the ACL inheritance flag.

**Umask** is used to control the permission level at which files and folders are created in a directory. For example, if my directory has 0777 permissions and my umask is 0022, the files are created at a permission level of 0644. Linux does not allow files to be created with execute permissions, which is why 6 is the most permissive access allowed with umask.

In Data ONTAP operating in 7-Mode, umask would be ignored when NFSv4 ACL inheritance was used. However, as per RFC 5661, the behavior in 7-Mode was not standard. Clustered Data ONTAP currently allows umask to override inherited ACLs, which is expected behavior as per RFC 5661; client-mode bits override inherited ACLs. See bug 952771 for details.

Versions of clustered Data ONTAP after 8.3.3 now support a configurable option to control this behavior on a granular level. The option is called -v4-inherited-acl-preserve and is available at advanced privilege level:

[-v4-inherited-acl-preserve {enabled|disabled}] - Ignore Client Specified Mode Bits and Preserve Inherited NFSv4 ACL When Creating New Files or Directories (privilege: advanced)
This optional parameter specifies whether the client-specified mode bits should be ignored and the inherited NFSv4 ACL should be preserved when creating new files or directories. The default setting is disabled.

# **ACL Formatting**

NFSv4.x ACLs have specific formatting. The following is an ACE set on a file:

A::ldapuser@domain.netapp.com:rwatTnNcCy

The preceding follows the ACL format guidelines of:

type:flags:principal:permissions

A type of "A" means allow. The flags are not set in this case, because the principal is not a group and does not include inheritance. Also, because the ACE is not an AUDIT entry, there is no need to set the audit flags. For more information about NFSv4.x ACLs, see <a href="http://linux.die.net/man/5/nfs4\_acl">http://linux.die.net/man/5/nfs4\_acl</a>.

# **ACL Interaction with Different Security Styles**

The security semantics of a volume are determined by its security style and its ACL (NFSv4 or NTFS).

#### For a volume with UNIX security style:

- NFSv4 ACLs and mode bits are effective.
- NTFS ACLs are not effective.
- Windows clients cannot set attributes.

#### For a volume with NTFS security style:

- NFSv4 ACLs are not effective.
- NTFS ACLs and mode bits are effective.
- UNIX clients cannot set attributes.

# For a volume with mixed security style:

- NFSv4 ACLs and mode bits are effective.
- NTFS ACLs are effective.
- Both Windows and UNIX clients can set attributes.

#### **Displaying NTFS Permissions from NFS Clients**

When you use NTFS security style volumes or qtrees, NFS clients display the mode bits or NFSv4 ACLs for the object as having wide open permissions (777) by default. This can be problematic for users and storage administrators for two primary reasons:

- Applications might depend on the ACLs or mode bits displaying properly for functionality.
- Users who see the mode bits as "wide open" might become alarmed, which can result in support tickets and cycles spent on troubleshooting.

Even though an ACL or mode bit shows 777 in NTFS security style volumes, it does not mean that the object allows everyone full access. In clustered Data ONTAP, NTFS security style volumes control access based on NTFS security and ACLs. Therefore, an NFS client must have a valid UNIX user that maps to a

valid Windows user to be able to access the volume at all (authentication). After the initial authentication, the mapped user is then used to determine access based on the granular NTFS ACLs.

Clustered Data ONTAP 8.3.1 and later introduced an option called <code>ntacl-display-permissive-perms</code>. The default value for the option is "disabled," which allows the approximation of interpreted NTFS ACLs on NFS clients mounting NTFS objects, thereby displaying permissions based on minimum access, more closely approximating the real NTFS permissions of the current user in UNIX terms. This helps alleviate concerns and address application compatibility and feature parity from Data ONTAP operating in 7-Mode.

The option allows the user accessing the NTFS security–style volume to see the approximate permissions provided based on the user accessing the share. Therefore, users accessing the object might see differing results based on the NTFS security access.

Also, because of the vast difference between NTFS and UNIX-style ACLs, the approximation of permissions might not be exact. For example, if a user has a granular permission provided only in NTFS security semantics, then the NFS client cannot interpret that properly.

The default value for the option is "disabled," which allows the approximation of interpreted NTFS ACLs on NFS clients mounting NTFS objects.

To disable this functionality, modify the option to "enabled."

# **Mixed Security Style Considerations**

Mixed qtree styles can cause issues with permissions if they are not set up properly. Mixed styles can also cause confusion about which permissions are set on a file or folder when using mixed security style, because NFS or CIFS clients might not display the ACLs properly. Mixed security style can get messy when clients modify permissions, even with identity management in place.

**Best Practice 18: Choosing a Security Style (See Best Practice 19)** 

Choose either NTFS- or UNIX-style security unless there is a specific recommendation from an application vendor to use mixed mode.

#### **ACL Behaviors**

- For any NT user, the user's SID is mapped to a UNIX ID and the NFSv4 ACL is then checked for access for that UNIX ID. Regardless of which permissions are displayed, the actual permissions set on the file take effect and are returned to the client.
- If a file has an NT ACL and a UNIX client does a chmod, chgrp, or chown, the NT ACL is dropped.

In versions earlier than clustered Data ONTAP 8.1, run the following command on the node that owns the data volume:

cluster::> node run -node [nodename that owns data volume] "fsecurity show /vol/volname"

In clustered Data ONTAP 8.2 and later, use the following command:

 $\verb|cluster::> vserver security file-directory show -vserver vs0 -path / junction-path|\\$ 

#### **Explicit DENY**

NFSv4 permissions may include explicit DENY attributes for OWNER, GROUP, and EVERYONE. That is because NFSv4 ACLs are "default-deny," which means that if an ACL is not explicitly granted by an ACE, then it is denied.

# **Example:**

```
sh-4.1$ nfs4_getfacl /mixed
A::ldapuser@domain.netapp.com:ratTnNcCy
A::OWNER@:rwaDxtTnNcCy
D::OWNER@:
A:g:GROUP@:rxtncy
D:g:GROUP@:waDTC
A::EVERYONE@:rxtncy
D::EVERYONE@:waDTC
```

DENY ACEs should be avoided whenever possible, because they can be confusing and complicated. When DENY ACEs are set, users might be denied access when they expect to be granted access. This is because the ordering of NFSv4 ACLs affects how they are evaluated.

The preceding set of ACEs is equivalent to 755 in mode bits. That means:

- The owner has full rights.
- Groups have read only.
- Others have read only.

However, even if permissions are adjusted to the 775 equivalent, access can be denied because of the explicit DENY set on EVERYONE.

For example, the user "Idapuser" belongs to the group "Domain Users."

```
sh-4.1$ id uid=55(ldapuser) gid=513(Domain Users) groups=513(Domain Users),503(unixadmins) context=unconfined_u:unconfined_r:unconfined_t:s0-s0:c0.c1023
```

Permissions on the volume "mixed" are 775. The owner is root and the group is "Domain Users":

```
[root@nfsclient /]# nfs4_getfacl /mixed
A::OWNER@:rwaDxtTnNcCy
D::OWNER@:
A::GROUP@:rwaDxtTnNcy
D::g:GROUP@:c
A::EVERYONE@:rxtncy
D::EVERYONE@:waDTC
[root@nfsclient /]# ls -la | grep mixed
drwxrwxr-x. 3 root Domain Users 4096 Apr 30 09:52 mixed
```

Because "Idapuser" is a member of Domain Users, it should have write access to the volume, and it does:

However, if the ACLs are reordered and the explicit DENY for EVERYONE is placed ahead of group, then "Idapuser" is denied access to write to the same volume it just had access to write to:

#### If the explicit DENY rule is removed, the desired access is restored:

# **Best Practice 19: Using DENY ACEs (See Best Practice 20)**

It is a best practice to set DENY ACEs only when absolutely necessary.

# **NFSv4 ACL Preservation**

By default, NFSv4 ACLs can be affected by setting mode bits on a file or folder. If an NFSv4 ACE has been configured and a chmod is used, the ACE is removed. This behavior can be avoided by setting the following on the NetApp storage system:

```
cluster::> set diag
cluster::*> nfs server modify -vserver vs0 -v4-acl-preserve enabled
```

NetApp recommends this option in environments using NFSv3 and NFSv4 on the same NFS exports.

#### **ACL Preservation in Action**

This is a newly created UNIX-style volume:

```
cluster::> volume show -vserver vs0 -volume unix -fields security-style,
unix-permissions, user, group
vserver volume user group security-style unix-permissions
vs0 unix 0 1 unix ---rwxr-xr-x
cluster ::> vserver security file-directory show -vserver vs0 -path /unix
             Vserver: vs0
           File Path: /unix
       Security Style: unix
      Effective Style: unix
      DOS Attributes: 10
DOS Attributes in Text: ----D---
Expanded Dos Attributes: -
         Unix User Id: 0
        Unix Group Id: 1
       Unix Mode Bits: 755
Unix Mode Bits in Text: rwxr-xr-x
               ACLs: -
```

In the preceding example, the volume (/unix) has 755 permissions. That means that the owner has ALL access, the owning group has READ/EXECUTE access, and everyone else has READ/EXECUTE access.

Even though there are no NFSv4 ACLs in the fsecurity output, there are default values set that can be viewed from the client:

The NFSv4 ACLs earlier show the same: the owner has ALL access, the owning group has READ/EXECUTE access, and everyone else has READ/EXECUTE access. The default mode bits are tied to the NFSv4 ACLs.

When mode bits are changed, the NFSv4 ACLs are also changed:

```
[root@nfsclient /]# chmod 775 /unix
[root@nfsclient /]# ls -la | grep unix
drwxrwxr-x. 2 root daemon 4096 Apr 30 11:24 unix
[root@nfsclient /]# nfs4_getfacl /unix
A::OWNER@:rwaDxtTnNcCy
A:g:GROUP@:rwaDxtTnNcy
A::EVERYONE@:rxtncy
```

When a user ACE is added to the ACL, the entry is reflected in the ACL on the appliance. In addition, the entire ACL is now populated. Note that the ACL is in SID format.

```
[root@nfsclient /]# nfs4_setfacl -a A::ldapuser@nfsv4domain.netapp.com:ratTnNcCy /unix
[root@nfsclient /] # nfs4 getfacl /unix
A::ldapuser@nfsv4domain.netapp.com:ratTnNcCy
A::OWNER@:rwaDxtTnNcCy
A:g:GROUP@:rwaDxtTnNcv
A::EVERYONE@:rxtncy
cluster::> vserver security file-directory show -vserver vs0 -path /unix
               Vserver: vs0
             File Path: /unix
         Security Style: unix
        Effective Style: unix
         DOS Attributes: 10
DOS Attributes in Text: ----D---
Expanded Dos Attributes: -
          Unix User Id: 0
         Unix Group Id: 1
        Unix Mode Bits: 775
Unix Mode Bits in Text: rwxrwxr-x
                  ACLs: NFSV4 Security Descriptor
                         Control:0x8014
                         DACL - ACEs
                           ALLOW-S-1-8-55-0x16019d
                           ALLOW-S-1-520-0-0x1601ff
                           ALLOW-S-1-520-1-0x1201ff-IG
                           ALLOW-S-1-520-2-0x1200a9
```

To see the translated ACLs, use fsecurity from the node shell on the node that owns the volume:

```
cluster::> node run -node node2 fsecurity show /vol/unix
[/vol/unix - Directory (inum 64)]
 Security style: Unix
 Effective style: Unix
 DOS attributes: 0x0010 (----D---)
 Unix security:
   uid: 0
   gid: 1
   mode: 0775 (rwxrwxr-x)
 NFSv4 security descriptor:
   DACL:
     Allow - uid: 55 - 0x0016019d
     Allow - OWNER@ - 0x001601ff
     Allow - GROUP@ - 0x001201ff
     Allow - EVERYONE@ - 0x001200a9 (Read and Execute)
   SACL:
     No entries.
```

When a change is made to the mode bit when NFSv4 ACLs are present, the NFSv4 ACL that was just set is wiped by default:

```
[root@nfsclient /]# chmod 755 /unix
[root@nfsclient /]# ls -la | grep unix
                                    4096 Apr 30 11:24 unix
drwxr-xr-x. 2 root daemon
[root@nfsclient /]# nfs4_getfacl /unix
A::OWNER@:rwaDxtTnNcCy
A:g:GROUP@:rxtncy
A::EVERYONE@:rxtncy
cluster::> node run -node node2 fsecurity show /vol/unix
[/vol/unix - Directory (inum 64)]
 Security style: Unix
 Effective style: Unix
 DOS attributes: 0x0010 (----)
 Unix security:
   uid: 0
   gid: 1
   mode: 0755 (rwxr-xr-x)
 No security descriptor available.
```

# To control this behavior in clustered Data ONTAP, use the following diag-level option:

```
cluster::> set diag
cluster::*> nfs server modify -vserver vs0 -v4-acl-preserve [enabled|disabled]
```

#### After the option is enabled, the ACL stays intact when mode bits are set.

```
[root@nfsclient /]# nfs4 setfacl -a A::ldapuser@nfsv4domain.netapp.com:ratTnNcCy /unix
[root@nfsclient /]# ls -\overline{la} | grep unix
drwxr-xr-x. 2 root daemon
                                        4096 Apr 30 11:24 unix
[root@nfsclient /]# nfs4 getfacl /unix
A::ldapuser@nfsv4domain.netapp.com:ratTnNcCy
A::OWNER@:rwaDxtTnNcCy
A:q:GROUP@:rxtncv
A::EVERYONE@:rxtncy
cluster::> vserver security file-directory show -vserver vs0 -path /unix
               Vserver: vs0
             File Path: /unix
         Security Style: unix
        Effective Style: unix
         DOS Attributes: 10
DOS Attributes in Text: ----D---
Expanded Dos Attributes: -
          Unix User Id: 0
         Unix Group Id: 1
        Unix Mode Bits: 755
Unix Mode Bits in Text: rwxr-xr-x
                  ACLs: NFSV4 Security Descriptor
                         Control:0x8014
                         DACL - ACEs
                          ALLOW-S-1-8-55-0x16019d
                           ALLOW-S-1-520-0-0x1601ff
                           ALLOW-S-1-520-1-0x1200a9-IG
                           ALLOW-S-1-520-2-0x1200a9
cluster::> node run -node node2 fsecurity show /vol/unix
[/vol/unix - Directory (inum 64)]
 Security style: Unix
 Effective style: Unix
 DOS attributes: 0x0010 (----D---)
 Unix security:
   uid: 0
   gid: 1
   mode: 0755 (rwxr-xr-x)
 NFSv4 security descriptor:
   DACL:
     Allow - uid: 55 - 0x0016019d
     Allow - OWNER@ - 0x001601ff
     Allow - GROUP@ - 0x001200a9 (Read and Execute)
     Allow - EVERYONE@ - 0x001200a9 (Read and Execute)
   SACL:
     No entries.
```

Note that the ACL is still intact after mode bits are set:

```
[root@nfsclient /]# chmod 777 /unix
[root@nfsclient /]# ls -la | grep unix
                                       4096 Apr 30 11:24 unix
drwxrwxrwx. 2 root daemon
[root@nfsclient /]# nfs4 getfacl /unix
A::ldapuser@win2k8.ngslabs.netapp.com:ratTnNcCy
A::OWNER@:rwaDxtTnNcCy
A:g:GROUP@:rwaDxtTnNcy
A::EVERYONE@:rwaDxtTnNcy
cluster::> vserver security file-directory show -vserver vs0 -path /unix
               Vserver: vs0
             File Path: /unix
        Security Style: unix
       Effective Style: unix
        DOS Attributes: 10
DOS Attributes in Text: ----D---
Expanded Dos Attributes: -
          Unix User Id: 0
         Unix Group Id: 1
       Unix Mode Bits: 777
Unix Mode Bits in Text: rwxrwxrwx
                  ACLs: NFSV4 Security Descriptor
                        Control:0x8014
                        DACL - ACEs
                          ALLOW-S-1-8-55-0x16019d
                          ALLOW-S-1-520-0-0x1601ff
                          ALLOW-S-1-520-1-0x1201ff-IG
                          ALLOW-S-1-520-2-0x1201ff
cm6080-rtp2::*> node run -node node2 fsecurity show /vol/unix
[/vol/unix - Directory (inum 64)]
  Security style: Unix
 Effective style: Unix
 DOS attributes: 0x0010 (----D---)
 Unix security:
   uid: 0
   aid: 1
   mode: 0777 (rwxrwxrwx)
 NFSv4 security descriptor:
   DACL:
     Allow - uid: 55 - 0x0016019d
     Allow - OWNER@ - 0x001601ff
     Allow - GROUP@ - 0x001201ff
     Allow - EVERYONE@ - 0x001201ff
   SACL:
     No entries.
```

# **NFSv4 Delegations**

NFSv4 introduces the concept of delegations that provide an aggressive cache, which is different from the ad hoc caching that NFSv3 provides. There are two forms of delegations: read and write. Delegations provide more cache correctness rather than improving performance. For delegations to work, a supported UNIX client is required along with the right delegation options enabled on the NetApp controller. These options are disabled by default.

When a server determines to delegate a complete file or part of the file to the client, the client caches it locally and avoids additional RPC calls to the server. This reduces GETATTR calls in case of read delegations because there are fewer requests to the server to obtain the file's information. However, delegations do not cache metadata. Reads can be delegated to numerous clients, but writes can be delegated only to one client at a time. The server reserves the right to recall the delegation for any valid

reason. The server determines to delegate the file under two scenarios: a confirmed call-back path from the client that the server uses to recall a delegation if needed and when the client sends an OPEN function for a file.

# Why Use Read or Write Delegations?

Delegations can be used to improve the read and write performance of certain applications. For example, web applications that have numerous readers of one or more files on the same client and across clients that also generate copious amounts of metadata operations like GETATTRs and LOOKUPs could request read delegations from the NetApp controller for local access to improve performance and response time. Delegating the whole file or certain ranges of bytes to the client's local memory avoids additional RPC calls over the wire for metadata operations.

If the file or byte offset is rewritten during the delegation, the delegation is recalled. Although this process is necessary to acquire updates, the delegation recall can affect read performance. Therefore, write delegations are typically granted for single writer applications. Read and write delegations can improve I/O performance, but that depends on the client hardware and operating system. For instance, low-memory client platforms do not handle delegations very well.

In 7-Mode, read and write delegations are set using the following commands:

```
option.nfs.v4.read_delegation on option.nfs.v4.write_delegation on
```

In clustered Data ONTAP, read or write delegations can be set during the creation of the NFS server or when modifying an existing NFS server. There is no production impact when enabling delegations on an existing NFS server other than the features delegations bring.

Configuration step 4) Enabling or disabling NFSv4 read file delegations.

Goal	How To
Enable read file delegations	vserver nfs modify -vserver vserver_name - v4.0-read-delegation enabled
Disable read file delegations	vserver nfs modify -vserver vserver_name - v4.0-read-delegation disabled

Configuration step 5) Enabling or disabling NFSv4 write file delegations.

Goal	How To
Enable write file delegations	vserver nfs modify -vserver vserver_name - v4.0-write-delegation enabled
Disable write file delegations	<pre>vserver nfs modify -vserver vserver_name - v4.0-write-delegation disabled</pre>

**Note:** Both the file read and write delegation options take effect as soon as they are changed. There is no need to reboot or restart NFS.

# Viewing Allocated and Maximum Available Delegations

In clustered Data ONTAP 8.3 and later, it is possible to query the allocated and maximum available delegations and other NFSv4.x states using the statistics command set.

To capture this info, statistics must first be collected for a period on the system with the following command in diag privilege:

```
cluster::> set diag
cluster::*> statistics start -object nfsv4_diag
Statistics collection is being started for sample-id: sample_17755
```

#### Then stop the collection:

```
cluster::*> statistics stop -sample-id sample_17755
Statistics collection is being stopped for sample-id: sample_17755
```

#### And view the results:

```
cluster::*> statistics show -counter storePool*
Object: nfsv4 diag
Instance: nfs4 diag
Start-time: 1/\overline{27}/2016 13:16:28
End-time: 1/27/2016 13:16:37
Elapsed-time: 10s
Node: node1
   Counter
                                                                  Value
   storePool ByteLockAlloc
   storePool ByteLockMax
                                                                1024000
   storePool_ClientAlloc
                                                                      0
   storePool_ClientMax
                                                                 102400
   storePool CopyStateAlloc
    storePool CopyStateMax
                                                                  10240
    storePool_DelegAlloc
   storePool DelegMax
                                                                1024000
    storePool_DelegStateAlloc
                                                                1024000
    storePool_DelegStateMax
    storePool LayoutAlloc
   storePool LayoutMax
                                                                1024000
    storePool LayoutStateAlloc
                                                                      Λ
    storePool LayoutStateMax
                                                                1024000
    storePool LockStateAlloc
                                                                     Ω
    storePool LockStateMax
                                                                1024000
    storePool OpenAlloc
```

# **NFSv4 Locking**

For NFSv4 clients, Data ONTAP supports the NFSv4 file-locking mechanism, maintaining the state of all file locks under a lease-based model. In accordance with <a href="RFC 3530">RFC 3530</a>, Data ONTAP "defines a single lease period for all state held by an NFS client. If the client does not renew its lease within the defined period, all state associated with the client's lease may be released by the server." The client can renew its lease explicitly or implicitly by performing an operation, such as reading a file. Furthermore, Data ONTAP defines a grace period, which is a period of special processing in which clients attempt to reclaim their locking state during a server recovery.

Locks are issued by Data ONTAP to the clients on a lease basis. The server checks the lease on each client every 30 seconds. In the case of a client reboot, the client can reclaim all the valid locks from the server after it has restarted. If a server reboots, then upon restarting it does not issue any new locks to the clients for a grace period of 45 seconds (tunable in clustered Data ONTAP to a maximum of 90 seconds). After that time the locks are issued to the requesting clients. The lease time of 30 seconds can be tuned based on the application requirements.

Table 13) NFS lease and grace periods.

Term	Definition (See RFC 3530 for More Information)
Lease	The time period in which Data ONTAP irrevocably grants a lock to a client
Grace period	The time period in which clients attempt to reclaim their locking state from Data ONTAP during server recovery

# Specifying the NFSv4 Locking Lease Period

To specify the NFSv4 locking lease period (the time period in which Data ONTAP irrevocably grants a lock to a client), you can modify the -v4-lease-seconds option. By default, this option is set to 30. The minimum value for this option is 10. The maximum value for this option is the locking grace period, which you can set with the locking.lease seconds option.

#### NFSv4.x Referrals

Clustered Data ONTAP 8.1 introduced NFSv4.x referrals. A referral directs a client to another LIF in the SVM. The NFSv4.x client uses this referral to direct its access over the referred path to the target LIF from that point forward. Referrals are issued when there is a LIF in the SVM that resides on the cluster node where the data volume resides. In other words, if a cluster node receives an NFSv4.x request for a nonlocal volume, the cluster node is able to refer the client to the local path for that volume by means of the LIF. Doing so allows clients faster access to the data using a direct path and avoids extra traffic on the cluster network.

# **How They Work**

When a mount request is sent, the request acts as a normal NFSv4.x mount operation. However, after the DH LOOKUP call is made, the server (NetApp cluster) responds with the GETFH status of "NFS4ERR\_MOVED" to notify the client that the volume being accessed does not live where the LIF being requested lives. The server then sends a LOOKUP call to the client, notifying it of the IP (using the fs\_location4 value) on the node where the data volume lives. This process works regardless of whether a client is mounting using a DNS name or IP. However, the client reports that it is mounted to the IP specified rather than the IP returned to the client from the server.

# For example:

#### The data volume lives on node1:

```
cluster::> volume show -vserver vs0 -volume nfsvol -fields node
vserver volume node
-----
vs0    nfsvol node1
```

#### The data LIF lives on node2:

```
cluster::> net int show -vserver vs0 -lif data2 -fields curr-node,home-node
  (network interface show)
vserver lif home-node curr-node address
----- vs0 data2 node2 node2 10.61.92.37
```

#### There is also a data LIF on node1:

# The client makes a mount request to the data LIF on node2, at the IP address 10.61.92.37:

```
[root@nfsclient /]# mount -t nfs4 10.61.92.37:/nfsvol /mnt
```

# The mount location looks to be at the IP address specified by the client:

```
[root@nfsclient /] # mount | grep /mnt 10.61.92.37:/nfsvol on /mnt type nfs4 (rw,addr=10.61.92.37,clientaddr=10.61.179.164)
```

# But the cluster shows that the connection was actually established to node1, where the data volume lives. No connection was made to node2:

```
cluster::> network connections active show -node nodel -service nfs*

Vserver Interface Remote

CID Ctx Name Name:Local Port Host:Port Protocol/Service

Node: nodel
286571835 6 vs0 data:2049 10.61.179.164:763 TCP/nfs

cluster::> network connections active show -node node2 -service nfs*

There are no entries matching your query.
```

Because clients might become "confused" about which IP address they are actually connected to as per the mount command, NetApp recommends using host names in mount operations.

## **Best Practice 20: Data LIF Locality (See Best Practice 21)**

NetApp highly recommends that there be at least one data LIF per node per SVM so that a local path is always available to data volumes. This process is covered in <a href="Data LIF Best Practices with">Data LIF Best Practices with</a> NAS Environments in this document.

If a volume moves to another aggregate on another node, the NFSv4.x clients must unmount and remount the file system manually to be referred to the new location of the volume. Doing so provides a direct data path for the client to reach the volume in its new location. If the manual mount/unmount process is not followed, the client can still access the volume in its new location, but I/O requests would then take a remote path. NFSv4.x referrals were introduced in RHEL as early as 5.1 (2.6.18-53), but NetApp recommends using no kernel older than 2.6.25 with NFS referrals and no version earlier than 1.0.12 of nfs-utils.

If a volume is junctioned below other volumes, the referral uses the volume being mounted to refer to as the local volume. For example:

- A client wants to mount vol2.
- Vol2's junction is /vol1/vol2.
- Vol1 lives on node1; vol2 lives on node2.
- A mount is made to cluster:/vol1/vol2.
- The referral returns the IP address of a LIF that lives on node2, regardless of what IP address is returned from DNS for the host name "cluster."
- The mount uses the LIF local to vol2 on node2.

In a mixed client environment, if any of the clients do not support referrals, then the -v4.0-referrals option should not be enabled. If the option is enabled and a clients that does not support referrals gets a referral from the server, that client is unable to access the volume and experiences failures. See RFC 3530 for more details about referrals.

Configuration step 6) Configuring NFSv4.x referrals.

Category	Commands
Configure NFSv4.x referrals.	To enable referrals on an SVM requires advanced privilege.
	cluster::> set advanced
	Warning: These advanced commands are potentially dangerous; use them only when directed to do so by NetApp personnel.  Do you want to continue? {y n}: y
	For NFSv4.0: cluster::*> vserver nfs modify -vserver test_vs1 -v4.0-referrals enabled -v4-fsid-change enabled
	For NFSv4.1: cluster::*> vserver nfs modify -vserver test_vs1 -v4.1-referrals enabled -v4-fsid-change enabled
	Verification
	<pre>cluster::*&gt; vserver nfs show -vserver test_vs1 -fields v4.0-referrals, v4-fsid- change Vserver v4-fsid-change v4.0-referrals</pre>
	test_vs1 enabled enabled
	<pre>cluster::*&gt; vserver nfs show -vserver test_vs1 -fields v4.1-referrals, v4-fsid- change Vserver v4-fsid-change v4.1-referrals</pre>
	test_vs1 enabled enabled

Refer to Table 30) NFSv4 configuration options in clustered Data ONTAP.for more information.

# **NFSv4.x Stateless Migration**

NFSv4 referrals also brought NFSv4 stateless migration support in clustered Data ONTAP 8.1 and later and include support only for Oracle dNFS.

Migration is an NFSv4.x feature that allows a file system to move from one server to another without client disruption. Migration enablement requires enabling referrals and the option <code>-v4-fsid-change</code> on the NFS server. Migration is a diag-level option. Enabling migration assumes the following about the solution:

- All clients accessing the NFSv4.x server on the SVM are stateless.
- All clients accessing the NFSv4.x server on the SVM support migrations.
- The NFSv4.x clients do not use the following:
  - Locking
  - Share reservations
  - Delegations
  - OPEN for file access
- The NFSv4.x clients do use the following:
  - READ, WRITE, and SETATTR with special stateid of all bits 0
  - OPEN only to create a file and close it right away
- The NFSv4.x clients do not have a state established on the NFS server.

NFS migration support can be useful in the following scenarios in clustered Data ONTAP:

- Volume moves
- LIF migration/failover

Table 14) Referrals versus migration versus pNFS.

	Referrals	Stateless Migration	pNFS
When does redirect take place?	At mount	Any operation (I/O and metadata)	I/O only (READ, WRITE)
Traffic that is redirected	All traffic	All traffic	I/O only (READ, WRITE)
Use case	Automounter	Oracle dNFS	Guaranteed data locality for I/O
Drawback	Only on mount	Only stateless operations (no lock state)	Non-I/O traffic is not redirected

# **Snapshot Copies with NFSv4.x**

In previous versions of NFS (v2/v3), the .snapshot directory was visible to clients. This was exposed at the mount point and was visible at every directory. However, because NFSv4.x does not use the MOUNT protocol, the .snapshot directory is not visible, but it is accessible from anywhere in the NFSv4.x mount. To access Snapshot copies using NFSv4.x, simply navigate to the .snapshot directory manually.

```
For example:

[root@nfsclient ~]# mount -t nfs4 10.61.92.37:/nfsvol /mnt

[root@nfsclient mnt]# cd /mnt

[root@nfsclient mnt]# ls -la | grep snapshot

[root@nfsclient mnt]# cd .snapshot

[root@nfsclient .snapshot]# ls -la

drwxrwxrwx. 12 root root 4096 Apr 25 16:05 .

drwxrwxrwx. 3 root root 106496 Apr 24 16:01 ..

drwxrwxrwx. 4 root root 106496 Apr 18 14:50 daily.2013-04-24_0010

drwxrwxrwx. 2 root root 106496 Mar 12 19:54 weekly.2013-04-14_0015

drwxrwxrwx. 4 root root 106496 Apr 18 14:50 weekly.2013-04-21_0015
```

# 9.3 NFSv4.1

NFSv4.1 support began in clustered Data ONTAP 8.1. NFSv4.1 is considered a minor version of NFSv4. Even though the NFSv4.1 <u>RFC 5661</u> suggests that directory delegations and session trunking are available, there is currently no client support, nor is there currently support in clustered Data ONTAP.

To mount a client using NFSv4.1, there must be client support for NFSv4.1. Check with the client vendor for support for NFSv4.1. Mounting NFSv4.1 is done with the minorversion mount option.

#### **Example:**

```
# mount -o nfsvers=4,minorversion=1 10.63.3.68:/unix /unix
# mount | grep unix
10.63.3.68:/unix on /unix type nfs
(rw,nfsvers=4,minorversion=1,addr=10.63.3.68,clientaddr=10.228.225.140)
```

#### Configuration step 7) Enabling NFSv4.1.

Category	Commands
Enable NFSv4.1.	
	cluster::> vserver nfs modify -vserver test_vs1 -v4.0 enabled -v4.1 enabled
	Verification: Note that v4.0 and v4.1 are both enabled.
	cluster::> vserver nfs show -vserver test_vs1 -fields v4.0,v4.1 Vserver v4.0 v4.1
	test_vs1 enabled enabled

# Parallel Network File System (pNFS)

Parallel NFS (pNFS) is a new part of NFS version 4.1 standards. NFSv4.1, which follows Request for Comments (RFC) 5661, is a minor release of NFSv4. NFSv4.1 does not modify any NFSv4 features and functionalities. With traditional NFS versions 3, 4, and 4.1, the metadata and data shared the same I/O path. With pNFS, there is now an NFS feature that handles metadata and data on different I/O paths. A metadata server handles all the metadata activities from the client, while the data servers provide a direct path for data access. As explained in RFC 5661:

"Parallel data access is controlled by recallable objects known as 'layouts,' which are integrated into the protocol locking model. Clients direct requests for data access to a set of data servers specified by the layout using a data storage protocol which may be NFSv4.1 or may be another protocol."

pNFS support began in clustered Data ONTAP 8.1 for files only and continues with enhancements in clustered Data ONTAP 8.2. There is no Data ONTAP 7G/7-Mode support for pNFS, nor will there ever be. Current client support for pNFS is very limited, but NetApp does support all clients that support pNFS and follow the RFC specifications. By default the pNFS option is enabled, but it is only active if both NFSv4.0 and NFSv4.1 support also is enabled. By default NFSv4.1 is disabled. It can be enabled by specifying the -v4.1 option as seen above and setting it to enabled when creating an NFS server.

pNFS requires a client that also supports pNFS. RHEL 6.4 was the first commercial Linux distribution that had full pNFS support. However, other client OS vendors have added pNFS support. NetApp supports all client OS vendors that support pNFS as per the RFC 5661 specifications.

#### **Best Practice 21: pNFS Client Recommendation (See Best Practice 22)**

NetApp highly recommends using the latest patched general-availability release of the client OS to leverage the advantages of any and all pNFS bug fixes.

#### **How pNFS Works**

pNFS defines the notion of a device that is generated by the server (that is, a NetApp NFS server running on clustered Data ONTAP) and sent to the client. This process helps the client locate the data and send requests directly over the path local to that data. Data ONTAP generates one pNFS device per flexible volume. The metadata path does not change, so metadata requests might still be remote. In a clustered Data ONTAP pNFS implementation, every data LIF is considered an NFS server, so NetApp strongly recommends that each node owns at least one data LIF per NFS SVM. Doing otherwise negates the benefits of pNFS and the clustered Data ONTAP nondisruptive-operations philosophy.

The device contains information about the following:

- Volume constituents
- Network location of the constituents

The device information is cached to the local node's NAS Volume Location Database for improved performance.

To see pNFS devices in the cluster, use the following diag-level command:


```
cluster::> set diag
cluster::*> vserver nfs pnfs devices cache show
```

# There are three main components of pNFS:

- Metadata server
  - Handles all nondata traffic such as GETATTR, SETATTR, and so on
  - Responsible for maintaining metadata that informs the clients of the file locations
  - Located on the NetApp NFS server
- Data server
  - Stores file data and responds to READ and WRITE requests
  - Located on the NetApp NFS server
  - Inode information also resides here
- Clients

These components leverage three different protocols. The **control protocol** is the way the metadata and data servers stay in sync. The **pNFS protocol** is used between clients and the metadata server. pNFS supports file-, block-, and object-based **storage protocols**, but NetApp currently only supports file-based pNFS.

Figure 11) pNFS data workflow.

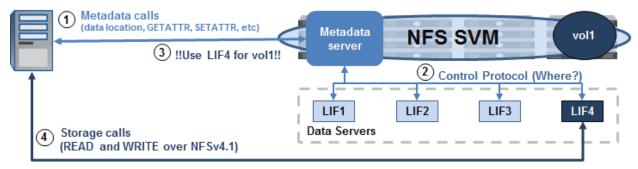

- The client makes a data request to the cluster.
- (2) The metadata server works to find the location of the data if the location is not already cached.
- (3) The location of the data is returned to the client via the control path.
- (4) The client begins operations over the specified data LIF returned from the metadata server.

# **pNFS Performance Results**

There are a number of documents available on how well pNFS performs with clustered Data ONTAP in specific workloads and environments. The following documents cover pNFS use cases, specifically with EDA and chip manufacturing workloads:

http://www.netapp.com/us/media/tr-4239.pdf

http://www.netapp.com/us/media/tr-4299.pdf

http://www.netapp.com/us/media/tr-4270.pdf

http://www.netapp.com/us/media/tr-4324.pdf

# **NFSv4.1 Delegations**

In clustered Data ONTAP 8.2, support for NFSv4.1 delegations was added. NFSv4.1 delegations are very similar to NFSv4.0 delegations, but are part of the v4.1 protocol rather than v4.0. The following is a table that covers the new additions to NFSv4.1 and how they benefit an environment over NFSv4.0. These additions are covered in detail in RFC 5661.

Table 15) NFSv4.1 delegation benefits.

NFSv4.1 Delegation Feature	Benefit Versus NFSv4.0 Delegation
EXCHANGE_ID is used	In NFSv4.0, SETCLIENTID was used. EXCHANGE_ID replaces SETCLIENTID and enables a client ID to be assigned before any other client operations take place. As per RFC 5661, "The only NFSv4.1 operations possible before a client ID is established are those needed to establish the client ID."
Callbacks use the same TCP connection as the forechannel	In NFSv4.0, callbacks use different TCP connections than the forechannel. Using the same TCP connection for callbacks provides better performance for delegations and is more firewall friendly.
New OPEN request options:  OPEN4_SHARE_ACCESS_WANT_DELEG_MASK  OPEN4_SHARE_ACCESS_WANT_NO_PREFERENCE  OPEN4_SHARE_ACCESS_WANT_READ_DELEG  OPEN4_SHARE_ACCESS_WANT_WRITE_DELEG  OPEN4_SHARE_ACCESS_WANT_ANY_DELEG  OPEN4_SHARE_ACCESS_WANT_NO_DELEG	NFSv4.1 provides more precise control to clients for acquisition of delegations than NFSv4.0. These new options enable more OPEN scenarios to be covered to prevent problems issuing or reclaiming delegations.

For information regarding pNFS with RHEL 6.4, see <u>TR-4063: Parallel Network File System Configuration and Best Practices for Clustered Data ONTAP</u>.

#### **NFSv4.1 Sessions**

NFSv4.1 sessions have been available since clustered Data ONTAP 8.1. As per RFC 5661:

A session is a dynamically created, long-lived server object created by a client and used over time from one or more transport connections. Its function is to maintain the server's state relative to the connection(s) belonging to a client instance. This state is entirely independent of the connection itself, and indeed the state exists whether or not the connection exists. A client may have one or more sessions associated with it so that client-associated state may be accessed using any of the sessions associated with that client's client ID, when connections are associated with those sessions. When no connections are associated with any of a client ID's sessions for an extended time, such objects as locks, opens, delegations, layouts, and so on, are subject to expiration. The session serves as an object representing a means of access by a client to the associated client state on the server, independent of the physical means of access to that state.

A single client may create multiple sessions. A single session MUST NOT serve multiple clients.

#### Best Practice 22: NFSv4.x Version Recommendation (See Best Practice 23)

Use NFSv4.1 with clustered Data ONTAP when possible. Performance, NDO, and features in NFSv4.1 surpass those in NFSv4.0.

# 9.4 Mount Option Best Practices with NFS

When specifying a mount, you can apply a variety of mount options to help resiliency and performance. The following is a list of some of those options, as well as information to assist with setting these options. Keep in mind that some application and/or OS vendors might have different recommendations for mount option best practices. It is important to consult with the application and/or OS vendors so that the correct options are used. For example, Oracle mount best practices are covered in TR-3633: Oracle Databases on Data ONTAP. This technical report focuses on a general catch-all configuration.

# **Mount Options**

The following is a list of typical mount options and suggestions on how to apply them with NetApp storage using NFS (v3 and v4.x). In most cases, mount options are standardized. Mount options might vary depending on the version and variety of Linux being used. Always consult the man pages of the Linux kernel being used to verify that the mount options exist for that version.

Mount options are specified using the -o flag. Mount options such as noacl and nolock do not apply to NFSv4 and NetApp does not recommend them.

If NFSv4 is enabled on the NetApp storage system, then newer clients negotiate NFSv4 on their own without mount options. Older clients use NFSv3 unless specified. If NFSv4 is disabled on the NetApp storage system, clients fall back to using NFSv3.

# **Mount Option Definitions**

#### hard or soft

hard or soft specifies whether the program using a file using NFS should stop and wait (hard) for the server to come back online if the NFS server is unavailable or if it should report an error (soft).

If hard is specified, processes directed to an NFS mount that is unavailable cannot be terminated unless the introption is also specified.

If soft is specified, the timeo=<value> option can be specified, where <value> is the number of seconds before an error is reported.

Note: This value should be no less than 60 seconds.

For business-critical NFS exports, NetApp recommends using hard mounts. NetApp strongly discourages the use of soft mounts.

#### intr

intr allows NFS processes to be interrupted when a mount is specified as a hard mount. This policy is deprecated in new clients such as RHEL 6.4 and is hardcoded to "nointr." Kill -9 is the only way to interrupt a process in newer kernels.

For business-critical NFS exports, NetApp recommends using intr with hard mounts in clients that support it.

#### nfsvers

nfsvers does not apply to NFSv4 mounts. To specify NFSv4, use the -t option for "type."

#### noexec

noexec prevents the execution of binaries on an NFS mount.

NetApp recommends use of this option only when advised by the application or client vendor.

#### nosuid

nosuid prevents the setting of set-user-identifier or set-group-identifier bits. Doing so prevents remote users from gaining higher privileges by running a setuid program.

NetApp recommends use of this option for better security on NFS mounts.

#### port

port allows the specification of which port an NFS mount leverages. By default, NFS uses port 2049 for communication with NetApp storage. If a different port is specified, firewall considerations should be considered, because communication can be blocked if an invalid port is specified.

NetApp does not recommend changing this value unless necessary.

In the case of automounter, NetApp recommends the following change in the auto.home or auto.misc or auto.\* files:

-fstype=nfs4, rw, proto=tcp,port=2049

#### rsize=num and wsize=num

rsize and wsize are used to speed up NFS communication for reads (rsize) and writes (wsize) by setting a larger data block size, in bytes, to be transferred at one time. Be careful when changing these values; some older Linux kernels and network cards do not work well with larger block sizes.

NetApp recommends use of this option only when advised by the application or client vendor. NetApp highly recommends using 64k rsize and wsize for better performance.

#### sec

sec specifies the type of security to utilize when authenticating an NFS connection.

sec=sys is the default setting, which uses local UNIX UIDs and GIDs by means of AUTH\_SYS to authenticate NFS operations.

sec=krb5 uses Kerberos V5 instead of local UNIX UIDs and GIDs to authenticate users.

sec=krb5i uses Kerberos V5 for user authentication and performs integrity checking of NFS operations using secure checksums to prevent data tampering.

sec=krb5p uses Kerberos V5 for user authentication and integrity checking and encrypts NFS traffic to prevent traffic sniffing. This is the most secure setting, but it also involves the most performance overhead.

Data ONTAP 7-Mode supports all security varieties specified.

Clustered Data ONTAP supports sys, krb5, krb5i (as of clustered Data ONTAP 8.3.1 and later), and krb5p (as of ONTAP 9).

NetApp recommends using sec only when clients have been configured to use the specified security mode.

#### tcp or udp

top or udp is used to specify whether the mount uses TCP or UDP for transport.

NFSv4 only supports TCP, so this option does not apply to NFSv4.

NetApp recommends TCP for all mounts, regardless of version, provided the client supports mounting using TCP.

# 10 NFS Auditing

NFS auditing is new in clustered Data ONTAP 8.2. In 7-Mode, NFS auditing required CIFS to function properly. That is no longer the case in clustered Data ONTAP. NFS auditing can now be set up independently and does not require a CIFS license.

The following section covers the setup and use of NFS auditing.

# 10.1 NFS Audit Setup

The use of NFS auditing does not require CIFS, but does require the use of NFSv4.x ACLs. Therefore, this option must be enabled on the SVM, along with NFSv4.x. This is because of the need to set an AUDIT type ACE on the file or directory to enable NFS auditing. After the AUDIT ACE is set, auditing takes place for NFSv3 and NFSv4.x operations.

# **Enabling Auditing on Clustered Data ONTAP System**

To enable NFSv4.x and NFSv4.x ACLs, see the sections on NFSv4.x and NFS ACLs.

After NFSv4.x and NFSv4.x ACLs are enabled, enable NFS auditing with the following command:

```
cluster::> vserver audit create -vserver nfs -destination /unix -rotate-size 100MB
```

This command enables auditing for NFS and CIFS access on the junction path "/unix" for the SVM named "nfs."

After auditing is enabled on the clustered Data ONTAP system, the AUDIT ACEs should be created.

#### **Best Practice 23: Audit ACE Recommendation (See Best Practice 24)**

If using inheritable audit ACEs, be sure to create at least one inheritable allow or deny ACE on the parent directory to avoid access issues. See <u>bug 959337</u> for details.

#### **Creating NFSv4 AUDIT ACEs**

To create an NFSv4 AUDIT ACE, mount the volume on which auditing was enabled using NFSv4.x. After the volume is mounted, create an AUDIT ACE on the volume, files, and/or directories where auditing is required.

An AUDIT ACE can be used to track ALLOW or DENY for a variety of operations, including:


- Read
- Write
- Execute
- Append
- Delete

For information about all of the ACE permissions in NFSv4, see <a href="http://linux.die.net/man/5/nfs4\_acl">http://linux.die.net/man/5/nfs4\_acl</a>.

Each Linux client uses a different method of assigning NFSv4.x ACEs. In RHEL/CentOS/Fedora, the commands nfs4 setacl and nfs4 getacl are used.

An AUDIT ACE leverages flags to specify if auditing should be for successes, failures, or both. AUDIT ACEs use the ACE type of U.

Figure 12) Example of setting NFSv4 audit ACE.

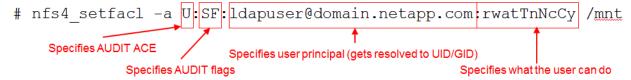

After the AUDIT ACE is applied and the user that is being audited attempts access, the events get logged to an XML file on the volume.

#### **Example of an Audit Event Logged**

```
- <Event>
- <System>
  <Provider Name="Netapp-Security-Auditing" />
  <EventID>4663</EventID>
  <EventName>Get Object Attributes</EventName>
  <Version>1</Version>
  <Source>NFSv3</Source>
  <Level>0</Level>
  <Opcode>0</Opcode>
  <Keywords>0x8020000000000000</Keywords>
  <Result>Audit Success</Result>
  <TimeCreated SystemTime="2013-08-08T20:36:05.011243000Z" />
  <Correlation />
  <Channel>Security</Channel>
  <Computer>e284de25-3edc-11e2-92d0-123478563412/525c9a2c-dce2-11e2-b94f-123478563412</Computer>
  <Security />
  </System>
- <EventData>
  <Data Name="SubjectIP" IPVersion="4">10.61.179.150</pata>
  <Data Name="SubjectUnix" Uid="10000" Gid="503" Local="false" />
  <Data Name="ObjectServer">Security</Data>
  <Data Name="ObjectType">Directory
  <Data Name="HandleID">000000000000453;00;00000040;3a2cada4</pata>
  <Data Name="ObjectName">/</Data>
  <Data Name="InformationRequested">File Type; File Size; Last Accessed Time; Last Metadata
Modfied Time; Last Modified Time; Unix Mode; Unix Owner; Unix Group; </ Data>
  </EventData>
  </Event>
```

# 11 NFS on Nontraditional Operating Systems

The following section covers NFS use on nontraditional NFS platforms, such as Windows and Apple operating systems. Windows NFS support was added to clustered Data ONTAP 8.2.3 and most recently was added to clustered Data ONTAP 8.3.1.

#### **NFS on Windows**

To use NFS with clustered Data ONTAP systems earlier than version 8.2.3 and 8.3.1 on Windows operating systems, server administrators can install third-party tools, such as the Hummingbird/OpenText NFS Client. Red Hat's <a href="Cygwin">Cygwin</a> emulates NFS but leverages the SMB protocol rather than NFS, which requires a CIFS license. True Windows NFS is available natively only through <a href="Services for Network File-System">Services for Network File-System</a> or third-party applications such as <a href="Hummingbird/OpenText">Hummingbird/OpenText</a>.

#### **Native Windows NFS in Clustered Data ONTAP**

In RFC 1813, the following section covers MS-DOS as a supported client for NFS:

```
nlm4_share
  struct nlm4 share {
       string
                 caller name<LM MAXSTRLEN>;
       netobj
                   fh;
       netobj
                   oh;
       fsh4 mode mode;
       fsh4 access access;
This structure is used to support DOS file sharing. The
caller name field identifies the host making the request.
The fh field identifies the file to be operated on. The oh
field is an opaque object that identifies the host or process
that is making the request. The mode and access fields
specify the file-sharing and access modes. The encoding of fh
is a byte count, followed by the file handle byte array. See
the description of nlm4 lock for more details.
```

The way that Windows uses NLM is with nonmonitored lock calls. The following nonmonitored lock calls are required for Windows NFS support:

```
NLM_SHARE
NLM_UNSHARE
NLM_NM_LOCK
```

These lock calls are currently not supported in versions of clustered Data ONTAP earlier than 8.3.1 or in versions of clustered Data ONTAP earlier than 8.2.3. <u>Bug 296324</u> covers this point. Check the <u>NFS Interoperability Matrix</u> for updates.

**Note:** PCNFS, WebNFS, and HCLNFS (legacy Hummingbird NFS client) are not supported with clustered Data ONTAP storage systems and there are no plans to include support for these protocols.

#### Considerations for Using Windows NFS in Clustered Data ONTAP

Keep the following considerations in mind when using Windows NFS with clustered Data ONTAP.

- Network Status Monitor (NSM) is not supported in Windows NFS. Therefore, volume moves and storage failovers can cause disruptions that might not be seen on NFS clients that do support NSM.
- If using Windows NFS on an SVM, the following options need to be set to "disabled."

```
enable-ejukebox
v3- connection-drop
```

**Note:** These options are enabled by default. Disabling them does not harm other NFS clients, but might cause some unexpected behavior.

- Always mount Windows NFS using the mount option mtype=hard.
- Windows NFS clients are not able to properly see the used space and space available through the df commands.

#### **Example of mounting NFS in Windows:**

```
C:\>mount -o mtype=hard \\10.63.3.68\unix Z:
Z: is now successfully connected to \\10.63.3.68\unix

The command completed successfully.
```

# **Enabling Windows NFS Support**

In clustered Data ONTAP, there is a specific NFS server option that needs to be toggled to "enabled" to allow Windows NFS clients. This option is disabled by default. If reverting from a clustered Data ONTAP version that supports Windows NFS, this option must be disabled prior to attempting the revert.

```
cluster::> nfs server show -vserver nfs_svm -fields v3-ms-dos-client
vserver v3-ms-dos-client
-----
nfs_svm disabled
```

#### Windows NFS Use Cases

Windows NFS can be used to provide access to NetApp storage devices on Windows operating systems in lieu of a CIFS license. Additional use cases include:

- Applications that run on Windows and require NFS connectivity and/or Linux-style commands and functions (such as GETATTR, SETATTR, and so on)
- When a user wants to leverage the NFS protocol rather than CIFS
- Where a user wants to avoid multiprotocol connectivity

Although Windows can be used to leverage NFS connectivity, it might make more sense to use CIFS and the newer features of the latest SMB version that Windows provides for performance and NDO functionality. Additionally, using Windows NFS with clustered Data ONTAP requires some considerations, covered later.

# Options for Using Windows NFS with Clustered Data ONTAP

As mentioned, nonmonitored locks are not supported earlier than clustered Data ONTAP 8.2.3 and 8.3.1. These locks are provided by the NLM protocol. As a result, there are two options to get Windows NFS to work with clustered Data ONTAP versions that do not support Windows NFS natively:

- Disable NLM (and thus, locking with NFSv3).
- Use <u>NFS version 4.</u>

#### Considerations for Disabling NLM with NFSv3

NFSv3 does not provide its own locking mechanisms. By its nature, NFSv3 is a stateless protocol. When an NFS server restarts, locks are managed by NLM, not NFS. If NLM is disabled, no locks are granted, which means that files can be accessed and written to when other users have them open. This is not preferred for production file environments. Consult the application vendor for a recommendation on disabling NLM.

# Scenarios in Which NFSv3 Locking Is Not Required

In some scenarios, NFSv3 locking is not required:

- Files that are accessed and written to by only one user or application
- Exports that are locked down to only one user or application
- Applications for which disabling locking is recommended

**Note:** There might be other scenarios in which NLM is not required. Contact the OS and/or application vendor for recommendations.

# **Enabling Single-Writer Access**

In clustered Data ONTAP, export policies and rules can be used, along with volume permissions, to control access to files and folders for single-writer status. For example, an export policy rule can be configured to allow access only to a specific client, thereby enabling only that client to have NFS connectivity to the NFS export.

The following is an example of a policy configured to allow only single-client access to an export using the -clientmatch option in the export policy rule.

In the preceding example, access is granted only to the 10.228.225.140 client. All other clients are unable to mount using NFS. If control over CIFS access to the export is desired, then export policy rules can be enabled for CIFS shares using the following command in advanced privilege:

```
cluster::> set advanced
cluster::*> cifs options modify -vserver SVM -is-exportpolicy-enabled true
```

# Why Using NFS Version 4 (NFSv4) Works

NFSv4 is another option for bypassing the non-monitored locking issue with NFSv3 in clustered Data ONTAP versions prior to 8.2.3. The reason NFSv4 in Windows works natively with clustered Data ONTAP is because NFSv4 incorporates locking and leasing in the protocol. For more information about NFSv4, see TR-3580: NFSv4 Enhancements and Best Practices Guide: Data ONTAP Implementation and/or RFC 3530.

# Considerations for Using NFSv4 with Windows for NFS

The following section covers the considerations for using NFSv4 with Windows for NFS.

# Lack of Support/Testing

Native Windows NFS does not provide the ability to mount using NFSv4. Thus, it is only possible to mount using NFSv4 with third-party clients. The Center for Information Technology Integration (CITI) at the University of Michigan had been developing an NFSv4.1 client for Windows, but development has ceased on that project. NetApp does not recommend using that utility because it does not have support from Microsoft, NetApp, or CITI.

#### Requirements for Name Services or the Equivalent

NFSv4 offers greater security through the name@v4-id-domain requirement for file and folder access. When a user name or group name does not have a valid entry in the NFSv4 ID domain configured on the NFS server, access is denied, and the user and group are squashed to the "nobody" user specified in the NFSv4 idmapd configuration file on the client. NFSv4 security benefits are covered in more detail in TR-3580: NFSv4 Enhancements and Best Practices Guide: Data ONTAP Implementation.

Because NFSv4 requires strict 1:1 name and group mappings for access, a name service (such as LDAP) or local users must be created to allow valid access. These user names must match exactly, including case. For more information about this, refer to TR-4073: Secure Unified Authentication.

For information about configuring OpenText with Windows clients, see <u>TR-4321: Windows NFS in</u> Clustered Data ONTAP.

# NFS Using Apple OS

NFS mounts are also possible using Apple OS using the Finder or terminal windows. For complete mount options in the Apple OS, use the man mount\_nfs command in a terminal window. When using Apple clients for NFS, there are some things to keep in mind.

#### **Dynamic Versus Static UIDs**

When using a Mac with Active Directory, the default behavior of the Mac is to dynamically create a UID/GID based on the Windows SID of the user. In many cases, this is sufficient, but if control over the UIDs and GIDs is needed (such as integration with an existing LDAP server), then static UIDs can be leveraged. For information about best practices for using Apple OS with Active Directory, see the white paper called <a href="Best Practices for Integrating OS X with Active Directory">Best Practices for Integrating OS X with Active Directory</a>.

# **Apple OS Disables Root by Default**

Apple <u>disables the root user</u> (UID 0) by default in its OS. Users are instead required to log in with a user name other than root and use sudo if performing root-level tasks. <u>It is possible to reenable the root user.</u>

#### **Apple UIDs Start at 501**

The Apple UID structure starts at UID 501. This UID is not a default UNIX user in clustered Data ONTAP, nor does it exist in most name service servers. This situation is the same for every Apple OS client in an environment, so it is possible that multiple users exist with the same UID. The options to handle this are as follows:

- Create a user on the cluster or in a name service server with UID 501 to authenticate all Apple users.
- Change the UID on the Apple OS for each user who intends to use NFS on Apple.

#### **Use of Apple NFS with NTFS Security-Style Volumes**

Apple NFS handles NTFS security–style volumes differently than Linux NFS clients. Therefore, copies/writes to an NFS mount using Finder applications fail by default when NTFS security style is used. This issue occurs when the Apple client attempts an EXCLUSIVE CREATE operation on the file, which is only allowed by SMB clients in clustered Data ONTAP.

As a workaround, the NFS server option <code>-ntfs-unix-security-ops</code> can be set to ignore to allow NTFS security—style volumes to work properly with NFS mounts on Apple. See <a href="bugg723115">bugg723115</a> for more information.

# NFS Rootonly Operations Do Not Work as Expected with Apple OS

In clustered Data ONTAP 8.2, the NFS server options <code>-mount-rootonly</code> and <code>-nfs-rootonly</code> were introduced. By default, mount-rootonly is enabled, and nfs-rootonly is disabled. Apple OS behavior when mounting using NFS defaults is to always use reserved ports for the MOUNT protocol and nonreserved ports for the NFS protocol. The Linux NFS mount option of resvport/noresvport applies in the Apple OS, but noresvport does not control the client's MOUNT port sent to the cluster. Therefore, Apple NFS clients always use ports in range <1024 for MOUNT.

There presently is not a known method to change this behavior, so Apple technical support would need to be engaged to use nonreserved ports for NFS MOUNT calls. For NFSv4.x mounts, this does not matter, because NFSv4.x does not leverage the MOUNT protocol. NFS client ports for NFS operations (port 2049) can be controlled using the resvport/noresvport mount options, but the NFS server option on the cluster would need to be toggled to honor the client behavior. Doing so would affect all versions of NFS.

Additionally, when attempting to mount with the resvport option specified in the Apple OS, the sudo command would need to be used, because root is disabled and the -users option is not specified by default.

Note: When using the Finder to mount NFS, mount options cannot be specified.

# 12 Multiprotocol User Mapping

Multiprotocol functionality includes the ability to map UNIX user identities (UIDs) to NT identities (SIDs). This mapping involves contacting an NT domain controller to do name-to-SID lookups. Because this translation is time consuming and must be performed for every NFS access of a file with NT security, these mappings are cached. In clustered Data ONTAP, credentials are cached in two locations: the NAS protocol stack and the Security Daemon (SecD).

# 12.1 Credential Caching in Clustered Data ONTAP

The following sections cover how clustered Data ONTAP caches identities and credentials for users and groups to enable better performance during authentication requests.

# **NAS Protocol Caching**

The NAS protocol stack is unique per node and handles the translation of NAS protocol packets into cluster-aware packets to be passed through the cluster network on to WAFL (Write Anywhere File System). The NAS protocol stack credential cache did not age out earlier than clustered Data ONTAP 8.2, but it now refreshes every 20 minutes (pre-8.2.3) or 120 minutes (8.2.3 and later). This action takes place so that stale credentials are not kept on the system. The NAS credential cache can be viewed and flushed manually through diag-level commands. As of ONTAP 8.3.1, the cache can be modified using the NFS server options—cached-cred-positive-ttl and—cached-cred-negative-ttl and is set to 24 hours for positive entries (2 hours for negative) to match the SecD cache. Keep in mind that to flush a NAS cache for a specific node one must be logged in to a management interface local to that node (such as the node management LIF). NAS protocol caches are flushed as a whole per SVM. After a credential is flushed, it must be repopulated into cache, which can affect latency on new connections. Existing connections are not affected by flushing this cache. However, NetApp recommends flushing caches only at the direction of NetApp Support.

**Note:** Diag-level commands must be used with caution.

# Example in 8.1:

```
cluster::> set diag
cluster::*> diag nblade cifs credentials show -vserver vs0 -unix-user-name root
Getting credential handles.
1 handles found....
Getting cred 0 for user.
         Global Virtual Server: 8
         Cred Store Uniquifier: 23
Cifs SuperUser Table Generation: 0
              Locked Ref Count: 0
                    Info Flags: 1
         Alternative Key Count: 0
       Additional Buffer Count: 0
               Allocation Time: 0 ms
                    Hit Count: 0 ms
                  Locked Count: 0 ms
Windows Creds:
       Flags: 0
       Primary Group: S-0-0
Unix Creds:
       Flags: 0
       Domain ID: 0
       Uid: 0
       Gid: 1
       Additional Gids:
cluster::*> diag nblade cifs credentials flush -vserver vs0
FlushCredStore succeeded flushing 2 entries
```

#### In 8.2.x and later:

```
cluster::> set diag
\verb|cluster::*> \verb|diag nb|| \verb|ade credentials show - vserver vs0 - unix-user-name root| \\
Getting credential handles.
1 handles found....
Getting cred 0 for user.
          Global Virtual Server: 8
         Cred Store Uniquifier: 23
Cifs SuperUser Table Generation: 0
               Locked Ref Count: 0
                    Info Flags: 1
          Alternative Key Count: 0
        Additional Buffer Count: 0
                Allocation Time: 0 ms
                     Hit Count: 0 ms
                   Locked Count: 0 ms
Windows Creds:
       Flags: 0
        Primary Group: S-0-0
Unix Creds:
        Flags: 0
        Domain ID: 0
        Uid: 0
        Gid: 1
        Additional Gids:
cluster::*> diag nblade credentials flush -vserver vs0
FlushCredStore succeeded flushing 2 entries
```

# NFS/Name Service Database (NSDB) Caches

In addition to NAS layer caches, ONTAP has the concept of NFS caches when name services are involved, particularly when using the <u>extended goups option</u>. Rather than constantly needing to reach out to name service servers (such as NIS or LDAP) and fetch credentials, the NSDB cache will keep NFS credentials for 30 minutes. The NSDB cache can also be cleared starting in ONTAP 8.3.1 with the **diag privilege** command diag nblade nfs nsdb-cache clear. Starting in ONTAP 9.0, the cache can be viewed with diag nblade nfs nsdb-cache show.

# SecD Caching

SecD is a user space application that runs on a per-node basis. The SecD application handles name service lookups such as DNS, NIS, and LDAP, as well as credential queries, caching, and name mapping. Because SecD is responsible for so many functions, caching plays an important role in its operations. SecD contains two types of caches: LRU and DB style.

# **LRU-Style Caches**

LRU caches are "Least Recently Used" cache types and age out individual entries at a specified timeout value based on how long it has been since the entry was last accessed. LRU cache timeout values are viewable and configurable using diag-level commands in the cluster.

In the following example, the "sid-to-name" cache (responsible for Windows SID to UNIX user name caching) allows a default of 2,500 max entries, which stay in cache for 86.400 seconds:

```
cluster::> set diag
cluster::*> diag secd cache show-config -node nodel -cache-name sid-to-name
Current Entries: 0
    Max Entries: 2500
Entry Lifetime: 86400
```

Caches can be manually flushed, but can only be flushed one at a time on a per-SVM basis:

```
cluster::> set diag
cluster::*> diag secd cache clear -node nodel -vserver vs0 -cache-name sid-to-name
```

#### **DB-Style Caches**


DB-style caches are caches that time out as a whole. These caches do not have maximum entries configured and are rarer than LRU-style caches.

Caches can be flushed in their entirety rather than per node, but both methods involve disrupting the node. One way to flush is to reboot the node using storage failover/giveback. The other method is to restart the SecdD process using the following diag-level command:

```
cluster::> set diag
cluster::*> diag secd restart -node node1
```

NetApp does not recommend adjusting SecD caches unless directed by NetApp Support.

Figure 13) Multiprotocol user mapping.

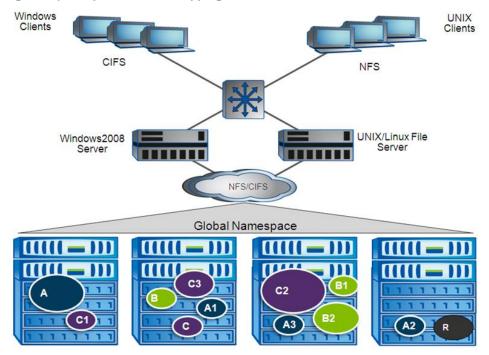

# 12.2 User Name Mapping During Multiprotocol Access

Data ONTAP performs a number of steps when attempting to map user names. Name mapping can take place for one of two reasons:

- The user name needs to be mapped to a UID.
- The user name needs to be mapped to a Windows SID.

#### Name Mapping Functionality

The method for user mapping depends on the security style of the volume being accessed. If a volume with UNIX security style is accessed using NFS, then a UID needs to be translated from the user name to determine access. If the volume is NTFS security style, then the UNIX user name needs to map to a Windows user name/SID for NFS requests because the volume uses NTFS-style ACLs. All access decisions are made by the NetApp device based on credentials, group membership, and permissions on the volume.

By default, NTFS security–style volumes are set to 777 permissions, with a UID and a GID of 0, which generally translates to the "root" user. NFS clients see these volumes in NFS mounts with this security setting, but users do not have full access to the mount. The access is determined by which Windows user the NFS user is mapped to.

The cluster use the following order of operations to determine the name mapping:

Note: 1:1 implicit name mapping

- a. Example: WINDOWS\john maps to UNIX user john implicitly.
- b. In the case of LDAP/NIS, this generally is not an issue.

Note: Vserver name-mapping rules

- a. If no 1:1 name mapping exists, SecD checks for name mapping rules.
- b. Example: WINDOWS\john maps to UNIX user unixjohn.

Note: Default Windows/UNIX user

- a. If no 1:1 name mapping and no name mapping rule exist, SecD checks the NFS server for a default Windows user or the CIFS server for a default UNIX user.
- b. By default, pcuser is set as the default UNIX user in CIFS servers when created using System Manager 3.0 or vserver setup.
- c. By default, no default Windows user is set for the NFS server.

Note: If none of the preceding exists, then authentication fails.

- a. In most cases in Windows, this failure manifests as the error "A device attached is not functioning."
- b. In NFS, a failed name mapping manifests as access or permission denied.

Name mapping and name switch sources depend on the SVM configuration. See the "File Access and Protocols Management Guide" for the specified version of clustered Data ONTAP for configuration details.

#### **Best Practice 24: Name Mapping Recommendation (See Best Practice 25)**

It is a best practice to configure an identity management server such as LDAP with Active Directory for large multiprotocol environments. See <u>TR-4073: Secure Unified Authentication</u> for more information about LDAP.

Configuration step 8) Configuring CIFS for multiprotocol access.


Category	Commands
Add CIFS license.	<b>Note:</b> None of the CIFS-related operations can be initiated without adding the CIFS license key.
	cluster::> license add -license-code XXXXXXXXXXXXXXXX
Enable CIFS.	
	cluster::> vserver modify -vserver test_vs1 -allowed-protocols nfs,cifs
	Verification
	cluster::> vserver show -instance -vserver test_vs1
	vserver: test_vs1 vserver Type: cluster vserver UUID: 51fdb806-b862-11e0-9980-
	Root Volume: test_vs1
	Anti-Virus On-Access Policy: default
Configure DNS server.	A DNS server must be created and configured properly to provide the name services to resolve the LIF names assigned to the network ports.
	cluster::> vserver services dns create -vserver test_vs1 -domains domain.netapp.com -state enabled -timeout 2 -attempts 1 -name-servers 172.17.32.100
	Verification
	cluster::> vserver services dns show -vserver test_vs1
	Vserver: test_vs1

```
Domains: domain.netapp.com
                     Name Servers: 172.17.32.100
                Enable/Disable DNS: enabled
                  Timeout (secs): 2
                 Maximum Attempts: 1
Create CIFS
server.
                cluster::> cifs create -vserver test_vs1 -cifs-server test_vs1_cifs -domain
                domain.netapp.com
                Verification
                cluster::> cifs server show
                          Server Domain/Workgroup Authentication
                vserver Name Name Style
               vserver
                test vs1 TEST VS1 CIFS DOMAIN domain
Create CIFS
share.
                cluster::> cifs share create -vserver test vs1 -share-name testshare1 -path
                /testshare1
                Verification
                cluster::> vserver cifs share show -vserver test vs1 -share-name testshare1
                                    vserver: test vs1
                                      Share: testshare1
                    CIFS Server NetBIOS Name: TEST_VS1_CIFS
                                    Path: /testshare1
                          Share Properties: oplocks
                                            browsable
                                             changenotify
                         Symlink Properties: -
                    File Mode Creation Mask: -
                Directory Mode Creation Mask: -
                              Share Comment: -
                                 Share ACL: Everyone / Full Control
                File Attribute Cache Lifetime: -
Make sure that
the default UNIX
               Make sure that the default UNIX user is set to a valid existing user. In clustered Data
user is set to
                ONTAP 8.2 and later, this user is set to pcuser by default. Previous versions of
pcuser.
                clustered Data ONTAP need to be set manually.
                cluster::> cifs options show -vserver test vs1
                vserver: test vs1
                  Default Unix User: - ←----- not mapped to pcuser
                   Read Grants Exec: disabled
                       WINS Servers: -
```

#### Create the UNIX group pcuser.

#### Create the UNIX user pcuser.

# Map the default UNIX user to pcuser.

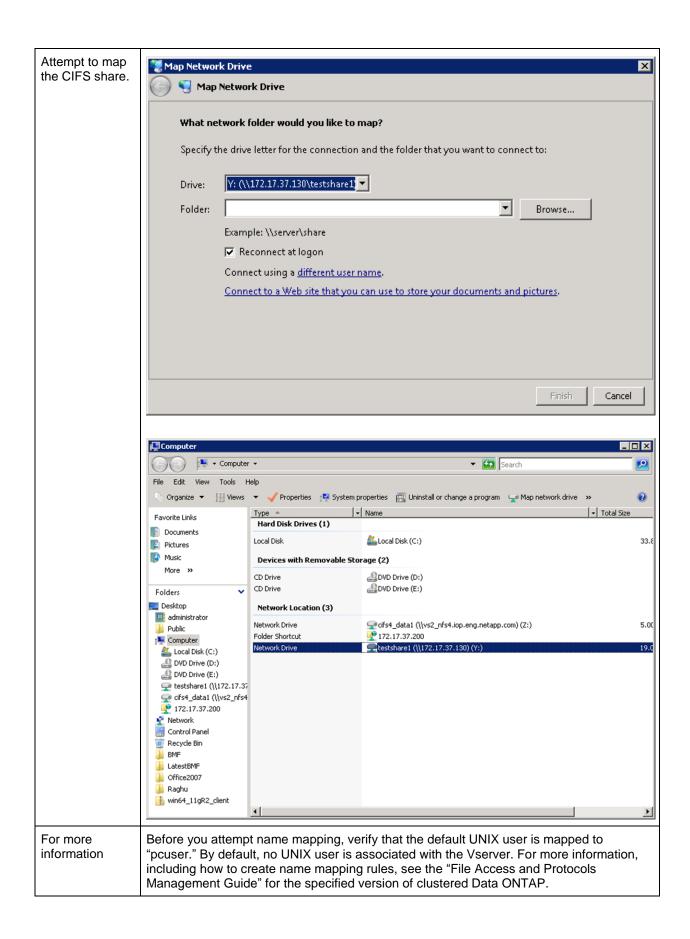

# **Using Local Files for Authentication**

In clustered Data ONTAP, there is no concept of /etc/passwd, /etc/usermap.cfg or other flat files. Instead, everything is contained within database table entries that are replicated across all nodes in the cluster for consistency and locality.

For local file authentication, users are created and managed at an SVM level for multitenancy. For instance, if there are two SVMs in a cluster, both SVMs have independent UNIX user and group lists. To manage these lists, the commands vserver services unix-user and vserver services unix-group are leveraged.

These commands control the following:

- User name
- UID/GID
- Group membership (primary and auxiliary)

Users and groups can be either created manually or loaded from the URI. For information about the procedure to load from the URI, see the "File Access and Protocol Guide" for the release of clustered Data ONTAP running on the system.

**Note:** UID and GID numbers can use a range of 0 to 4,294,967,295 (the largest 32-bit unsigned integer possible).

#### **Example of Creating Local UNIX User**

cluster::> vserver services unix-user create -vserver vs0 -user testuser -id 101 -primary-gid 101

#### **Example of Creating Local UNIX Group**

cluster::> vserver services unix-group create -vserver vs0 -name testgroup -id 101

#### **Example of Adding a Local UNIX User to a Local UNIX Group**

cluster::> vserver services unix-group adduser -vserver vs0 -name testgroup -username testuser

Using local users and groups can be beneficial in smaller environments with a handful of users, because the cluster would not need to authenticate to an external source. This prevents latency for lookups, as well as the chance of failed lookups due to failed connections to name servers.

#### Handling the Root User in Multiplatform Linux Environments

One use case for adding a user to local groups is for the root user. The root user is local to the cluster SVM by default and might not be included in name services (such as LDAP or NIS). This situation can prove to be problematic in environments that use multiple Linux platforms (that is, Solaris, AIX, HP-UX, RHEL, and so on). The default root group on some platforms is 0 (root), while it is 1 (daemon) on others. In clustered Data ONTAP, root defaults to a primary GID of 1.

This situation can create issues, especially in NFSv4, because the client's primary group for root might differ from the primary group for the cluster. This difference might cause a scenario in which the permissions display as root:nobody.

To address these environments, it might make sense to add the root user to both the root (GID 0) and daemon (GID 1) groups in the SVM's local unix-user and unix-group database.

# The Wheel Group and NFSv4

The "wheel" group is a common UNIX user group that is used to provide users with the ability to use su on commands. This group generally uses GID 10. One commonly used application that makes use of the wheel group is tar. When you use tar in NFSv4, if the wheel group is not present in name services, you might see failures because the group does not map into the NFSv4 ID domain.

#### **Best Practice 25: The Wheel Group (See Best Practice 26)**

If you use NFSv4.x, it makes sense to create a local group for wheel on the clustered Data ONTAP SVM using GID 10 (or whichever GID wheel is used on your clients). Doing so helps prevent issues with resolving the wheel group.

For larger environments, NetApp recommends using a name server such as NIS or LDAP to service UID/GID translation requests.

#### **Best Practice 26: Primary GIDs (See Best Practice 27)**

UNIX users always have primary GIDs. When specifying a primary GID, whether with local users or name services, be sure that the primary GID exists in the specified nm-switch and ns-switch locations. Using primary GIDs that do not exist can cause authentication failures in clustered Data ONTAP 8.2 and earlier.

# **Local User and Group Limits**

In versions earlier than clustered Data ONTAP 8.3, there was no set limit for local users and groups. Potentially, a storage administrator could create as many local users and groups as that administrator saw fit. However, as local users and groups are created, the replicated database tables that make clustered Data ONTAP run properly grow in size. If these database tables grow to the point of memory exhaustion when reading/writing the tables, cluster outages can occur. Therefore, 8.3 introduced a hard limit on local users and groups. This limit is cluster-wide and affects all SVMs.

#### **Best Practice 27: Local UNIX Users and Groups (See Best Practice 28)**

In versions earlier than clustered Data ONTAP 8.3, there was no hard limit on local users and groups. However, that does not mean that there is no actual limit. NetApp highly recommends not exceeding the local UNIX user and group limits as defined in the following table when using clustered Data ONTAP versions earlier than 8.3.

**Note:** This limit is for local UNIX users and groups. Local CIFS users and groups (vserver cifs users-and-groups) have an independent limit and are not affected by this limit.

Table 16) Limits on local users and groups in clustered Data ONTAP.

Local UNIX User Limit in 8.3 (Default and Max)	Local UNIX Group Limit in 8.3 (Default and Max)
32,768 (default)	32,768 (default)
65,536 (max)	65,536 (max)

As previously mentioned, the local UNIX user and group limits are cluster-wide and affect clusters with multiple SVMs. Thus, if a cluster has 4 SVMs, then the maximum number of users in each SVM must add up to the maximum limit set on the cluster.

#### For example:

- SVM1 has 2,000 local UNIX users.
- SVM2 has 40,000 local UNIX users.
- SVM3 has 20 local UNIX users.
- SVM4 would then have 23,516 local UNIX users available to be created.

Any attempted creation of any UNIX user or group beyond the limit would result in an error message.

#### Example:

```
cluster::> unix-group create -vserver NAS -name test -id 12345

Error: command failed: Failed to add "test" because the system limit of {limit number}
    "local unix groups and members" has been reached.
```

The limits are controlled by the following commands in the advanced privilege level:

```
cluster::*> unix-user max-limit
  modify show
```

#### Best Practice 28: Local UNIX Users and Group Limits (See Best Practice 1)

If a cluster requires more than the allowed limit of UNIX users and groups, an external name service such as LDAP should be leveraged. Doing so bypasses the limits on the cluster and allows a centralized mechanism for user and group lookup and management.

#### **Default Local Users**

When an SVM is created using vserver setup or System Manager, default local UNIX users and groups are created, along with default UIDs and GIDs.

The following shows these users and groups:

cluster::>	vserver services t User	unix-user User	show - Group	vserver vs0 Full	
Vserver	Name	ID	ID	Name	
nfs	nobody	65535	65535	-	
nfs	pcuser	65534	65534	-	
nfs	root	0	0	-	
cluster::> Vserver	vserver services	unix-grou ID	-	-vserver vs0	
			-	-vserver vs0	
Vserver	Name	ID 1	-	-vserver vs0	
Vserver nfs	Name daemon	ID 1 65		-vserver vs0 -	

# Rules to Convert User Mapping Information in 7-Mode in Clustered Data ONTAP

\* Name mappings with IP addresses are not supported in clustered Data ONTAP.

Table 17) 7-Mode to clustered Data ONTAP mapping.

7-Mode Mapping	Clustered Data ONTAP			
	-direction	-pattern	-replacement	-position
X => Y	Win-UNIX	Х	Υ	_
X <= Y	UNIX-Win	Υ	Х	_
X == Y	UNIX-Win/ Win-UNIX	X/Y	Y/X	_

**Note:** For further information about CIFS configuration and name mapping, refer to <u>TR-4191: Best Practices Guide for Clustered Data ONTAP 8.2.x and 8.3 Windows File Services.</u>

**Note:** 1:1 name mappings do not require specific rules in clustered Data ONTAP (such as X == Y). This implicit name mapping is done by default. Additionally, as of clustered Data ONTAP 8.2.1, trusted domain name mapping is supported. For more information, see the File Access and Protocol Guides.

# 13 Unified Security Style (Infinite Volumes)

Infinite Volumes were introduced in clustered Data ONTAP 8.1.1 with support for NFSv3. Unified security style was introduced in clustered Data ONTAP 8.2 to support CIFS and NFSv4 for Infinite Volumes. Unified security style is intended to provide ubiquitous access control in a multiprotocol environment rather than prioritizing behavior on a particular protocol.

Infinite Volumes use only unified security style. This style is not currently available for NetApp FlexVol® volumes.

For detailed information about Infinite Volumes, see <u>TR-4037: Introduction to NetApp Infinite Volume</u> and TR-4178: Infinite Volume Deployment and Implementation Guide.

# 13.1 What Is Unified Security Style?

Unified security style consolidates file permission management for both UNIX and Windows users and groups. Windows and UNIX users can view and manage permissions on files regardless of the current effective style and regardless of the protocol previously used to set permissions on those files.

# 13.2 UNIX, NTFS, and Mixed Security Styles

Data ONTAP operating in 7-Mode and clustered Data ONTAP support three security styles for FlexVol volumes: UNIX, NTFS, and mixed. These security styles prioritize the network protocol when managing permissions, but at the expense of other protocols. For example, Windows clients cannot change UNIX-style ACLs, and UNIX clients cannot change NTFS ACLs. In mixed style, although both UNIX and Windows clients can set ACLs, these clients are currently unable to view ACLs set by the other. Also, when an ACL is set, it blindly overwrites the existing permissions. Table 18 describes the behavior and limitations of each security style.

Table 18) Limitations of existing security styles.

Security Style	Limitations
UNIX	<ul> <li>Windows clients cannot set attributes.</li> <li>NTFS-style ACLs are not effective; only NFSv4 ACLs and mode bits are effective.</li> <li>UNIX mode bits can be merged into an NFSv4 ACL.</li> </ul>
NTFS	<ul> <li>UNIX clients cannot set attributes.</li> <li>Only NTFS-style ACLs are effective; NFSv4 ACLs and mode bits are not effective.</li> </ul>
Mixed	<ul> <li>Both Windows and UNIX clients can set attributes.</li> <li>UNIX mode bits can be merged into an NFSv4 ACL, but they cannot be merged into an NTFS ACL.</li> <li>Only one style of ACL can be honored on an object.         <ul> <li>Applying UNIX-style ACLs drops NTFS-style ACLs.</li> <li>Applying NTFS-style ACLs drops UNIX-style ACLs.</li> </ul> </li> </ul>

**Note:** These limitations apply to all objects in NetApp storage (files, directories, volumes, qtrees, and LUNs).

# **Contrasting the Clustered Data ONTAP Security Styles**

Unified security style in clustered Data ONTAP eliminates many of the caveats and restrictions imposed by the UNIX, NTFS, and mixed security styles. The intent of unified security style is to provide ubiquitous access control and management for both UNIX and Windows clients.

In unified security style:

- UNIX and Windows clients can view ACLs and permissions regardless of the on-disk effective security style; that is, regardless of the protocol previously used to set ownership or permissions.
- UNIX and Windows clients can modify ACLs and permissions regardless of the on-disk effective security style; that is, regardless of the protocol previously used to set ownership or permissions.
- UNIX mode bits can be merged into an existing ACL regardless of the on-disk effective security style; that is, regardless of whether the ACL is an NFSv4 ACL or an NTFS ACL.
- ACEs in NTFS ACLs can represent UNIX or Windows principals (users or groups).
  - Current NFSv4 clients and servers support a single NFSv4 domain, and all principals must be mapped into that NFSv4 domain. For this reason, NFSv4 ACLs set by NFSv4 clients contain only NFSv4 principals.

# **Mixed Security Style Versus Unified Security Style**


The main differences between the mixed and unified security styles are illustrated in Table .


Table 19) Mixed versus unified security style.

Mixed Security Style	Unified Security Style
NFS clients cannot view an existing NTFS ACL.	<ul> <li>NFS clients can view/modify existing NTFS ACLs.</li> </ul>
<ul> <li>NFS clients can only blindly overwrite an existing NTFS ACL.</li> </ul>	<ul> <li>Group mapping has been added to support NFSv4 clients. Both Windows users and Windows groups can be mapped into the</li> </ul>
<ul> <li>NFS mode bits cannot be merged into an existing NTFS ACL.</li> </ul>	NFSv4 domain.
NFS principals (users/groups) cannot be represented in an NTFS ACL.	<ul> <li>If an NFS client saves mode bits, the mode bits can be merged into an existing NFS ACL or NTFS ACL.</li> </ul>
Windows clients cannot view an existing NFSv4 ACL.	<ul> <li>Windows clients can view/modify existing NFSv4 ACLs.</li> </ul>
Windows clients can only blindly overwrite	<ul> <li>UNIX principals might appear in NTFS ACLs.</li> </ul>
an existing NFSv4 ACL.	<ul> <li>UNIX principals are distinguished by a user- or group- prefix.</li> </ul>
	<ul> <li>The NFS well-known principals (OWNER@, GROUP@, and EVERYONE@) are supported.</li> </ul>

The following figure illustrates the NFS well-known principals (OWNER@, GROUP@, and EVERYONE@) in unified style (on the right), contrasted with mixed style (on the left).

Figure 14) Mixed-style (left) and unified-style (right) mode bit display on Windows.

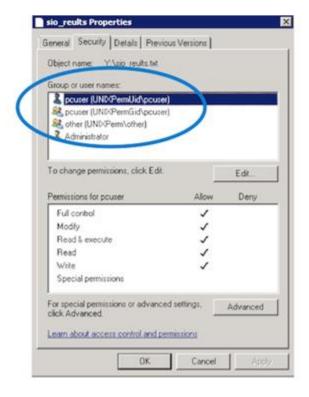

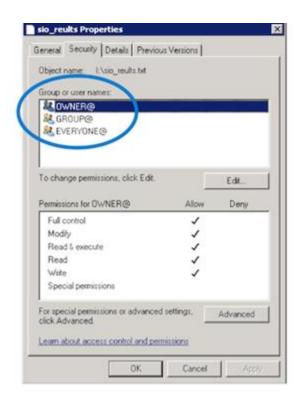

The NFS well-known principals (OWNER@, GROUP@, and EVERYONE@) are defined in the NFSv4 specification. There is a significant difference between these principals in an ACL and the UNIX mode classes (owner, owning group, and other). The NFS well-known principals are defined in Table .

Table 20) NFS well-known principal definitions.

Who	Description
OWNER@	The owner of the file
GROUP@	The group associated with the file
EVERYONE@	The world, including the owner and owning group

The UNIX mode classes are specific and exclusive. For example, permissions granted to "other" exclude the owner and the owning group. Thus a mode mask of 007 grants rwx permission to everyone except members of the owning group and the owner.

The well-known NFS principals are inclusive, and an ACL is processed in order to determine the sum of the permissions granted to each principal. Thus an ACL granting FullControl to EVERYONE@ results in a mode mask of 777.

While recognizing that it is not possible to represent the entirety of an ACL in mode bits, the NFSv4.1 specification provided clarification to potential ambiguities in the original NFSv4 specification:

- Interpreting EVERYONE@ as equivalent to UNIX "other" does not follow the intent of the EVERYONE@ definition. The intent of EVERYONE@ is literally everyone, which includes the owner and owning group.
- A server that supports both mode and ACL must take care to synchronize the mode bits with OWNER@, GROUP@, and EVERYONE@. This way, the client can see semantically equivalent access permissions whether the client asks for the mode attributes or the ACL.

# NTFS Security Style Versus Unified Security Style

There are two main features of NTFS security style that merit discussion when contrasting its behavior with unified security style.

- NTFS security style explicitly blocks attempts to change ownership or permissions using NFS.
- NTFS security style always displays the most permissive mode permissions possible to NFS clients,<sup>1</sup> which are calculated by summing all the permissions granted across the ACL. Thus NFS clients often display 777 regardless of the actual permissions on a file.

# **Unified security style:**

• The ability of the superuser (root) or regular users to change file ownership can be controlled and restricted using the <code>-superuser</code> and <code>-chown-mode</code> options, which are described in subsequent sections of this document.

 It is not currently possible to completely block permission changes using NFSv3, but the capability of an NFSv3 client to change an ACL is limited. An NFSv3 client can only affect (add, remove, modify) the NFS well-known principal ACEs (OWNER@, GROUP@, and EVERYONE@). It is not possible for an NFSv3 client to add, remove, or modify any Windows ACE in the ACL.

134

<sup>&</sup>lt;sup>1</sup> There was an option in Data ONTAP 7-Mode to generate "least permissive" mode bits in NTFS security style but that option is not available in clustered Data ONTAP.

- Permissions are calculated as directed in the NFSv4.1 specification. The algorithm uses the NFS well-known principal ACEs (OWNER@, GROUP@, and EVERYONE@), the Windows owner, and the Windows Everyone group when calculating the UNIX mode. Thus an NTFS ACL that grants FullControl to OWNER@ and Read+Execute to GROUP@ would generate a mode of 750.
- The generated mode might be 000 if an ACL contains Windows group ACEs but no Windows Everyone ACE and none of the NFS well-known principals.
- If a mode of 000 is disconcerting or undesirable, the OWNER@ ACE can be included in an NTFS ACL with little or no impact on access control on the file because the UNIX owner always has the right to read and change permissions. Note that this unconditional right permitting the UNIX owner to read and change permissions does not automatically result in an OWNER@ ACE being included in an ACL.

Figure 15 illustrates an NTFS ACL in unified security style containing both NFS well-known principals and Windows groups.



Figure 15) UNIX permission in an NTFS ACL in unified style.

# 13.3 Unified Security Style Behavior in Clustered Data ONTAP

Unified security style in clustered Data ONTAP eliminates many of the caveats and restrictions imposed by the UNIX, NTFS, and mixed security styles. Unified security style provides ubiquitous access control and management for both UNIX and Windows clients.

In unified security style:

- ACLs and permissions can be viewed by UNIX and Windows clients regardless of the on-disk effective security style; that is, regardless of the protocol previously used to set ownership or permissions.
- ACLs and permissions can be modified by UNIX and Windows clients regardless of the on-disk effective security style; that is, regardless of the protocol previously used to set ownership or permissions.

- UNIX mode bits can be merged into an existing ACL regardless of the on-disk effective security style;
   that is, regardless of whether the ACL is an NFSv4 ACL or an NTFS ACL.
- ACEs in NTFS ACLs can represent UNIX or Windows principals (users or groups).
  - Current NFSv4 clients and servers support a single NFSv4 domain, and all principals must be mapped into that NFSv4 domain. For this reason, NFSv4 ACLs set by NFSv4 clients contain only NFSv4 principals.

To control the NFSv4 ACL preservation option, use the following command:

```
cluster::> set advanced
cluster::*> nfs server modify -vserver [SVM] -v4-acl-preserve enabled
```

In clustered Data ONTAP, it is possible to view the effective security style and ACLs of an object in storage by using the <code>vserver security file-directory</code> command set. Currently, the command does not autocomplete for SVMs with content repository enabled, so the SVM name must be entered manually.

#### **Example:**

```
::> vserver security file-directory show -vserver infinite -path /infinitevolume/CIFS
               Vserver: infinite
             File Path: /infinitevolume/CIFS
        Security Style: mixed
       Effective Style: ntfs
        DOS Attributes: 10
DOS Attributes in Text: ----D---
Expanded Dos Attributes: -
          Unix User Id: 500
         Unix Group Id: 512
        Unix Mode Bits: 777
Unix Mode Bits in Text: rwxrwxrwx
                  ACLs: NTFS Security Descriptor
                         Control:0x8504
                         Owner:DOMAIN\Administrator
                         Group: DOMAIN\Domain Users
                         DACL - ACEs
                          ALLOW-S-1-520-0-0x1f01ff-OI|CI
                          ALLOW-S-1-520-1-0x1201ff-0I|CI
                          ALLOW-S-1-520-2-0x1201ff-OI|CI
                          ALLOW-DOMAIN\unified1-0x1f01ff-OI|CI
                          ALLOW-DOMAIN\Administrator-0x1f01ff-OI|CI
                          ALLOW-DOMAIN\unifiedgroup-0x1f01ff-OI|CI
::> vserver security file-directory show -vserver infinite -path /infinitevolume/NFS
               Vserver: infinite
             File Path: /infinitevolume/NFS
        Security Style: mixed
       Effective Style: unix
        DOS Attributes: 10
DOS Attributes in Text: ----D---
Expanded Dos Attributes: -
          Unix User Id: 100059
         Unix Group Id: 10008
        Unix Mode Bits: 777
Unix Mode Bits in Text: rwxrwxrwx
                  ACLs: NFSV4 Security Descriptor
                         Control:0x8014
                         DACL - ACEs
                          ALLOW-S-1-8-10001-0x16019f
                          ALLOW-S-1-520-0-0x1601ff
                          ALLOW-S-1-520-1-0x1201ff-IG
                          ALLOW-S-1-520-2-0x1201ff
```

In this example, a volume named infinite contains a folder with effective security style of UNIX called NFS and an effective NTFS style folder called CIFS. The effective style reflects the protocol that last applied an ACL to the object and, although both folders indicate mixed security style, the behavior is unified security style. Table 21 shows the main differences between the mixed and unified security styles.

Table 20) Mixed mode versus unified security style.

Mixed	Unified	
NFS clients cannot view an existing NTFS- style ACL.	NFS clients can view and modify existing NTFS-style ACLs.	
<ul> <li>NFS clients can only blindly overwrite an existing NTFS-style ACL.</li> </ul>	<ul> <li>Group mapping has been added to support NFSv4 clients. Both users and groups can</li> </ul>	
NFS mode bits cannot be merged into an existing NTFS-style ACL.  NFS principals (upore or groups) cannot be	<ul> <li>be mapped into the NFSv4 domain.</li> <li>If an NFS client saves mode bits, the mode bits can be merged into an existing ACL.</li> </ul>	
<ul> <li>NFS principals (users or groups) cannot be represented in an NTFS-style ACL.</li> <li>Windows clients cannot view an existing</li> </ul>	<ul> <li>NFS clients are independently configurable for NFS ACLs or NTFS-style ACLs.</li> </ul>	
NFSv4 ACL.  Windows clients can only blindly overwrite	Windows clients can view and modify existing NFSv4 ACLs.	
an existing NFSv4 ACL.	<ul> <li>UNIX principals might appear in NTFS-style ACLs. UNIX principals are distinguished by a unix-user or unix-group prefix.</li> </ul>	

**Note:** The effective style indicates the protocol most recently used to set the ACL in all security styles. The difference in unified security style is that the effective style does not indicate ACL management restrictions or limitations.

# **Unified Security Style Behavior in NFSv3**

The NFSv3 protocol does not support ACLs. Therefore, when a client mounts an Infinite Volume using NFSv3, only the mode bits are visible to that client. Mode bits are the classic rwx style of permissions that can be numerically represented 0–7 for owner, group, and other. For more information about mode bit permissions, see <u>File Permission Modes from Oracle</u>.

ACLs are still honored for access control. UNIX to Windows name mapping is required to interpret Windows principals in NTFS-style ACLs. A UNIX user would need to map to a valid Windows user to interpret the Windows principal in NTFS-style ACEs.


# Unified Security Style Behavior in NFSv4.x

Infinite Volumes currently support NFSv4.1 only in clustered Data ONTAP 8.2. NFSv4.1 must be enabled and configured on the cluster, and clients must be NFSv4.1 capable. A single identity mapping domain should be available (only one domain per SVM is supported in clustered Data ONTAP). NetApp highly recommends enabling NFSv4 ACL preservation when using NFSv4 ACLs.

When NFSv4 ACLs are used, the ACLs map directly to Windows SIDs, allowing unified access to files and directories.

However, when an NFSv4 ACL cannot be mapped to a Windows SID, the ACL represents itself with user- or group- in the list. A dummy SID is created in Data ONTAP using the UID or GID of the user being represented.

# **Example:**

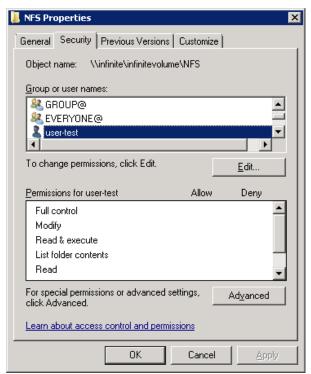

```
cluster::> vserver security file-directory show -vserver infinite -path /infinitevolume/NFS
               Vserver: infinite
              File Path: /infinitevolume/NFS
        Security Style: mixed
        Effective Style: unix
        DOS Attributes: 10
DOS Attributes in Text: ----D---
Expanded Dos Attributes: -
          Unix User Id: 100059
         Unix Group Id: 10008
        Unix Mode Bits: 777
Unix Mode Bits in Text: rwxrwxrwx
                  ACLs: NFSV4 Security Descriptor
                         Control:0x8014
                         DACL - ACEs
                          ALLOW-S-1-8-10001-0x16019f
                           ALLOW-S-1-520-0-0x1601ff
                          ALLOW-S-1-520-1-0x1201ff-IG
                          ALLOW-S-1-520-2-0x1201ff
cluster::> set diag
cluster::*> diag secd authentication translate -node nodel -vserver infinite -sid S-1-8-10001
domain\user-test (User)
cluster::*> diag secd authentication translate -node nodel -vserver infinite -win-name
domain\user-test
S-1-8-10001
```

# The other NFSv4 ACLs listed on the object are the default EVERYONE@, GROUP@, and OWNER@ ACLs.

```
cluster::*> diag secd authentication translate -node nodel -vserver infinite -sid S-1-520-0 OWNER@ (Well known group)

cluster::*> diag secd authentication translate -node nodel -vserver infinite -sid S-1-520-1 GROUP@ (Well known group)

cluster::*> diag secd authentication translate -node nodel -vserver infinite -sid S-1-520-2 EVERYONE@ (Well known group)
```


These default ACLs get set on every object and reflect the mode bit translation for NFSv3 backward compatibility.

#### Example:

```
# ls -la | grep NFS
                            unifiedgroup 4096 Nov 1 13:46 NFS
drwxrwxrwx. 2 unified1
# nfs4 getfacl /infinitevol/NFS
A::test@domain.win2k8.netapp.com:rwatTnNcCy
A::OWNER@:rwaDxtTnNcCv
A:g:GROUP@:rwaDxtTnNcy
A::EVERYONE@:rwaDxtTnNcy
# chmod 755 NFS
# ls -la | grep NFS
drwxr-xr-x. 2 unified1
                           unifiedgroup 4096 Nov 1 13:46 NFS
# nfs4 getfacl /infinitevol/NFS
A::test@domain.win2k8.netapp.com:rwatTnNcCy
A::OWNER@:rwaDxtTnNcCy
A:g:GROUP@:rxtncy
A::EVERYONE@:rxtncy
```

# Unified Security Style Behavior in NFSv4 ID Domain

Unified security style leverages the NFSv4 ID domain attribute on the NFS server to formulate unified ACLs. The default value of this is defaultv4iddomain.com. Therefore, users might appear with the following format, even if NFSv4.x is not used:

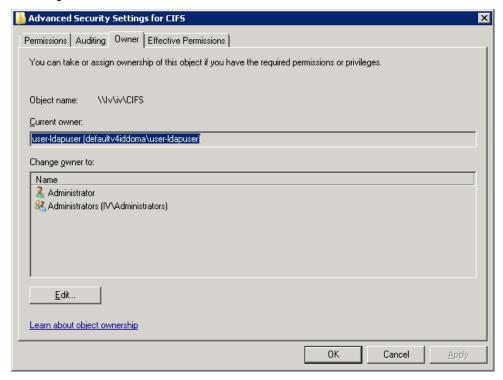

To avoid this behavior, set the v4-id-domain option in the NFS server even if NFSv4.x is not being used.

#### **Example:**

cluster::> nfs server modify -vserver infinite -v4-id-domain domain.win2k8.netapp.com

# **Unified Security Style Behavior in CIFS**

Infinite Volumes currently support SMB version 1.0 only. NTFS-style ACLs are supported and operate identically to FlexVol volumes. With unified security style, however, NTFS ACLs are retained when UNIX mode bits are applied. This behavior is similar to the NFSv4 ACL preserve option, but it cannot be managed from the command line.

#### 13.4 Unreachable Attributes

If an Infinite Volume data constituent is offline, the unreachable-attr-action attribute on the volume controls how data access behaves for inaccessible attributes.

There are two options: return-generated and wait.

- **Return-generated** returns default values for the attributes, which appear to the client as a file size of 0 and timestamps that are in the past. This is the default setting.
- Wait causes the volume to return a RETRY error, which can cause some clients to appear to hang because they retry the request indefinitely.

# 13.5 Infinite Volume Export Policies

When SVMs are created for Infinite Volumes, several default export policies are created. These policies contain default rules, which are applied to the volume in the SVM. In clustered Data ONTAP 8.2, export policies apply only to NFS by default. Previous versions of clustered Data ONTAP used export policies for CIFS access as well.

The following default polices are created when an SVM is created for an Infinite Volume:

```
default repos_root_readonly_export_policy
```

When an Infinite Volume is added, two additional policies are also created:

```
default
repos_namespace_export_policy
repos_restricted_export_policy
repos_root_readonly_export_policy
```

These policies have the following default rules:

```
Vserver: IV
                                Policy Name: repos namespace export policy
                                Rule Index: 1
                           Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
                            RO Access Rule: anv
                            RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 0
                  Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                 Allow Creation of Devices: true
                NTFS Unix Security Options: fail
        Vserver NTFS Unix Security Options: -
                     Change Ownership Mode: restricted
             Vserver Change Ownership Mode: -
                                    Vserver: IV
                               Policy Name: repos namespace export policy
                                Rule Index: 2
                           Access Protocol: anv
Client Match Hostname, IP Address, Netgroup, or Domain: ::0/0
                           RO Access Rule: anv
                            RW Access Rule: any
User ID To Which Anonymous Users Are Mapped: 0
                 Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                 Allow Creation of Devices: true
                NTFS Unix Security Options: fail
        Vserver NTFS Unix Security Options: -
                    Change Ownership Mode: restricted
             Vserver Change Ownership Mode: -
                                    Vserver: IV
                               Policy Name: repos_root_readonly_export_policy
                                Rule Index: 1
                           Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: 0.0.0.0/0
                            RO Access Rule: any
                            RW Access Rule: never
User ID To Which Anonymous Users Are Mapped: 0
                  Superuser Security Types: any
              Honor SetUID Bits in SETATTR: true
                Allow Creation of Devices: true
                NTFS Unix Security Options: fail
        Vserver NTFS Unix Security Options:
                     Change Ownership Mode: restricted
             Vserver Change Ownership Mode: -
```

```
Vserver: IV
Policy Name: repos_root_readonly_export_policy
Rule Index: 2
Access Protocol: any
Client Match Hostname, IP Address, Netgroup, or Domain: ::0/0
RO Access Rule: any
RW Access Rule: never
User ID To Which Anonymous Users Are Mapped: 0
Superuser Security Types: any
Honor SetUID Bits in SETATTR: true
Allow Creation of Devices: true
NTFS Unix Security Options: fail
Vserver NTFS Unix Security Options: -
Change Ownership Mode: restricted
Vserver Change Ownership Mode: -
```

**Note:** The policies named "default" and "repos\_restricted\_export\_policy" do not contain any rules by default.

For information about how these rules affect access, see section 3.4, "Translation of NFS Export Policy Rules from 7-Mode to Clustered Data ONTAP."

#### Infinite Volume Junction Paths

By default, if no junction path is specified when creating an Infinite Volume, the path is /NS. This behavior differs from FlexVol behavior, in which a junction path is created only if one has been specified. To control this behavior, either specify the junction path at volume creation or unmount and remount the Infinite Volume to the desired path.

# **Configuring the Change Ownership Policy**

Chown-mode can be set on a storage virtual machine or in an NFS export rule to control the ability of regular users to change file ownership. There are two values: restricted and unrestricted. Unrestricted allows a regular user who owns a file to change the ownership of that file. When restricted, such attempts to change ownership are denied. Note that privileged root (-superuser=any) can still change the ownership of any file.

The chown-mode option is restricted by default and only available at advanced privilege.

```
cluster::> set advanced
cluster::*> vserver nfs modify -vserver [SVM] -chown-mode
<resticted|unrestricted|use_export_policy>
```

If the Vserver-level chown-mode option is set to use\_export\_policy, the restricted/unrestricted behavior is controlled using an export-policy rule.

```
cluster::*> export-policy rule modify -vserver [SVM] -policyname repos_namespace_export_policy
-chown-mode <restricted|unrestricted>
```

# **Configuring ACL Preserve on Mode Change**

In unified security style, preserving ACLs on mode change applies to all (NTFS and NFSv4) ACLs.<sup>2</sup>

<sup>&</sup>lt;sup>2</sup> In UNIX or mixed security style, this option applies only to NFSv4 ACLs. This option is not relevant in NTFS security style because NFS permission change operations are blocked.

When v4-acl-preserve is enabled, it is not possible to affect (add, modify, or remove) Windows ACEs using NFSv3. A chmod command can manipulate the NFS well-known principal ACEs (OWNER@, GROUP@, and EVERYONE@), but it cannot manipulate any other ACEs in the ACL.

When v4-acl-preserve is disabled, a chmod command replaces an existing NTFS or NFSv4 ACL with the mode bits specified by the command.

The v4-acl-preserve option is enabled by default and only available at advanced privilege.

cluster::> set advanced cluster::> vserver nfs modify -vserver [SVM] -v4-acl-preserve <enable|disable>

# 14 NFS Performance Monitoring and Data Gathering

In clustered Data ONTAP, EMS messages are viewed differently than they are in 7-Mode. In 7-Mode, the /etc/messages file located in /vol/vol0 can be viewed using CLI with rdfile or using NFS or CIFS. Clustered Data ONTAP currently does not provide NAS protocol visibility for logs. However, there are various ways to view the log files.

# **Viewing Log Files**

#### To view EMS errors:

```
cluster::> event log show
```

# SecD Troubleshooting

SecD provides a number of diag-level commands to troubleshoot authentication and permissions issues. The following information shows examples of commands to use for various scenarios. All commands are at the diagnostic level (denoted by \* in the CLI prompt). Exercise caution while at the diagnostic level.

# Check name mapping functionality:

```
cluster::*> diag secd name-mapping show -node nodel -vserver vs0 -direction unix-win -name
ldapuser
ldapuser maps to WIN2K8\ldapuser
```

#### Translate user names and groups into SIDs or UIDs:

```
cluster::*> diag secd authentication translate -node node1 -vserver vs0 -unix-user-name ldapuser
55

cluster::*> secd authentication translate -node node1 -vserver vs0 -win-name DOMAIN\ldapuser
S-1-5-21-2216667725-3041544054-3684732124-1123

cluster::*> secd authentication translate -node node1 -vserver vs0 -unix-group-name unixadmins
503
```

#### Enable/disable debug-level logging in SecD:

```
cluster::*> diag secd trace set -node <nodename> -trace-all [yes|no]
```

#### Check user name credentials and group membership as SecD sees them:

```
cluster::*> diag secd authentication show-creds -node node1 -vserver vs0 -unix-user-name ldapuser
-list-name true -list-id true

UNIX UID: 55 (ldapuser) <> Windows User: S-1-5-21-2216667725-3041544054-3684732124-1123
(DOMAIN\ldapuser (Domain User))

GID: 513 (Domain Users)
Supplementary GIDs:
503 (unixadmins)

Windows Membership:
S-1-5-21-2216667725-3041544054-3684732124-513 DOMAIN\Domain Users (Domain group)
S-1-5-21-2216667725-3041544054-3684732124-1108 DOMAIN\unixadmins (Domain group)
S-1-5-32-545 BUILTIN\Users (Alias)
User is also a member of Everyone, Authenticated Users, and Network Users

Privileges (0x80):
```

#### Restart SecD process (Note: This is a disruptive operation):

```
cluster::*> diag secd restart -node <nodename>
```

**Note:** Restarting SecD is not necessary in most cases and should be done only as a last resort. Restarting SecD is not needed to set log tracing. It is used only to clear all caches at once, fix configuration replay issues, or clear a hung process.

### **NFS Troubleshooting Basics**

The following section covers some NFS troubleshooting basics to assist in resolving configuration issues that cause access problems with NFS mounts.

When troubleshooting NFS access issues, it is important to note where in the process the NFS request is failing. For example, a failure during mount generally has a much different root cause than a failure during file access.

Export policies and rules are some of the most common issues in clustered Data ONTAP NFS access issues. For information about export policies and rules, see the <u>section earlier in this document about export policies and rules</u>.

### **Cannot Mount**

The following section covers common errors and scenarios in which an NFS mount fails to a clustered Data ONTAP system. The section also covers how to resolve the issue.

Note: The 7-Mode option nfs.mountd.trace is currently not available in clustered Data ONTAP.

Table 21) Common mount failures.

Error	What to Check	How to Resolve
Access denied by server while mounting	NFS client  - If using Kerberos, is the configuration correct? See TR-4073 for details.  - If using AUTH_UNIX or AUTH_SYS, does the user resolve in the name service?  NFS server	Review the NFS client configuration.  Review the NFS server configuration, export policies, and rules and make corrections.
	<ul><li>NFS server options.</li><li>Can the user be resolved by the server into a UID?</li><li>Is SecD running?</li></ul>	
	<ul> <li>Export policy rule(s) of the volume.</li> <li>Export policy rule(s) of the parent volume(s).</li> </ul>	
	Common mistakes in export policies include:  - No rule defined in export policy.  - Clientmatch is incorrect	

	(such as 0.0.0.0 instead of 0.0.0.0/0 for all clients).	
	<ul> <li>Client match does not allow client attempting access.</li> </ul>	
	<ul> <li>Access protocol does not allow NFS.</li> </ul>	
	<ul> <li>RO policy is set to incorrect value.</li> </ul>	
	<ul> <li>User is squashed to the anon user, which does not have permissions to the volume.</li> </ul>	
	NFS server options that could cause access-denied errors during mount include:	
	- NFS mount root only.	
Requested NFS version or transport protocol is not supported	NFS server  - NFS server options for the NFS version.  - TCP/UDP settings.  - NFS server is running.  Network/firewall  - Verify that the firewall is not blocking NFS or related ports.  - Verify that the data LIF allows NFS.  SVM  - Verify that the SVM allows NFS as a protocol.	Review the NFS server configuration to verify that the protocol and NFS version are enabled and the server is running.  Review the network settings and data LIFs to verify that NFS is allowed.  Review the SVM to verify that NFS is allowed.
Mount hangs indefinitely	Network  - Is the LIF up? Can it be pinged?  - Is the DNS entry correct?  - Is the LIF at home? Are failover groups configured properly?  - Is the firewall blocking any of the NFS ports?	Review the network settings. Review the data LIFs on the cluster.

Mount syntax	Review the mount syntax.		
<ul> <li>Is the right mount path specified?</li> </ul>	Review the NFS volume.		
NFS server			
<ul> <li>Is the junction the same as the mount path?</li> </ul>			
- Is the volume mounted?			
<ul> <li>If using LS mirrors, have they been updated?</li> </ul>			
NFS client			
- If volume permission changes have been made, has the volume been remounted?			
- Is the volume mounted with no access cache?			
NFS client  - Is something already mounted to that mount point?	Review the output of the mount command.		
NFS client - Does the mount point exist?	Use a valid mount point.		
NFS client  - Does the user have permission to mount?  NFS server  - Is root-only mount set?	Check client and server configuration.		
NFS client  - Does the user have root access?  NFS server  - Does the client export as root?	Check export policies and rules. Check client configuration for root access.		
- Is superuser set properly?			
	- Is the right mount path specified?  NFS server - Is the junction the same as the mount path? - Is the volume mounted? - If using LS mirrors, have they been updated?  NFS client - If volume permission changes have been made, has the volume been remounted? - Is the volume mounted with no access cache?  NFS client - Is something already mounted to that mount point?  NFS client - Does the mount point exist?  NFS client - Does the user have permission to mount?  NFS server - Is root-only mount set?  NFS client - Does the user have root access?  NFS server - Does the client export as root? - Is superuser set		

For information regarding mount issues using NFS Kerberos, see <u>TR-4073: Secure Unified Authentication</u> for more details.

### **Permission Denied/Access Issues**

The following section covers issues in which an NFS mount succeeds but accessing the mount fails. The section also covers how to resolve the issue. Not all scenarios are covered.

Table 22) Common access issues.

Error	What to Check	How to Resolve
Permission denied (while accessing mount/reading/writing)	- Do the data volume's security settings permit the user access?  - Do the parent volume's security settings permit the user access?  - What is the volume's security style? Does the user attempting access map to a valid Windows user if the security style is NTFS?  - If able to cd but not able to read or write, but UNIX permissions seem to allow access to all users, does the cluster know the user attempting access?	Verify and modify the volume's security.  Verify and modify the export policy rule to allow access.  Verify that the user can map properly into name service.  Verify that the user exists in name service.
Permission denied (while attempting chmod/chown/chgrp)  Operation not permitted (while chown/chmod/chgrp)	NFS server  - Is chown allowed by anyone other than root?  - Is the user the owner of the file?  NFS client - Is the user root?	Change the NFS server and export policy rule options for chown to "unrestricted."
Not a directory (when traversing Snapshot directory)	NFS client - Check the kernel version.	See <u>Bugzilla 798809</u> .

## Files Written as "Nobody"

The following section covers issues in which NFSv4 clients show file ownership as the "nobody" user. The section also covers how to resolve the issue. Not all scenarios are covered.

A stale file handle error occurs when the server file system has changed and the file handle is no longer valid. For example: Client A opens file xxx.yyy for edit, Client B deletes this file, Client A goes to save the edit, Client A gets a stale file handle error.

This situation can occur not just for operations on individual files, but also because of changes in directory structure.

Table 23) Files written as "nobody" in NFSv4.

Error	What to Check	How to Resolve
No error; files written as the "nobody" user (or some other unexpected user)	Possible NFS client  - /var/log/messages file.  - Is the NFSv4 domain specified in /etc/idmapd.conf?  - What is the user name attempting access? Can the client resolve the name in the name service?  NFS server  - Can the cluster translate the user name to a UID?  - Is the NFSv4 domain set?  - If the user writing the file is root, does the export policy squash root to the anon user (superuser = none)?  - Is the name service working properly?	Fix the NFSv4 domain ID.  Verify that the user name matches the NFSv4 domain user name exactly (case sensitive).  Verify that the client and cluster can resolve the user name.  Adjust the export policy rule to allow superuser access if desired.

## **Stale File Handle on NFS Mount**

The following section covers scenarios in which a stale file handle error might occur and how to resolve them. Not all scenarios are covered.

Table 24) Stale file handle on NFS mount.

Error	What to Check	How to Resolve
mount.nfs: Stale file handle	NFS server  - Did the junction path for the volume change?  - Is the volume mounted?  - Does the volume still exist?  NFS client  - Is the mount already mounted somewhere else on the client?	Verify and remount the volume from the client.  Mount the volume from the cluster if it is not mounted.
Cannot open directory: Stale file handle	NFS server  - Was the fsid-change option modified?	Remount the volume from the client.
Was not found in /proc/mounts	NFS client  - Does the mount show up in /proc/mounts?  - Does the mount show (deleted) in the output?	Reboot the client.

## Performance Monitoring in Clustered Data ONTAP 8.1 and Earlier

In 7G, nfsstat -d was a common and popular command to provide information about NFS operations. In clustered Data ONTAP, nfsstat -d does not exist. However, the statistics command can be used with a variety of parameters to get details of NFS metadata operations at the individual cluster node level. These commands are available at advanced privilege.

cluster::> statistics show-periodic -node node1
-object nfs3 -interval 1

null	gattr	sattr	lookup	access	rsym	read	write	create	mkdir	symln	mknod	remove	rmdir	rename	link
0	0	0	0	0	0	15	11	0	0	0	0	0	0	0	0
0	16	0	0	0	0	45	6	0	0	0	0	0	0	0	0
0	0	0	0	0	0	12	2	0	0	0	0	0	0	0	0
0	0	0	0	0	0	47	16	0	0	0	0	0	0	0	0
0	0	0	0	0	0	11	2	0	0	0	0	0	0	0	0
0	22	0	0	9	0	12	5	0	0	0	0	0	0	0	0
0	16	0	0	0	0	49	5	0	0	0	0	0	0	0	0

The following command provides information from each individual volume about NFS workload and latency.

```
cluster::*> statistics show-periodic -node node1
-object volume -instance vs2_nfs4_data3
```

instance name	node name	instance uuid	avg latency	total ops	read data	read latency	read_ops	write data	write latency	write ops	other latency	other ops	nts read data	nfs read latency	nts read ops
0	0	0	Ous	0	ОВ	Ous	0	ÛB	0us	0	0us	0	ОВ	Ous	0
0	0	0	0us	0	0B	0us	0	0B	0us	0	0us	0	0B	0us	0
0	0	0	0us	0	0B	0us	0	0B	0us	0	0us	0	0B	0us	0

The following command identifies the type of protocol in use and the details of the RPC calls. These are available in **advanced privilege**.

```
Cluster::*> statistics oncrpc show-rpc-calls -node nodel -protocol tcp

Node: nodel

Transport Protocol: tcp

Bad Procedure Calls: 0 -

Bad Length Calls: 0 -

Bad Header Calls: 8 0/s:16s

Bad Calls: 8 0/s:16s

Bad Program Calls: 0 -

Total Calls: 116491426 58/s:16s
```

Per-client statistics are also available to identify which client IP addresses are generating what NFS traffic in clustered Data ONTAP. These are available in **advanced privilege**.

```
cluster::> set advanced
cluster::*> statistics settings modify -client-stats enabled

Warning: System performance may be significantly impacted. Are you sure?
Do you want to continue? {y|n}: y

cluster::*> statistics show -object client
```

Node: fas3070c-svl19 Object.Instance.Counter Value	Delta
client.172.17.44.106.hostname	
fas6080c-svl14.iop.eng.netapp.com	
client.172.17.44.106.total-ops 0	-
client.172.17.44.106.nfs2-ops 0	-
client.172.17.44.106.nfs3-ops 0	-
client.172.17.44.106.nfs4-ops 0	-
client.172.17.44.106.cifs-ops 0	-
client.172.17.44.106.recv-data 100B	-
client.172.17.44.106.sent-data 0B	-
client.172.17.44.106.recv-packets 2	-
client.172.17.44.106.avg-latency-remote Ous	-
client.172.17.44.151.hostname	
client.172.17.44.151.total-ops 0	_
client.172.17.44.151.nfs2-ops 0	_
client.172.17.44.151.nfs3-ops 0	_
client.172.17.44.151.nfs4-ops 0	_
client.172.17.44.151.cifs-ops 0	-

We can also drill down to details for a single client.

```
cluster::*> statistics show -object client -instance 172.17.44.106
Node: fas3070c-svl19
                                                                                            Value
                                                                                                                  Delta
      Object.Instance.Counter
      client.172.17.44.106.hostname
                                               fas6080c-svll4.iop.eng.netapp.com
      client.172.17.44.106.total-ops
      client.172.17.44.106.nfs2-ops
      client.172.17.44.106.nfs3-ops
client.172.17.44.106.nfs4-ops
                                                                                                  0
                                                                                                  0
      client.172.17.44.106.cifs-ops
client.172.17.44.106.recv-data
client.172.17.44.106.sent-data
                                                                                              200B
                                                                                                             1B/s:80s
                                                                                                 0В
      client.172.17.44.106.recv-packets
client.172.17.44.106.sent-packets
client.172.17.44.106.avg-latency
                                                                                                               0/s:80s
                                                                                                  4
                                                                                                0us
      client.172.17.44.106.nlm-ops
client.172.17.44.106.mount-ops
                                                                                                   0
      client.172.17.44.106.local-ops
                                                                                                  0
      client.172.17.44.106.remote-ops
client.172.17.44.106.avg-latency-local
client.172.17.44.106.avg-latency-remote
                                                                                                  0
                                                                                                0us
                                                                                                0us
17 entries were displayed.
```

In clustered Data ONTAP, use the locks show command to list all the locks assigned to files residing in a specific volume under an SVM.

```
cluster::*> vserver locks show
Vserver: vs2_nfs4
Volume Object Path
                                  LIF
                                             Protocol Lock Type Client
vs2_nfs4_data2
        /nfs4_ds2/app/grid/product/11.2.0/dbhome_1/oc4j/j2ee/home/persistence/jms.state
                                  vs2_nfs4_data1
                                                       byte-range 172.17.37.103
                                             nlm
               Bytelock offset(Length): 0 (9223372036854775807)
        /nfs4_ds2/app/grid/product/11.2.0/dbhome_1/oc4j/j2ee/home/persistence/Oc4jJmsExceptionQueue
                                  vs2_nfs4_data1
                                             nlm
                                                       byte-range 172.17.37.103
               Bytelock Offset(Length): 0 (9223372036854775807)
2 entries were displayed.
```

The locks break command can be used to remove a lock on a particular file.

```
cluster::*> locks break -vserver vs2 -volume vs2_nfs4_data2 -lif vs2_nfs4_data1 -path
/nfs4_ds2/app/grid/product/11.2.0/dbhome 1/oc4j/j2ee/home/persistence/jms.state
```

Perfstat8 is also available for clustered Data ONTAP for use in performance collection. Each version of Perfstat improves data collection for clusters.

"Admin" and "diag" user access is needed to run the perfstat command.

The following command illustrates how to capture a perfstat for a clustered Data ONTAP cluster. The cluster management IP should always be used. Perfstat discerns the nodes in the cluster and collects data for each node. In this example, the cluster management IP is 172.17.37.200 for a 4-node cluster. This perfstat collects 24 iterations with a sleep time of 300 seconds between iterations. More examples are available from the Perfstat8 tool download page:

https://support.netapp.com/NOW/download/tools/perfstat/perfstat8.shtml

A valid NetApp Support account is required for access to the perfstat8 tool.

```
[root@linux]# ./perfstat8 --verbose -i 24,300 172.17.37.200
```

## Performance Monitoring in 8.2 Clustered Data ONTAP

In clustered Data ONTAP 8.2, performance monitoring commands changed slightly because the underlying performance monitoring subsystems got an overhaul. As a result, legacy performance commands use the statistics-v1 command set, while the newer performance monitoring commands leverage the statistics command.

Keep the following points in mind for performance commands in clustered Data ONTAP 8.2:

- NFS per-client statistics do not exist under statistics in 8.2; they exist only under statistics-
- In 8.2.1, per-client statistics work properly with the regular statistics commands.
- Regular statistics commands can implement multiple counters. These are separated by a pipe symbol rather than comma-separated, as seen in previous versions of clustered Data ONTAP.

### Example:

```
cluster::> statistics show -object zapi|aggregate
```

• Per-client statistics currently do not resolve IP addresses to names.

**Note:** Currently there is no way to sort "top clients" in per-client statistics. Newer releases of clustered Data ONTAP introduce new performance improvements and bug fixes so that statistics-v1 is no longer necessary.

For more information regarding performance in clustered Data ONTAP, see <u>TR-4211: NetApp Storage Performance Primer for Clustered Data ONTAP 8.2.</u>

## **Determining What Type of Virtual Machine Is Hosted on NFS**

In clustered Data ONTAP 8.3 and later, it is possible to determine what type of virtual machine is accessing the storage using statistics captured in the counter manager. Use the following commands to show the statistics. These are available in **diagnostic privilege**.

```
cluster::> set diag
cluster::*> statistics show -object wafl -counter wafl_nfs_application_mask -raw
```

The output of these statistics shows masks for specific virtual machines. The masks are described later.

Table 25) Virtual machine statistic masks.

VM Type	Mask
None	0
ESX/ESXi	1
Citrix Xen	2
Red Hat KVM	4

If more than one virtual machine application is being used, then the masks are added together to determine which ones are in use. For example, if ESX/ESXi and Red Hat KVM are in use, then the masks would be 1 + 4 = 5.

To collect these statistics, the sample must be started and stopped using the statistics start command. The following is an example of what those statistics look like in **diagnostic privilege**.

#### **Example:**

```
cluster::> set diag
cluster ::*> statistics start -object wafl
Statistics collection is being started for Sample-id: sample 454
cluster ::*> statistics stop
Statistics collection is being stopped for Sample-id: sample 454
cluster::*> statistics show -object wafl -counter wafl nfs application mask
Object: wafl
Instance: wafl
Start-time: 2/2/2015 10:08:09
End-time: 2/2/2015 10:08:28
Elapsed-time: 19s
Node: node1
   Counter
                                                         Value
   ______
   wafl nfs application mask
Object: wafl
Instance: wafl
Start-time: 2/2/2015 10:08:09
End-time: 2/2/2015 10:08:28
Elapsed-time: 19s
Node: node2
   Counter
                                                          Value
   wafl_nfs_application_mask
2 entries were displayed.
```

## **Determining If Oracle Is in Use**

Additionally, the wafl counters can determine if Oracle data is hosted on NFS.

```
cluster::> set diag
cluster::*> statistics show -object wafl -counter wafl_nfs_oracle_wcount -raw
```

### **Example:**

```
cluster::*> statistics show -object wafl -counter wafl nfs oracle wcount
Object: wafl
Instance: wafl
Start-time: 2/2/2015 10:08:09
End-time: 2/2/2015 10:08:28
Elapsed-time: 19s
Node: node1
   Counter
                                                       Value
   _____
   wafl_nfs_oracle_wcount
Object: wafl
Instance: wafl
Start-time: 2/2/2015 10:08:09
End-time: 2/2/2015 10:08:28
Elapsed-time: 19s
Node: node2
   Counter
                                                       Value
  wafl nfs oracle wcount
                                                        188
2 entries were displayed.
```

# **Appendix**

## **NFS Server Option List in Clustered Data ONTAP**

Table 26) NFS options in clustered Data ONTAP.

NFS Option	Version	Privilege Level	Definition
NFS Access (-access)	All	Admin	Access allowed or not.
NFSv3 (-v3)	All	Admin	Enable/disable NFSv3.
NFSv4 (-v4.0)	8.1 and later	Admin	Enable/disable NFSv4.
UDP (-udp)	All	Admin	Enable/disable UDP.
TCP (-tcp)	All	Admin	Enable/disable TCP.
Spin Authentication (-spinauth)	All	Admin	Enable/disable spinauth; deprecated.
Default Windows User (-default-win-user)	All	Admin	Specify the default Windows user for multiprotocol access.
NFSv4.0 ACL Support (-v4.0-acl)	8.1 and later	Admin	Enable/disable NFSv4 ACL support.
NFSv4.0 Read Delegation (-v4.0-read-delegation)	8.1 and later	Admin	Enable/disable NFSv4 read and write delegations.
NFSv4.0 Write Delegation (-v4.0-write-delegation)			
NFSv4 ID Mapping Domain (-v4-id-domain)	8.1 and later	Admin	Specify the NFSv4 ID domain.
NFSv4.1 Minor Version Support (-v4.1)	8.1 and later	Admin	Enable/disable NFSv4.1 minor version support.
Rquota Enable (-rquota)	8.1 and later	Admin	Enable/disable rquota support.
pNFS Support (-v4.1-pnfs)	8.1 and later	Admin	Enable/disable pNFS support.

	1		
NFSv4.1 ACL Support (-v4.1-acl)	8.1 and later	Admin	Enable/disable NFSv4.1 ACL support.
NFS vStorage Support (-vstorage)	8.1 and later	Admin	Enable/disable NFS vStorage support.
Default Windows Group (-default-win-group)	8.2 and later	Admin	Set the default Windows group, Infinite Volume only. See TR-4037: Introduction to NetApp Infinite Volume for details about Infinite Volume.
NFSv4.1 Read Delegation (-v4.1-read-delegation)	8.2 and later	Admin	Enable/disable NFSv4.1 read and write delegations.
NFSv4.1 Write Delegation (-v4.1-write-delegation)			
NFS Mount Root Only (-mount-rootonly)	8.2 and later	Admin	Allow mounts only from the root user.
NFS Root Only (-nfs-rootonly)	8.2 and later	Admin	Allow NFS only from the root user.
RPC GSS Context Cache (-rpcsec-ctx-high)  RPC GSS Context Idle (-rpcsec-ctx-idle)	All	Advanced	Specifies the max number of RPCSEC_GSS contexts and the idle timeout of the cache. See RFC 2203 for information about RPCSEC_GSS contexts.
NFSv2 (-v2)	8.0 and 8.1.x	Advanced	Enable/disable NFSv2 (removed from clustered Data ONTAP 8.2).
NFSv3 EJUKEBOX Error (-enable-ejukebox)	All	Advanced	Enables/disables NFSv3 EJUKEBOX errors. Jukebox errors are "NFS not responding" errors. This option is enabled by default.
Include EJUKEBOX Replies in the NFS Replay Cache (-cache-ejukebox)	8.0 only	Advanced	Specifies whether EJUKEBOX errors are cached for NFSv3.
Require All NFSv3 Reads to Return Read Attributes (-v3-require-read-attributes)	All	Advanced	Specifies whether NFSv3 read operations are required to return read attributes.
Show Change in FSID as NFSv3 Clients Traverse File Systems	All	Advanced	Specifies whether Data ONTAP shows changes in file system identifiers (FSIDs) as NFSv3 clients traverse file systems. If

(-v3-fsid-change)			you change the value of this parameter, clients must remount any paths over which they use NFSv3.
Enable the Dropping of a Connection When an NFSv3 Request Is Dropped (-v3-connection-drop)	All	Advanced	Option to enable/disable connection drops if an NFSv3 connection is dropped; useful for older clients that might not handle connection drops properly; enabled by default.
NFS Response Trace Enabled (-trace-enabled) NFS Response Trigger (-trigger)	All	Advanced	Specifies whether Data ONTAP logs NFS requests when they exceed the NFS response trigger time, which is defined by the –trigger parameter.
UDP Maximum Transfer Size (-udp-max-xfer-size) TCP Maximum Transfer Size (-tcp-max-xfer-size)	All	Advanced	Specifies the maximum transfer size (in bytes) that the storage system negotiates with the client for TCP and UDP connections. Range for UDP is 8192 to 57344. Range for TCP is 8192 to 65536.
NFSv3 TCP Maximum Read Size (-v3-tcp-max-read-size) NFSv3 TCP Maximum Write Size (-v3-tcp-max-write-size)	8.1 and later	Advanced	Specifies the maximum transfer size (in bytes) that the storage system negotiates with the client for TCP transport of data for NFSv3 read and write requests. The range is 8192 to 1048576 for reads and 8192 to 65536 for writes. The default setting is 65536 when created. Number specified depends on the application vendor's recommendation.
Show Change in FSID as NFSv4 Clients Traverse File Systems (-v4-fsid-change)	8.1 and later	Advanced	Specifies whether Data ONTAP shows changes in file system identifiers (FSIDs) as NFSv4 clients traverse file systems. If you change the value of this parameter, clients must remount any paths over which they use NFSv4.
NFSv4.0 Referral Support (-v4.0-referrals)	8.1 and later	Advanced	Specifies whether Data ONTAP supports NFSv4.0 referrals. The default setting is disabled when created. You can set this parameter to Enabled only if the -v4-fsid-change option is also set to Enabled. If clients accessing the node do not support NFSv4.0 referrals, set this option to Disabled; otherwise, those clients are not able to access the file system. This parameter is not supported for SVMs with Infinite Volume.

		ı	
NFSv4 Validate UTF-8 Encoding of Symbolic Link Data (-v4-validate-symlinkdata)	8.1 and later	Advanced	Specifies whether Data ONTAP validates the UTF-8 encoding of symbolic link data. The default setting is Disabled when created. This is useful for international implementations of NFSv4.
NFSv4 Lease Timeout Value (-v4-lease-seconds) NFSv4 Grace Timeout Value (-v4-grace-seconds)	8.1 and later	Advanced	Specifies the locking lease and grace reclaim timeouts.
Preserves and Modifies NFSv4 ACL (-v4-acl-preserve)	8.1 and later	Advanced	Enables/disables preservation of the NFSv4 ACL in the event a chmod is performed.
NFSv4.1 Implementation ID Domain (-v4.1-implementation-domain)  NFSv4.1 Implementation ID Name (-v4.1-implementation-name)  NFSv4.1 Implementation ID Date (-v4.1-implementation-date)	8.1 and later	Advanced	Specifies the NFSv4.1 implementation information.
NFSv4.1 Referral Support (-v4.1-referrals)	8.1 and later	Advanced	Specifies whether Data ONTAP supports NFSv4.1 referrals. The default setting is Disabled when created. You can set this parameter to Enabled only if the -v4-fsid-change option is also set to Enabled. If clients accessing the node do not support NFSv4.1 referrals, set this option to Disabled; otherwise, those clients are not able to access the file system. This parameter is not supported for SVMs with Infinite Volume.
Number of Slots in the NFSv4.x Session Slot Tables (-v4.x-session-num-slots) Size of the Reply That Will Be Cached in Each NFSv4.x Session Slot (-v4.x-session-slot-reply-cachesize)	8.2 and later	Advanced	Specifies the number of session slot tables and the size of those slots. Adjusting these values depends on the application and OS using them and can affect performance (positively or negatively). For details about slot tables, see RFC 5661.

	I	1	T
Maximum Number of ACEs per ACL (-v4-acl-max-aces)	8.2 and later	Advanced	Specifies the maximum number of allowed ACEs per ACL. Default is 400. The range is 192 to 1,024. Setting the value higher than the default can affect performance, so set only when necessary.
Validation of Qtree IDs for Qtree File Operations (-validate-qtree-export)	8.2.1 and later	Advanced	This optional parameter specifies whether clustered Data ONTAP performs an additional validation on qtree IDs. The default setting is Enabled. This parameter is only effective when a qtree is assigned an export policy.
Showmount Enabled (-showmount)	8.3 and later	Advanced	This optional parameter specifies whether to allow or disallow clients to see all of the Vserver's NFS exports list using the showmount -e command. The default setting is Disabled.
AUTH_SYS and RPCSEC_GSS Auxiliary Groups Limit (-extended-groups-limit)	8.3 and later	Advanced	This optional parameter specifies the maximum number of auxiliary groups supported over RPC security options AUTH_SYS and RPCSEC_GSS in Data ONTAP. The range is 32 to 1,024. The default value is 32.
AUTH_SYS Extended Groups Enabled (-auth-sys-extended-groups)	8.3 and later	Advanced	This optional parameter specifies whether Data ONTAP supports fetching auxiliary groups from a name service rather than from the RPC header. The default setting is Disabled.
Set the Protocol Used for Name Services Lookups for Exports (-name-service-lookup-protocol)	8.3 and later	Advanced	This optional parameter specifies the protocol to use for doing name service lookups. The allowed values are TCP and UDP. The default setting is UDP.
Permitted Kerberos Encryption Types (-permitted-enc-types)	8.3 and later	Advanced	This optional parameter specifies the permitted encryption types for Kerberos over NFS. The default setting is des,des3,aes-128,aes-256.
NFS Mount Daemon Port (-mountd-port)	8.3 and later	Advanced	This optional parameter specifies which port the NFS mount daemon (mountd) uses. The default setting is 635.
Network Lock Manager Port (-nlm-port)	8.3 and later	Advanced	This optional parameter specifies which port the network lock manager (NLM) uses. The default setting is 4045.

Network Status Monitor Port (-nsm-port)	8.3 and later	Advanced	This optional parameter specifies which port the network status monitor (NSM) uses. The default setting is 4046.
NFS Quota Daemon Port (-rquotad-port)	8.3 and later	Advanced	This optional parameter specifies which port the NFS quota daemon (rquotad) uses. The default setting is 4049.
Set the Protocol Used for Name Services Lookups for Exports (-name-service-lookup-protocol)	8.3.1 and later	Advanced	This optional parameter specifies the protocol to use for doing name service lookups. The allowed values are TCP and UDP. The default setting is UDP.
NFSv3 MS-DOS Client Support (-v3-ms-dos-client)	8.2.3 and later; 8.3.1 and later	Admin	This optional parameter specifies whether to enable access for NFSv3 MS-DOS clients. The default setting is disabled at the time of creation. This parameter is not supported for Vservers with Infinite Volume.
Time to Live Value (in msecs) of a Positive Cached Credential (-cached-cred-positive-ttl)	8.3.1 and later	Advanced	This optional parameter specifies the age of the positive cached credentials after which they are cleared from the cache. The value specified must be from 60000 through 604800000. The default setting is 86400000.
Time to Live Value (in msecs) of a Negative Cached Credential (-cached-cred-negative-ttl)	8.3.1 and later	Advanced	This optional parameter specifies the age of the negative cached credentials after which they are cleared from the cache. The value specified must be from 60000 through 604800000. The default setting is 7200000.
Skip Permission Check for NFS Write Calls from Root/Owner (-skip-root-owner-write-perm- check)	8.3.1 and later	Advanced	This optional parameter specifies if permission checks are to be skipped for NFS WRITE calls from root/owner. For copying read-only files to a destination folder that has inheritable ACLs, this option must be enabled.  Warning: When enabled, if an NFS client does not make use of an NFS ACCESS call to check for user-level permissions and then tries to write onto read-only files, the operation succeeds. The default setting is disabled.
Display maximum NT ACL Permissions to NFS Client (-ntacl-display-permissive-	8.3.1 and later	Advanced	This optional parameter controls the permissions that are displayed to NFSv3 and NFSv4 clients on a file or directory that

perms)			has an NT ACL set. When true, the displayed permissions are based on the maximum access granted by the NT ACL to any user. When false, the displayed permissions are based on the minimum access granted by the NT ACL to any user. The default setting is false.
Trust No-Match Result from Any Name Service Switch Source During Netgroup Lookup (-netgroup-trust-any-ns-switch-no-match)	8.3.1 and later	Advanced	This optional parameter specifies if you can consider a no-match result from any of the netgroup ns-switch sources to be authoritative. If this option is enabled, then a no-match response from any of the netgroup ns-switch sources is deemed conclusive even if other sources could not be searched. The default setting is "disabled," which causes all netgroup ns-switch sources to be consulted before a no-match result is deemed conclusive.
DNS Domain Search Enabled During Netgroup Lookup (-netgroup-dns-domain-search)	8.3.1 and later	Advanced	If you enable this optional parameter, during client access check evaluation in a netgroup, Data ONTAP performs an additional verification so that the domain returned from DNS for that client is listed in the DNS configuration of the Vserver. Doing so enables you to validate the domain when clients have the same short name in multiple domains. The default setting is enabled.
Map Unknown UID to Default Windows User (-map-unknown-uid-to-default- windows-user)	8.3.1 and later	Advanced	If you enable this optional parameter, unknown UNIX users that do not have a name mapping to a Windows user are mapped to the configured default Windows user. This allows all unknown UNIX users access with the credentials of the default Windows user. If you disable it, all unknown UNIX users without name mapping are always denied access. By default, this parameter is enabled.
Ignore the NT ACL Check for NFS User 'root' (-ignore-nt-acl-for-root)	8.3.1 and later	Advanced	This optional parameter specifies whether Windows ACLs affect root access from NFS. If this option is enabled, root access from NFS ignores the NT ACL set on the file or directory. If auditing is enabled for the Vserver and there is no name-mapping present, then a default SMB credential (Builtin\administrator) is used for auditing and an EMS warning is generated. The

			default setting is "disabled," which causes NFS "root" to be mapped to a Windows account, like any other NFS user.
Use 64 Bits for NFSv3 FSIDs and File IDs (-v3-64bit-identifiers)	ONTAP 9.0 and later	Advanced	This optional parameter specifies whether ONTAP uses 64 bits (instead of 32 bits) for file system identifiers (FSIDs) and file identifiers (file IDs) that are returned to NFSv3 clients. If you change the value of this parameter, clients must remount any paths over which they are using NFSv3. When -v3-fsid-change is disabled, enable this parameter to avoid file ID collisions.
Ignore Client Specified Mode Bits and Preserve Inherited NFSv4 ACL When Creating New Files or Directories (-v4-inherited-acl-preserve)	ONTAP 9.0 and later	Advanced	This optional parameter specifies whether the client-specified mode bits should be ignored and the inherited NFSv4 ACL should be preserved when creating new files or directories. The default setting is disabled.
Lookup for the filename in unconverted language if converted language lookup fails (-v3-search-unconverted-filename)	ONTAP 9.0 and later	Advanced	This optional parameter specifies whether to continue the search with unconverted name while doing lookup in a directory.

# **Export Policy Rule Option List**

Table 27) Export policy rule options.

Export Policy Rule Option	Privilege Level	What It Does
Policy Name (-policyname)	Admin	Shows/sets policy name.
Rule Index (-ruleindex)	Admin	Sets the rule index for the export policy rule. This is the order in which the rules are applied.
Access Protocol (-protocol)	Admin	Shows/sets the protocols allowed by an export policy rule.
Client Match (-clientmatch)	Admin	Shows/sets the host name, IP, netgroups, subnet, or domain allowed to access using the export policy rule.

		T
RO Access/RW Access Rule (-rorule) (-rwrule)	Admin	Shows/sets the values for which the AUTH option (such as krb, sys, and so on) is allowed RW and RO access. None causes users to come in as anon. Never denies access.
User ID to Which Anonymous Users Are Mapped (-anon)	Admin	Shows/sets the user ID to which anonymous users are mapped.
Superuser (-superuser)	Admin	Determines the AUTH option that allows root/superuser access. None squashes root to anon.
Honor SetUID Bits in SETATTR (-allow-suid)	Admin	Specifies whether set user ID (suid) and set group ID (sgid) access is enabled by the export rule.
Allow Creation of Devices (-allow-dev)	Admin	Specifies whether the creation of devices is enabled by the export rule.
NTFS UNIX Security Options (-ntfs-unix-security-ops)	Advanced	Specifies whether UNIX-type permission changes on NTFS (Windows) volumes are prohibited (fail) or allowed (ignored) when the request originates from an NFS client.
Vserver NTFS UNIX Security Options (-ntfs-unix-security-ops-vs)	Advanced	Shows the SVM-wide setting for this option; can only be modified at the NFS server level.
Change Ownership Mode (-chown-mode)	Advanced	Controls whether or not users other than the superuser can chown. Can be overridden by the SVM-wide policy (see below).
Vserver Change Ownership Mode (-chown-mode-vs)	Advanced	Shows the SVM-wide setting for this option; can only be modified at the NFS server level. Must be set to "unrestricted" to allow the export policy rule to apply in NFSv4.

# NFSv3 Option Changes in Clustered Data ONTAP

Table 29 shows how to apply the 7-Mode options for NFSv3 in clustered Data ONTAP.

Table 28) NFSv3 configuration options in clustered Data ONTAP.

7-Mode Option	How to Apply	Remark
nfs.response.trace	vserver nfs modify -vserver vs0vs0 -trace-enabled	If this option is "on," it forces all NFS requests that have exceeded the time set in nfs.response.trigger to be logged. If this option is "off," only one message is logged per hour.
nfs.rpcsec.ctx.high	vserver nfs modify -vserver vs0vs0 -rpcsec-ctx-high	If set to a value other than zero, it sets a high-water mark on the number of stateful RPCSEC_GSS (see RFC 2203) authentication contexts. (Only Kerberos V5 currently produces a stateful authentication state in NFS.) If it is zero, then no explicit high-water mark is set.
nfs.rpcsec.ctx.idle	vserver nfs modify -vserver vs0vs0 -rpcsec-ctx-idle	This is the amount of time, in seconds, that an RPCSEC_GSS context (see the description for the nfs.rpcsec.ctx.high option) is permitted to be unused before it is deleted.
nfs.tcp.enable	vserver nfs modify -vserver vs0vs0 -tcp enabled	When this option is enabled, the NFS server supports NFS over TCP.
nfs.udp.xfersize	vserver nfs modify -vserver vs0vs0 -udp-max-xfer-size 32768	This is the maximum transfer size (in bytes) that the NFSv3 mount protocol should negotiate with the client for UDP transport.
nfs.v3.enable	vserver nfs modify -vserver vs0vs0 -v3 enabled	When enabled, the NFS server supports NFS version 3.

# NFSv4 Option Changes in Clustered Data ONTAP

The following table shows how to apply the 7-Mode options for NFSv4 in clustered Data ONTAP.

Table 30) NFSv4 configuration options in clustered Data ONTAP.

7-Mode Option	How to Apply	Remark
nfs.v4.enable	vserver nfs modify -vserver vs0 -v4 enabled	When this option is enabled, the NFS server supports NFS version 4.
nfs.v4.read_delegation	vserver nfs modify -vserver vs0 -v4-read-delegation	When this option is enabled, read delegations are supported for NFS version 4.
nfs.v4.write_delegation	vserver nfs modify -vserver vs0 -v4-write-delegation	When this option is enabled, write delegations are supported for NFS version 4.
nfs.tcp.xfersize	vserver nfs modify -vserver vs0 -tcp-max-xfer-size	This is the maximum transfer size (in bytes) that the NFS mount protocol should negotiate with the client for TCP transport.
nfs.v4.acl.enable	vserver nfs modify -vserver vs0 -v4-acl	Enable NFSv4 ACL support.
nfs.v4.reply_drop	vserver nfs modify -vserver vs0 -v4-reply-drop	This is a debugging operation to cause requests to be dropped to test client/server resiliency.
nfs.v4.id.domain	vserver nfs modify -vserver vs0 -v4-id-domain	This option controls the domain portion of the string form of user and group names as defined in the NFS version 4 protocol. The domain name is normally taken from the NIS domain in use or otherwise from the DNS domain. However, if this option is set, it overrides this default behavior.
locking.grace_lease_seconds	vserver nfs modify -vserver vs0 -v4-grace-seconds	This optional parameter specifies the time period in which clients attempt to reclaim their locking state from Data ONTAP during server recovery. By default, the grace period is 45 seconds. The minimum value is 1 more than the value of the -v4-lease-seconds parameter. The maximum value is 90.
nfs.v4.snapshot.active.fsid.enable	vserver nfs modify -vserver vs0 -v4-fsid-change	This affects the behavior of the fsid used for the .snapshot directory and entities in the .snapshot directory. The default behavior is that they use a different fsid than the active

kerberos.file_keytab.principal       vserver nfs kerberos-config modify -vserver vs0 -spn         kerberos.file_keytab.realm       vserver nfs kerberos-config modify -vserver vs0 -spn         nfs.kerberos.enable on/off       vserver nfs kerberos-config modify -vserver vs0 - kerberos enable/disable         kerberos.file_keytab.enable on/off       kerberos.file_keytab.enable = on:			copy of the files in the file system. When this option is enabled, the fsid is identical to that for files in the active file system. "Off" by default.
modify -vserver vs0 -spn  nfs.kerberos.enable on/off  vserver nfs kerberos-config modify -vserver vs0 - kerberos enable/disable  kerberos.file_keytab.enable on/off  kerberos.file_keytab.enable = on:     'vserver services kerberos-realm modify -kdc-vendor Other'  In this case, the keytab file must be added to the clustered Data ONTAP configuration:     'vserver nfs kerberos-	kerberos.file_keytab.principal		
modify -vserver vs0 - kerberos enable/disable  kerberos.file_keytab.enable = on:     'vserver services kerberos-realm modify -kdc- vendor Other'  In this case, the keytab file must be added to the clustered Data ONTAP configuration:     'vserver nfs kerberos-	kerberos.file_keytab.realm	<u> </u>	
= on:     'vserver services     kerberos-realm modify -kdc-     vendor Other'  In this case, the keytab file must be     added to the clustered Data ONTAP     configuration:     'vserver nfs kerberos-	nfs.kerberos.enable on/off	modify -vserver vs0 -	
<pre>kerberos.file_keytab.enable = off:     'vserver services</pre>	kerberos.file_keytab.enable on/off	<pre>- on:     'vserver services kerberos-realm modify -kdc- vendor Other'  In this case, the keytab file must be added to the clustered Data ONTAP configuration:     'vserver nfs kerberos- config modify -keytab-uri'  kerberos.file_keytab.enable = off:</pre>	

## **NFSv3 Port Changes**

In clustered Data ONTAP, the mountd port changed from 4046 to 635. The status port also changed from 4047 to 4046. The following shows an example of rpcinfo -p showing a 7-Mode and a clustered Data ONTAP system.

### 7-Mode rpcinfo:

### **Clustered Data ONTAP rpcinfo:**

```
[root@nfsclient ~]# rpcinfo -p 10.61.92.34
program vers proto port service
100000 2 udp 111 portmapper
100000 3 udp 111 portmapper
100000 3 udp 111 portmapper
100000 3 tcp 111 portmapper
100000 4 udp 111 portmapper
100000 4 tcp 111 portmapper
100003 3 udp 2049 nfs
100003 3 tcp 2049 nfs
100003 4 tcp 2049 nfs
100003 4 tcp 2049 nfs
100005 1 udp 635 mountd
100005 1 udp 635 mountd
100005 2 udp 635 mountd
100005 1 tcp 635 mountd
100005 1 tcp 635 mountd
100005 2 tcp 635 mountd
100005 1 tcp 635 mountd
100005 3 tcp 635 mountd
100005 4 tcp 635 mountd
100021 4 tcp 4045 nlockmgr
100024 1 tcp 4046 status
100024 1 tcp 4046 status
100011 1 udp 4046 status
```

### References

- TR-3580: NFSv4 Enhancements and Best Practices Guide: Data ONTAP Implementation
- TR-4073: Secure Unified Authentication
- TR-4182: Ethernet Storage Best Practices for Clustered Data ONTAP Configurations
- TR-4379: Name Services Best Practices
- TR-4191: Best Practices Guide for Clustered Data ONTAP 8.2.x and 8.3 Windows File Services
- TR-4211: NetApp Storage Performance Primer for Clustered Data ONTAP 8.2
- TR-4523: DNS Load Balancing in ONTAP
- TR-4239: Synopsys VCS Performance Validation with NFSv4.1/pNFS
- TR-4229: Optimizing Build and Verification with Cadence Incisive
- TR-4270: Optimizing Standard Cell Library Characterization with Cadence Virtuoso Liberate
- TR-4324: Electronic Device Automation Verification Workloads and All Flash FAS (AFF) Arrays
- RFC 2203: RPCSEC GSS Protocol Specification
- RFC 3530: Network File System (NFS) Version 4 Protocol
- RFC 5661: Network File System (NFS) Version 4 Minor Version 1 Protocol
- RFC 5331: RPC: Remote Procedure Call Protocol Specification Version 2

Refer to the Interoperability Matrix Tool (IMT) on the NetApp Support site to validate that the exact product and feature versions described in this document are supported for your specific environment. The NetApp IMT defines the product components and versions that can be used to construct configurations that are supported by NetApp. Specific results depend on each customer's installation in accordance with published specifications.

### **Copyright Information**

Copyright © 1994–2016 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

#### **Trademark Information**

NetApp, the NetApp logo, Go Further, Faster, AltaVault, ASUP, AutoSupport, Campaign Express, Cloud ONTAP, Clustered Data ONTAP, Customer Fitness, Data ONTAP, DataMotion, Flash Accel, Flash Cache, Flash Pool, FlashRay, FlexArray, FlexCache, FlexClone, FlexPod, FlexScale, FlexShare, FlexVol, FPolicy, GetSuccessful, LockVault, Manage ONTAP, Mars, MetroCluster, MultiStore, NetApp Fitness, NetApp Insight, OnCommand, ONTAP, ONTAPI, RAID DP, RAID-TEC, SANshare, SANtricity, SecureShare, Simplicity, Simulate ONTAP, SnapCenter, SnapCopy, Snap Creator, SnapDrive, SnapIntegrator, SnapLock, SnapManager, SnapMirror, SnapMover, SnapProtect, SnapRestore, Snapshot, SnapValidator, SnapVault, SolidFire, StorageGRID, Tech OnTap, Unbound Cloud, vFiler, WAFL, and other names are trademarks or registered trademarks of NetApp, Inc. in the United States and/or other countries. All other brands or products are trademarks or registered trademarks is available on the web at http://www.netapp.com/us/legal/netapptmlist.aspx. TR-4067-0716

