
Glow Strings V2 Manual

All New Customization



SIZES 50, 100, 150, 200 LEDS

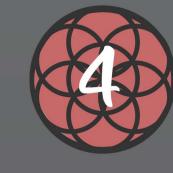

EVERYDAY MODES



FESTIVAL MODES



SETTING ADJUSTMENTS



MILLION COLORS

Getting Started

First remove Glow Strings from packaging, then you will remove twist ties from strands trying to not tangle them.

Using the provided power adapter. Plug in your Glow Strings. They should power on automatically. From here follow the steps below in learning how to use your Glow Strings!

One Bitton to Solve Everything BASIC NAVIGATION

DASIC NAVIGALION

Press, Hold and **Release** are the only 3 actions you need to control every aspect of your Glow Strings. These actions allow you to Change Modes, Colors, and Adjust Settings with ease.

Turning On: When plugging in your Glow Strings they will automatically turn on. To turn on when off, Press and Hold button for 1 second and release when your LEDs flash white.

Turning Off: Press and Hold for 1 second and release when your LEDs flash red.

Changing Modes: On start up the default setting is for your modes to autoplay, meaning automatically change modes every 60 seconds. You can click to cycle to your next mode if you want as well.

Mode States

THERE ARE 4 MODE STATES

By default the Glow Strings are set to Everyday Modes. To access the other Mode states, Press, Hold and Release when you see Yellow. You have now entered the state change menu. Click once to cycle through each mode state category and stop and when the color shows your desired category. To enter the selected mode state Press, Hold and Release when you see Red. You have now entered your new state.

Red Everyday Modes: Everyday modes consist of vibrant Shooting Star, Sparkle, Cycle and many more modes which we feel are great for all occasions

Orange Festival Modes: Festival Modes are best in a party setting. When getting lit as some say. They consist of more flashy patterns emulating stage lighting at a concert. WARNING: These modes may potentially trigger seizures for people with photosensitive epilepsy. Viewer discretion is advised.

Yellow Colors: Colors are a state where you can choose what color the entire string will be with no flashing pattern. From this state you can adjust the Saturation and Brightness of the color for full customization of your vibe

Green House Party Modes: All Modes contains all of the modes from Everyday and Festival modes to give you an action packed set of modes to melt your face with. WARNING: These modes may potentially trigger seizures for people with photosensitive epilepsy. Viewer discretion is advised.

Mode Options SETTINGS

state (besides Color State), Press, Hold and Release when you see No. You have now entered the Mode Options. Click once to cycle through each mode option category and stop when the color shows your desired category:

Turquioise Autoplay: determines whether your modes will cycle automatically, or only with a button press.

Everyday, Festival, and House Party Modes have a variety of customizable options available! From any mode

Press, Hold and Release on Turquioise to turn off Autoplay. Follow the same steps to turn it back on. (default on)

Sky Blue Interval: determine how much time goes by before the next mode change happens. You have 3

options: 60 sec, 30 sec, and 10 secs. Press, Hold and Release on Sky Blue to enter the interval menu. You will now have the ability to click through 3 brighteness's of Red (60) Red (30) Red (10). Press, Hold and Release on your desired interval option. The LEDs will show the same color, then show white at the same brightness level. (default 60)

Elue Random Order: If you're wanting to spice up your mode cycle, you can turn Random Order on, which

cycles through your modes in a random order so there will never be dull moment. Press, Hold and Release

on Blue to turn on Random Order. Follow the same steps to turn it back off.

(default off)

Voilet Random Interval: Best for the Festival Modes! Turning on random interval will choose a random time interval between 1 and 5 seconds to simulate festival lighting so you always feel like you're at the rave.

Press, Hold and Release on Voilet to turn on Random Interval. Follow the same steps to turn it back on.

(default off) WARNING: These modes may potentially trigger seizures for people with photosensitive epilepsy.

Viewer discretion is advised.

Purple Exit Mode Options: Press, Hold and release on Purple. You will be brought back to the mode state you were in previously.

HUE, BRIGHTNESS, AND SATURATION

Color State

The **Color state** is a little different from the rest. You have more settings that the latter does not contain. To access these features you must first be in the color state. To enter the color state from any other **mode** state, **Press, Hold** and **Release** when you see **Yellow**. Cycle till you see **Yellow**. **Press, Hold** and **Release**

when you see Hed. You have now entered the Colors state.

Hue: To cycle through the Colors of the Rainbow use a single click.

Brightness: From inside of the Color state, Press, Hold and Release when current color your on shows at a

lower brightness. You have entered the **Brightness Setting**. You can now cycle through **5 levels of brightness** to fit your vibe. To choose your desired brightness, **Press, Hold** and **Release** when you see **Red**.

Saturation: From inside of the **Color state**, **Press, Hold** and **Release** when the current color you're on shows at a less saturated version (more white). You have entered the Saturation Setting. You now can cycle through 5 levels of saturation to fit your vibe. To choose desired saturation, **Press, Hold** and **release** when when you see **Red**.

Exit to Mode State Change Menu: Press, Hold and Release when when LEDs show Magenta> You have now entered the State Change Menu.

Included in Glow String 12 Set individually addresable string light leds



GLOW STRINGS V2 CONTROLLER



POWER ADAPTER



A LIFETIME OF FUN AND BEWONDERMENT!

