Bi-directional Programmable DC Power Supply

IT6600C Installation Guide



Product: IT6600C series
Version: V1.0 / 8, 2026

Notices

© Itech Electronic, Co., Ltd. 2026
No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior permission and written consent from Itech Electronics, Co., Ltd. as governed by international copyright laws.

Manual Part Number

IT-S0182

Revision

1st Edition: August 31,

2026.

Itech Electronic, Co., Ltd.

Trademarks

Pentium is U.S. registered trademarks of Intel Corporation.

Microsoft, Visual Studio, Windows and MS Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries and regions.

Warranty

The materials contained in this document are provided “as is”, and is subject to change, without prior notice, in future editions. Further, to the maximum extent permitted by applicable laws, ITECH disclaims all warrants, either express or implied, with regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. ITECH shall not be held liable for errors or for incidental or indirect damages in connection with the furnishing, use or application of this document or of any information contained herein. Should ITECH and the user enter into a separate written agreement with warranty terms covering the materials in this document that conflict with these terms, the warranty terms in the separate agreement shall prevail.

Technology Licenses

The hardware and/or software described herein are furnished under a license and may be used or copied only in accordance with the terms of such license.

Restricted Rights Legend

Restricted permissions of the U.S. government. Permissions for software and technical data which are authorized to the U.S. Government only include those for custom provision to end users ITECH provides this customary commercial license in software and technical data pursuant to FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for the Department of Defense, DFARS 252.227-7015 (Technical Data – Commercial Items) and DFARS 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation).

Safety Notices

CAUTION

A CAUTION sign denotes a hazard.
It calls attention to an operating procedure or practice that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.

WARNING

A WARNING sign denotes a hazard. It calls attention to an operating procedure or practice that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

NOTE

A NOTE sign denotes important hint. It calls attention to tips or supplementary information that is essential for users to refer to.

Quality Certification and Assurance

We certify that the device meets all the published specifications.

Warranty

ITECH warrants that the product will be free from defects in material and workmanship under normal use for a period of one (1) year from the date of delivery (except those described in the Limitation of Warranty below).
For warranty service or repair, the product must be returned to a service center designated by ITECH.

Note

Visit https://www.itechate.com/en/support/register.html to complete product registration by filling out the necessary information to extend the warranty to two (2) years.

- The product returned to ITECH for warranty service must be shipped PREPAID. And ITECH will pay for return of the product to customer.
- If the product is returned to ITECH for warranty service from overseas, all the freights, duties and other taxes shall be on the account of customer.

Limitation of Warranty

This Warranty will be rendered invalid if the product is:

- Damage caused by circuit installed by customer or using customer own products or accessories;
- Modified or repaired by customer without authorization;
- Damage caused by circuit installed by customer or not operating our products under designated environment;
- The product model or serial number is modified, deleted, removed or illegible;
- Damaged as a result of accidents, including but not limited to lightning, moisture, fire, improper use or negligence.

Safety Symbols

⎓	Direct current	|	ON (power on)
∼	Alternating current	○	OFF (power off)
⎓ ∼	Both direct and alternating current	⎍	Power-on state
⏚	Protective conductor terminal	⎎	Power-off state
⏚	Earth (ground) terminal	⏥	Reference terminal
⚠	Caution, risk of electric shock	+	Positive terminal

Copyright © Itech Electronic Co., Ltd.

	Warning, risk of danger (refer to this manual for specific Warning or Caution information)	—	Negative terminal
	Frame or chassis terminal	-	-

Safety Precautions

The following safety precautions must be observed during all phases of operation of this instrument. Failure to comply with these precautions or specific warnings elsewhere in this manual will constitute a default under safety standards of design, manufacture and intended use of the instrument. ITECH assumes no liability for the customer's failure to comply with these precautions.

WARNING

- Do not use the instrument if it is damaged. Before operation, check the casing to see whether it ccabinets. Do not operate the instrument in the presence of inflammable gasses, vapors or dusts.
- The instrument is provided with power cable during delivery and should be connected to the distribution box. Before operation, be sure that the instrument is well grounded.
- Make sure to use the power cable supplied by ITECH.
- Check all marks on the instrument before connecting the instrument to power supply.
- Use electric wires of appropriate load. All loading wires should be capable of bearing maximum short-circuit of electronic load without overheating. If there are multiple loads, each pair of the load power cable must be carry out the full rated short-circuit output current of the power securely.
- Ensure the voltage fluctuation of mains supply is less than 10% of the working voltage range in order to reduce risks of fire and electric shock.
- Do not install alternative parts on the instrument or perform any unauthorized modification.
- Do not use the instrument if the detachable cover is removed or loose.
- To prevent the possibility of accidental injuries, be sure to use the power adapter supplied by the manufacturer only.
- We do not accept responsibility for any direct or indirect financial damage or loss of profit that might occur when using the instrument.
- This instrument is used for industrial purposes. Do not apply this product to IT power supply system.
- Never use the instrument with a life-support system or any other equipment subject to safety requirements.

Copyright © Itech Electronic Co., Ltd.

CAUTION

- Failure to use the instrument as directed by the manufacturer may render its protective features void.
- Always clean the casing with a dry cloth. Do not clean the internals.
- Make sure the vent hole is always unblocked.

Environmental Conditions

The instrument is designed for indoor use and an area with low condensation. The table below shows the general environmental requirements for the instrument.

Environmental Conditions	Requirements
Operating temperature	0°C to 50°C
Operating humidity	20%-80% (non-condensation)
Storage temperature	-20°C to 70 °C
Altitude	Operating up to 2,000 meters
Pollution degree	Pollution degree 2
Installation category	II

NOTE

To make accurate measurements, allow the instrument to warm up for 30 min before operation.

Regulatory Markings

CE	The CE tag shows that the product complies with the provisions of all relevant European laws (if the year is shown, it indicates that the year when the design is approved).
UKCA	The UKCA tag shows that the product complies with the provisions of all relevant United Kingdom laws (if the year is shown, it indicates that the year when the design is approved).
	This instrument complies with the WEEE directive (2002/96/EC) tag requirements. This attached product tag shows that the electrical/electronic product cannot be discarded in household waste.
	This symbol indicates that no danger will happen or toxic substances will not leak or cause damage in normal use within the specified period. The service life of the product is 10 years. The product can be used safely within the environmental protection period; otherwise, the product should be put into the recycling system.

Copyright © Itech Electronic Co., Ltd.

Waste Electrical and Electronic Equipment (WEEE) Directive



2002/96/EC Waste Electrical and Electronic Equipment (WEEE) Directive

This product complies with the WEEE Directive (2002/96/EC) marking requirement. This affix product label indicates that you must not discard the electrical/electronic product in domestic household waste.

Product Category

With reference to the equipment classifications described in the Annex I of the WEEE Directive, this instrument is classified as a “Monitoring and Control Instrument” product.

To return this unwanted instrument, contact your nearest ITECH office.

Copyright © Itech Electronic Co., Ltd.

Compliance Information

Complies with the essential requirements of the following applicable European Directives, and carries the CE marking accordingly:

- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
- Low-Voltage Directive (Safety) 2014/35/EU

Conforms with the following product standards:

EMC Standard

IEC 61326-1 / EN 61326-1 [1][2][3]
Reference Standards
CISPR 11, Class A
IEC 61000-3-2
IEC 61000-3-3
IEC 61000-4-2
IEC 61000-4-3
IEC 61000-4-4
IEC 61000-4-5
IEC 61000-4-6
IEC 61000-4-11

1. The product is intended for use in non-residential/non-domestic environments. Use of the product in residential/domestic environments may cause electromagnetic interference.
2. Connection of the instrument to a test object may produce radiations beyond the specified limit.
3. Use high-performance shielded interface cable to ensure conformity with the EMC standards listed above.

Safety Standard

IEC 61010-1:2010+A1:2019

Note

This section provides general and universal terms. For more detailed information on the Declaration of Conformity, please contact ITECH personnel.

Copyright © Itech Electronic Co., Ltd.

Content

Quality Certification and Assurance i
Warranty i
Limitation of Warranty i
Safety Symbols i
Safety Precautions ii
Environmental Conditions iii
Regulatory Markings iii
Waste Electrical and Electronic Equipment (WEEE) Directive iv


Compliance Information v

Chapter 1 Instrument Introduction 1

1.1 Verifying the Shipment 1
1.2 Front Panel Overview 2
1.3 Rear Panel Overview 4

Chapter 2 Connection Setting 6




2.1 Install and Connect the Power Supply Units 6
2.2 Connecting the Power Cable 11
2.3 Power-On and Power-Off Procedure 12
2.4 Connecting to the Device Under Test 13

Copyright © Itech Electronic Co., Ltd.

Chapter 1 Instrument Introduction

1.1 Verifying the Shipment

Unpack the box and check the contents before operating the instrument. please check the contents. If wrong items have been delivered, if items are missing, contact the dealer from which you purchased the instrument immediately.

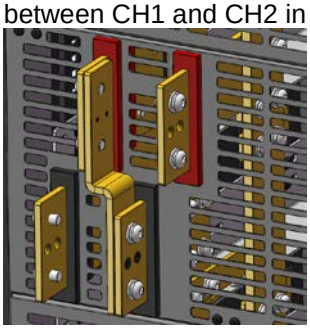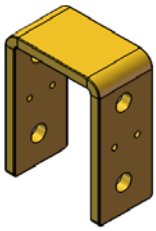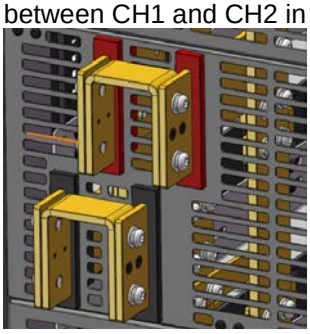
Item	Qty (pcs)	Description
	1	Series Busbar, used for series connection between CH1 and CH2 in cabinet. 
	2	Parallel Busbar, used for parallel connection between CH1 and CH2 in cabinet. 
AC Power Input Cable Set	1	2.5 m, UL1015 AWG4/0, 600 V, 105 °C; L1 ×2, L2 ×2, L3 ×2, PE ×2.
Common Busbar Adapter	16	ITE.72.5mm×29mm×27mm TMY 4×20
Common Busbar Adapter	16	ITE.120mm×29mm×27mm TMY 4×20
Common Busbar	1	ITE.TMY 8×50 L=1369.4mm 4530g
Common Busbar	1	ITE.TMY 8×50 L=1373.6mm 4590g
Common Busbar	1	ITE.TMY 8×50 L=1401.35mm 4680g
Common Busbar	1	ITE.TMY 8×50 L=1377.35mm 4560g
Common Output Busbar	2	ITE.TMY 6×80 L=172.5mm 690g
Common Output Busbar	2	ITE.TMY 6×80 L=125mm 495g
Crimp Terminal Wire Harness	2	ITE.UL1430 24AWG-300V-105°C 400mm, KSS-ET0.34-8PK ferrules at both ends (2PIN)
Crimp Terminal Wire Harness	6	ITE.UL1430 24AWG-300V-105°C 200mm, KSS-ET0.34-8PK ferrules at both ends (2PIN)
Fiber-Optic Module	10	FTN.FTCS-1312-20D-1DKS
Fiber-Optic Cable Assembly	1	ITE.LC-LC Single-Mode Fiber-Optic Patch Cable 2500mm
Fiber-Optic Cable Assembly	8	ITE.LC-LC Single-Mode Fiber-Optic Patch Cable 200mm
Terminal Protective Cover	8	ITE.72.1mm×32.4mm×39.05mm
Hex Socket Button Head Combination Screw	Several	ITE.M8×16

Copyright © Itech Electronic Co., Ltd.

Hex Socket Head Cap Combination Screw	Several	ITE.M4×10
Snap Bushing	Several	Protects test leads passing through the output terminal cover from edge abrasion.
Spare Parts	Several	Cabinet mounting screws, etc.


1.2 Front Panel Overview

The detailed front panel is as follows.

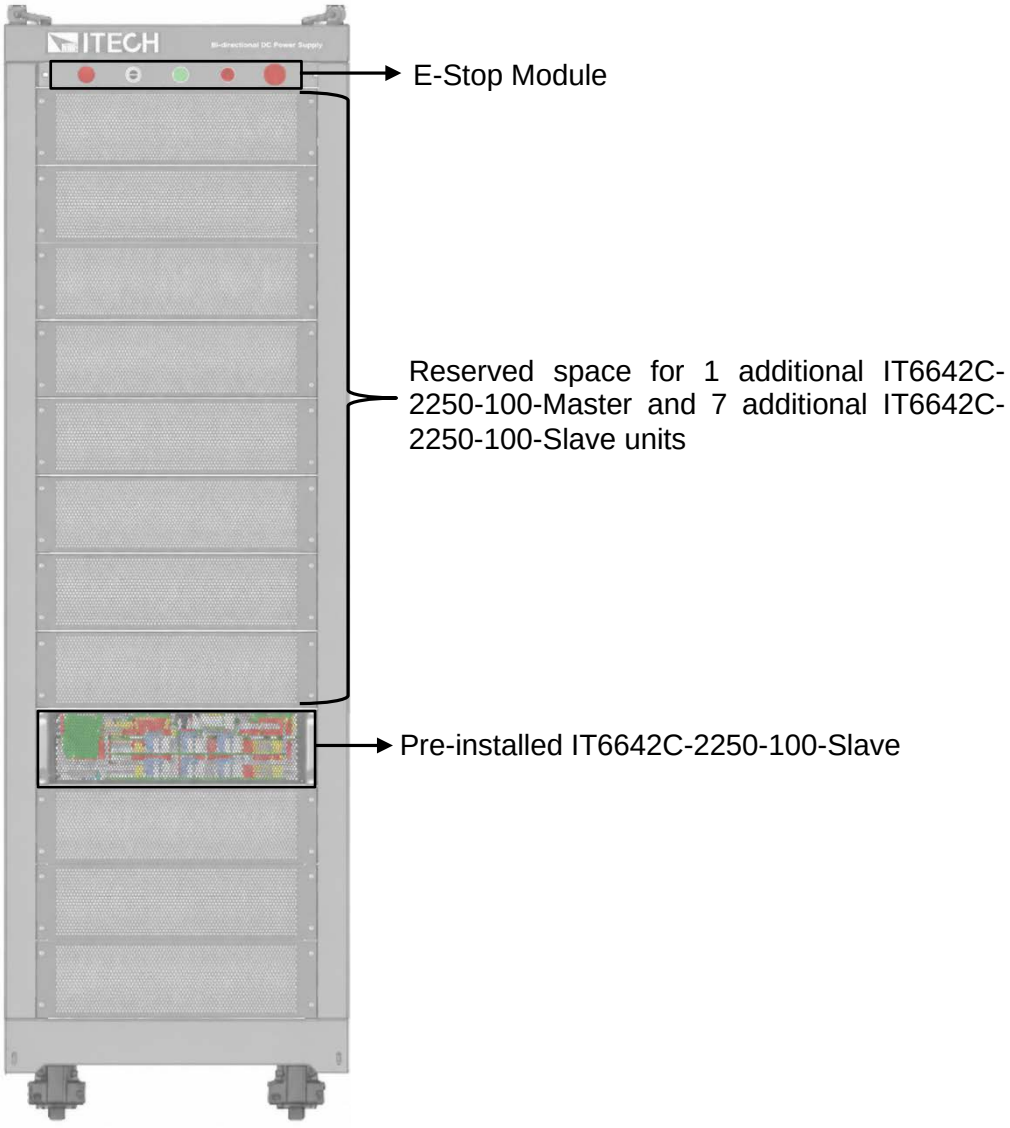

E-Stop Module

The E-stop module includes the **Indicator Lamp, Switch Lock, Power On button, Power Off button, and Emergency Stop button**.

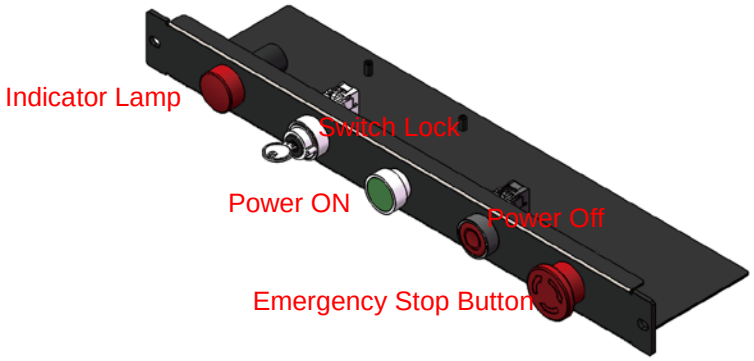

Functions are described below:

- **Indicator Lamp**: Illuminates red when the cabinet is powered on.
- **Switch Lock**: Enables or disables the cabinet power-on function. When the switch lock is in the ON position, the cabinet can be powered on by pressing the **power-on button**. When the switch lock is in the OFF position, the **power-on button** is disabled.
- **Power On**: Press the **power-on button** (Green) to power up the cabinet.
- **Power Off**: Press the **power-off button** (Red) to power down the cabinet.
- **Emergency Stop**: Press this button to immediately shut down all devices inside the cabinet. To restore operation, rotate the button to reset it, and then follow the normal power-on procedure.


Power Switch Status

The switch status in the cabinet is as follows.

- Single instrument switch status.



- Switch lock status.

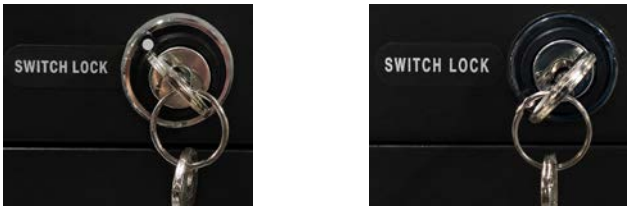


Power On Power Off


For detailed information regarding menus and operations, please refer to the IT6600C User Manual.

1.3 Rear Panel Overview

The detailed description of the rear panel is described as below.

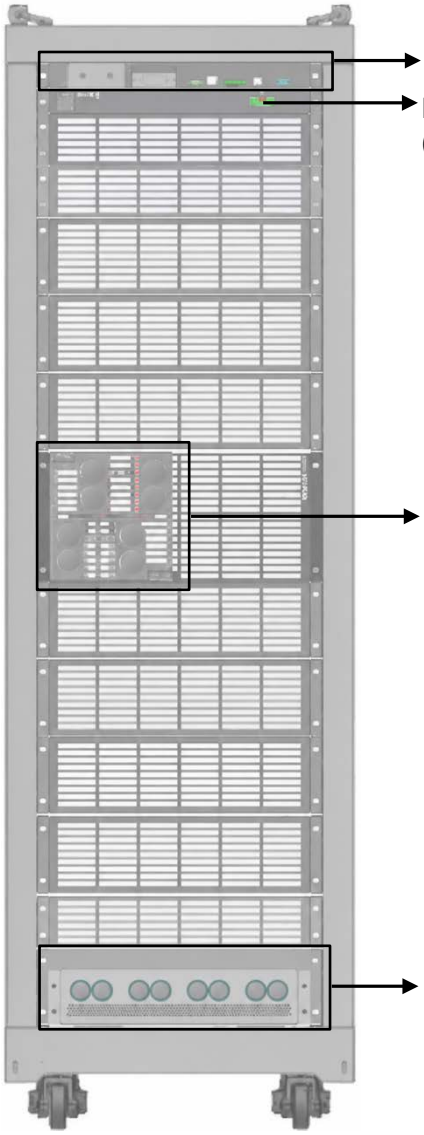

Control, communication, and sensing interfaces

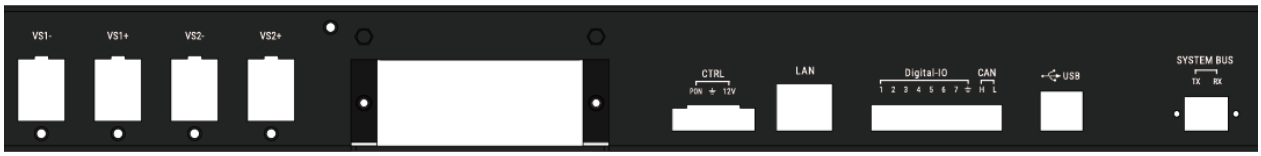


Name	Description
VS1- and VS1+ (CH1)	Remote sense terminals, used for maximizing measurement accuracy.
VS2- and VS2+	Remote sense terminals, used for maximizing measurement accuracy.

Copyright © Itech Electronic Co., Ltd.

Optional expansion slot	Optional interfaces: (Plastic plugs are inserted by default when the user does not purchase the interface.) The optional interface as follows: ● GPIB ● RS-232/ Analog interface ● Ether CAT ● Relay board
CTRL	This interface is used for the parallel connection between the master cabinet (with operation panel) and the slave cabinet (without operation panel). Invalid in this project.
LAN	LAN communication interface.
Digital I/O CAN	● Digital IO Port. ● CAN communication interface CAN-H and CAN-L, the detailed information refer to User manual.
USB	USB communication interface.
System Bus	TX/RX used for the parallel connection between the cabinets.

Emergency stop control signal terminal

Pin2 and Pin3 of the terminal are shorted by default, as shown in the figure below.

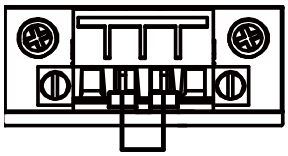


When the cabinet is powered on and off by the **Emergency Stop** button on the front panel of the cabinet, make sure that the short-circuit clips here are correctly installed.

When controlling the power on and off of the cabinet (emergency stop) through external cords, refer to the following steps:

a. Remove the short-circuit clip between Pin2 and Pin3.

Note: Lead 24V voltage signal.

b. Refer to the figure below to connect to the external signal control circuit.

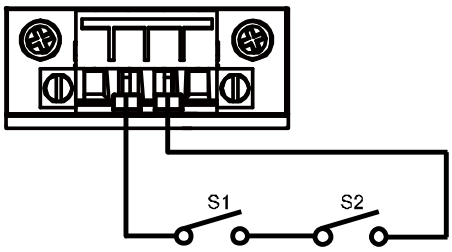

S1: Cage door switch by customer

S2: External switch by customer

Note: When both S1 and S2 are closed, the cabinet is powered on; if either S1 or S2 is disconnected, an emergency stop is triggered and the cabinet is powered off. If you need to power on the cabinet again, make sure that the switches at S1 and S2 are closed.

Copyright © Itech Electronic Co., Ltd.

Chapter 2 Connection Setting


2.1 Install and Connect the Power Supply Units

This section describes how to install and connect one IT6642C-2250-100-Master unit and seven IT6642C-2250-100-Slave units in the reserved cabinet space, and configure them for parallel operation with the pre-installed IT6642C-2250-100-Slave unit.

Installation of power supply

1. Install four common busbar adapters on each of the eight power supply units to be installed. Secure the adapters to the corresponding output busbar terminals using M8 × 16 hex socket combination screws, as shown in the figure below.

   This step is not required for the Slave unit pre-installed in the cabinet.

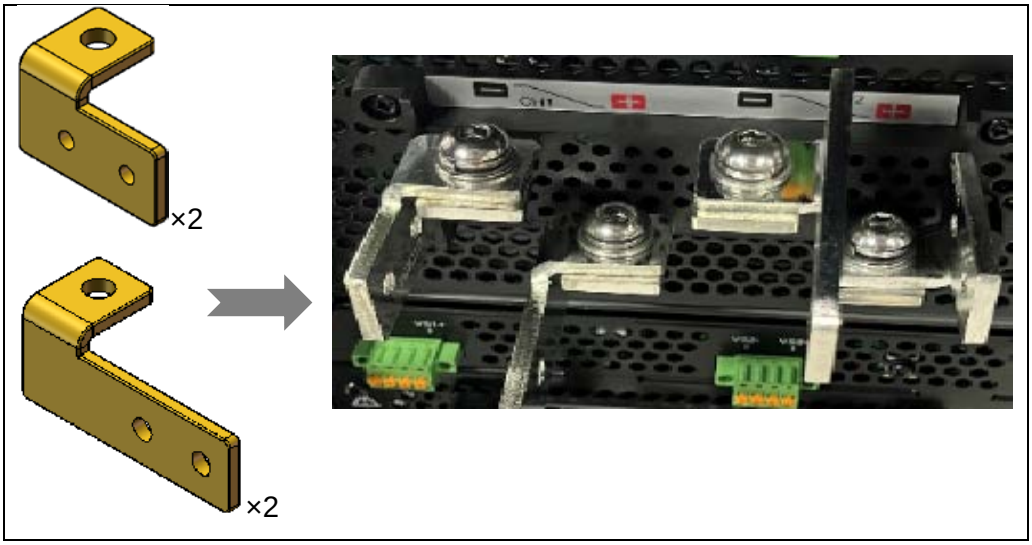

2. Remove the front and rear blanking panels from the reserved installation position.

   Note: Before removal, take a photo of the original installation positions of the rear panel and related components for reference when reinstalling the cabinet rear panel later.


3. Place the **eight power supply units** to be installed on the pre-installed side mounting brackets in the cabinet one by one, and secure each unit to the cabinet front panel with screws. The completed installation is shown in the figure below.

   Note: Refer to the pre-installed Slave unit in the cabinet for the installation method.




Copyright © Itech Electronic Co., Ltd.

4. Using the pre-installed Slave unit in the cabinet as a reference, secure each of the eight power supply units to the connectors on the sides of the cabinet using M4 × 10 combination screws, as shown in the figure below.

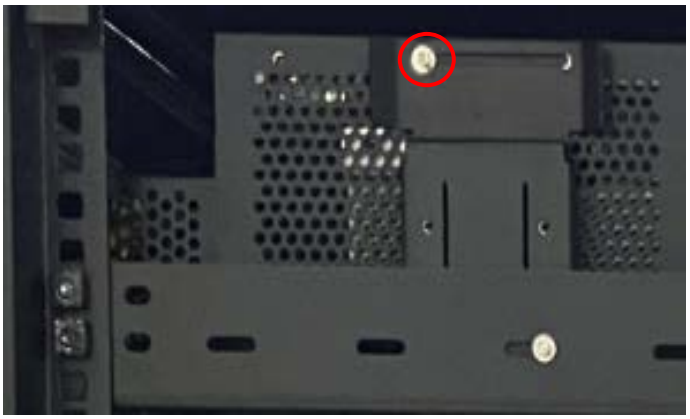





5. Install the **four common busbars** vertically and secure them to the corresponding common busbar adapters of all nine power supply units using **M6 × 16 screws**, as shown in the figure below.



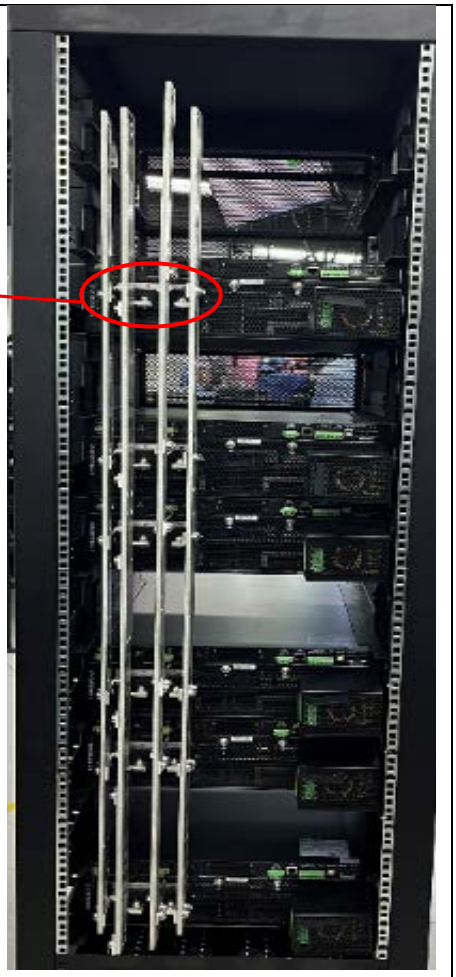


Same connection method.

CH1-	

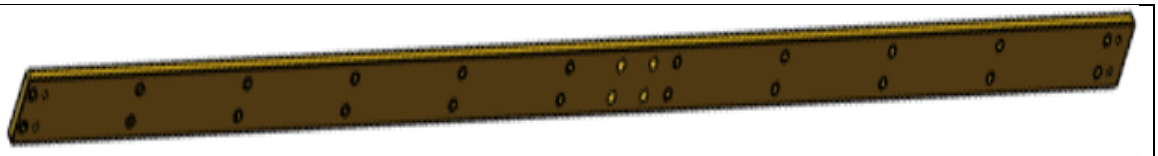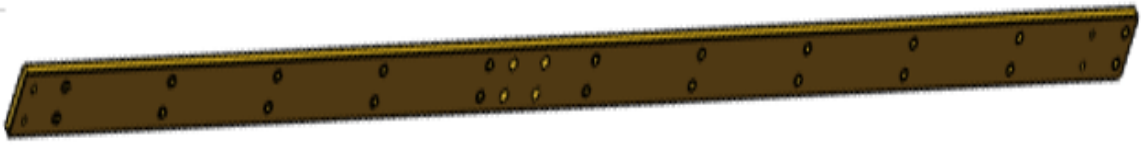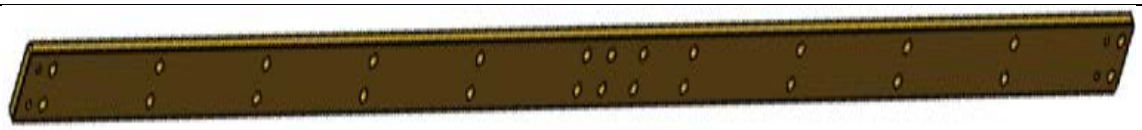CH1+	
CH2-	
CH2+	


6. Secure the **four common output busbars** to the corresponding positions on the common busbars using **M8 × 20 combination screws**. When installing the **CH1− common output busbar**, orient the notch upward. When installing the **CH2+ common output busbar**, orient the notch downward, as shown in the figure below.

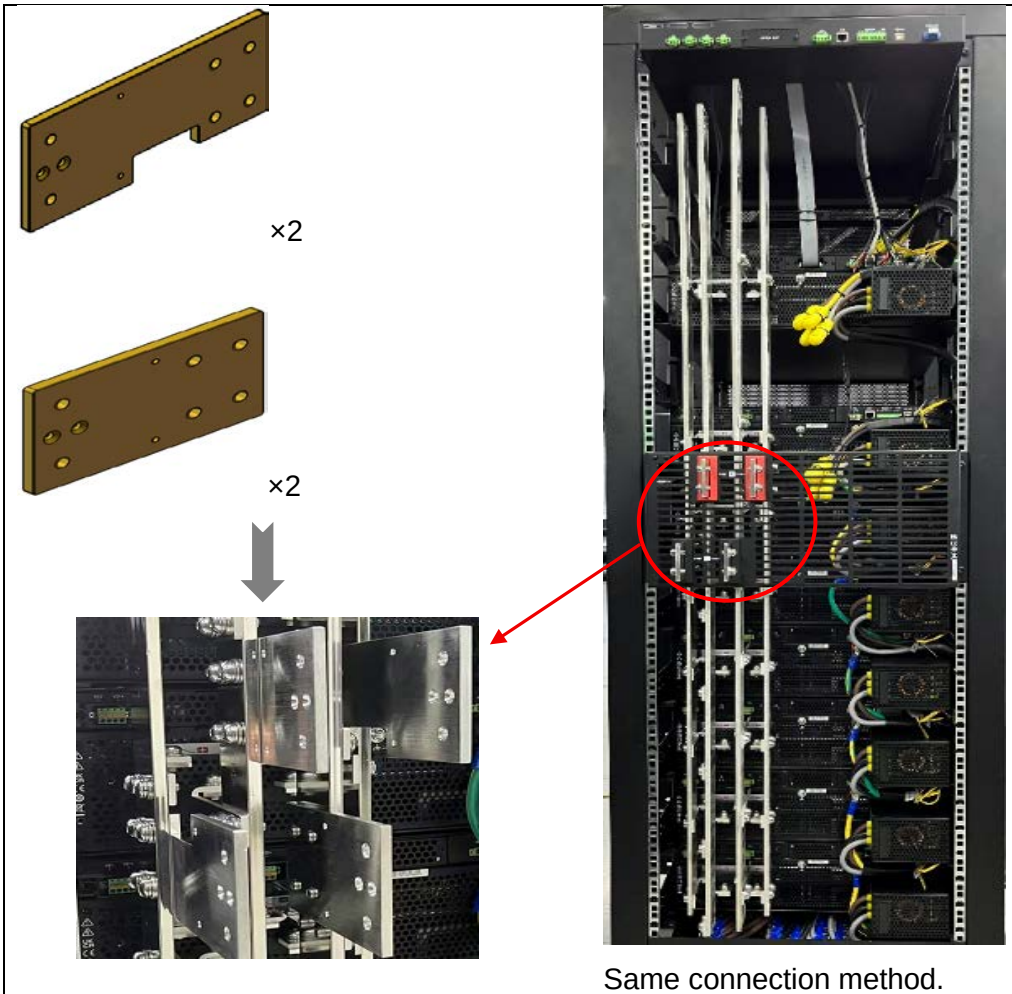

Same connection method.


7. Connect the other ends of the cables for the control, communication, and sensing interfaces on the cabinet rear panel to the corresponding terminals on the rear panel of the Master unit, as shown in the figure below.

   Note: When connecting the **Optional interface**, remove the plastic plug from the rear panel, then gently insert the adapter box into the unit. Do not force it in. Secure it with **M3 × 10 screws**.

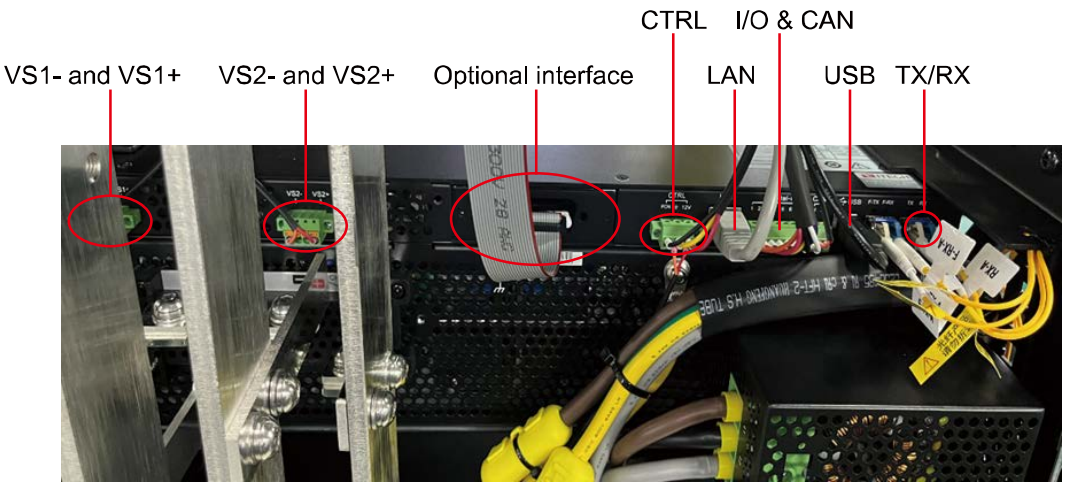

8. Connect the reserved AC input power cables to the AC input terminals of the eight additional power supply units. Then install one terminal protective cover on each unit, as shown in the figure below.

   Note: Refer to the pre-installed Slave unit in the cabinet for the installation method.

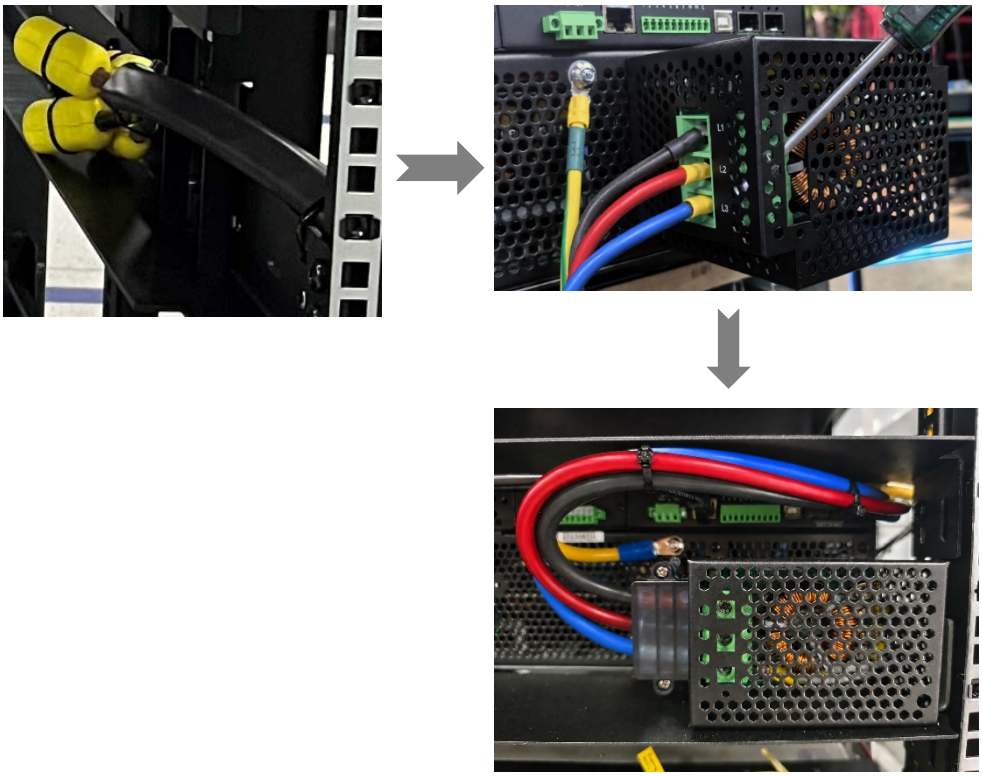


Same connection method.


Connecting the Fiber-Optic Cables and CTRL Wire Harnesses

The master-slave connections inside the cabinet are shown below.


Cabinet

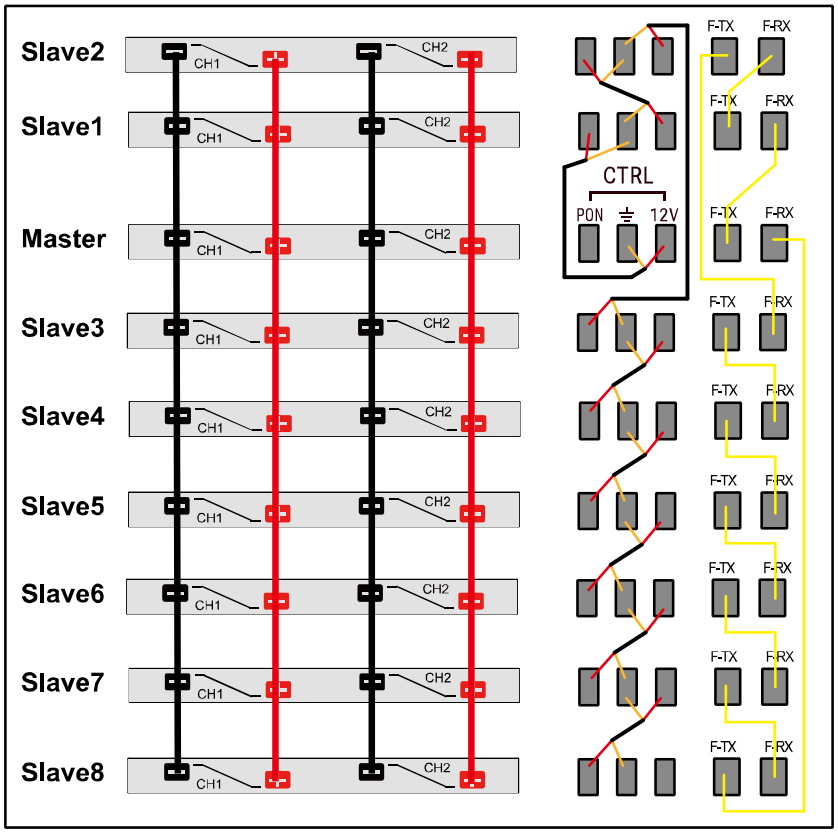

1. Ensure that all power switches in the cabinet and the main circuit breaker in the AC power distribution box are **OFF**.
2. Connect the **CTRL wire harnesses** (crimp terminal wire harnesses) between the master unit and the slave units as shown in the figure above.



3. Connect the **System Bus fiber-optic cables** between the **F-TX** and **F-RX** ports of the master and slave units according to the connections shown in the figure above.
4. Insert each fiber-optic transceiver module into the corresponding **F-TX** or **F-RX** port. Then insert the fiber-optic cable connector into the transceiver module until it clicks securely into place.

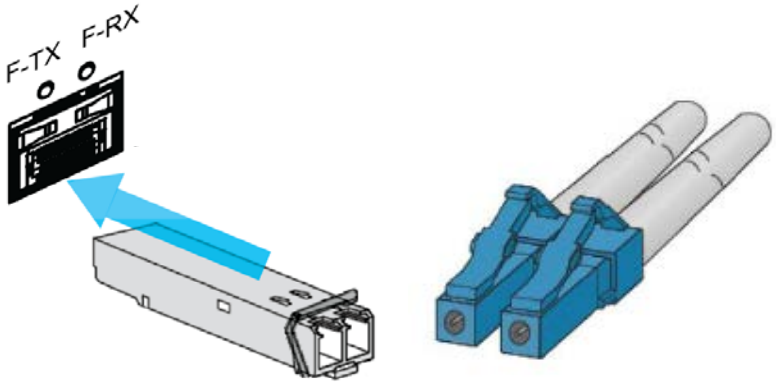

5. Reinstall the rear panel of the cabinet.

Copyright © Itech Electronic Co., Ltd.

6. Install and tighten the M8 × 16 hex socket combination screws on the **common output busbars**, as shown in the figure below.



Configuring the Master and Slave

1. Turn on the power switch on the front panel of the Master unit.
2. Press the keys [**Shift**] and then press [**P-set**] (System) in order on the front panel to enter the system menu.
3. Press the up/down key or rotate the knob to find **General->Parallel Settings** menu.
4. Set the **Role**, set instrument with operating panel to single unit.
5. In the **Info** interface, press the combination key of [**Shift**] , [.] , [**3**] , [**8**] in order.
6. Set the number of inner ring parallel instruments, such as Inner Number = **9**, and press [**Enter**].
7. Turn off the power switch on the front panel of the Master unit. After the power is turned off completely, turn on the power switch again.
8. After the instrument is restarted, the parallel operation is complete.

2.2 Connecting the Power Cable

Before Connection

Before connecting the power cables, please confirm.


- The power switch of each instrument is turned off.
- The switch of the AC distribution box is off.
- The specifications of the power distribution box should meet the voltage and current range identified on the sticker on the side of the cabinet.
- ITECH provides two sets of power cables for the cabinet. When connecting to the distribution cabinet, the cabinet requires two sets of cables. Please prepare the following wiring connections: L1 ×2, L2 ×2, L3 ×2, and PE.

  AC input power cable specification (per cable): AWG 4/0, 600 V, 105°C, 2500 mm length, with TLK120-10 terminals.


Copyright © Itech Electronic Co., Ltd.

Connection Steps

1. Remove the protective cover on the rear panel. The wiring terminals are as shown in the figure below.



2. Connect the 2 sets of power cables for the cabinet to the AC distribution box.

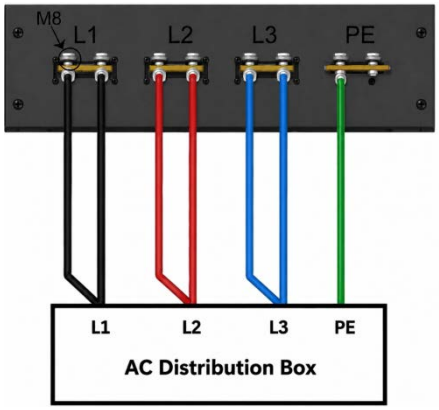

3. Install the protective cover.

2.3 Power-On and Power-Off Procedure

WARNING

Before powering on the cabinet, make sure that the AC input cables are properly connected. Do not touch the power terminals or any internal cabinet wiring when the cabinet is energized. Failure to follow this instruction may result in electric shock.

Switch Relationship

The power supplies inside the cabinet can operate only when all required power controls are enabled. If the switch lock, cabinet power status, or instrument power switch is off, the corresponding power supply remains off.

Switch Lock	Start and stop button	Instrument Switch	Instrument Power Status
On	On	On	ON
On	On	OFF	OFF
On	OFF	On	OFF
On	OFF	OFF	OFF
OFF	On	On	OFF
OFF	On	OFF	OFF
OFF	OFF	On	OFF
OFF	OFF	OFF	OFF

Power-On Procedure

To power on the cabinet:

1. Turn on the switch of the AC power distribution box.
2. Turn the cabinet switch lock to the ON position.

Copyright © Itech Electronic Co., Ltd.

3. Press the green **power-on button** on the front panel to power on the cabinet.
4. Turn on the power switches of the power supplies inside the cabinet in sequence.

Power-Off Procedure

To power off the cabinet:

1. Turn off the power switches of the power supplies inside the cabinet in sequence.
2. Press the red **power-off button** on the front panel to power off the cabinet.
3. Turn the cabinet switch lock to the OFF position.
4. Turn off the switch of the AC power distribution box.

Emergency Stop and Recovery

In an emergency, press the Emergency Stop button to shut down all devices inside the cabinet. After the emergency condition has been cleared, rotate the Emergency Stop button to reset it. Then follow the normal power-on procedure to restore operation.

WARNING: Before restarting, identify and remove the cause of the emergency stop.

2.4 Connecting to the Device Under Test

WARNING

- Before connecting test cables, be sure to switch off the instrument. Power switch is in Off position, otherwise touching the output terminals on the rear panel may result in personal injury or death due to electric shock.
- To avoid electrical shock, before testing, please make sure the rating values of the testing cables, and do not measure the current that higher than the rating value. All test cables shall be capable of withstanding the maximum short circuit current of the instrument without causing overheat.
- If several DUTs are provided, each pair of DUT wires shall safely withstand the rated short circuit output current of the power supply under full load.
- Do not short the battery when connecting or disconnecting the battery testing circuit. Short circuit may cause severe accident.
- It is recommended to connect a fuse in series between the power supply and the battery for battery testing to prevent short circuits caused by any problems.
- Because the instrument can be used to sink current, hazardous voltages from an external energy source such as a battery may be present on the output terminals even with the instrument power off. Provision must be made to disconnect the external energy source before touching the output or sense terminals.
- Always use test cables provided by ITECH to connect the equipment. If test cables from other factories are used, please confirm the maximum current that the test cables can withstand.
- During wiring, check that the positive and negative poles of the test cables are properly and tightly connected. Do not connect the positive pole and disconnect the negative pole.

Copyright © Itech Electronic Co., Ltd.


- Ensure that the output terminals are either insulated or covered using the safety covers provided, so that no accidental contact with lethal voltages can occur.
- This system provides a one-key emergency stop function. If an emergency occurs, please press the **Emergency Stop** button to ensure personal and property safety.
- It is forbidden to move, disassemble, and wire the cabinet during system test operation.

Note: The hole diameter of the terminal on the DC side is M8. Live wiring is prohibited.

Dual-channel mode


In dual-channel output mode, the IT6600C series provides 1200V, 450A, and 189kW per channel.

- **Local Measurement**

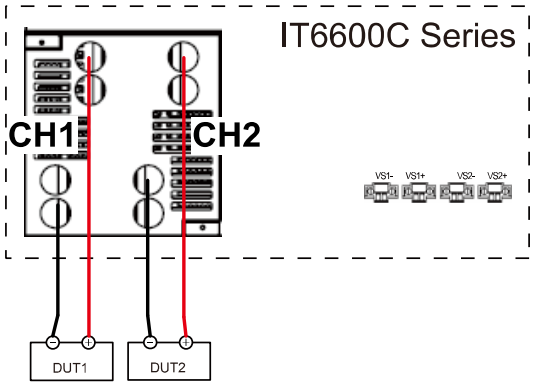

- **Remote Sensing**

  For battery testing, the remote Sense terminals must be connected. Remote sensing is also recommended when the DUT draws high current or when long output cables are used. After connecting the Sense leads, enable the Sense function.

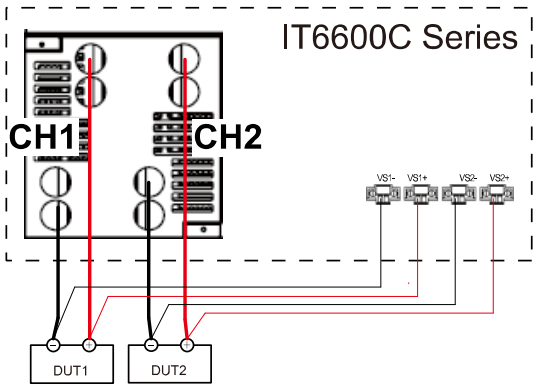

1. Refer to the figure above to connect the DUT, and live wiring is prohibited.
2. Set the two channels of the power supply to **Dual** mode.
   a) Press the keys [**Shift**] and then press [**P-set**] (System) in order on the front panel to enter the system menu.
   b) Select the **Source** tab, then press the up/down key or rotate the knob to find **Output Mode** menu.

c) Press the up/down key to move the cursor to the **Mode** function setting and press the **[Enter]** key to confirm. Rotate the knob to set **Dual** output mode, and press the **[Enter]** key to confirm.

3. Enable/Disable Remote Sense.

a) Press the keys [**Shift**] and then press [**P-set**] (System) in order on the front panel to enter the system menu.


b) Select the **Source** tab, then press the up/down key or rotate the knob to find **Remote sense** menu.

c) Press the up/down key to move the cursor to the **Status** function setting and press the **[Enter]** key to confirm. Rotate the knob to select enable or disable the remote sense function, and press the **[Enter]** key to confirm.

Series mode


The IT6600C series delivers 2250V, 450A, and 378kW when its two channels are connected in series.

- **Local Measurement**

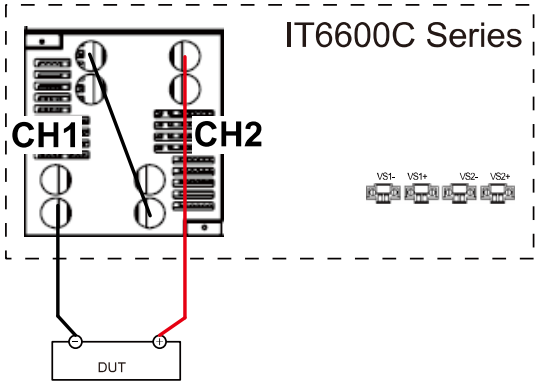

- **Remote Sensing**

For battery testing, the remote Sense terminals must be connected. Remote sensing is also recommended when the DUT draws high current or when long output cables are used. After connecting the Sense leads, enable the Sense function.

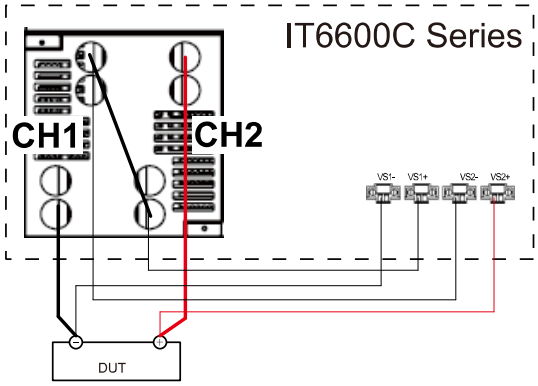

1. Refer to the figure above to connect the DUT, and live wiring is prohibited.
2. Set the two channels of the power supply to **Series** mode.

a) Press the keys [**Shift**] and then press [**P-set**] (System) in order on the front panel to enter the system menu.

b) Select the **Source** tab, then press the up/down key or rotate the knob to find **Output Mode** menu.

c) Press the up/down key to move the cursor to the **Mode** function setting and press the **[Enter]** key to confirm. Rotate the knob to set **Series** output mode, and press the **[Enter]** key to confirm.

3. Enable/Disable Remote Sense.

   a) Press the keys [**Shift**] and then press [**P-set**] (System) in order on the front panel to enter the system menu.


   b) Select the **Source** tab, then press the up/down key or rotate the knob to find **Remote sense** menu.

   c) Press the up/down key to move the cursor to the **Status** function setting and press the **[Enter]** key to confirm. Rotate the knob to select enable or disable the remote sense function, and press the **[Enter]** key to confirm.

Parallel mode


The IT6600C series delivers 1200V, 900A, and 378kW when its two channels are connected in **parallel**.

- **Local Measurement**

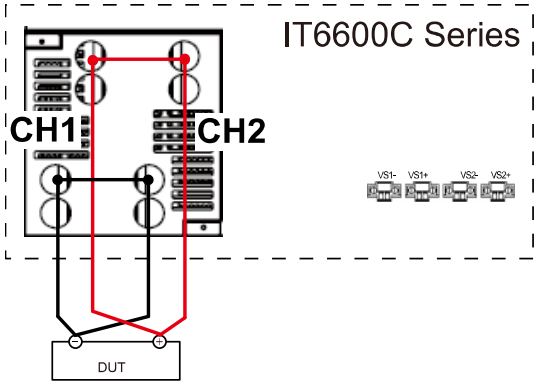

- **Remote Sensing**

  For battery testing, the remote Sense terminals must be connected. Remote sensing is also recommended when the DUT draws high current or when long output cables are used. After connecting the Sense leads, enable the Sense function.

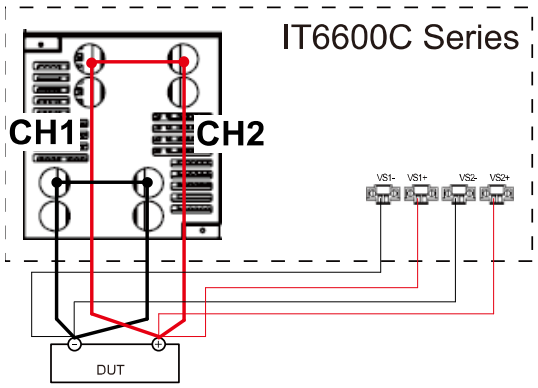

1. Refer to the figure above to connect the DUT, and live wiring is prohibited.
2. Set the two channels of the power supply to **parallel** mode.

   a) Press the keys [**Shift**] and then press [**P-set**] (System) in order on the front panel to enter the system menu.

   b) Select the **Source** tab, then press the up/down key or rotate the knob

Copyright © Itech Electronic Co., Ltd.

to find **Output Mode** menu.

c) Press the up/down key to move the cursor to the **Mode** function setting and press the **[Enter]** key to confirm. Rotate the knob to set **Parallel** output mode, and press the **[Enter]** key to confirm.

3. Enable/Disable Remote Sense.

a) Press the keys [**Shift**] and then press [**P-set**] (System) in order on the front panel to enter the system menu.

b) Select the **Source** tab, then press the up/down key or rotate the knob to find **Remote sense** menu.

c) Press the up/down key to move the cursor to the **Status** function setting and press the **[Enter]** key to confirm. Rotate the knob to select enable or disable the remote sense function, and press the **[Enter]** key to confirm.

Contact US

Thank you for purchasing ITECH products. If you have any doubt about this product, please contact us as follow.

1. Visit ITECH website www.itechate.com .
2. Select the most convenient contact for further consultation.