WASHTECH

PROFESSIONAL WASH SYSTEMS

CD150 OPERATOR MANUAL

Distributed in Australia by MOFFAT

Service 1 800 622 216
Parts 1 800 337 963

740 SpringvaleRoad, Mulgrave 3170, Victoria, Tel 03 9518 3888 Fax 03 9518 3818

CONNECTIONS		Ø
A	HOT WATER INLET = 65°C } 200-400 kPa	3/4"
B	TANK DRAINAGE POINT IS 1 .5" BSP =	40mm
	RECOMMENDED MINIMUM WASTE PIPE 2" BSP =	50mm
C	ELECTRICAL CONNECTION 400/415V, 3-N+E~CD150 =	30A
⊗	SHOWS RECOMMENDED FLOOR PENETRATION. POSITION FOR WASTE AND SUPPLY - IN LINE WITH END ELEVATION	

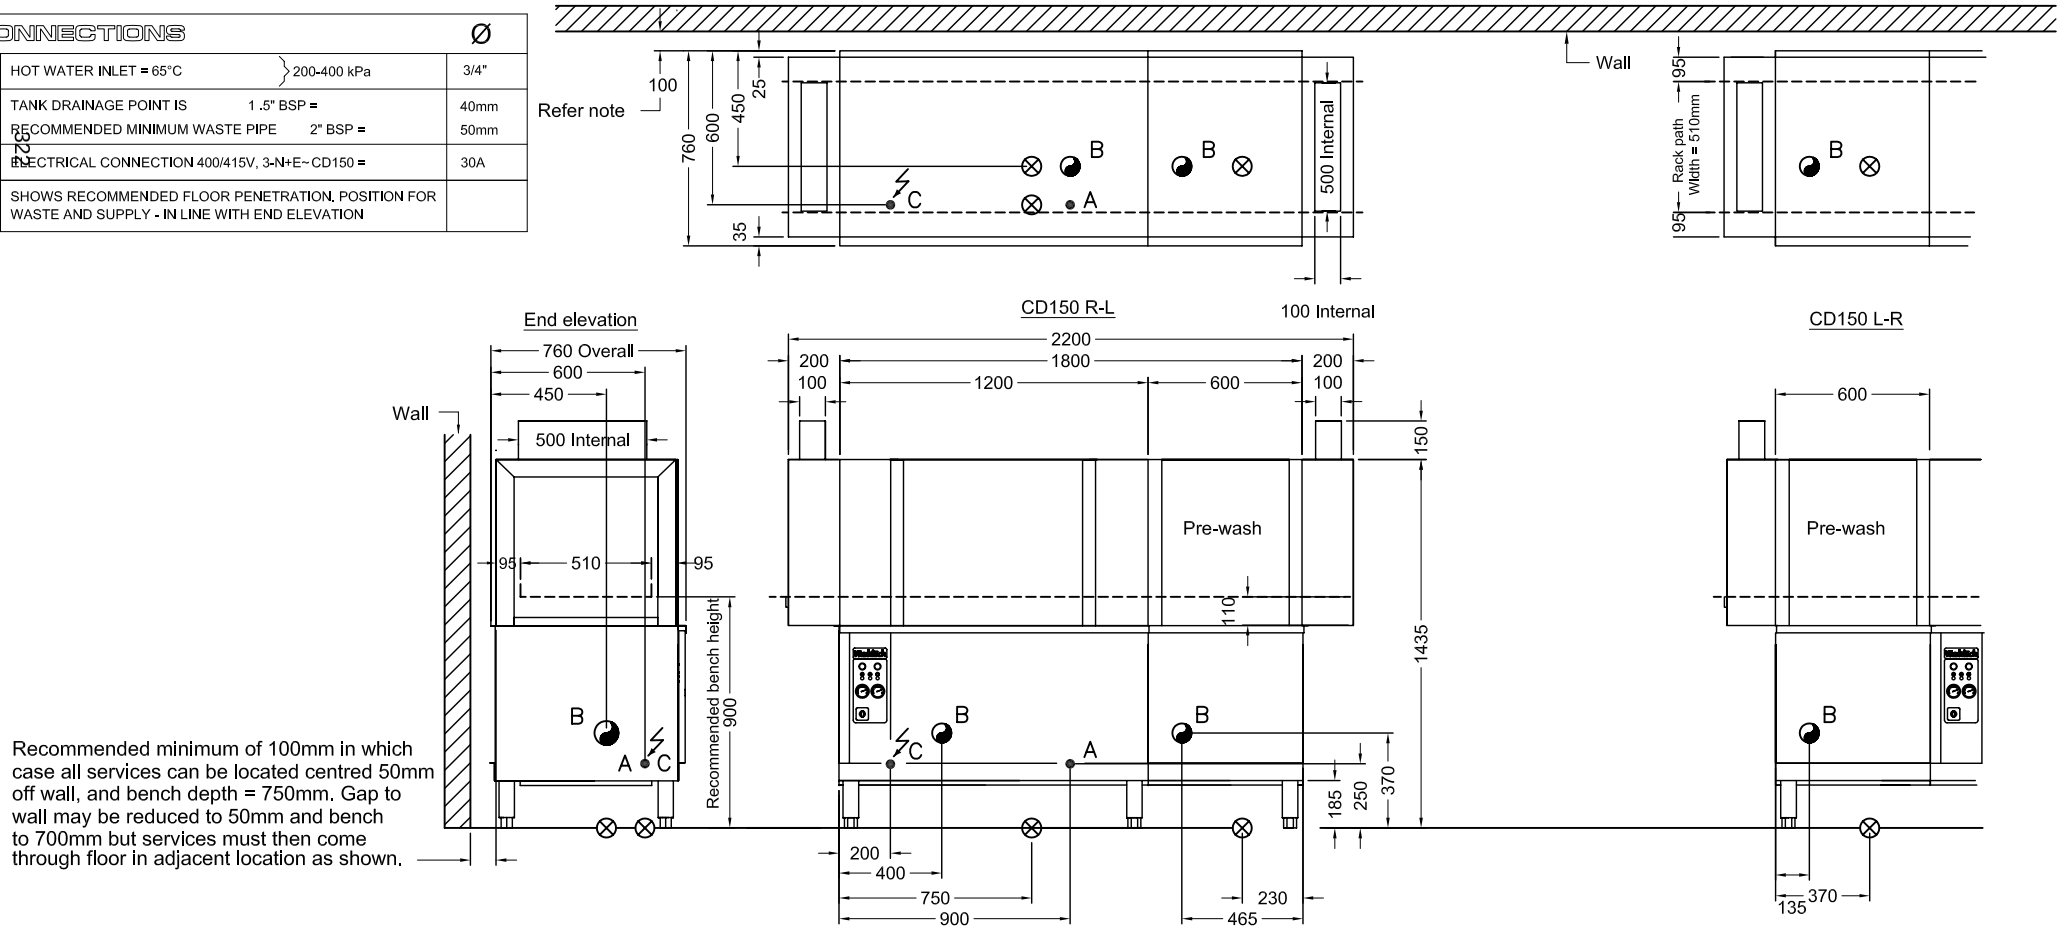

CD150

CD150 INSTALLATION
Installation personnel must be suitably qualified and ensure compliance with all codes and standards.
Install machine on sound self-draining floor and use adjustable feet to level machine.
Bench work detail drawing available on request

Allow room for detergent to one side of machine or in adjacent cupboard. 20 litre containers require approx 450H x 250W x 350D but smaller containers are available from many suppliers.

A. WATER SUPPLY - HOT

Temperature	- 65 +/- 5 degrees C
Pressure	- 200-400kPa = 30-60Psi recommended.
Consumption	- 350 litres per hour approx.
Connection	- 20mm (3/4" BSP Male). FLUSH SUPPLY LINE before connection (point A on drawing).

B. WASTE
40mm - refer point B on drawing. Direct waste pipe behind machine or through open area in base.

C. POWER
Must be 5 Wire 3 Phase, Neutral + earth 400/415V 30A/Ph 50Hz permanent wiring required via wall switch adjacent to machine.

DETERGENT
Refer your professional chemical supplier for advice on wash and rinse chemicals and dispensers.

COMMISSIONING PROCEDURES:
Connect all services as above. Ensure that all internal machine components such as filter and drain upstands are in place. Turn on water and switch on power. Close machine door and switch machine on, machine will fill. When water sprays from rinse arms inside machine, switch both power switches off at the wall. Remove lower front panel and switch commissioning switch by breaking label over same. Check rotation of wash pump and alter supply phase connections if necessary to achieve correct rotation. Close panel and switch machine on. Machine is now ready for use - refer operating instructions.

© WASHTECH® PROFESSIONAL WASH SYSTEMS
414 ROSEBANK ROAD, AUCKLAND, Tel (09) 829-0930
PO Box 90-548 NEW ZEALAND Fax (09) 829-0930

Description:	CHECKED BY	ISSUE NO.	Rev.	Issue Date:	Drawing No:
CD150 INSTALLATION DETAIL		1	D	29-03-03	CD150

DO NOT SCALE - IF IN DOUBT ASK DWG SIZE A3 (390x265) SPECIFICATION SUBJECT TO CHANGE WITHOUT NOTICE.

WASHTECH

PROFESSIONAL WASH SYSTEMS

Safe Installation and Use of Wash Equipment

As with all electrical and mechanical equipment dishwashing equipment can be hazardous if installed or operated incorrectly.

Installation

- ✓ Use qualified, skilled personnel
- ✓ Follow installation instructions
- ✓ Connect to correct voltage and supply current
- ✓ Provide fully accessible Electrical Isolation Switch

Training and Supervision

- ✓ Read and Understand the Operating instructions
- ✓ Train all staff.
- ✓ This appliance is not intended for use by young children.
- ✓ Young Children should be supervised to ensure they do not play with the appliance.
- ✓ This appliance is not intended for use by infirm persons without supervision

Hot Surfaces

- ✓ Be aware some surfaces can be hot.

Chemicals

- ✓ Commercial dishwashing detergents are hazardous
- ✓ Read and follow the safety information found on the labels of detergent containers and Material Safety Data Sheets
- ✓ Handle with care
- ✓ Use protective eyewear and clothing if decanting containers

Hot Water

- ✓ Door safety switches are designed for emergency use only.
- ✓ **WAIT** for the green cycle light to go out before opening the door.
- ✓ Wash water is 60°C and contains caustic detergent so **DO NOT** put hands in wash water.

Cleaning

- ✓ **DO NOT** hose down the machine or splash water over the exterior.
- ✓ Watch for broken glass etc when cleaning the inside of the machine especially with glasswashers..

For further information on any of the above contact

GROUP

Distributed in Australia by MOFFAT

Service 1 800 622 216
Parts 1 800 337 963

740 SpringvaleRoad, Mulgrave 3170, Victoria, Tel 03 9518 3888 Fax 03 9518 3818

WASHTECH CD 150

OPERATING INSTRUCTIONS

START UP

Fit drain upstands, wash pump inlet filters and scrap trays.
Close doors. Turn main switch ON - RED light comes on and machine fills.
When machine is full, filling automatically stops.

OPERATION

Press START button to operate machine.
When AMBER ready light comes on racks can be fed into the machine.
Note: Conveyor will not operate unless AMBER ready light is illuminated (ie. machine is up to required temperature).

SHUT DOWN - IMPORTANT - EVERY NIGHT

Press stop button.
Turn machine switch off.
Remove scrap trays and rinse clean.
Remove drain upstands to drain tanks.
Remove pump inlet filters and rinse clean.
Replace drain upstands, filters and scrap trays.
Note: Shorter upstand into pre-wash tank (entry end).

We recommend regular removal and flushing of wash and rinse arms.
To remove wash arm assembly, lift to unhook and withdraw.
To remove rinse arm assembly, twist and withdraw.
Flush arms with water using a toothpick to clear jets, if necessary.
Refitting is the reverse of the removal procedure.

Use of correct type and quantities of detergent is essential to the effective operation of this machine. A low foam speciality product is recommended.

For information on recommended detergent suppliers or local service agents, contact:

REV 1B
24/4/98

ali GROUP
Distributed in Australia by MOFFAT
Service 1 800 622 216
Parts 1 800 337 963
740 SpringvaleRoad, Mulgrave 3170, Victoria, Tel 03 9518 3888 Fax 03 9518 3818

GETTING THE BEST RESULTS FROM YOUR DISHWASHER

1. Hot Water Supply

An adequate supply of water at the correct temperature and pressure is essential for effective operation of your machine. An inadequate hot water supply will result in significant time delays between operating cycles. Refer Installation information for detail. Water softening is recommended in hard water areas - especially for glasswashing.

2. Pre-rinsing

Pre-scraping of dishes is required by Food Hygiene Regulations. The best method is to pre-rinse with warm water with a Fisher Pre-rinse Unit - or alternatively by scraping or dunking in water. Cutlery should be pre-soaked in warm water, preferably containing cutlery pre-soak compound - refer your chemical supplier.

3. Racking Procedures

Do not overload racks or cutlery containers, minimise the overlap of crockery. Cycle times are short and water consumption per cycle low - so there is no advantage in overloading racks.

4. Cycle Times

With multi-cycle machines select cycle 3 initially and switch to faster cycles only if necessary. Note that water consumption does not increase with longer cycles. For best results use the longest cycle whenever possible.

5. Detergent

Use of correct type and quantity of detergent is essential to the performance of the machine. Low foam specialty products are recommended. We strongly recommend that you use a professional dishmachine chemical supplier - and will be pleased to recommend a supplier in your region. Discuss with them the use of cutlery pre soak solution, detergent and drying agent.

6. Drying

Single tank commercial dishwashers do not have a drying cycle. However, the machines do rinse at high temperatures which promote fast drying particularly when drying agents are used. We recommend prompt removal of the rack from the machine - leave the rack on the bench for 2 to 3 minutes before emptying. This time will be reduced with correct use of drying agent (rinse fluid) which reduces water surface tension and allows water to drain quickly from washware. For advice on drying agents and injectors refer to your chemical supplier.

7. Daily Cleaning

It is essential that the machine is drained and cleaned at the end of each day. Drain the machine then remove, clean and replace filters as per the operating instructions. Regularly check the wash and rinse jets. Remove wash and rinse arms by undoing the central thumbscrew. (DO NOT remove the thumbscrew retainer plate if fitted). Flush arms with water and use a toothpick or paperclip, if necessary, to clear jets. On some models individual jets can be removed for cleaning by twisting anticlockwise. To remove the end plugs on these arms first remove the end jet then withdraw end plug. To flush the machine, leave the drain upstand out, close the door and switch the machine on for about 20 seconds. DO NOT leave the machine unattended during this process.

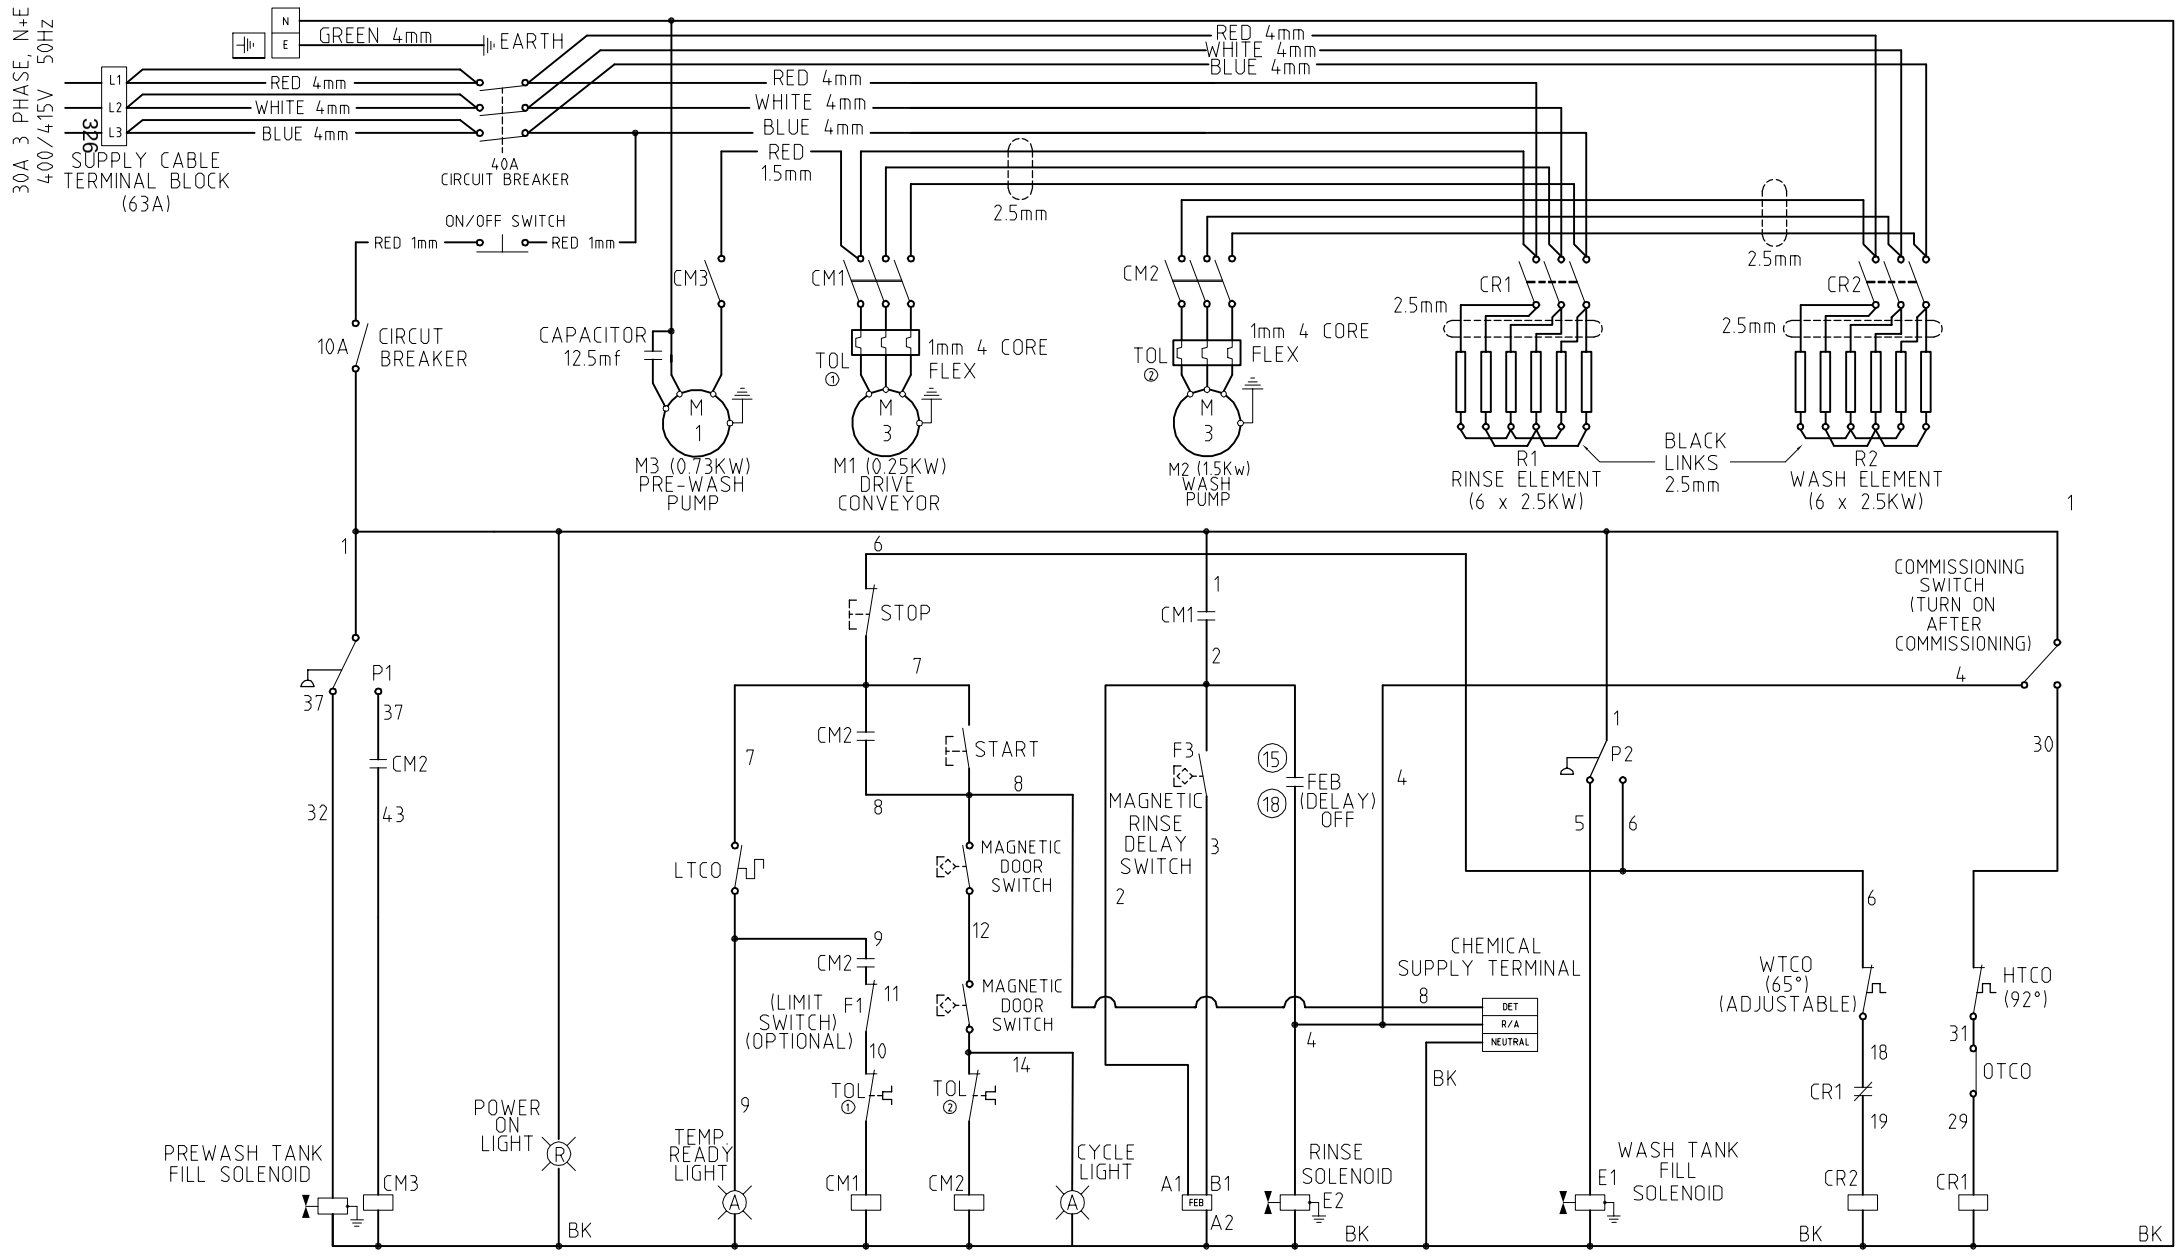

✱ CONTROLS USE ALL WHITE WIRE OR WHITE\STRIPED WIRE UNLESS OTHERWISE SHOWN

Date	Change	Issue
15-05-03	CHANGE PREWASH PUMP	1-P

© WASHTECH® PROFESSIONAL WASH SYSTEMS
414 ROSEBANK ROAD, AUCKLAND, Tel (09) 829-0930
PO Box 90-548 NEW ZEALAND Fax (09) 829-0930

Description:	CHECKED BY	ISSUE NO.	Rev.	Issue Date:	Drawing No:
CD150 (III) SCHEMATIC DIAGRAM		1	P	15-05-03	250117

DO NOT SCALE - IF IN DOUBT ASK DWG SIZE A3 (390x265) SPECIFICATION SUBJECT TO CHANGE WITHOUT NOTICE.

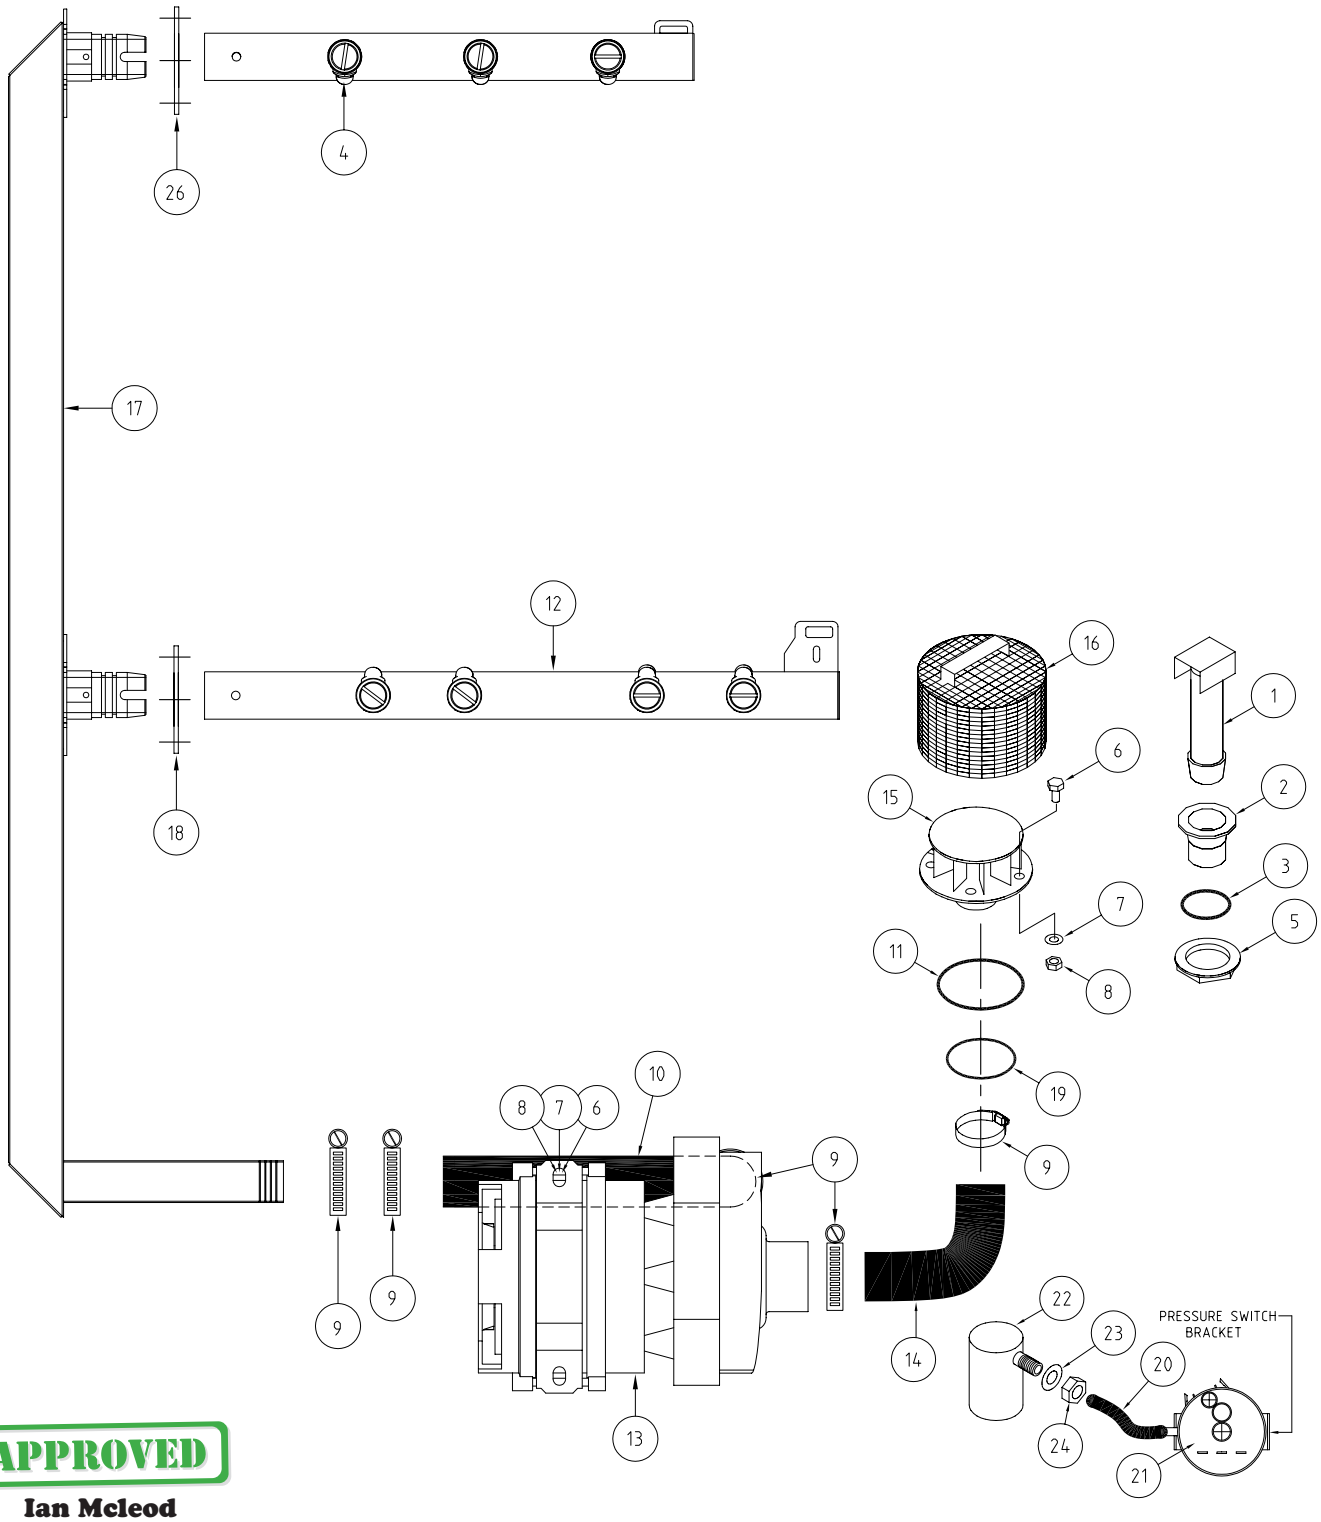

APPROVED

Ian Mcleod

ITEM	CODE	DESCRIPTION	QTY
1	830 10078	ASSY CD150 PRE-WASH DRAIN UPSTAND	1
2	400 30042	WASTE DRAIN PLASTIC 40mm WASHTECH	1
3	1896	GASKET 40mm DRAIN WASTE	1
4	836 10011	UPPER PRE-WASH ARM	1
5	6037	BACKNUT 126 X 40mm	1
6	600 80015	MS HX SS 304 M6 X 16	8
7	8566	WASHER SPRING SS 304 M6	8
8	8106	NUT HX SS 304 M6	8
9	ASS28	HOSECLIP ASS28	5
10	1262	HOSE WASH PUMP INLET UHB44	1
11	ARP241	O RING ARP241	1
12	836 10010	LOWER PRE-WASH ARM	1

ITEM	CODE	DESCRIPTION	QTY
13	3904	PUMP WASH OPEN 2256EP 1hp240	1
14	2438210	HOSE WASH PUMP INLET M2	1
15	C160603	INLET WASH PUMP SUCTION C30	1
16	1238	FILTER WASH INLET 100mm CIRC.	1
17	836 10052	CD PRE-WASH MINIFOLD	2
18	835 90006	CD WASH MANIFOLD FLANGE	2
19	ARP229	O RING ARP229	1
20	3067	PRESSURE SWITCH HOSE x 150mm LONG	1
21	130605C	SWITCH PRESSURE 50-30 1 LEVEL	1
22	C161301	AIR TRAP F2 C34-F45	1
23	400 90010	GASKET 10x19x.8 CAF	1
24	600 80009	NUT SS304 HEX M10	1

© WASHTECH®
PROFESSIONAL WASH SYSTEMS
414 ROSEBANK ROAD, AUCKLAND, Tel (09) 829-0930
PO Box 90-548 NEW ZEALAND Fax (09) 829-0930

Drawing No: CD150 001	ISSUE NO. 1	Rev. B	Description: ASSY CD150 PREWASH SYSTEM	Scale NTS	Units: mm	Proj:
	Issue Date: 09-12-0327			FINISH:		
	Drawn by: B.A.E			Material:		

Tolerance: REF | Checked by: | Approved by: | Sheet No. | Drawing No: CD150 001

DO NOT SCALE - IF IN DOUBT ASK DWG SIZE A3 (390x265)

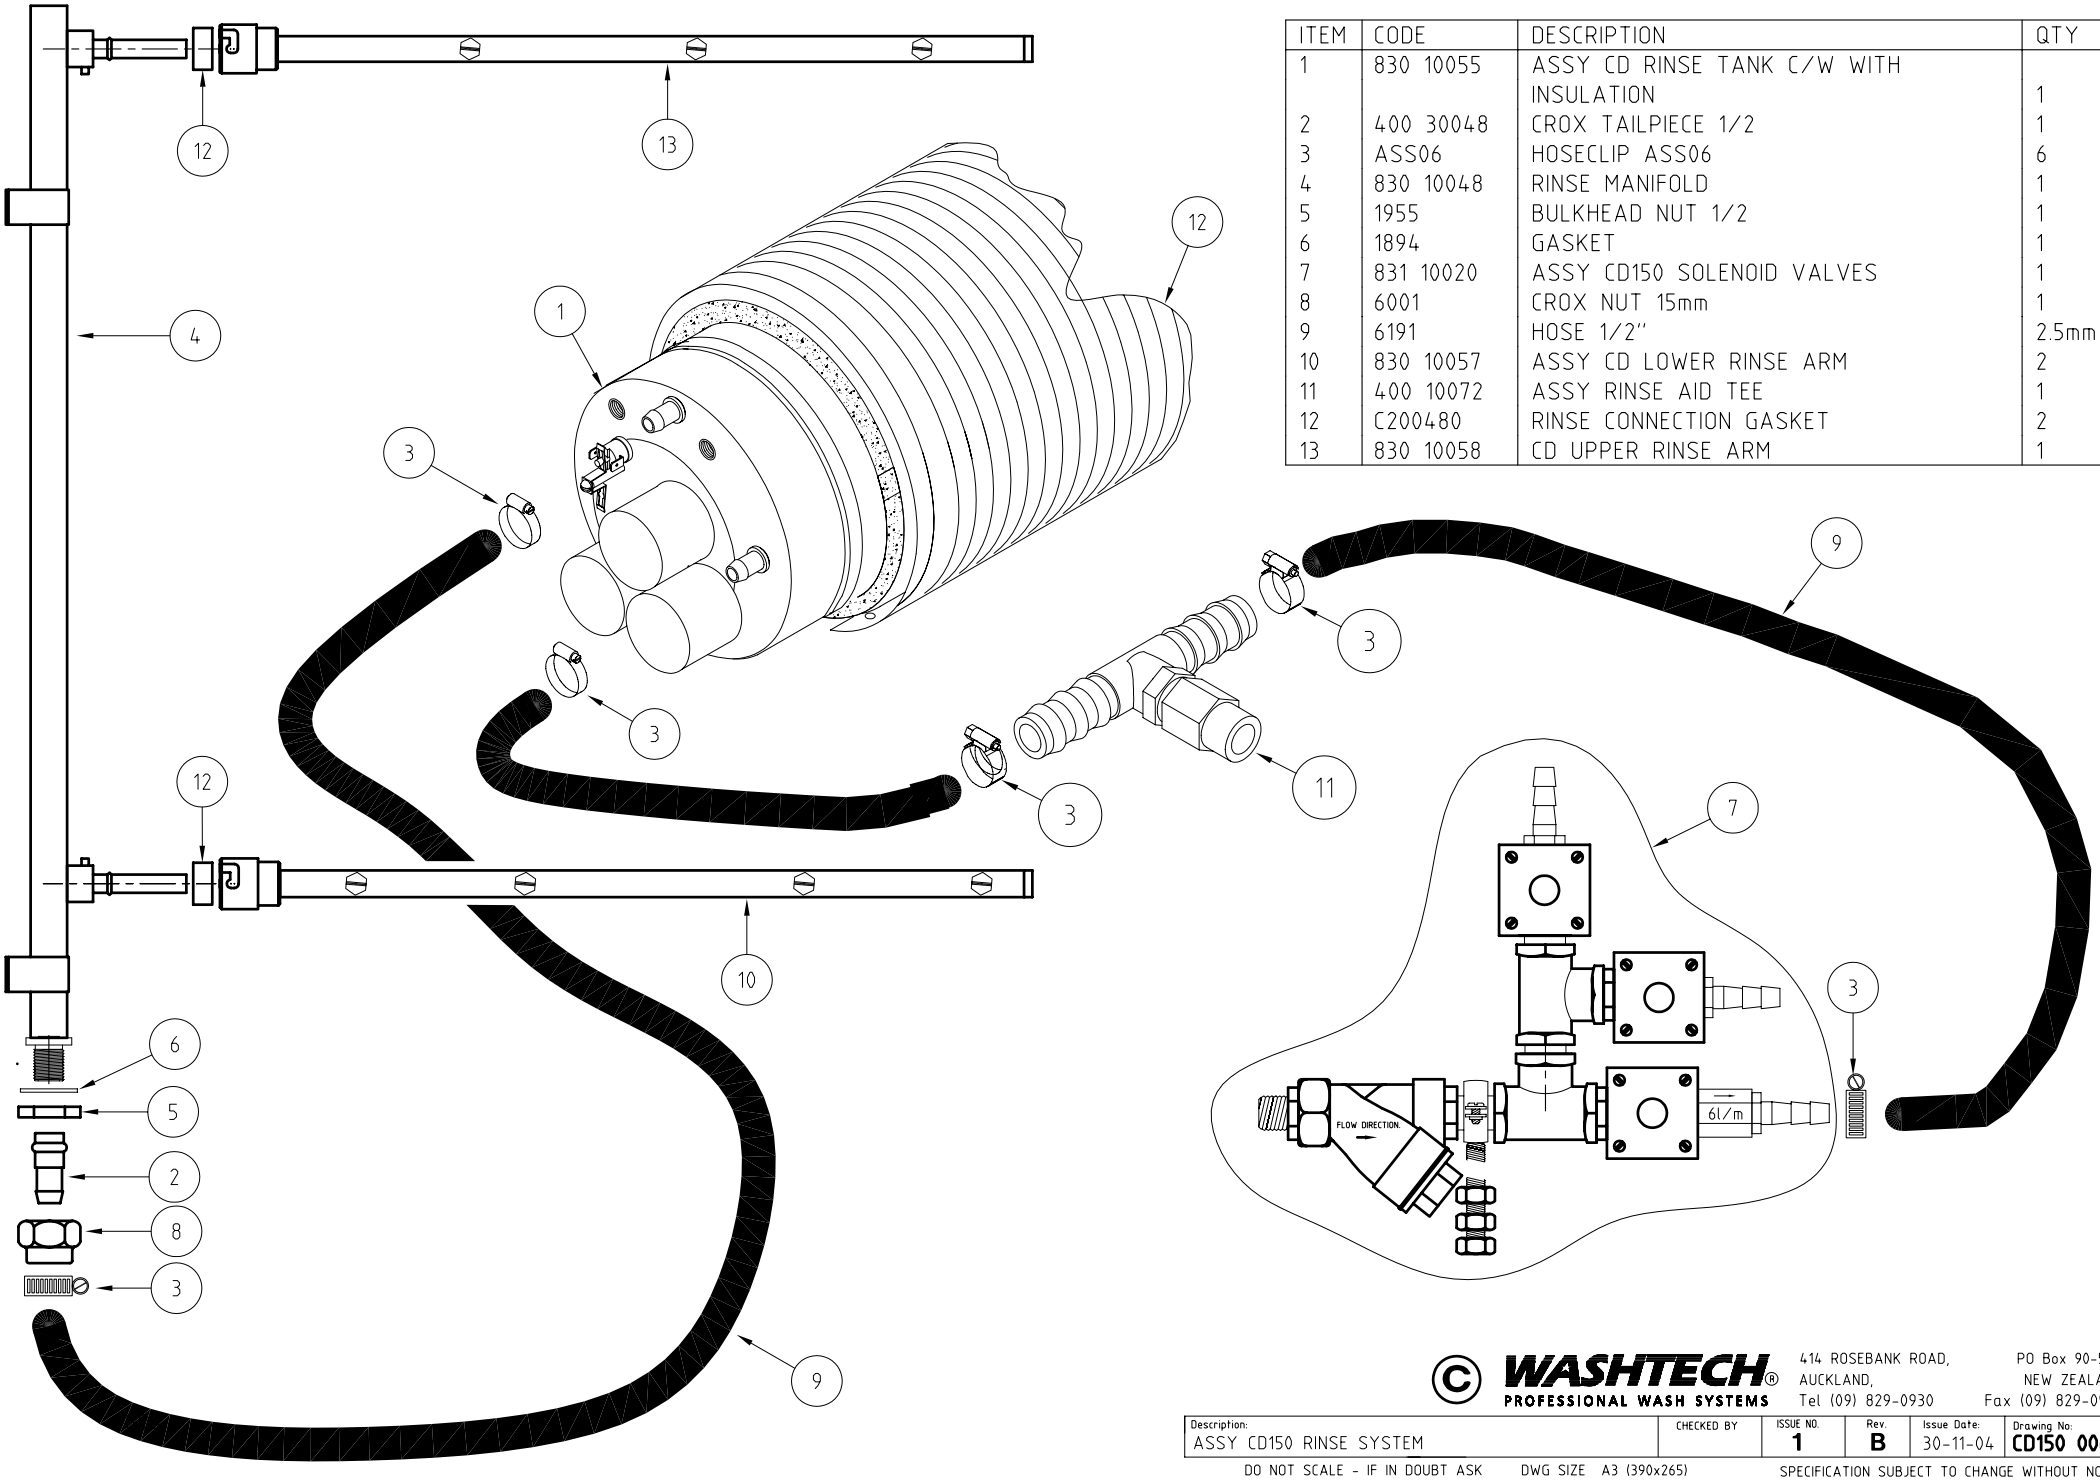

ITEM	CODE	DESCRIPTION	QTY
1	830 10055	ASSY CD RINSE TANK C/W WITH INSULATION	1
2	400 30048	CROX TAILPIECE 1/2	1
3	ASS06	HOSECLIP ASS06	6
4	830 10048	RINSE MANIFOLD	1
5	1955	BULKHEAD NUT 1/2	1
6	1894	GASKET	1
7	831 10020	ASSY CD150 SOLENOID VALVES	1
8	6001	CROX NUT 15mm	1
9	6191	HOSE 1/2"	2.5mm
10	830 10057	ASSY CD LOWER RINSE ARM	2
11	400 10072	ASSY RINSE AID TEE	1
12	C200480	RINSE CONNECTION GASKET	2
13	830 10058	CD UPPER RINSE ARM	1

© WASHTECH® PROFESSIONAL WASH SYSTEMS
414 ROSEBANK ROAD, AUCKLAND, Tel (09) 829-0930
PO Box 90-548 NEW ZEALAND Fax (09) 829-0930

Description:	CHECKED BY	ISSUE NO.	Rev.	Issue Date:	Drawing No:
ASSY CD150 RINSE SYSTEM		1	B	30-11-04	CD150 006

DO NOT SCALE - IF IN DOUBT ASK DWG SIZE A3 (390x265)

SPECIFICATION SUBJECT TO CHANGE WITHOUT NOTICE.