




Operator's, Maintenance & Service Manual

Anthem® Incline Screen

Through Body Design

SN: 2254831
MODEL # F6163IBS
11-2022

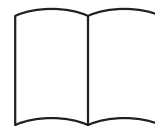

WARNING!

**Read manual before
operating equipment.**

Table of Contents

Foreword	3	Drive Belt	16
Contact Us	3	Media	16
Product Support	3	Condition	16
Parts Sales	3	Load	17
Warranty Registration	4	Start Up Operation	17
Screen General Safety	5	Shutdown Procedure	17
Signal Words and Symbols	5	Screen Transportation	18
Owner Responsibilities	5	Shipping Brackets	18
Safety Rules	5	Lifting Points	18
Hearing Protection	6	Drive Mechanism	19
Eye Protection	6	Operating Temperature	19
Overhead Protection	6	Seal Lubrication	19
Inhalation Protection	6	Adding Grease	19
Electrical Safety	6	Drive Bearing Lubrication	19
Rigging Safety	6	Draining Oil	19
Chains and Slings	6	Adding Oil	19
Support Structure	6	Verifying Oil Level	20
Lockout/Tagout	7	V-Belt	20
Lockout/Tagout	7	Signs of Wear	20
Procedure	7	Replacement	20
Anthem® Inclined Screen Decal Layout	8	QD® Bushings	20
Right Hand	8	Driven Sheave Removal	21
Left Hand	9	Drive/Motor Sheave Removal	21
Component Identification	10	Installation	22
Through Design	10	Flywheel Weights	22
Screen Site Prep	12	Removing Weight	22
Structure Requirements	12	Installing Weight	22
Screen Clearance Requirements	12	VS2	23
Power Requirements	12	Overview	23
Screen Setup	13	Torque Specifications	23
Lifting	13	Installation	23
Installation to Frame	13	Maintenance	26
Sheave Alignment	14	Every 500 Hours	26
Snubber Adjustment	14	After 1st 100 Hours of Operation	26
Troubleshooting	14	Every 500 Hours	26
Belt Guard	15	Re-torque Values	26
Flywheel Guard	15	Rosta Tensioning	27
Screen Start-up / Operation	16	Overview	27
Pre-Operational Inspection	16	Instruction	27
Guarding	16	Screen Tuning	28
Shipping Brackets	16	Adjustable Weights	28
Clearance	16	Liners and Tube Guard	29
Lubrication	16	Liners	29
Hardware	16	Signs of Wear	29
		Feedbox Liner Replacement	29
		Discharge Lip Liner Replacement	29

Tube Guards	30
Signs of Wear	30
Replacement	30
Maintenance Schedule	31
Maintenance Actions	31
Daily Maintenance	31
Weekly Maintenance	31
Bi-Weekly Maintenance	31
Imperial Torque Specs	32
Recommended Torque	32
US Bolts	32
Metric Torque Spec	33
Class 4.6 and 8.8	33
Class 10.9 and 12.9	34
Long-Term Storage Maintenance	34
Anthem Incline Screen Inspection Checklist	35
Incline Screen Troubleshooting	37
Troubleshooting Guideline	37
Screen Lubrication Chart	39
ISO Grade Lubricant	39
Grease lubrication	39
Oil Quantity	39
Lubrication Details	40
Anthem® Inclined Screen Start-Up Checklist	41
Screen Delivery Inspection	41
Screen Specifications	41
Screen Issues / Notes (If Applicable)	45
Screen(s) Stroke With Material	46
Screen(s) Stroke With Material	47
Maintenance Log	48
Warranty	51
Proposition 65 Warning	57

Foreword

This instructional manual was compiled for the benefit of all those involved in the maintenance and operation of Superior Industries products. When carefully read, and suggested operating and service procedures applied, the information contained within this instruction manual can save valuable time and eliminate broad assumptions.

A careful study by everyone working on the equipment should be made of this manual to familiarize yourself with the mechanical make-up and design features of the product before it is placed in operation.

It contains important instructions for safe, optimal and economical use of the equipment. Follow these instructions to avert possible hazards, cut repair costs and the number of failures, increase the equipment's reliability and prolong its service life

This manual should be completed with local safety and environmental protection regulations. In addition, the generally accepted technical rules governing safety in the workplace should be followed.

A copy of this user manual should always be available near the equipment.

The descriptions and specifications in this manual were accurate when it was approved for publishing.

Superior Industries reserves the right to discontinue it's models at any time and change the specification or drawings, without notice or any obligation.

Should you have any questions regarding the equipment or this publication, please contact Superior Industries.

Contact Us

<https://superior-ind.com/contactus/>

Product Support

- Available 24 hrs / 7 days a week / 365 days a year.
- +1 (320) 589-7485
- productsupport@superior-ind.com

Parts Sales

- Available 24 hrs / 7 days a week / 365 days a year.
- +1 (320) 589-7547
- partsales@superior-ind.com

Warranty Registration

- 1. Go to <https://superior-ind.com/customer-support/warranty/>
- 2. Complete warranty form to register your equipment with our customer service department. Completion ensures that equipment will be covered under the seller’s standard warranty. Read through standard warranty located in the back of this manual.
- 3. Unit Serial Number and model can be found on front cover of this manual. Unit Serial Number can also be found on conveyor nameplate.
- 4. After all information is entered, check box agreeing with bolded statement.
- 5. Click submit to finish registration.



Please complete the form below to register your equipment with our customer service department. The completion ensures the equipment will be covered under the seller's standard warranty, which is located in the back of your owner's manual.

On behalf of Superior's hard-working employees and our great network of dealers, thank you for your purchase!

Name *

First

Last

Serial Number

Model

Service Start Date

Transaction Type

☐ Sale

☐ Lease

☐ Rental

☐ Change of Ownership

Are you a dealer or owner/lessee? *

☐ Dealer

☐ Owner/Lessee

Next

Screen General Safety



Read and understand equipment operator's manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

Signal Words and Symbols



This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



NOTICE is used to address practices not related to physical injury.



Safety instructions (or equivalent) signs indicate specific safety related instructions or procedures.

Superior Industries cannot anticipate every possible circumstance which involves potential hazard. The warnings and notifications in the manual are not all inclusive.

Owner Responsibilities

- Know the job that is to be done and know what is required to properly perform the assignment.
- All personnel must read this manual and thoroughly understand safe and correct installation, operation, and maintenance procedures.
- Install equipment correctly before placing in service and then follow recommended maintenance schedule and procedures to service equipment thereafter.
- Fulfill all warranty obligations so as to not void warranty. Complete description of obligations is found on back of sales contract under terms and conditions. Warranty policy is located on inside back cover of this manual.
- Keep work site clean to prevent accidents.
- Keep flammable fluid stored in a safe place away from any form of heat.
- Clean up spilled fluid immediately.

- Place warnings on any corrosive or toxic chemicals to ensure their safe handling.
- Clean ice and snow off walk ways and stairs in winter. Keep material spills down to minimum.
- Do not store tools or equipment on walkways.
- Be organized and keep safety items in visible accessible places. Have an emergency call list beside phones.
- Keep area around panel free from debris and equipment. Clear access must be maintained at all times.

Safety Rules

- Follow all applicable local, state, and federal codes, regulations and/or laws; OSHA rules and regulations; insurance requirements; and in compliance with equipment safety labeling and manual instructions in regards to operating and maintaining your equipment.
- Do not allow anyone to operate equipment until he/she has read manual and is familiar with safety precautions.
- Do not allow unauthorized persons unfamiliar with equipment to operate or perform maintenance.
- Do not operate or maintain equipment while under the influence of alcohol, medications, or other drugs which can impair judgment or cause drowsiness.
- Required PPE (personal protective equipment) will vary depending on equipment usage and location. It is operator's responsibility to wear correct PPE for the situation and when required.
- It is operator's responsibility to be aware of hazardous areas and follow safety signs and label instructions.
- It is operator's responsibility to be aware of equipment operation and work area hazards at all times. Keep work areas clear and clean.
- Loose clothing, long hair, or jewelry can get caught in moving parts. Remove or restrain when necessary.
- Do not smoke while servicing the equipment.
- Do not perform maintenance while equipment is running unless noted otherwise in a procedure within this manual.
- Lockout/Tagout/Blockout equipment before any setup, maintenance, or adjustments to this equipment.
- It is operator's responsibility to know all locations, and periodically check, all guards and shields are in place before operating equipment.
- Watch for adequate overhead clearance and power lines before setting up and operating equipment.

- Operators are responsible to know location and function of all controls and indicators.
- Be sure area is clear of persons before starting equipment for operation or maintenance.
- Equipment requires an operator at all times. Never leave machine running unattended.
- The equipment should not be used to handle materials other than what it was designed for. Refer to specifications.
- Do not use equipment if safety devices are not working properly. Remove from service until repaired.
- Modifying equipment or using unapproved factory recommended service parts may result in injury, death, voided warranty, and/or decrease equipment effectiveness.
- Be sure equipment is in lowest position before transporting. Do not exceed 55 mph on paved roadways. Reduce speed in adverse conditions or uneven terrains.
- Never approach screen while it is operating.
- Never work on a moving machine.
- Never attempt to catch falling material.

Hearing Protection

- Use proper hearing protection to prevent temporary or permanent hearing loss when equipment is in use.
- Noise levels vary from 86-93 dBA around screen.

Eye Protection

- Use proper eye protection to prevent fine dust particles from entering the eyes while equipment is in use.

Overhead Protection

- Use proper head protection to prevent injury from falling material while working around equipment whether in operation or not.

Inhalation Protection

- Use proper breathing mask to prevent inhalation of airborne particulates while equipment is in use.

Electrical Safety

- Only licensed electricians should service electrical connections.
- Use proper Lockout/Tagout/Blockout procedures when working near electrical sources.
- Repair worn or damaged wires and connectors.
- Inspect cables and connectors daily.
- Ground all tools.

Rigging Safety

- Follow all applicable regional and occupational safety regulations governing the safe use of cranes, hoists, derricks, and all lifting equipment.
- Use rigging equipment within manufacturers recommendations.
- Inspect all rigging equipment prior to and after each use.
- Never stand near a sling or cable while under tension.
- Never approach a suspended load, use tag lines to control suspended load movement.
- Plan each lift from start to finish.
- Use only recommended lifting points when rigging this equipment.

Chains and Slings

Ensure chain and hardware are of proper size.

Inspect equipment regularly to manufactures guidelines.

Do not jerk load or move equipment suddenly.

Use padding between chain and equipment to protect from damage.

Support Structure

- Vibratory equipment support structure must comply with and achieve performance set by ISO 2372 standard.
- Any vibratory equipment (e.g., vibratory screens) supported on a support structure that is not in compliance with ISO 2372 standard must not be operated.
- Operation of any Superior Industries vibratory equipment on a structure that does not meet ISO 2372 standard may result in damage to equipment, damage to support structure, and serious bodily injury.
- Applicable vibration severity range maximum limit for this equipment to comply with ISO 2372 is 0.62 in/s (11.2 mm/s).
- If you do not have access to ISO 2372 or are unsure how to comply with ISO 2372 or these requirements, you must contact Superior Industries before operation of vibratory equipment.
- Failure to use support structure in compliance with the ISO 2372 standard (or to comply with the provisions of preceding paragraph) will void any applicable warranty on any Superior Industries equipment used with such non-compliant support structure.
- Vibration measurements should be taken directly under each spring base/s and recorded in your warranty documentation and maintenance file.

Lockout/Tagout



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

WARNING

Heed to the following warnings. Failure to do so could result in death or serious injury.

- Follow correct Lockout/Tagout procedures.
- Follow all applicable local, state, and federal codes, regulations and/or laws; OSHA rules and regulations; insurance requirements; and in compliance with equipment safety labeling and manual instructions in regards to operating and maintaining your equipment.

Lockout/Tagout

Placement of a lock and tag(s) on an energy isolating device, in accordance with a procedure, ensuring that the energy isolating device and equipment being controlled cannot be operated until lock and tag(s) are removed.

Lockout/Tagout protects against:

- Unexpected or accidental start up or movement of equipment and/or parts.
- Unsafe operation of equipment.
- Stored energy in equipment even when it is shutdown.

Procedure

Figure 1



1. Identify energy source(s).
2. Isolate energy source(s).
3. Lock and tag energy source(s).

4. Prove equipment isolation is effective.

According to 29CFR part 1910 of OSHA regulations, employer must establish lockout/tagout system of procedures, training, and periodic inspection before any employee operates, services, or maintains piece of equipment.

Follow employer's policies and recommendations for Lockout/Tagout procedures.

Lockout/Tagout when:

- Repairs or maintenance is required on equipment.
- Cleaning or lubricating equipment.
- Cleaning blocked or jammed mechanisms.
- Equipment is left unattended.

Lockout/Tagout Rules

- Maintenance personnel, foreman, team leader, or anyone working on equipment must apply a lock and tag to equipment.
- Each person working on equipment applies their own tag.
- Only the person who applied lock and tag can remove it.


Anthem® Inclined Screen Decal Layout

 Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

Note: Inspect decals every time equipment is cleaned, keep free of debris and replace if decal becomes faded, worn or is peeling.

Right Hand

Figure 2

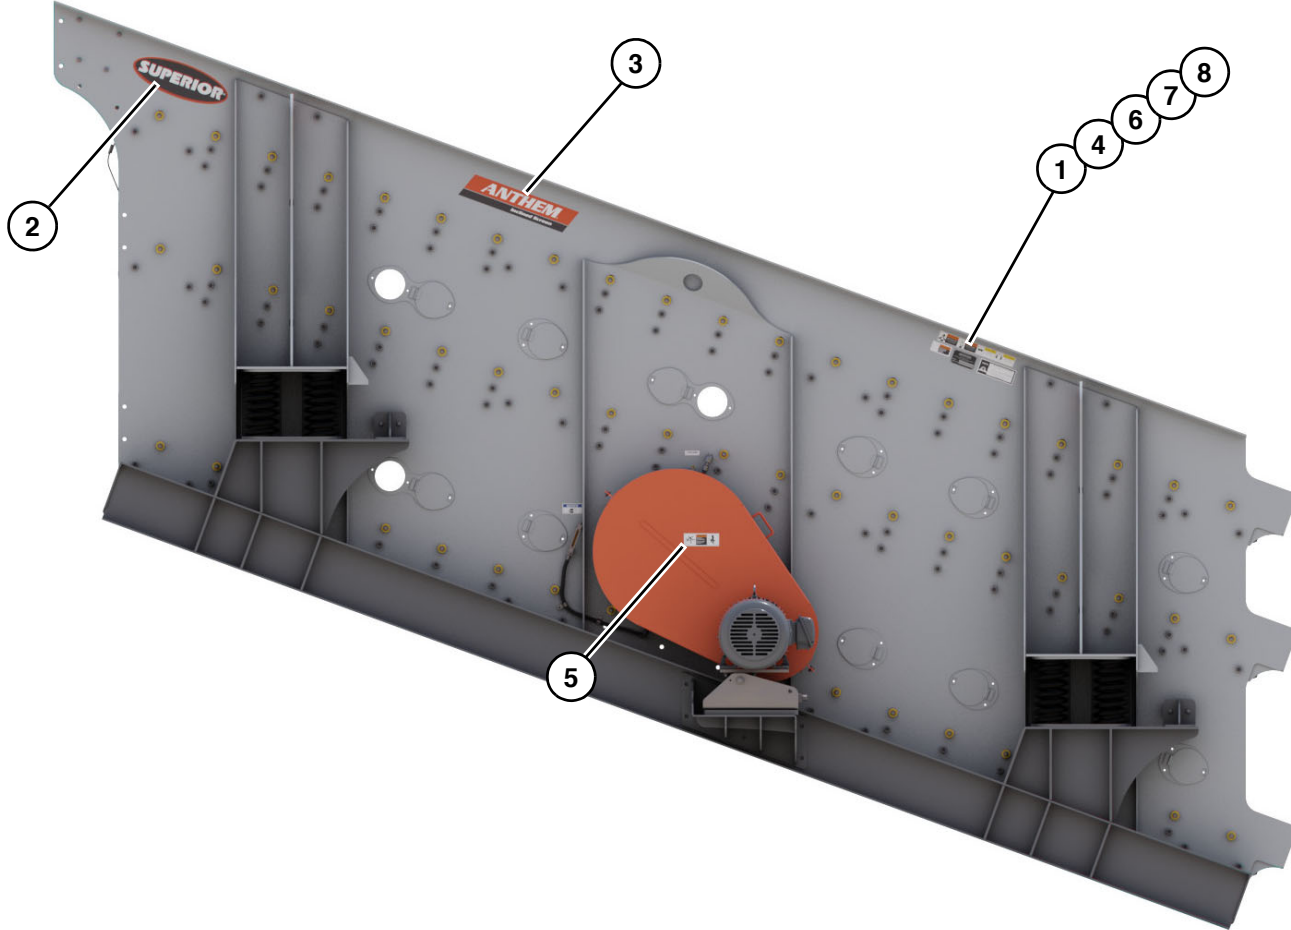


Refer to numbers below and (Figure 2) for decal placement.

1. 19-01104 Serial Number Plate, Qty-1
2. 19-01153 Superior Industries Logo 29.43"W x 12.08"H, Qty-2
3. 19-01194 Anthem® Inclined Screen Logo, Qty-2
4. 19-00081 Parts Order Decal, Qty-1
5. 19-00158 Moving Parts Decal, Qty-1
6. 19-00323 Read Owner's Manual Decal, Qty-1
7. 19-01136 Safety Strip Decal, Qty-1
8. 19-80358 Patent URL Sticker, Qty-1

Left Hand

Figure 3

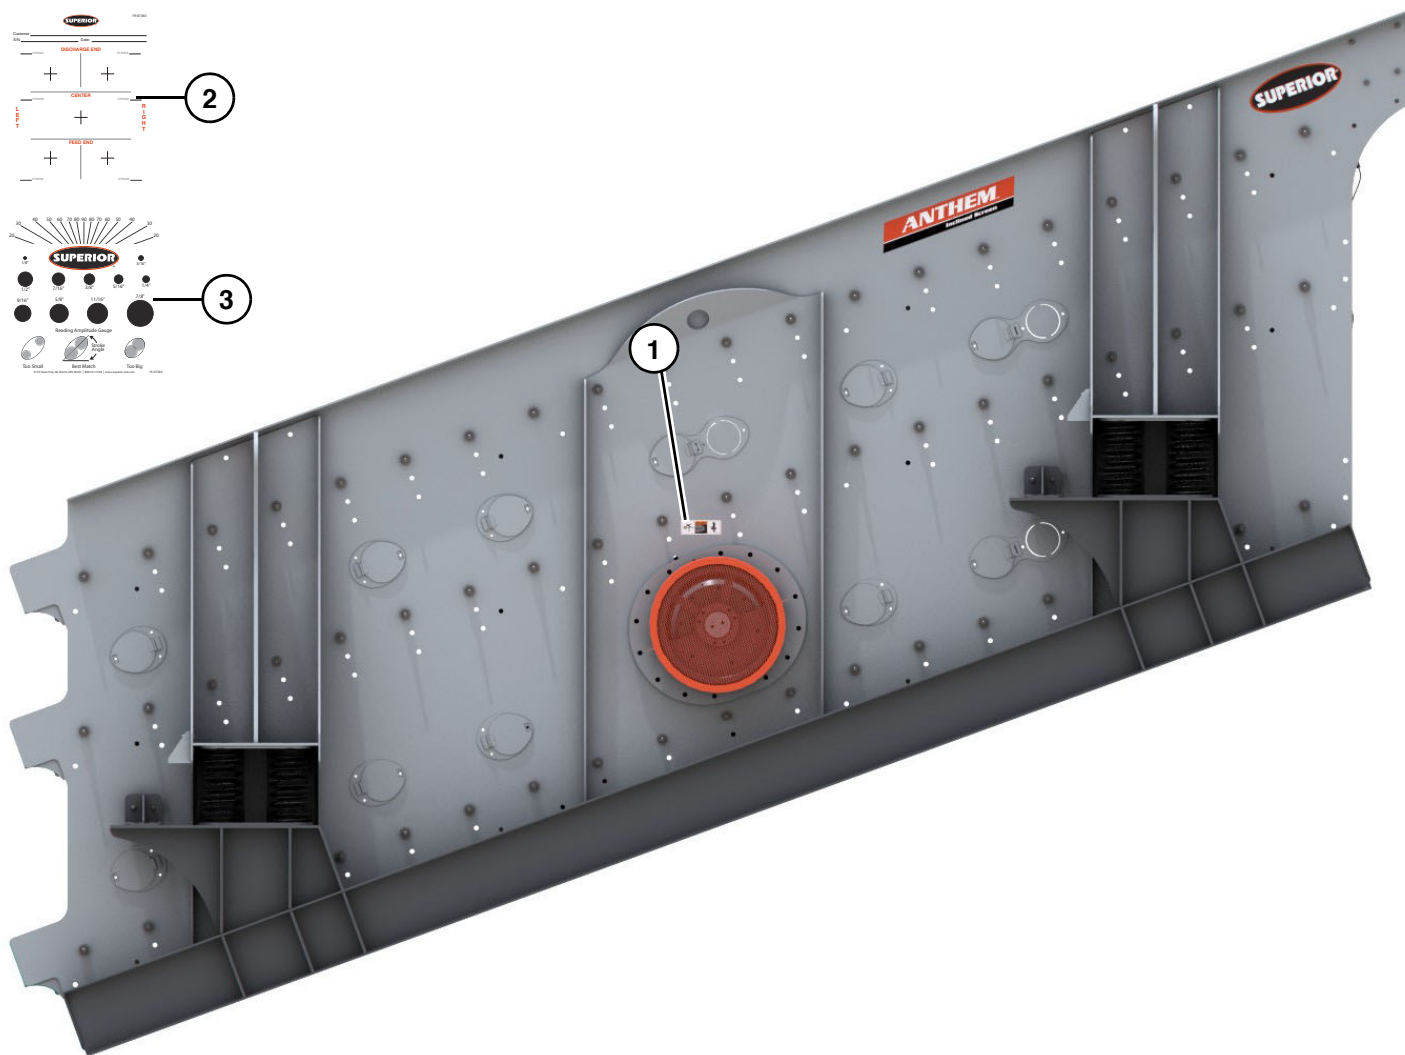

Refer to numbers below and (Figure 3) for decal placement.

1. 19-00158 Moving Parts Decal, Qty-1
2. 19-01360 Vibration Indicator Magnet
 - Ships loose with manual, Qty-1
3. 19-01361 Stroke Test Decal
 - Ships loose with manual, Qty-1


Component Identification

 Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death

Note: The following identification is to be used only as a reference only, refer to engineered general arrangement drawing for accurate depiction.


Through Design

Figure 4

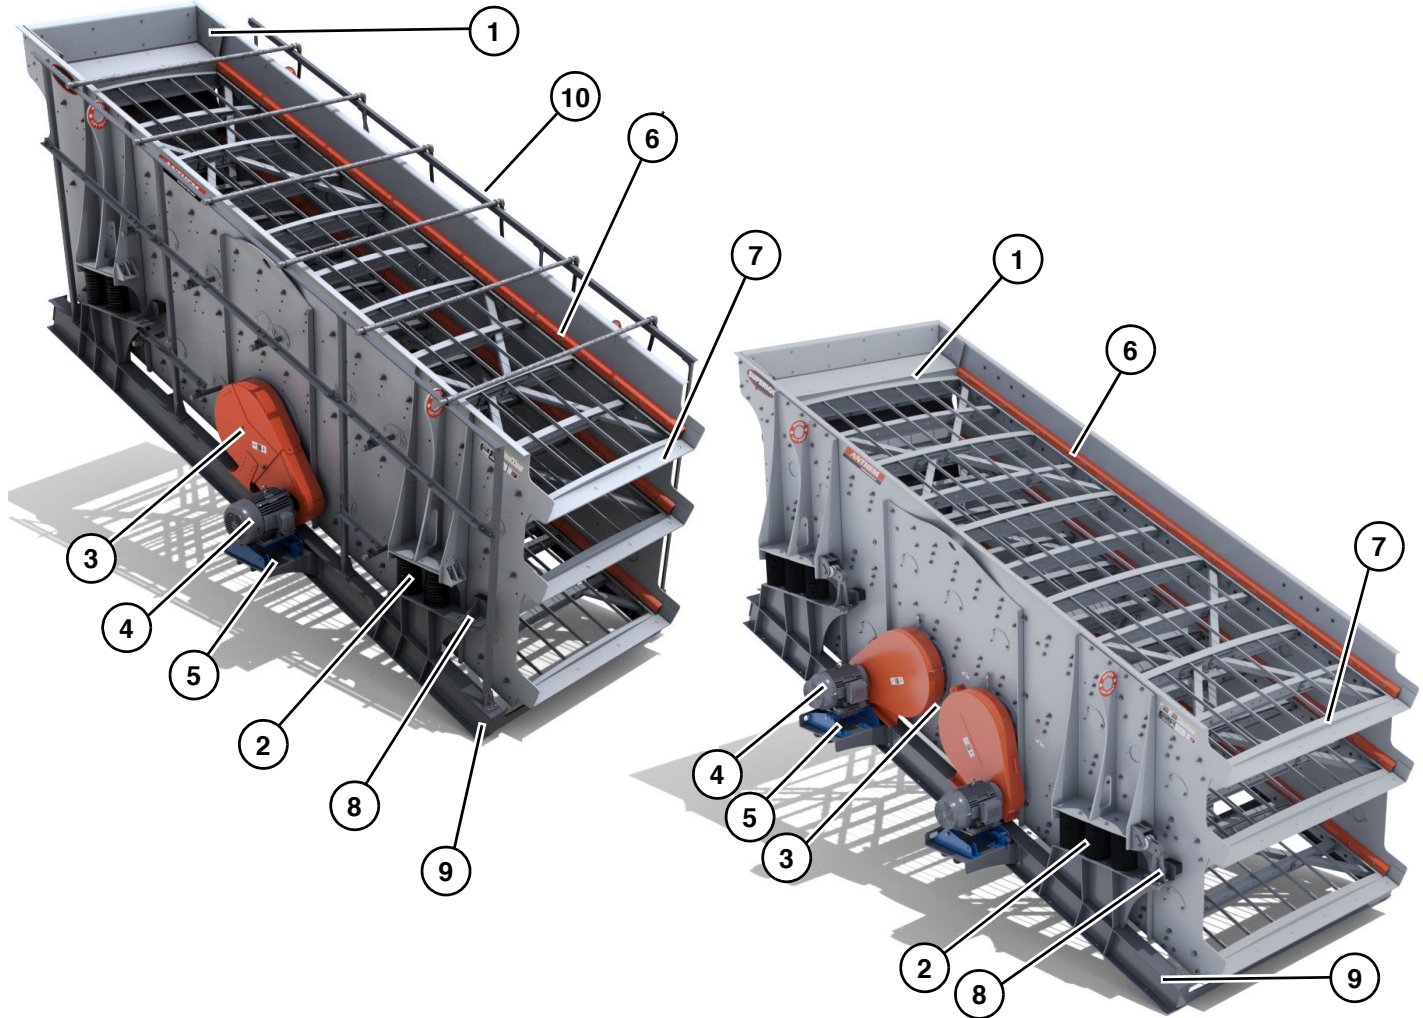

1. Feed Box
2. Springs
3. Belt Guard
4. Motor
5. Motor Mount
6. Take-Up Rail
7. Discharge Lip
8. Snubber
9. Baseframe
10. Spray Stysem

Figure 5

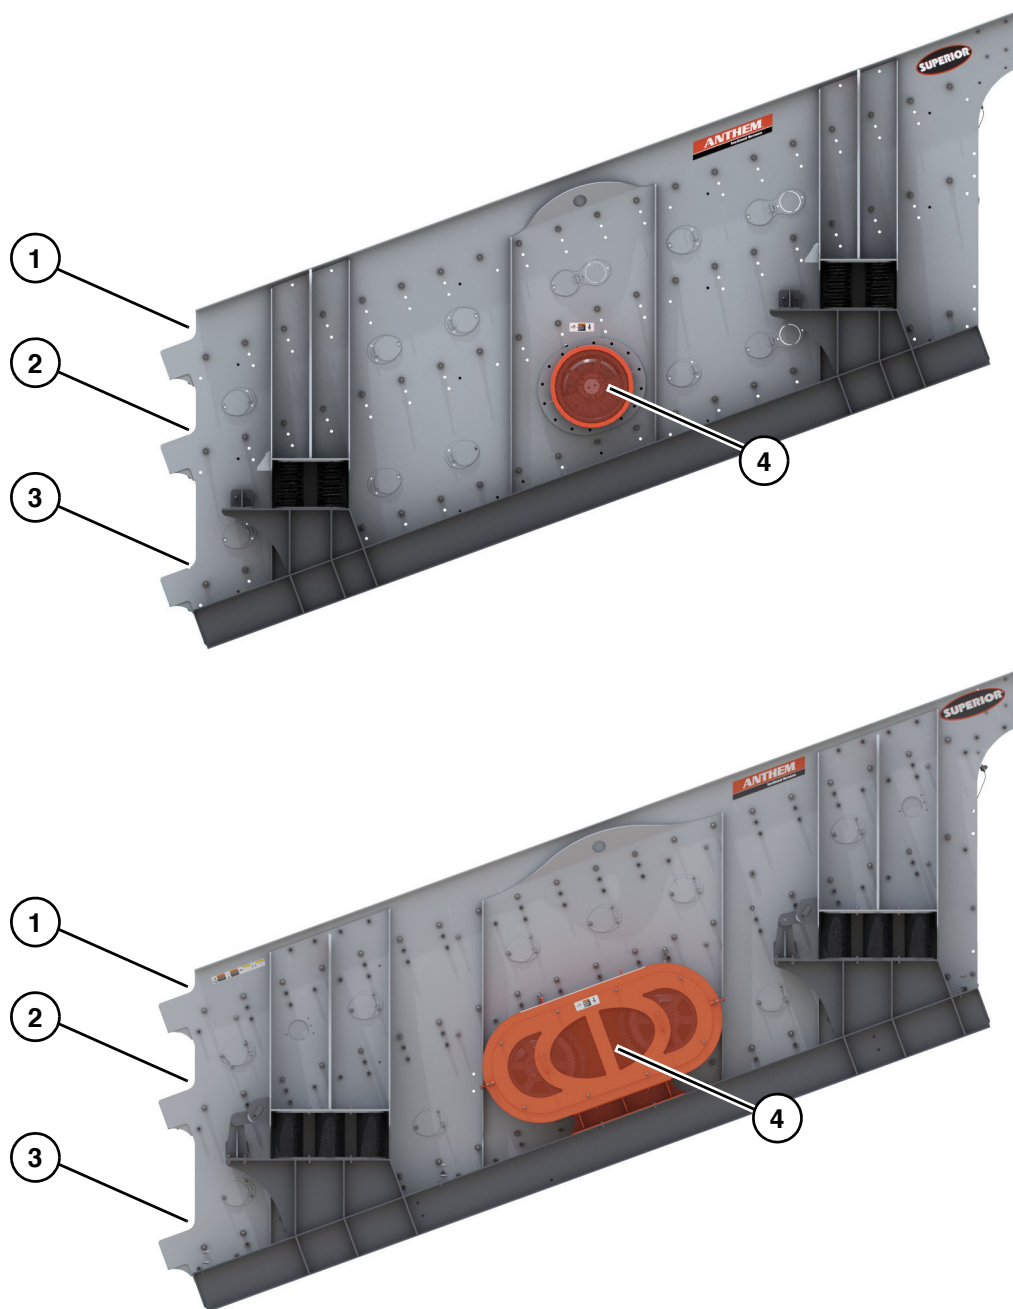

- 1. Top Deck
- 2. Middle Deck
- 3. Bottom Deck
- 4. Flywheel Guard

Screen Site Prep



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

Power Requirements

NOTICE

- Electrical wire diameter can drastically effect motor output.
- All motor wiring should be installed by a licensed electrician to the code in that area.

Proper power requirements are vital for proper screen efficiency.

Structure Requirements

NOTICE

- Proper screen support is vital to operation of screen.
- Improperly supported screens can result in excessive vibration as well as loss of efficiency.
- Inadequate support promotes structural fatigue which can ultimately compromise overall structure.

Support screen directly below springs.

Note: All supports should be designed to carry combined weight of screen, base frame, and load of material circulating across screen. Additional reserve strength should be factored into account for dynamic force generated during startup and shutdown phases of screen.

Screen Clearance Requirements

NOTICE

- Do not allow buildup of material to interfere with normal action of screen.
- Doing so can result in severe damage to screen and may void all warranties.

- Allow 2" (50.8mm) Horizontal Clearance around Vibrating Body of Screen.
- Allow 3" (76.2mm) Vertical Clearance around Vibrating Body of Screen.

Note: This clearance accommodates circular motion during operation and screen action during startup and shutdown.

Screen Setup



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:


- Follow correct Lockout/Tagout/Blockout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

Lifting

NOTICE

- Use of spreader beams or lifting yoke is required to prevent damage to screen body.
- Shipping brackets, if equipped, must be removed prior to operation.

Figure 6

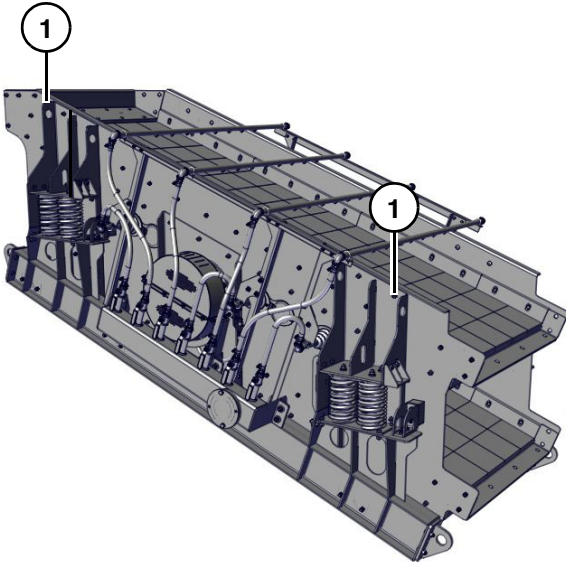

Screen is supplied with four lifting points (1) (Figure 6).

Use appropriate equipment to lift screen.

Note: If equipped with base frame, shipping brackets will be installed. Do not remove shipping brackets until after screen has been placed and secured into operational position.

Note: Refer to “Rigging Safety” on page 6 for applicable safety precautions.

Installation to Frame

⚠ CAUTION

- Do not use hands to guide suspended screen or to align springs. Doing so can result in personal injury.
- Shipping brackets, if equipped, must be removed prior to operation.

Follow steps below:

1. Clear mounting area of structure from any debris or obstructions that may interfere with placement of screen.
2. Check mounting structure for level and plumb.
3. Using appropriate lifting equipment and proper safe rigging procedures, lift and guide screen onto structure.

Note: Use of tag lines is recommended to control suspended loads.


4. Slowly lower screen onto structure taking caution to ensure proper placement.
5. Once lowered and only after all rigging is slack, secure base frame to support structure using appropriate fasteners and disconnect rigging equipment.
6. Check base frame for level along both width and length.

Note: If base frame is out of level, shim between base frame and mounting structure until level is achieved.

7. Remove shipping brackets.

Sheave Alignment

Figure 7

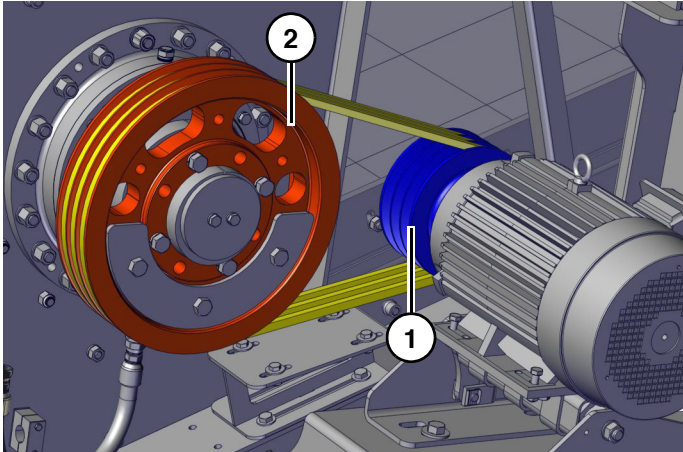

Follow steps below:


1. Check alignment of motor sheave (1) and drive sheave (2) by placing straight-edge across faces of sheaves and “sighting in” alignment (*Figure 7*).
2. Loosen driven sheave hub bolts.
3. Slide hub and sheave in or out along motor shaft until driven sheave belt grooves are aligned with drive sheave pulley grooves.
4. Tighten drive sheave hub bolts.

Snubber Adjustment

NOTICE

- Without proper snubber adjustment, lugging can cause damage to belts, springs, drive shaft, drive shaft seal, structure, etc.

Figure 8

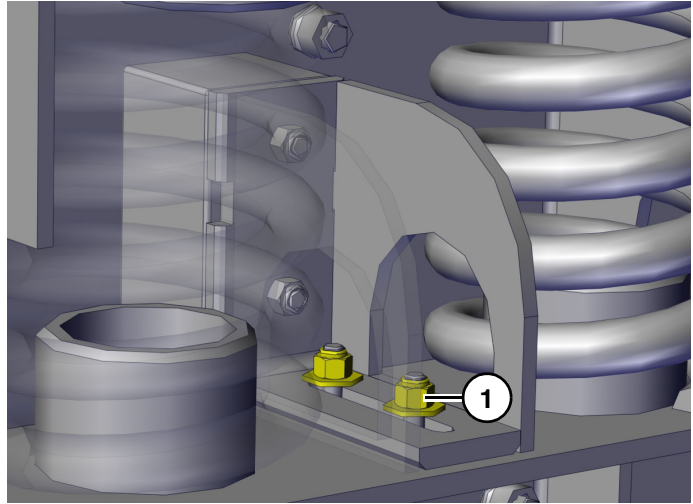

Follow steps below:

1. Loosen nuts and washers (1) (*Figure 8*).
2. Slide snubber until there is a no gap between snubber bumper and screen wall.
3. Tighten nuts and washers (1) (*Figure 8*).

Note: Take care to adjust each snubber equally.

Troubleshooting

- Side Bump: Identified by the side-to-side motion of a screen during operation.

Note: Side-to-side motion decreases screening efficiency. “Incline Screen Troubleshooting” on page 37. Snubber can be used to resolve side-to-side motion issue.


Belt Guard

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:

- All guards provided with this unit must remain installed, intact, and unmodified unless required to adhere to local safety requirements.
- Any persons working with or near this equipment must have knowledge of all safety precautions.


Figure 9

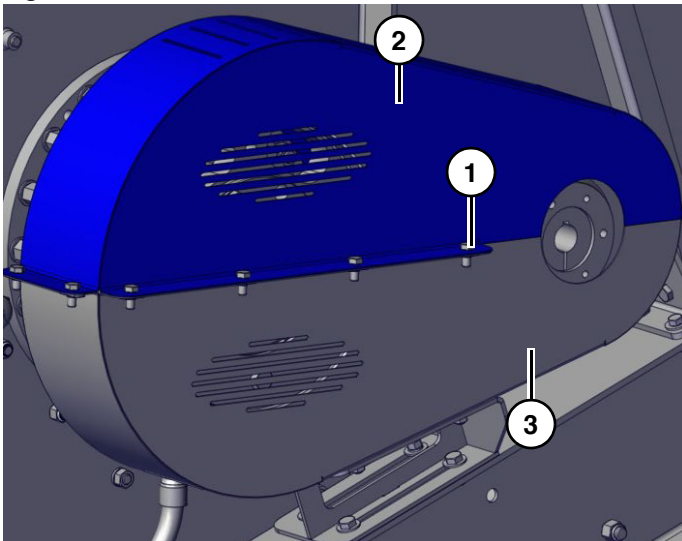

Follow Instructions below for removing top portion of belt guard:

1. Motor mount and motor may need to be removed before guarding is removed.
2. Remove bolts (1) that secure top portion (2) of belt guard to bottom portion (3) of belt guard (*Figure 9*).

Figure 10

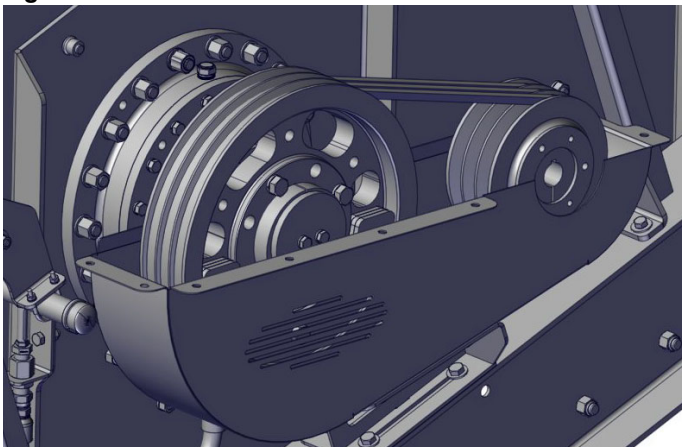

3. Using appropriate equipment, lift and remove top portion of belt guard off of bottom portion, for access to v-belts and sheaves (*Figure 10*).


Flywheel Guard

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:

- All guards provided with this unit must remain installed, intact, and unmodified unless required to adhere to local safety requirements.
- Any persons working with or near this equipment must have knowledge of all safety precautions.


Figure 11

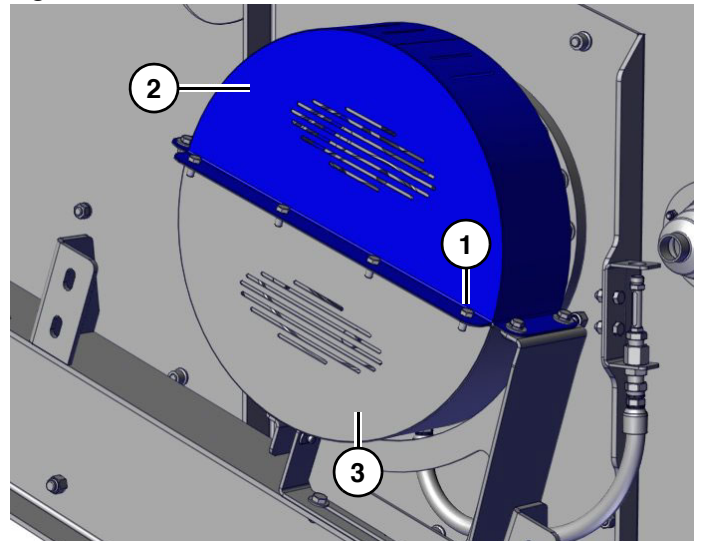

Follow instructions below to remove top portion of flywheel guard:

1. Remove bolts (1) that secure top portion (2) of guard to bottom portion (3) of guard (*Figure 11*).

Figure 12

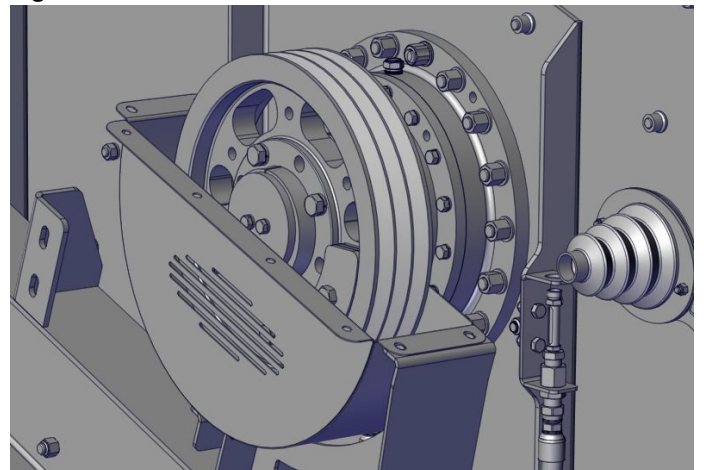

2. Using appropriate equipment, lift and remove top portion of guard off of bottom portion, for access to sheave and components (*Figure 12*).

Screen Start-up / Operation



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

Pre-Operational Inspection

WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout/Blockout procedures.
- Follow instructions completely. Failure to do so may cause death or serious injury.

Note: Follow guidelines below and perform the following checks prior to starting screen.

Guarding

WARNING

- Guarding must be in place.
- Keep away from moving parts. Not doing so can result in personal injury and/or death.

- Verify all guarding is installed.
- Verify guard is not in contact with moving drive components.

Shipping Brackets

- Verify shipping brackets have been removed, if applicable.

Clearance

- Verify 3" (76.2mm) of vertical clearance is maintained between all sides of vibrating screen and non-vibrating equipment.
- Verify 2" (51mm) of horizontal clearance is maintained around vibrating body of machine and all no-vibrating components.

Note: See "Screen Clearance Requirements" on page 12.

- Verify shipping brackets have been removed.

Lubrication

NOTICE

Oil level and lubricant checks must be checked prior to screen start-up. Failure to do so can result in damage to equipment.

- Verify oil level in both drives by inspecting sight gauge.

- Add or remove oil as needed.

Note: "Screen Lubrication Chart" on page 39

- Verify drive shaft seal has appropriate type and quantity of grease.

Note: "Seal Lubrication" on page 19

Hardware

Verify fasteners are in place, tight, and secured by randomly checking hardware in areas such as:

- Feed Box
- Discharge Lips
- Spring Mounts
- Motor Mount
- Tension rails
- Decks

Drive Belt

- Verify drive belt is in acceptable condition (no cracks or stretching).

Note: Adjust belt tension if necessary.

Media

NOTICE

- Loose media can slap and vibrate causing premature wear.
- Loose media will drastically reduce screening efficiency.

- Verify screening media is tight, flat, and secure.

Condition

Verify material is not built up inside areas such as:

- Bottom of belt guard
- Inside springs
- Between driven sheave and shaft seal
- Between drive sheave and motor enclosure
- Below air vents

Note: If material or debris is discovered it must be removed to ensure safe and efficient operation.

Load

NOTICE

Never start-up or shutdown screen while it still contains material. Doing so may cause severe damage and void all warranties.

- Verify feed box, screen basket, and discharge lips are free of material.

Start Up Operation

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:


- Follow correct Lockout/Tagout/Blockout procedures.
- Follow instructions completely. Failure to do so may cause death or serious injury.
- All personnel must stay clear of screen and structure area while machine is operating.

NOTICE

Never start-up or shutdown screen while it still contains material. Doing so may cause severe damage and void all warranties.

Note: Start screen prior to discharging any material onto decks.

Figure 13

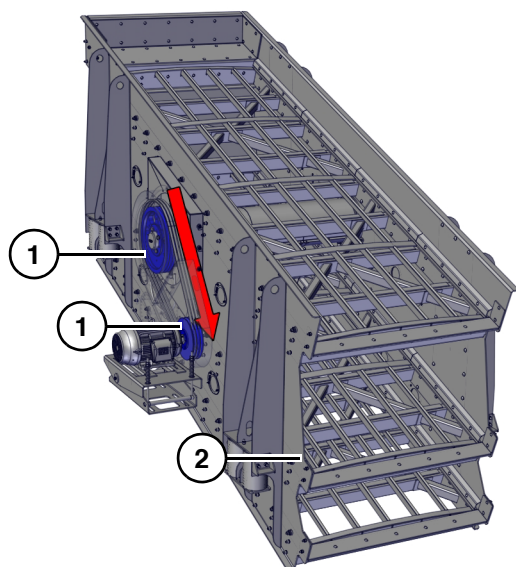

Follow steps below for initial screen start-up:

1. Ensure all personnel are clear of screen / structure area.

2. Sound horn to alert others in area that screen is about to start.
3. Bump-start motor to verify sheave rotation.

Note: If sheave (1) is not rotating toward discharge end (2) of screen, reverse motor direction (*Figure 13*). Bump-start motor again to verify.

4. Verify screen has reached operational speed within 10 seconds.

Note: If start-up takes longer, check belt tension and motor amperage.

5. Start feeding material to center of feed box.

Note: Ensure material is fed to center of feed box for proper distribution across top deck.

6. Maintain clearance distance between feed box and in-feed chutes or conveyors to avoid interference during start and stop cycles.

Shutdown Procedure

NOTICE

Never start-up or shutdown screen while it still contains material. Doing so may cause severe damage and void all warranties.

Note: Equipment shutdown should always take place in sequence starting with farthest upstream equipment to ensure no equipment is left loaded.

Follow guidelines below during screen shutdown:

- Allow material to clear screen prior to shutdown.
- Clean and clear material and debris from around screen and structure.

Screen Transportation



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.


WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout/Blockout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.
- Never alter or modify components.
- Stay clear of equipment while lifting/transporting.
- Never stand near or under equipment while lifting/transporting.

Shipping Brackets

Figure 14

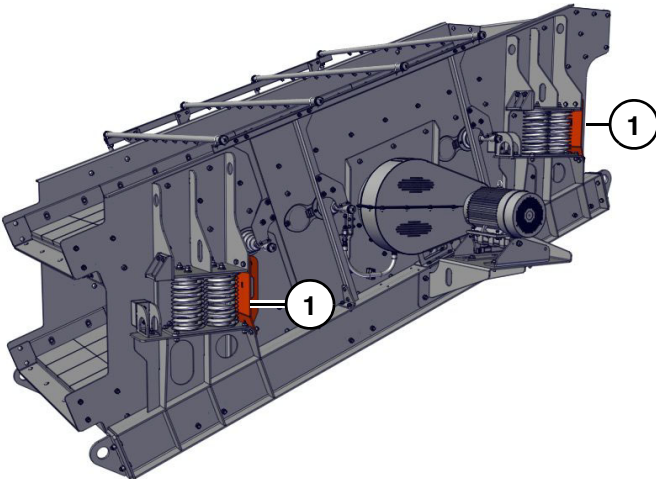


Shipping brackets (1) (Figure 14) must be attached in event that screen should need to be transported while mounted to its base frame.

Note: Shipping brackets help prevent damage occurring during transport.

Note: Shipping brackets must be removed prior to operation.

Lifting Points

Figure 15

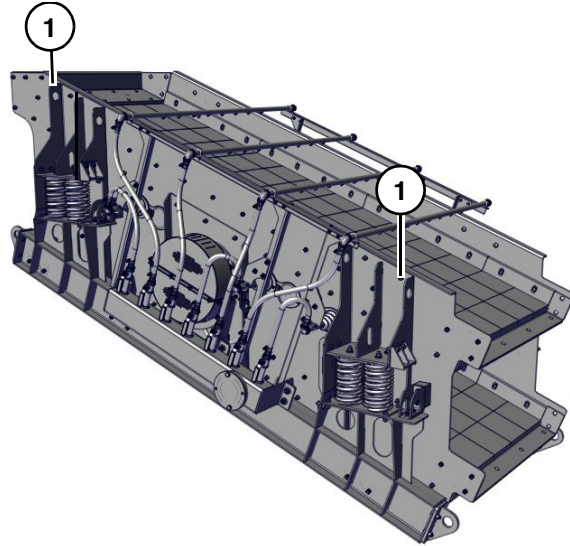

Note: Lifting points (2) (Figure 15) have been integrated into design of unit "Lifting" on page 13.

Note: Refer to "Rigging Safety" on page 6 for applicable safety precautions.

Drive Mechanism



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout/Blockout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

Operating Temperature

- Operating temperature should fall between 125°F-150°F (52°C-66°C).

Note: When taking/recording temperature, ensure laser hits bearing cover for proper temperature reading.


Seal Lubrication

NOTICE

Add 1 pump of grade 2, high temperature lithium grease every 10 hours. Not doing so can result in damage to equipment.

Adding Grease

Figure 16

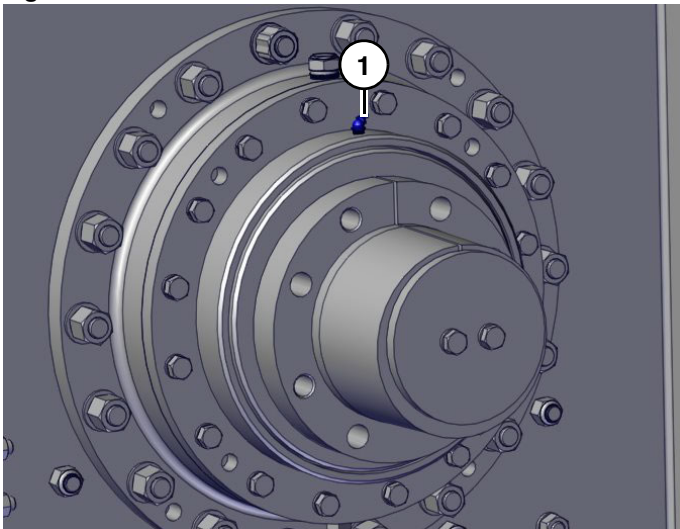

To add grease to seal, follow steps below:


1. Pack cavity with grade 2, high temperature lithium grease. (Figure 16).
2. Add 1 pump through grease point.

Note: Add 1 pump every 10 hours.

Drive Bearing Lubrication

Draining Oil

Figure 17

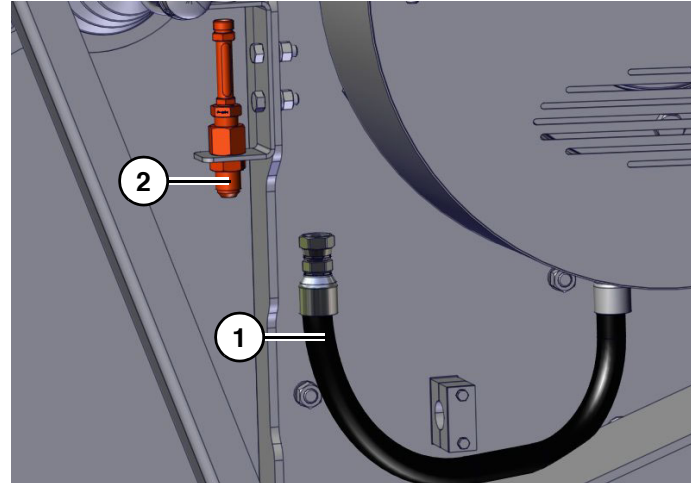


To drain oil, follow steps below:

1. Remove bottom hose (1) from sight gauge (2) (Figure 17).
2. Hang hose down and allow oil to drain into appropriate container for recycling.
3. Inspect oil for any contaminants.
4. Re-Attach hose to sight gauge when complete.

Adding Oil

Type: ISO Grade Lubricant

Figure 18

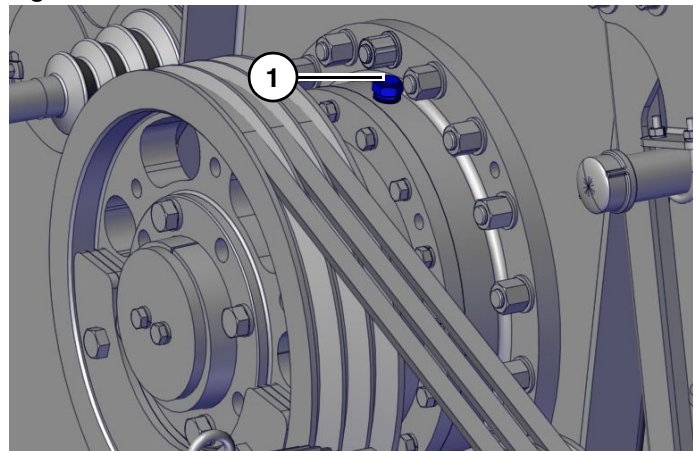

Note: Fill point for bearings is located on top of bearing housings.

To add oil, follow steps below:

1. Clean area around breathers (1) (Figure 18) to ensure oil is not contaminated.
2. Remove breather (1) (Figure 18).
3. Add oil as needed. "Screen Lubrication Chart" on page 39


Note: Do not overfill.

4. Clean breather (1) (Figure 18) and breather threads.
5. Clean threads on bearing housing.
6. Apply Loctite™ 564 (or equivalent thread sealer) to breather threads.
7. Re-Install breather.

Verifying Oil Level

Note: Sight glass for oil level is located on oil drain hose.

Figure 19

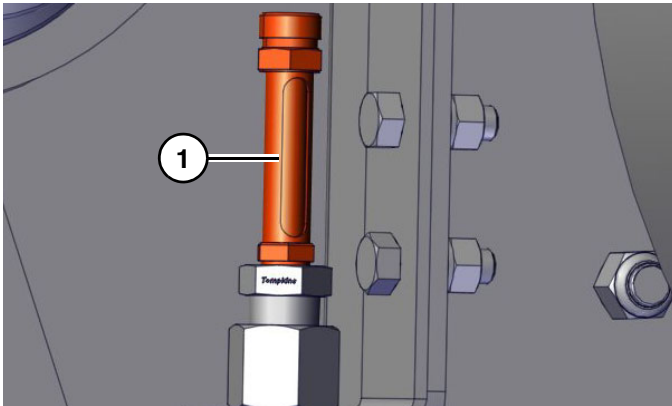

To verify oil level, follow steps below:

1. Clean face of sight glass (1) (Figure 19).
2. Verify oil is at mid-level of sight glass.

V-Belt

Signs of Wear

Refer to bullet points below for signs of wear.

- Surface cracks
- Fraying
- Splitting
- Slipping during start-up or shutdown
- Stretching

Replacement

To replace v-belt, follow steps below:

1. Remove belt guard fastening hardware.
2. Remove belt guard.
3. Adjust motor mount toward drive sheave.
4. Remove worn or damaged belt.
5. Install new belt.
6. Adjust motor away from drive sheave.
7. Set belt tension.
8. Reinstall belt guard.
9. Reinstall belt guard fastening hardware.

QD® Bushings

NOTICE

- Excessive bolt torque can cause bushing breakage.


Figure 20

Bushings Style	Bolts (in)		Torque Wrench	
	Qty.	Size	lb-ft	lb-in
H	2	1/4 x 3/4	7.9	95
JA	3	10-24 x 1	4.5	54
SH & SDS	3	1/4-20 x 1 3/8	9.0	108
SD	3	1/4-20 x 1 7/8	9.0	108
SK	3	5/16-18 x 2	15.0	180
SF	3	3/8-16 x 2	30.0	360
E	3	1/2-13 x 2 3/4	60.0	720
F	3	9/16-12 x 3 5/8	75.0	900
J	3	5/8-11 x 4 1/2	135.0	1620
M	4	3/4-10 x 6 3/4	225.0	2700
N	4	7/8-9 x 8	300.0	3600
P	4	1-8 x 9 1/2	450.0	5400
W	4	1 1/8-7 x 11 1/2	600.0	7200
S	5	1 1/4-7 x 15 1/2	750.0	9000

Driven Sheave Removal


Note: Ensure v-belts have been removed prior to sheave removal.

Figure 21

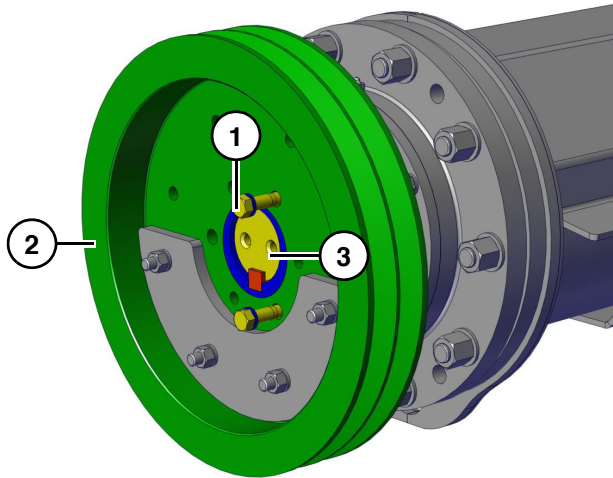

1. Remove sheave bolts and washer (1) (Figure 21).
2. Reinstall bolts in pusher holes to press sheave off of bushing.
3. Remove sheave (2) from drive shaft (3) (Figure 21).

Figure 22

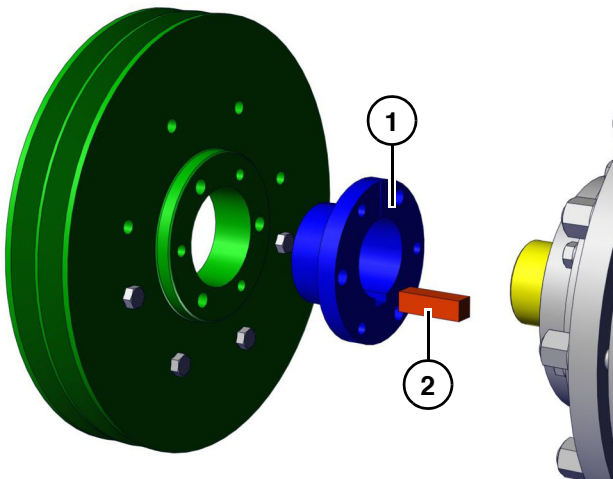

4. Remove bushing (1) (Figure 22).


Note: Wedge may need to be used to open bushing for removal.

5. Remove drive shaft key (2) (Figure 22).

Drive/Motor Sheave Removal

Note: Ensure v-belts have been removed before removing sheave.


Figure 23

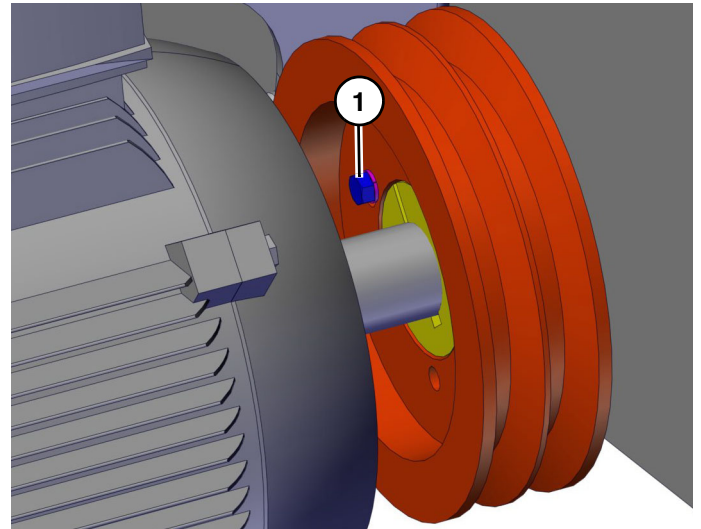

To remove sheave, follow steps below:

1. Loosen and remove bushing bolt and washer (1) (Figure 23).
2. Reinstall bolts in pusher holes to press sheave off of bushing.


Figure 24

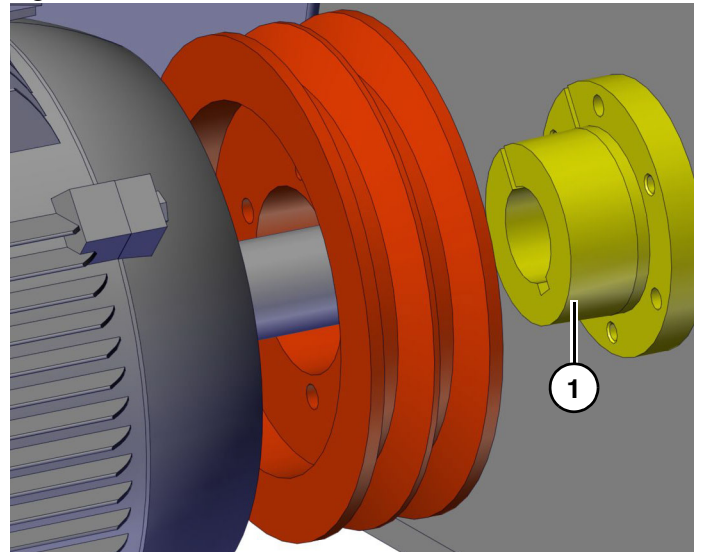

3. Remove bushing (1) (Figure 24).

Note: Wedge may need to be used to open bushing for removal

Figure 25

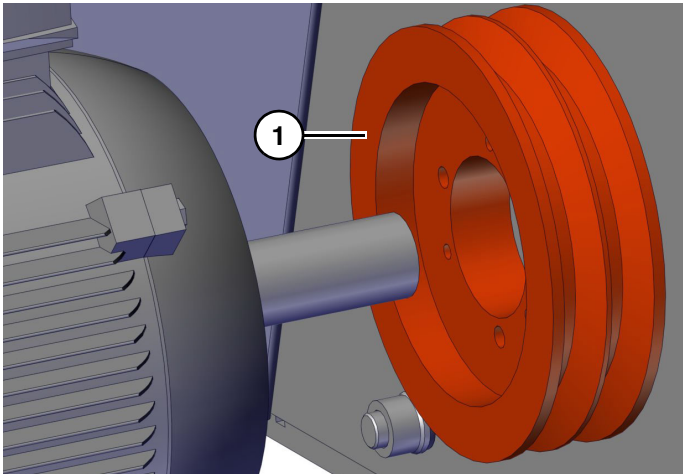

4. Remove sheave (1) (Figure 25) from shaft.


Installation

Complete removal process in reverse order.

Flywheel Weights

Removing Weight


Figure 26

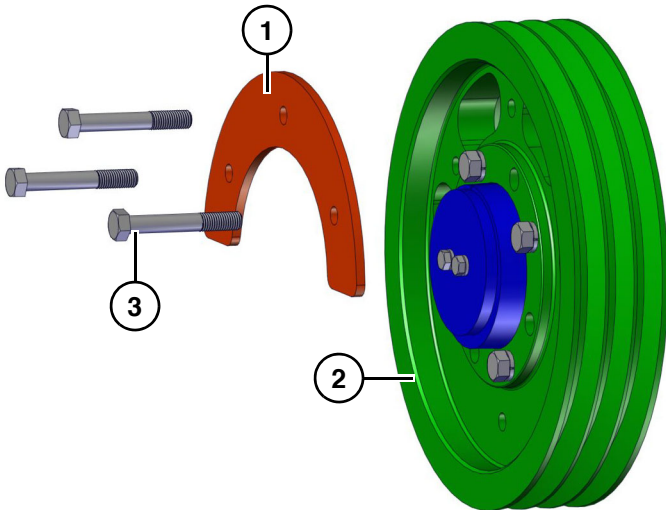

1. Remove weight (1) from both sheaves (2) by loosening and removing weight bolts (3) and nuts (Figure 26).

Installing Weight

Figure 27

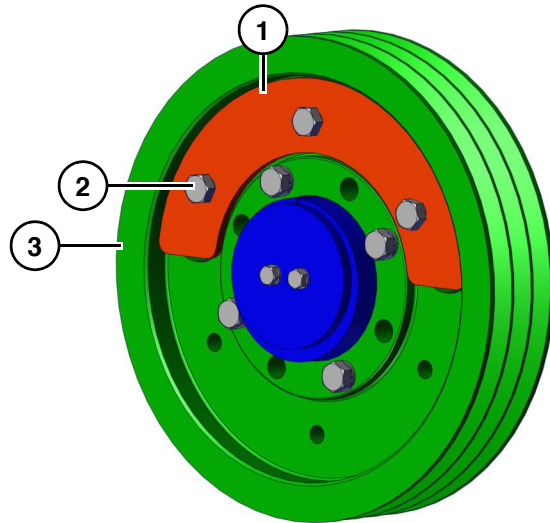

1. Set weight (1) into place and tighten bolts (2) and nuts to secure weight (1) to sheave (3) (Figure 26).

Note: Weights must be distributed across both sheaves equally.



Read and understand equipment operator's manual before operating or performing maintenance. Failure to do so could result in serious injury or death.


⚠ WARNING

Failure to follow instructions below could result in death or serious injury:

- Lockout/Tagout/Blockout before performing maintenance or installation.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

Overview


Figure 28

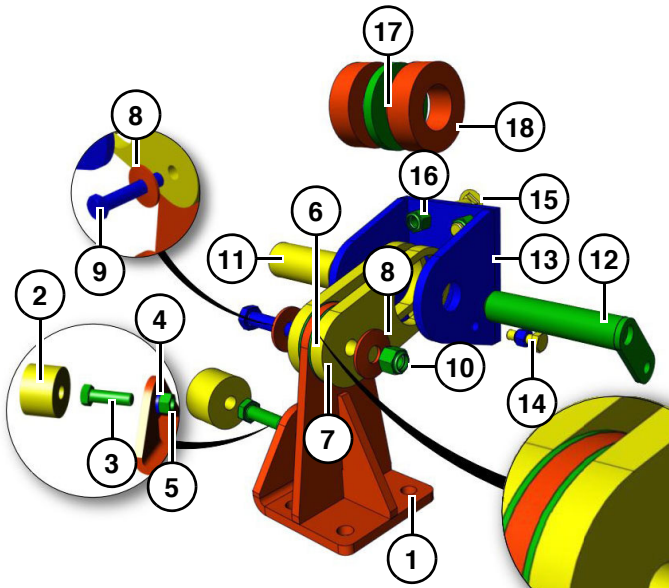

1. Lower Bracket
2. Bumper
3. 3/4"-10 x 2 1/2" Grade 8 HHCS Bolt
4. 3/4" Lock Washer
5. 3/4"-10 Grade 5 Zinc Hex Nut
6. Brass Flat Washer
7. Arm
8. Spring Washer
9. 3/4"-10 x 3 3/4" B7 HHCS Bolt
10. 3/4"-10 Grade 8 Zinc Nylock Hex Nut
11. Sleeve
12. Lock Pin
13. Upper Bracket
14. 1/2"-13 x 1 1/2" Grade 5 Zinc Bolt
15. 3/4"-10 x 2" Grade 5 Carriage Bolt
16. 3/4"-10 Grade 8 Nut
17. Thin Spacer
18. Thick Spacers

Torque Specifications

Figure 29

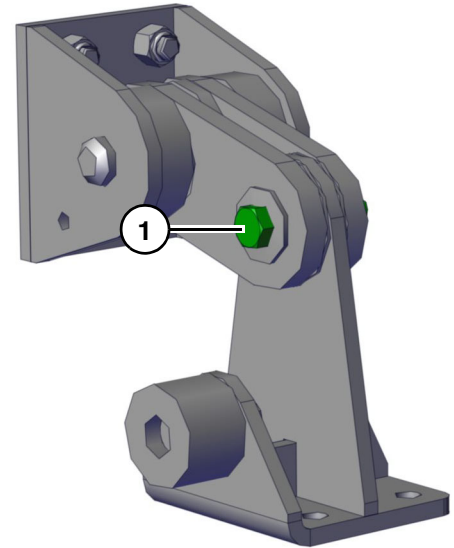


Bolt (1) (Figure 29) must be torqued to the following:

- 32 Drive: 150 ft. lbs
- 38 Drive: 250 ft. lbs


Installation

Figure 30

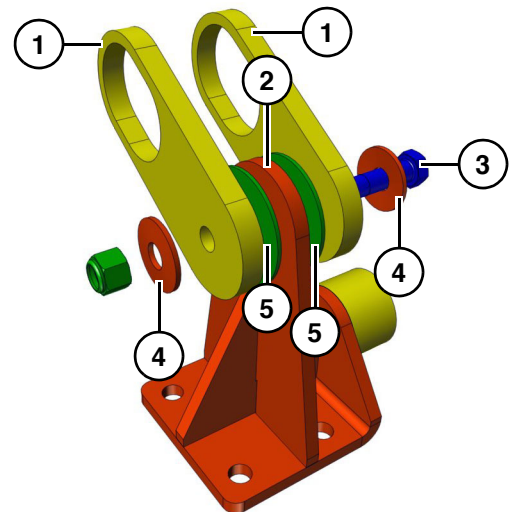


1. If not already done, assemble link arms (1) to lower bracket (2) by inserting bolt (3) through link arms (1) spring washers (4) and brass washers (5) (Figure 30).

Figure 31

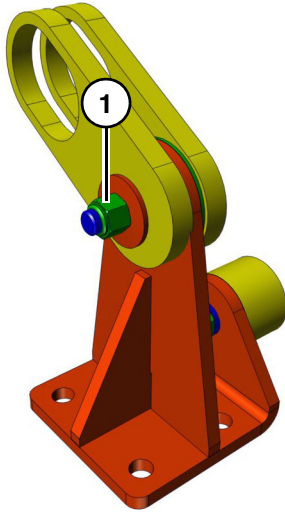


2. Secure bolt with nut (1) (Figure 31).

Figure 32

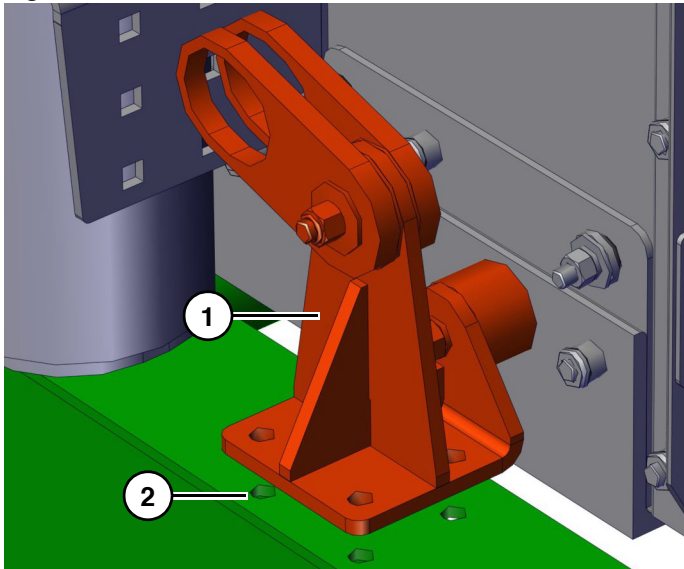


3. Align lower bracket assembly (1) with holes in screen frame (2) (Figure 32).

Figure 33

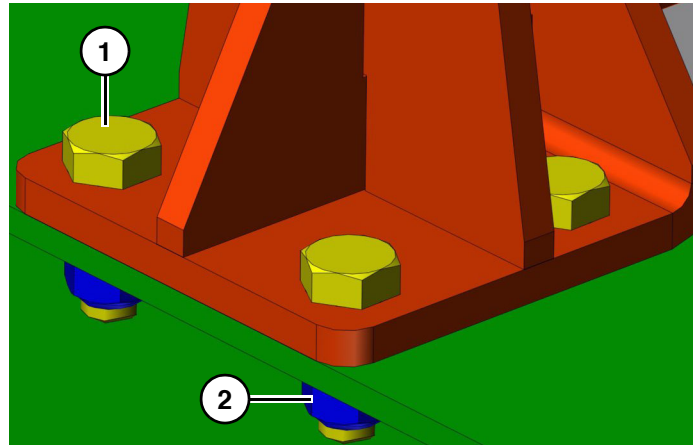


4. Install bolts (1) and nuts (2) to properly secure lower bracket assembly to screen (Figure 33).

Figure 34

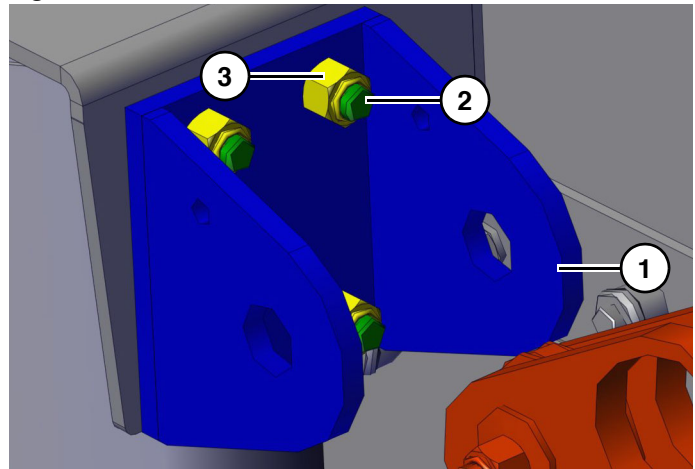


5. Secure upper bracket assembly bracket (1) to screen with appropriate bolts (2) and nuts (3) (Figure 34).

Figure 35

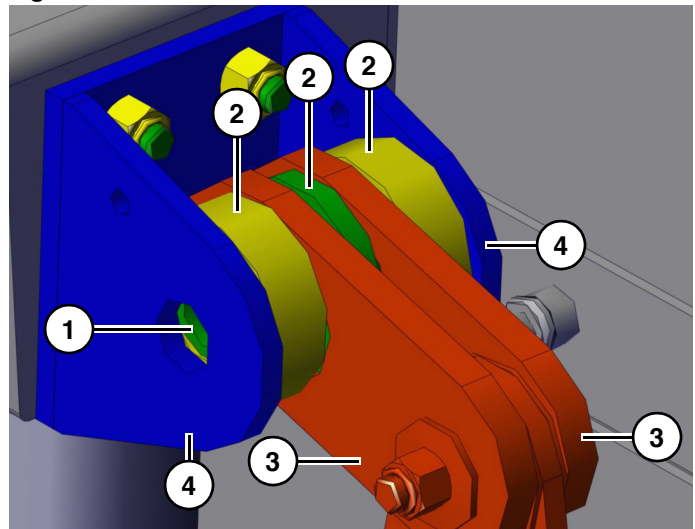


6. Place sleeve (1), spacers (2) and arms (3) between two tabs (4) on upper bracket assembly (Figure 35).

Figure 36

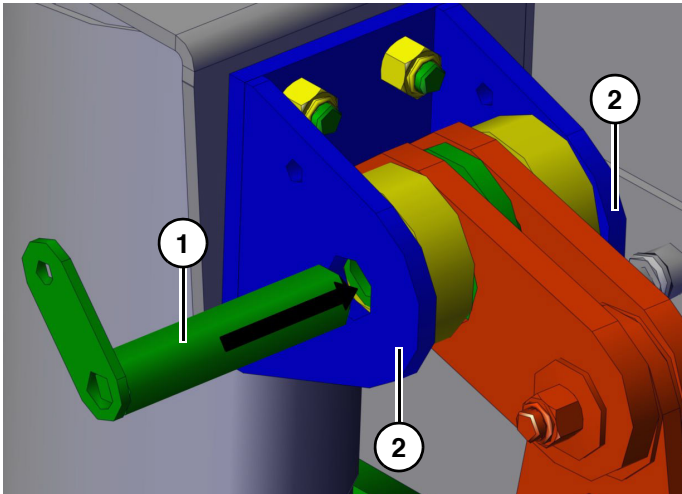


7. Slide lock pin (1) through tabs (2) and into sleeve (Figure 36).

Figure 37

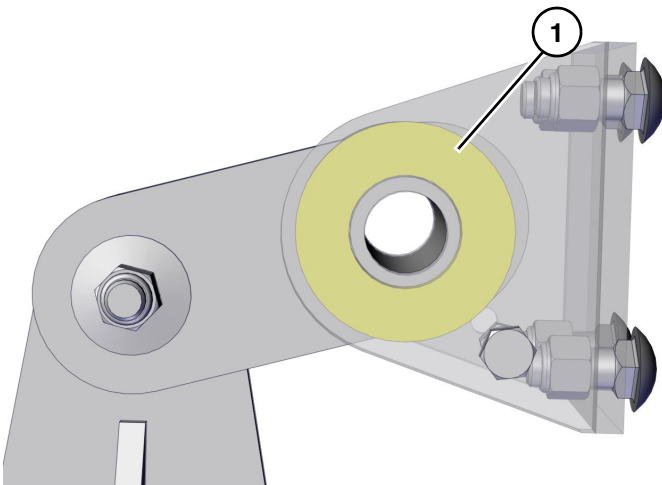


8. Center UHMW piece (1) (Figure 37) on slot.

Figure 38

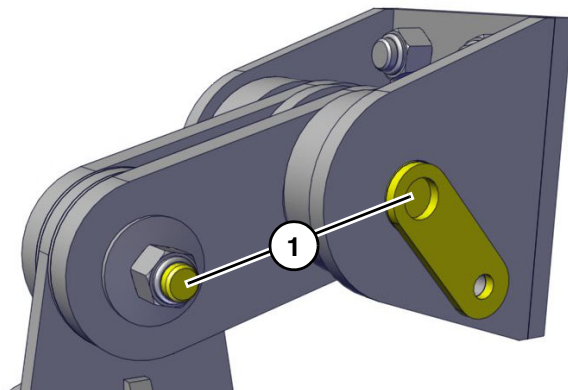


NOTE: Bolt and pin spacing should be 5-1/4" (133.35mm) (1) (Figure 38).

Figure 39

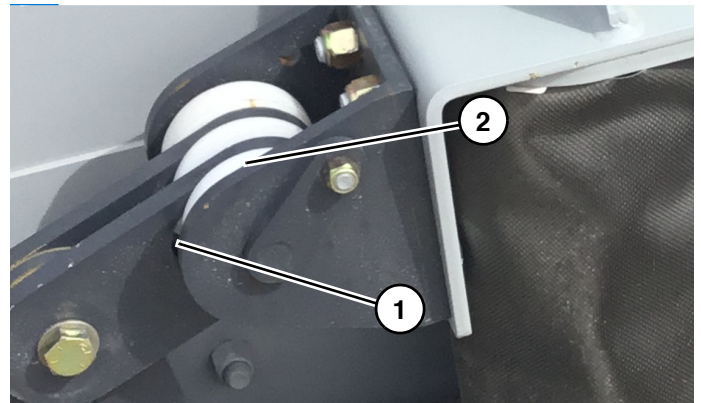


NOTE: If arm slot (1) is visible outside the UHMW donut (2) on either side, the VS2 must be moved to cover slot (1) (Figure 39).

Figure 40

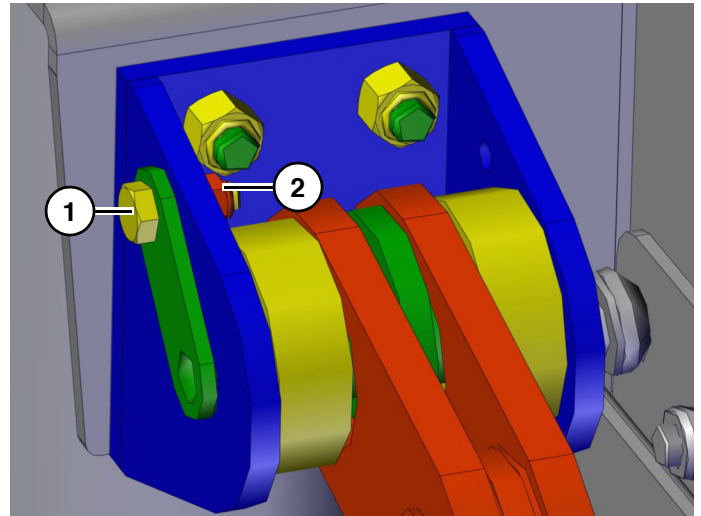

9. Secure lock pin with bolt (1) and nut (2) (Figure 40).

Figure 41

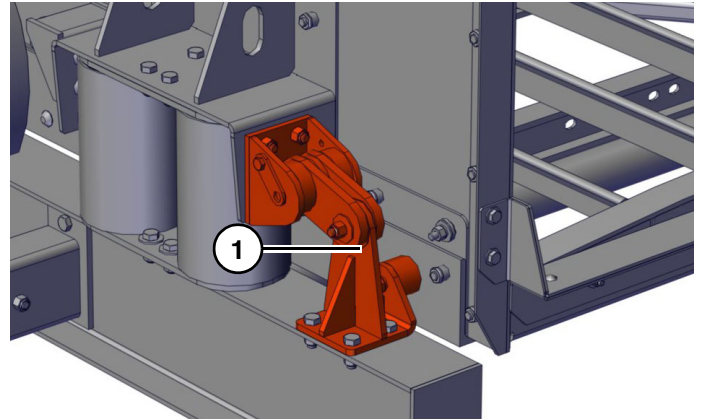

Note: VS2 (1) (Figure 41) should appear as shown once fully installed.

Maintenance

Every 500 Hours

Evaluate the following parts for excessive damage and or wear:

- Sleeve
- Spacers
- Bumper

After 1st 100 Hours of Operation

- Re-Torque

Every 500 Hours

- Re-Torque

Re-torque Values

Screen	Size	Torque
Guardian® Horizontal	32 Drive	150 ft.-lbs. (20.75 m-kgs)
	38 Drive	250 ft.lbs. (34.56 m-kgs)
Anthem® Incline	5' and 6'	150 ft.-lbs. (20.75 m-kgs)
	7' and 8'	250 ft.lbs. (34.56 m-kgs)

Rosta Tensioning



Read and understand equipment operator's manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:


- Lockout/Tagout/Blockout before performing maintenance or installation.

Notice

- Do not use compressed air power tools for tensioning.


Overview

Figure 42

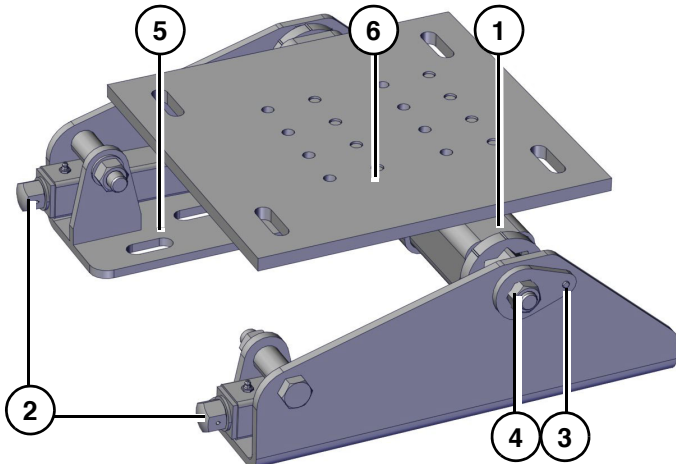

1. Angle Scale
2. Tensioning Bolts
3. Lock Bolt
4. Shaft Bolt
5. Motor Mount Base
6. Motor Plate

Figure 43

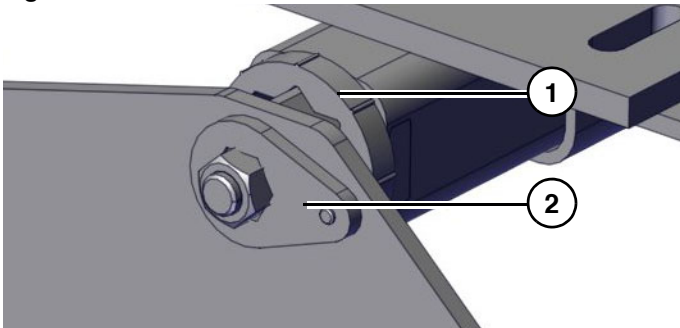

1. Angle Scale
2. Key

Instruction

1. Remove lock bolt and lock (3) (Figure 42).
2. Loosen shaft bolt (4) (Figure 42).
3. Adjust tension uniformly (2) (Figure 42).

Note: Uses 30mm (1-1/4") wrench

Note: Adjust until Angle Scale (1) is between 10° and 15° (Figure 42), (Figure 43).

4. Tighten Shaft Bolt (4) to 300 ft/lbs (Figure 42).
5. Install Lock and Lock Bolt (3) (Figure 42).

For best results motor mount base (5) and motor plate (6) should be closest to parallel from one another as possible (Figure 42).

Motor mount base should not contact motor plate.

Screen Tuning



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:


- Follow correct Lockout/Tagout/Blockout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

NOTICE

- Weights are adjustable. It is recommended to contact Superior for proper adjustment recommendations.

Adjustable Weights

Figure 44

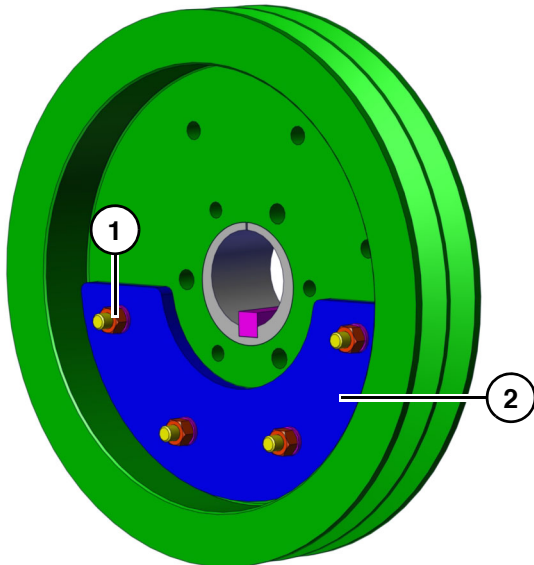

1. Remove sheave weight nuts, washer and bolts (1) (Figure 44).
2. Remove or add recommended weights (2) (Figure 44).
3. Set weights into place and tighten bolts (1) (Figure 44).
4. Place sheave back onto shaft.
5. Tighten sheave bolts (1) (Figure 44).
6. Place end plate(3) and tighten bolts (2) (Figure 44) onto drive shaft.

Liners and Tube Guard



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

NOTICE

- Carefully monitoring condition of liners and replacing when necessary will protect underlying components from wear.
- Loose liners can detach causing further issues downstream.
- Loose liners can cause excessive vibration which can lead to additional hardware failure.
- Broken, loose, or worn fastening hardware can allow fines into unprotected areas causing wear to underlying components.

Liners

Signs of Wear


- Thinning of liner material: Liner material will wear down and “thin out” in areas of heavy exposure.

Note: Thinning material is susceptible to cracking.

- Broken or worn fastening hardware: Can cause liners to vibrate causing “slapping” noise.

Feedbox Liner Replacement

Figure 45

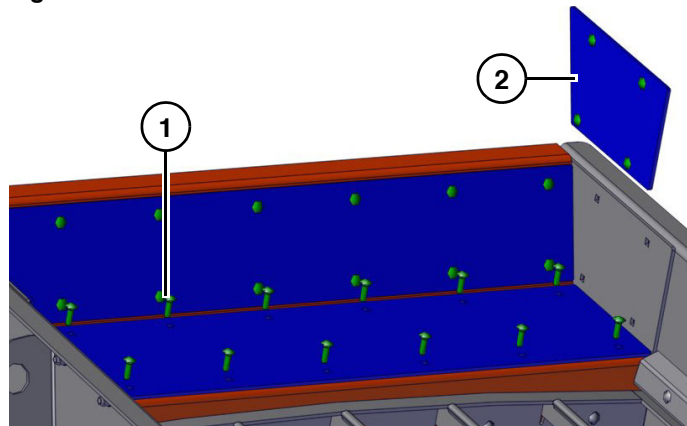


To replace feed box liners, follow steps below:

1. Remove fastening hardware (1) (*Figure 45*).
2. Remove worn or damaged liner(s) (2) (*Figure 45*).
3. Install new liner(s).
4. Install new fastening hardware.

Discharge Lip Liner Replacement

Figure 46

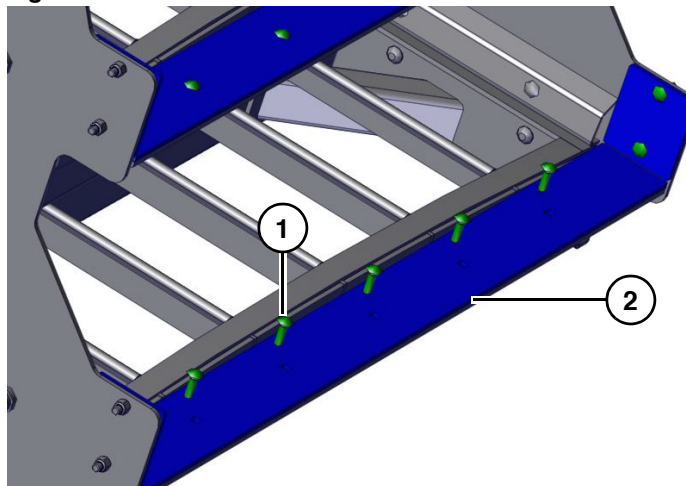

To replace discharge lip liners, follow steps below:

1. Remove fastening hardware (1) (*Figure 46*).
2. Remove worn or damaged liner(s) (2) (*Figure 46*).
3. Install new liner(s).
4. Install new fastening hardware.

Tube Guards

Signs of Wear


- Thinning of tube guard or strap material: Tube guard or strap material will wear down and “thin out” in areas of heavy exposure.

Note: Thinning material is susceptible to cracking

- Broken or worn fastening hardware: Can cause tube guards or straps to vibrate causing “slapping” noise.

Replacement

Figure 47

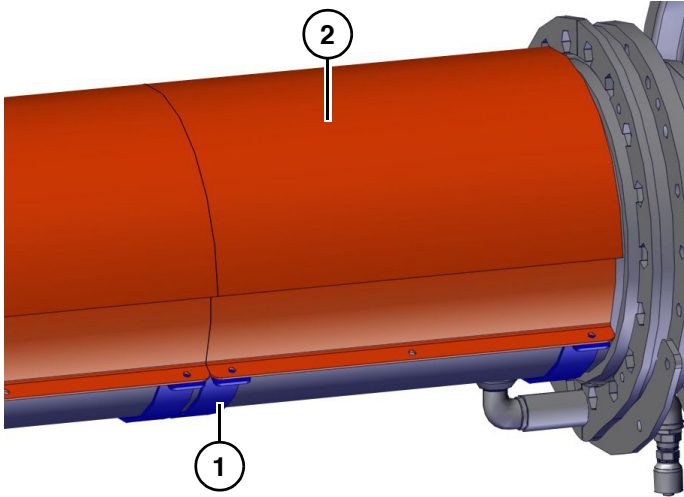

To replace tube guards, follow steps below:

1. Remove fastening hardware.
2. Remove straps (1) and worn or damaged rock tube guard(s) (2) (Figure 47).
3. Install new rock tube guard(s) and straps.
4. Install new fastening hardware.
5. Tap face of tube guard with appropriate equipment to verify straps exert enough clamping force to resist rotation.

Maintenance Schedule



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout/Blockout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

NOTICE

- Failure to follow manufacturers recommendations can cause equipment failure and introduce unnecessary hazards regarding the operation of this equipment.

Refer to tables below for maintenance tasks:

Maintenance Actions

1. Check
2. Clean
3. Change
4. Fill
5. Adjust
6. Lubricate

Daily Maintenance

Description	Action					
Oil Level	1			4		
Oil Breather Caps	1	2				
Tensioner Spring Tension	1				5	
Below Screen Box		2				
Guarding	1	2				
Draw plate Tension	1				5	
Snubber Position	1				5	
Feed Box		2				
Fastening Hardware Condition	1					
Springs		2				

Weekly Maintenance

Description	Action					
Discharge Lip Condition	1					
Tube Guard Condition	1					
Springs Condition	1					
Drive Seal Condition	1					6
V-Belt Condition	1					
Drive and Driven Sheaves Condition	1					
Tag-Line Tension Band Tension and Condition	1					
Hardware Torque		2				

Bi-Weekly Maintenance



Description	Action					
Springs		2				

Imperial Torque Specs

Recommended Torque

FT/LBS	Grade 2		Grade 5		Grade 8		18-8 S/S		Bronze		Brass	
	Coarse	Fine	Coarse	Fine	Coarse	Fine	Coarse	Fine	Coarse	Fine	Coarse	Fine
1/4"	4	4.7	6.3	7.3	9	10	6.3	7.8	5.7	7.3	5.1	6.4
5/16"	8	9	13	14	18	20	11	11.8	10.3	10.9	8.9	9.7
3/8"	15	17	23	26	33	37	20	22	18	20	16	18
7/16"	24	27	37	41	52	58	31	33	29	31	26	27
1/2"	37	41	57	64	80	90	43	45	40	42	35	37
9/16"	53	59	82	91	115	129	57	63	53	58	47	51
5/8"	73	83	112	128	159	180	93	104	86	96	76	85
3/4"	125	138	200	225	282	315	128	125	104	102	118	115
7/8"	129	144	322	355	452	501	194	193	178	178	159	158
1"	188	210	483	541	682	764	287	289	265	240	235	212

US Bolts

Head Marking	Grade and Material	Nominal Size Range (inches)	Mechanical Properties		
			Proof Load (psi)	Min. Yield Strength (psi)	Min. Tensile Strength (psi)
 No Markings	Grade 2 Low or medium carbon steel	1/4" thru 3/4"	55,000	57,000	74,000
		Over 3/4" thru 1-1/2"	33,000	36,000	60,000
 3 Radial Lines	Grade 5 Medium carbon steel, quenched and tempered	1/4 thru 1"	85,000	92,000	120,000
		Over 1" thru 1-1/2"	74,000	81,000	105,000
 6 Radial Lines	Grade 8 Medium carbon alloy steel, quenched and tempered	1/2" thru 1-1/2"	120,000	130,000	150,000
 A325	Grade A325 Carbon Alloy Steel with or without Boron	1/2" thru 1-1/2"	85,000	92,000	120,000
Stainless markings vary. Most stainless is non-magnetic	18-8 Stainless Steel alloy with 17-19% Chromium and 8-13% Nickel	All sizes thru 1"		20,000 Min. 65,000	65,000 Min. 100,000 - 150,000 Typical

Metric Torque Spec

Class 4.6 and 8.8

Nominal Dia. (mm)	Pitch	Class 4.6				Class 8.8			
		Clamp Load (lbs)	Tightening Torque			Clamp Load (lbs)	Tightening Torque		
			Lubricated (ft-lbs)	Zinc Plated (ft-lbs)	Plain & Dry (ft-lbs)		Lubricated (ft-lbs)	Zinc Plated (ft-lbs)	Plain & Dry (ft-lbs)
4	0.7	333	0.7	0.7	0.9	858	1.7	1.9	2.3
5	0.8	538	1.3	1.5	1.8	1387	3.4	3.9	4.5
6	1	763	2.3	2.6	3.0	1968	5.8	6.6	7.7
7	1	1095	2.8	4.3	5.0	2822	9.7	11	13.0
8	1.25	1389	5.5	6.2	7.3	3580	14.1	16	18.8
10	1.5	2200	10.8	12.3	14.4	5671	27.9	31.6	37.2
12	1.75	3197	18.9	21.4	25.2	8240	48.7	55.1	64.9
14	2	4379	30.2	34.2	40.2	11289	77.8	88.1	103.7
16	2	5943	47	53	62	15320	121	137	161
18	2.5	7301	65	73	86	18822	167	189	222
20	2.5	9286	91	104	122	23938	236	267	314
22	2.5	11509	125	141	166	29669	321	364	428
24	3	13372	158	179	211	34471	407	461	543
27	3	17428	232	262	309	44924	597	676	796
30	3.5	21266	314	356	419	54819	809	917	1079
33	3.5	26310	427	484	570	67821	1101	1248	1468
36	4	30982	549	622	732	79866	1415	1603	1886

Class 10.9 and 12.9

Nominal Dia. (mm)	Pitch	Class 4.6				Class 8.8			
		Clamp Load (lbs)	Tightening Torque			Clamp Load (lbs)	Tightening Torque		
			Lubricated (ft-lbs)	Zinc Plated (ft-lbs)	Plain & Dry (ft-lbs)		Lubricated (ft-lbs)	Zinc Plated (ft-lbs)	Plain & Dry (ft-lbs)
4	0.7	1228	2.4	2.7	3.2	1436	2.8	3.2	3.8
5	0.8	1985	4.9	5.5	6.5	2319	5.7	6.5	7.6
6	1	2816	8.3	9.4	11.1	2391	9.7	11	13
7	1	4039	13.9	15.8	18.5	4720	16.3	18.4	21.7
8	1.25	5123	20.2	22.9	26.9	5987	23.6	26.7	31.4
10	1.5	8115	339.9	45.2	53.2	9484	46.7	52.9	32.2
12	1.75	11792	69.6	78.9	92.8	13781	81.4	92.2	108.5
14	2	16154	111.3	126.1	148.4	18879	130	147.4	173.4
16	2	21924	173	196	230	25622	202	229	269
18	2.5	26934	239	270	318	31477	279	316	372
20	2.5	34256	337	382	449	40034	394	446	525
22	2.5	42457	460	521	613	49619	537	609	716
24	3	49629	582	660	777	57649	681	771	908
27	3	64288	854	968	1139	75132	998	1131	1331
30	3.5	78448	1158	1312	1544	91680	1353	1534	1804
33	3.5	97055	1576	1786	2101	113425	1842	2087	2455
36	4	114291	2024	2294	2699	133569	2366	2681	3154

Long-Term Storage Maintenance

NOTICE
During Seasonal down-time or any long interruption to operation, take measures to prevent damage to internal components.

To prepare equipment for long-term storage, follow steps bellow:

1. Remove oil breather caps and replace with solid pipe plugs.
2. Install long-term storage additive to oil in drive
3. Apply lubricant (grease) to drive shaft to prevent hardening of seals or drive shaft corrosion.
4. Turn on screen for 2 minutes once per month to keep protective film of oil on internal drive components.

Note: If screen cannot be powered during storage, rock drive sheave once every 15 days to lubricate internal drive components.

Anthem Incline Screen Inspection Checklist



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout/Blockout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

Daily	Poor			Excellent		Recommended Action (A) or Comment (C)
Oil Level	1	2	3	4	5	N/A (A) (C)
Breather	1	2	3	4	5	N/A (A) (C)
Tag-Line Tension	1	2	3	4	5	N/A (A) (C)
Area Below Screen Cleanliness	1	2	3	4	5	N/A (A) (C)
Guarding In Place	1	2	3	4	5	N/A (A) (C)
Draw Plate Tension	1	2	3	4	5	N/A (A) (C)
Snubber Contact	1	2	3	4	5	N/A (A) (C)
Material Build-up Inside Feed Box	1	2	3	4	5	N/A (A) (C)
Hardware Condition	1	2	3	4	5	N/A (A) (C)
Material Build-up Around Springs	1	2	3	4	5	N/A (A) (C)
Material Build-up Inside Belt Guard	1	2	3	4	5	N/A (A) (C)
	1	2	3	4	5	N/A (A) (C)
Weekly	Poor			Excellent		Recommended Action (A) or Comment (C)
Screening Media Condition	1	2	3	4	5	N/A (A) (C)
Feed Box Liners Condition	1	2	3	4	5	N/A (A) (C)
Discharge Lip Liners Condition	1	2	3	4	5	N/A (A) (C)
Rock Shields Condition	1	2	3	4	5	N/A (A) (C)
Springs Condition	1	2	3	4	5	N/A (A) (C)
Drive Seal Condition	1	2	3	4	5	N/A (A) (C)

Daily	Poor			Excellent			Recommended Action (A) or Comment (C)
Drive Belt Condition	1	2	3	4	5	N/A	(A) (C)
Sheave Condition	1	2	3	4	5	N/A	(A) (C)
Tag-line Tension Band Condition	1	2	3	4	5	N/A	(A) (C)
	1	2	3	4	5	N/A	(A) (C)
Periodic	Poor			Excellent			Recommended Action (A) or Comment (C)
Oil Sample Analysis	1	2	3	4	5	N/A	(A) (C)

Incline Screen Troubleshooting



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

⚠ WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

Troubleshooting Guideline

Symptom	Possible Cause
Screen slow to start, over 10 seconds.	• Check power supply. • Check drive belt for slipping. • Verify electrical supply cable is of sufficient diameter.
Material moves too slowly across screen.	• Increase drive speed. • Increase sheave weights.
Material moves too quickly across screen.	• Decrease drive speed. • Decrease sheave weights.
Material not distributed evenly (running down a single side).	• Verify screen is laterally level. • Inspect for broken shaft. • Verify in-feed is evenly distributed. • Inspect springs for damage. • Verify sheave weights are equal on both sides.
Material being ejected from screen.	• Increase material feed. • Decrease drive speed.
Material overflowing, dead action at feed end.	• Decrease material feed. • Increase drive speed within manufactures recommendations. • Inspect springs for damage. • Check for adequate clearance, "Screen Clearance Requirements" on page 12.
Media blinding over with clay.	• Clean in-feed material if possible. • Increase flow from spray system if possible. • Consider installing ball tray deck option if possible. • Use smallest possible wire diameter for current mesh opening.

Symptom	Possible Cause
Screen running erratically causing excessive vibration in surrounding structure.	• Verify screen support is properly sized and braced. • Verify spring heights are level. • Inspect for broken shafts. • Inspect for loose hardware or components. • Verify sheave weights are equal on both sides. • Check for adequate clearance, "Screen Clearance Requirements" on page 12. • Verify screen is running at proper speed.
Screen rocking side-to-side.	• Inspect drive belt alignment. • Inspect drive belt tension. • Inspect springs for damage. • Inspect springs to ensure all are same height. • Verify screen is laterally level.

Screen Lubrication Chart



Read and understand equipment operators manual before operating or performing maintenance. Failure to do so could result in serious injury or death.

WARNING

Failure to follow instructions below could result in death or serious injury:

- Follow correct Lockout/Tagout/Blockout procedures.
- Follow installation instructions completely. Failure to do so may cause death or serious injury.

Note: Take oil sample every 250 hours of operation and send to lab for professional analysis.

Parts Per Million Operating Range

Contaminate	Acceptable Range
Iron	125-150
Chrome	25-30
Aluminum	45-50
Copper	100-125
Silicon	25-30
Water	0

Note: Change oil every 500 hours or if oil samples show high contaminant levels.

ISO Grade Lubricant

Ambient Temp Range	Specifications	Lubricant
-30 to 25°F (-34.4 to -3.9°C)	ISO 68	Mobil SHC 626
25 to 85°F (-3.9 to 29.4°C)	ISO 150	Mobil SHC 629
85 to 105°F (29.4 to 41°C)	ISO 220	Mobil SHC 630
105 to 115°F (41 to 46°C)	ISO 320	Mobil SHC 632

Grease lubrication

Ambient Temp Range	Lubricant
All ranges	Grade 2, high-temperature lithium grease.

Oil Quantity

Screen Size	Quantity (per gearbox)
5' and 6' (32 drive)	2.0 gallons
7' and 8' (38 drive)	4.5 gallons
8' (40 drive)	5.25 gallons

Note: Fill to center of sight glass.

Lubrication Details

Description	Action	Detailed Instruction
Drive	- Take Oil Sample every 250 hours of operation for lab analysis. - Change oil every 500 hours of operation. - Check oil level daily.	"Draining Oil" on page 19
Drive Seal	Add grease after every 40 hours of operation.	"Adding Grease" on page 19

Anthem® Inclined Screen Start-Up Checklist

Screen Delivery Inspection


Screen Delivery Inspections	Yes	No
Equipment Received in Good Physical Condition?		
Have all Shipping Brackets Been Removed?		
Have All Guards Been Properly Installed?		
Has a Copy of the Operation Manual Been Provided?		
Have Equipment Safety Operating Procedures Been Explained?		
Have Equipment Operating Procedures Been Explained?		
Have Maintenance Procedures Been Explained?		

Screen Specifications

Screen Specifications		Modifications to Screen
Screen Model		Note any modifications (if applicable):
Screen Serial Number		
Electric Motor HP	HP	
Electric Motor Speed (RPM)	RPMs	
Motor Sheave Diameter		
Screen Operating Rotation	With Flow Or Counter Flow	
No. of Bolt-On Counter Weights Installed		
Tons Per Hour		
Maximum Feed Size		
Wet or Dry		
Start Up Date (MM/DD/YYYY)		
Distributor Name		
Customer Name		

Thank You For Your Business!


Figure 48

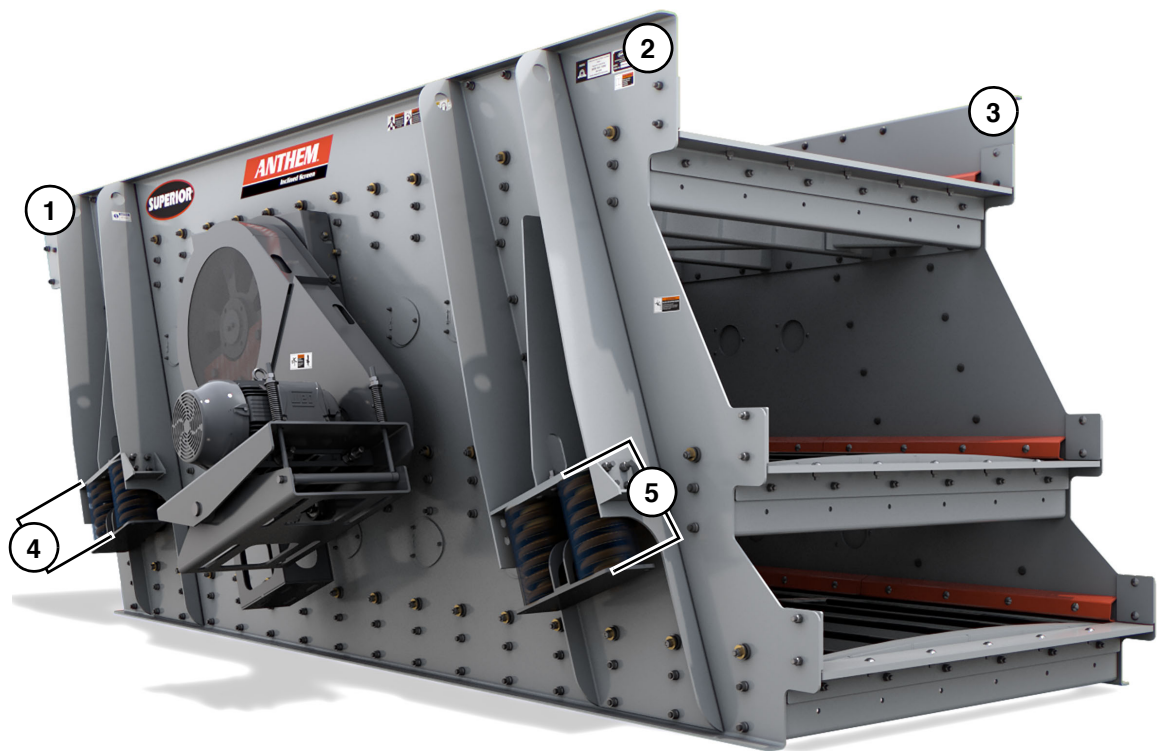

- 1. Left Feed (Figure 48)
- 2. Left Discharge (Figure 48)
- 3. Right Discharge (Figure 48)

Screen Stroke	Length
Screen Stroke	
Screen Stroke	
Spring Height	Inches (mm)
Spring (4) (Figure 48) Height (Measure Bottom of Spring to Top of Base)	
Spring (5) (Figure 48) Height (Measure Bottom of Spring to Top of Base)	
Bearing Temperatures	Temperature
Record Bearing Ambient Temperatures after 1 Hour	
Seal	No
Verify Seal is Greased	
Verify Type of Grease	
Oil	
Verify Type of Oil being Used	
Lubrication Levels	No
Verify Lubrication Levels	


Figure 49

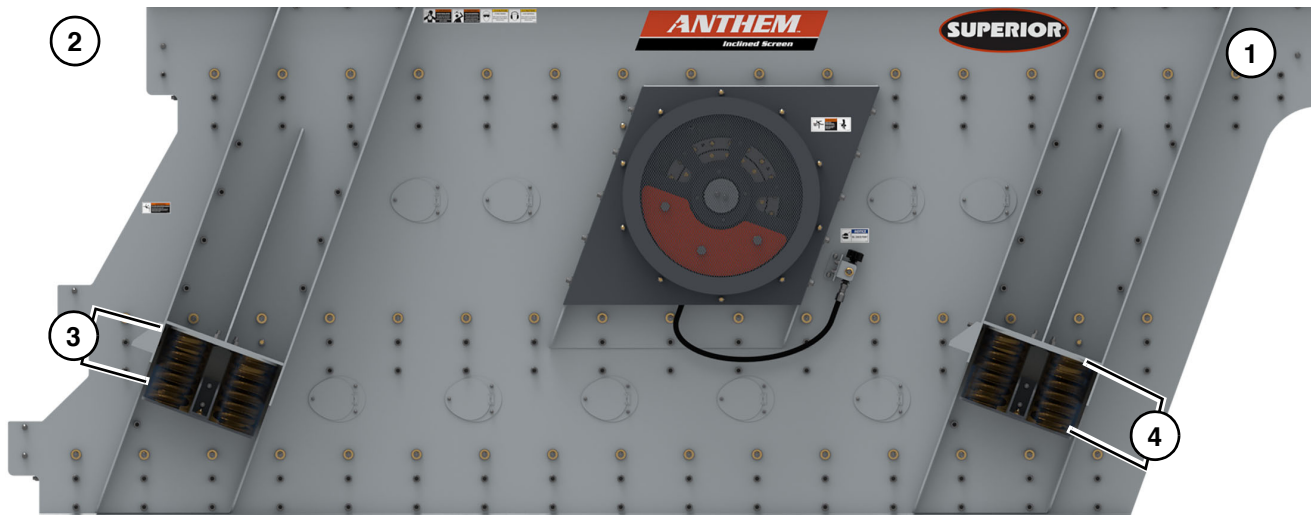

- 1. Right Feed ((Figure 49)
- 2. Right Discharge (Figure 49)

Screen Stroke	Length
Screen Stroke	
Screen Stroke	
Spring Height	Inches (mm)
Spring (3) (Figure 49) Height (Measure Bottom of Spring to Top of Base)	
Spring (4) (Figure 49) Height (Measure Bottom of Spring to Top of Base)	
Bearing Temperatures	Temperature
Record Bearing Ambient Temperatures after 1 Hour	
Lubrication Levels	No
Verify Lubrication Levels	

Figure 50

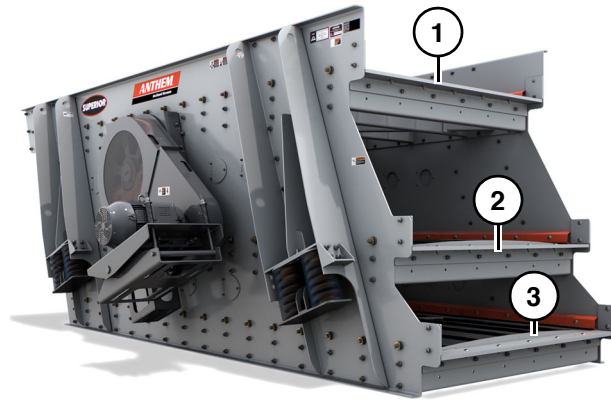

Top Deck (1) (Figure 50)		Measurement	
Media Type			
Opening Size			
Build Up	Yes		No
Central Deck (2) (Figure 50)		Measurement	
Media Type			
Opening Size			
Build Up	Yes		No
Bottom Deck (3) (Figure 50)			
Media Type			
Opening Size			
Build Up	Yes		No
Under Hopper			
Build Up	Yes		No
Clearance			
Discharge			
Build Up	Yes		No
Vertical Clearance to Chute Work or Surrounding Structure			
Horizontal Clearance to Chute Work or Surrounding Structure			
Structure		Inches (mm)	
Level Side to Side			
Level End to End			
Base Movement	Yes		No
Screen Base Frame Supported to a Solid Footing Under the Springs	Yes		No
Feed End Clearance		Inches (mm)	
Verify Clearance Requirements			
Verify Screen Installation meets Clearance Requirements			
Drop Height of Material onto the Feed Box		Inches (mm)	
Record Drop Height of Material onto the Feed Box			
DOL Type Starter			
Verify a DOL Type Starter is being Used with Screen.	Yes		No
If DOL Type Starter is not being Used, Verify Screen Starts within 10 Seconds.			
Breather			
Verify Breathers are Clear of any Moisture from Spray Bars if Screen is a Wet Screen	Yes		No
Verify Breathers are Clear of Heavy Dust if Screen is a Dry Screen			
Electric Motor Rotation (If Screen is Dual Shaft)			
Check Electric Motor Rotation before Installation of V-Belt.	Yes		No
Tail Gate Assembly			
Tail Gate Assembly has been Inspected	Yes		No
Springs			
Verify Springs are Clear and Guarding/Protection is in Place	Yes		No

Screen Issues / Notes (If Applicable)

Note Any Modifications (If Applicable)



Screen(s) Stroke With Material

Customer _____
S/N. _____ Date: _____

_____ STROKE

DISCHARGE END

STROKE _____

+

+

_____ STROKE

CENTER

STROKE _____

+

LEFT

RIGHT

_____ STROKE

FEED END

STROKE _____

+

+

Customer _____
S/N. _____ Date: _____

_____ STROKE

DISCHARGE END

STROKE _____

+

+

_____ STROKE

CENTER

STROKE _____

+

LEFT

RIGHT

_____ STROKE

FEED END

STROKE _____

+

+

46

IS-0019_03-2020

800.321.1558
www.superior-ind.com

Screen(s) Stroke With Material



Customer _____

S/N. _____ Date: _____

____ STROKE

DISCHARGE END

STROKE ____

+

+

____ STROKE

CENTER

STROKE ____

LEFT

+

RIGHT

____ STROKE

FEED END

STROKE ____

+

+



Customer _____

S/N. _____ Date: _____

____ STROKE

DISCHARGE END

STROKE ____

+

+

____ STROKE

CENTER

STROKE ____

LEFT

+

RIGHT

____ STROKE

FEED END

STROKE ____

+

+

Maintenance Log

Serviced By	Work Performed	Date

Warranty

SUPERIOR INDUSTRIES, INC (d/b/a Superior Equipment and as Superior Components)

TERMS AND CONDITIONS

1) OFFER AND ACCEPTANCE. Superior Industries, Inc's ("Seller") acceptance of Buyer's order to purchase products is expressly made conditional on assent to these Terms and Conditions, which along with the Sales Order constitute a binding "Contract" between the parties. This Contract constitutes the complete and final agreement between Seller and Buyer for the products. Any additional or different terms or conditions contained in any document furnished by Buyer, including but not limited to, any purchase order or any acknowledgment, are deemed to be material and are hereby objected to and rejected by Seller. If such agreement shall be deemed an offer or counter-offer by Buyer, Seller expressly rejects such offer or counter-offer and limits acceptance to these Contract terms and expressly objects to any different or additional terms proposed by Buyer. Any actual performance by Buyer or Seller thereafter shall be deemed a renewal of the offer contained in this Contract and acceptance of this Contract without change. In the event of a conflict between the terms of this Contract and the terms of any other document, the terms of this Contract shall control. This offer to purchase Seller's products is valid for thirty (30) days from the date of the Sales Order.

In the event of a significant general material price increase (as measured by any applicable third-party material price index) after the date of issuance of any purchase order, Seller reserves the right to charge a materials surcharge calculated to recoup the actual increase in material cost for the products subject to the purchase order which is attributable to such general material price increase. Documentation of the general material price increase and the actual increase in material cost will be provided to the Buyer upon written request.

2) PAYMENT TERMS. All prices specified in this Contract are FCA Seller's designated location, which constitutes delivery. All risk of damage to or loss of the products from any cause whatsoever shall pass to Buyer upon delivery, even if Seller arranges for shipment of the product. Unless otherwise expressly provided on the reverse hereof, payment shall be made within thirty (30) days from the earlier of the date of delivery or the date of an invoice, without discount. Any discount which may be expressly provided on the reverse hereof applies to the sale price of the products at the shipping point, and does not apply to any charges made for taxes, storage, loading or transportation. All payments shall be made in United States dollars. Interest will be charged at the rate of eighteen percent (18%) per annum, or the maximum interest rate allowable by applicable law, whichever is lower, on all unpaid invoices. Buyer shall pay all taxes and charges of any nature imposed by any federal, state, or local governmental authority by reason of the sale or delivery of the products whether levied or assessed against Seller, Buyer, or the products. Such applicable taxes or charges, if not included in this Contract, shall be invoiced separately. If, in Seller's opinion, reasonable doubt exists as to Buyer's financial condition, Seller may, at any time and without prejudice to any other remedies, suspend or terminate performance of any order, decline to ship, stop any material in transit, or require full or partial payment by Seller in advance.

3) DELIVERY. Any delivery or promise date indicated on the Sales Order is an estimate of the date Seller believes the products will be available for delivery, provided, however, Seller shall not be responsible for any delays in delivery.

4) WARRANTY.

a) New Product(s) Limited Warranty. Subject to the terms, conditions and limitations contained herein, Seller makes the single applicable warranty of paragraphs (i) through (v) below only to the original Buyer of Seller's new product(s). Each specified warranty period begins on the applicable date (the "Warranty Start Date") determined as follows: (1) for Seller-manufactured conveyor components, the date of shipment; (2) for Seller-manufactured capital equipment, the earliest applicable of the following dates, if any: (a) one year from date of shipment if not commissioned, (b) the date of shipment if commissioned and unregistered, or (c) the date of registration if commissioned and registered; or (3) for all other cases, the date of sale. The specified warranty periods are sometimes referred to as "original warranty periods." The terms "shipment" and "sale" as used herein refer to the dates of shipment and sale from by the Seller and not from any distributor of the Seller. The warranties specified below do not apply to any part, portion or component of any product which is manufactured by a third party ("Third- Party Component").

i) Conveying equipment and conveying components (e.g., conveyors and Superior-manufactured conveyor components such as idlers and pulleys) (a) will not fail to operate in accordance with the product(s)' respective specifications due to defects in material or workmanship during the period ending two (2) years from the Warranty Start Date or at 6,000 hours of operation, whichever occurs first, normal wear and tear excluded, and (b) will not incur a failure of the product(s)' respective structural members (e.g., truss) due to defects in material or workmanship during the period ending five (5) years from the Warranty Start Date, normal wear and tear excluded.

ii) Crushing equipment (e.g., cones, jaws and impactors) will not fail to operate in accordance with the product(s)' respective specifications due to defects in material or workmanship during the period ending two (2) years from the Warranty Start Date or 6,000 hours of operation, whichever occurs first, normal wear and tear excluded.

iii) Vibratory equipment (e.g., screens and feeders) will not fail to operate in accordance with the product(s)' respective specifications due to defects in material or workmanship during the period ending two (2) years from the Warranty Start Date or 6,000 hours of operation, whichever occurs first, normal wear and tear excluded.

iv) Washing equipment (e.g., washers and classifiers) will not fail to operate in accordance with the product(s)' respective specifications due to defects in material or workmanship during the period ending two (2) years from the Warranty Start Date or 6,000 hours of operation, whichever occurs first, normal wear and tear excluded.

v) Other Superior Products. Any Superior-manufactured new product to which no single category of subparagraphs (i) through (iv) above clearly applies will not fail to operate in accordance with the product's respective specifications due to defects in material or workmanship during the period ending two (2) years from the warranty start date defined in this paragraph, normal wear and tear excluded.

b) Aftermarket Part(s) Limited Warranty; Exclusion of Third-Party Components. Subject to the terms, conditions and limitations contained herein, Seller warrants only to the original Buyer that Seller's manufactured aftermarket parts (e.g., mainframe, axle, undercarriage) (the "Aftermarket Parts") will not fail to operate in accordance with the Aftermarket Parts' specifications due to defects in material or workmanship during the period length of one (1) year, normal wear and tear excluded. Warranty period starts from date of shipment. The foregoing limited warranty does not apply to any part, portion or component of any Third-Party Component.

c) Coverage Exclusions. The warranties provided in subsections (a) and (b) above shall not apply to any of the following:

i) consumable parts (including but not limited to manganese or other wear parts, screen mesh, v-belts, bearings, oil, liners, etc.);

ii) failure or damage due to improper installation or commissioning;

iii) failure or damage of equipment or equipment support structure (e.g., chassis) due to improper selection or improper support of equipment (e.g., improper cribbing, chassis, etc.);

iv) labor, travel, or freight costs associated with repairs and/or parts installation, unless such costs (1) are associated with a repair or parts installation approved in writing by the Seller, (2) are carried out by or coordinated with a dealer of Seller as may be required by the Seller, and (3) do not exceed a total amount authorized in writing by the Seller;

v) any loss or damages resulting from plant or equipment down time or loss of equipment or plant use, or equipment or plant productivity (all of which include but are not limited to loss or damages resulting from down time or loss of use of the products or components subject to this warranty and any equipment used with such products or components); and

vi) for avoidance of doubt, any of the items excluded in subsection 4(e) below.

d) DISCLAIMER OF ALL OTHER WARRANTIES, EXPRESS, IMPLIED OR STATUTORY. THE LIMITED WARRANTY SET FORTH IN THE FOREGOING PARAGRAPH IS THE SOLE AND EXCLUSIVE WARRANTY WITH RESPECT TO THE PRODUCTS. SELLER MAKES NO OTHER EXPRESS WARRANTY OF ANY KIND OR NATURE AS TO THE PRODUCTS OR THEIR PERFORMANCE EXCEPT FOR THOSE LIMITED WARRANTIES EXPRESSLY SET FORTH IN THE FOREGOING PARAGRAPH AND SPECIFICALLY DISCLAIMS ANY AND ALL REPRESENTATIONS OR WARRANTIES OF ANY KIND OR NATURE CONCERNING THE PRODUCTS, INCLUDING, BUT NOT LIMITED TO, ANY REPRESENTATION OR WARRANTY THAT THE PRODUCTS COMPLY WITH ANY LAW, RULE OR REGULATION. SELLER MAKES NO WARRANTIES WITH RESPECT TO ANY THIRD PARTY COMPONENT AND SELLER SPECIFICALLY SELLS SUCH THIRD- PARTY COMPONENTS "AS IS" WITHOUT ANY WARRANTY. FURTHER, SELLER MAKES NO IMPLIED WARRANTY OF ANY KIND OR NATURE WITH RESPECT TO ITS PRODUCTS OR ANY THIRD-PARTY COMPONENT AND SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ANY AND ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, OR COMPLIANCE WITH ANY FEDERAL, STATE OR LOCAL LAW, RULE OR REGULATION. IN ADDITION, SELLER EXPRESSLY DISCLAIMS TO THE FULLEST EXTENT ALLOWED BY LAW, RULE OR REGULATION ANY WARRANTY PROVIDED UNDER ANY FEDERAL, STATE OR LOCAL LAW, RULE OR REGULATION.

e) Terms and Conditions of Warranty; Voiding of Warranty; Notice Requirements. The limited warranties set forth above shall be null and void if (a) any alterations or modifications are made to a product, (b) a product is not maintained in strict compliance with the maintenance requirements set forth in the maintenance manual for such product or otherwise provided to Buyer of such product, (c) any repairs are made to a product which are not authorized by Seller in writing, (d) any failure of a product to comply with the above limited warranty is not reported to Seller in writing within thirty (30) days of the date such failure first occurs, (e) a product is operated after the failure of any warranty first occurs, (f) a product is used for any purpose other than for the purpose for which it was manufactured, (g) a product is not operated, maintained, and/or repaired in strict compliance with the terms and conditions set forth in any operating manual for the product (including but not limited to exceeding the load bearing capacity of the product), (h) a product is abused or damaged, (i) Buyer fails to deliver the product to Seller for inspection and testing if requested by Seller or Buyer disposes of the product or any part or component on or before the sixtieth (60th) day after sending a written claim under the warranty to Seller, (j) such failure of the limited warranty results from a failure of any Third-Party

Component, (k) Buyer replaces any part or component of the product with a non-authorized part or component other than genuine parts or components sold, distributed or authorized by Seller.

f) Course of Dealing; Course of Performance; Usage of Trade. No course of dealing or course of performance of Seller with respect to the products sold under this Contract or with respect to any of its products to whomever sold and no usage of trade shall be considered in interpreting this Contract or any part thereof and none of the foregoing shall be considered a waiver or modification of any such terms, conditions, disclaimers or limitation of the limited warranties or disclaimers contained in this Contract. No statement, whether written or oral, made by any employee, salesperson, distributor, agent or contractor of Seller which is not set forth in this Contract shall be considered a representation or warranty with respect to any product, its specifications or its performance and all such statements are hereby disclaimed.

g) Exclusive Remedies for Breach of Warranty. The sole and exclusive remedy for any failure of any product to comply with the limited warranty set forth above or any other warranty imposed upon Seller by law, if any, shall, at the election of Seller, in its sole discretion, be either (a) the repair or replacement of the product or component which failed to comply with such warranty or (b) the refund of the purchase price of the product. Except as provided below, any repair or replacement shall carry the same warranty as the original product but only for the remainder of the original warranty period. Buyer's exclusive remedy with respect to any claim arising out of or as a result of Third-Party Component shall be against the third-party manufacturer.

h) Warranty Claims; Notice Requirement; Limited Time to Bring Claims. Any and all claims under the above-limited warranty shall be made to Seller only in writing and not later than thirty (30) days after the date the product first fails to comply with the above-limited warranty but in no event later than the expiration of the original warranty period with respect to which the claim is being made. Any claim under the above-limited warranty made after such period for making a claim shall be null and void. After receiving written notice of the warranty claim, Seller shall determine whether to (a) repair or replace the product or part or (b) refund the purchase price of the product. Seller may require Buyer to return any product or component part thereof which Buyer claims to be defective to Seller at Buyer's cost for inspection as a condition to any claim under the above-limited warranty. No product or part may be returned to Seller without Seller's prior written authorization. If a product which is returned is determined by Seller in its sole discretion not to have failed to comply with the limited warranty, Buyer shall pay costs of removal, repair and/or replacement for such product. If a product which is returned is determined by Seller in its sole discretion to have failed to comply with the limited warranty, Seller shall pay for all repair and/or replacement costs for such product (or refund the purchase price if so elected by Seller) and Seller shall reimburse Buyer for the reasonable costs of shipping the product or component to Seller.

i) Limitation on Liability for Breach of Warranty and Other Claims. If the warranty and the remedy for any failure of any product to comply with any warranty are deemed for any reason to fail their intended purpose, Seller's liability for any failure of any product to comply with any such warranty, together with any and all other liability, if any, arising out of or in connection with such product, including, but not limited to, all claims, whether in contract, tort, or otherwise, arising out of, connected with, or resulting from the manufacture, sale, delivery, resale, repair, replacement, or use of the product, shall not exceed the purchase price for such product. In no event shall Seller be responsible or liable to Buyer or any third party under any circumstances for any indirect, consequential, special, punitive or exemplary, damages or losses, including, but not limited to, damages for loss of profits, goodwill, use of the product or any other equipment or other intangible losses which may be incurred in connection with the product regardless of the type of claim or the nature of the cause of action, even if Seller has been advised of the possibility of such damage or loss. Any and all claims that Buyer has against Seller, whether or not Buyer is aware of such claims, must be brought by Buyer within thirty (30) days after the date that such claim first arose, but in any event within the applicable warranty period set forth above. Any claim not brought by Buyer within the applicable thirty (30) day period shall be deemed null and void.

5) INDEMNIFICATION. Buyer will indemnify and hold harmless Seller, its affiliates and their respective officers, directors, employees, agents and other representatives and defend any action brought against same with respect to any claims, judgments, actions, suits, demands, damages, liabilities, costs or expenses (including, but not limited to, reasonable attorneys' fees and legal expenses) associated with or arising from the ownership, use or operation of the products by Buyer or any third party, including without limitation, product liability, an international, federal or state occupational safety and health statute, or any other governmental regulations or laws.

6) TERMINATION OF PERFORMANCE. Buyer may cancel its order only with the written consent of Seller and upon terms that will indemnify Seller from any loss, damage and expense arising from such cancellation. Seller may terminate this Contract pursuant to Sections 2 and/or 11 hereof, and in such event, Seller shall have no further liability to produce or ship any products hereunder and shall have no liability for damages to Buyer or any third party.

7) TECHNICAL ADVICE. No obligation or liability shall arise out of Seller's rendering of technical advice in connection with Buyer's order of products. Any technical advice furnished, or recommendation made by Seller or any employee or representative of Seller, concerning any use or application of any products or parts furnished under this Contract is believed to be reliable, but Seller makes no warranty, express or implied, of results to be obtained. Buyer assumes all responsibility for loss or damage resulting from the handling or use of any such products or parts in accordance with such technical advice or recommendation. The selection of the products ordered, or design of any custom products, shall be Buyer's sole and ultimate responsibility, and Seller shall have no liability whatsoever for any design defects of custom products, or if the products ordered are unsuitable for Buyer's intended use. Any advice or assistance provided by Seller to Buyer in connection with Buyer's selection or design of the products is at Buyer's risk, and Seller makes no representation or warranty whatsoever in connection with such advice or assistance.

8) BUYER'S REPRESENTATIONS. Buyer represents and warrants to Seller, expressly acknowledging that Seller is relying on these representations and warranties, that: (i) all information supplied by Buyer to Seller in any financial, credit or accounting statement is

and will be true, correct, valid and genuine; (ii) the products are to be used only for business purposes; (iii) Buyer is duly organized, validly existing, and in good standing under the Laws of the state of its formation and is qualified to operate and use the products in the jurisdictions in which the products are used; (iv) Buyer has the full authority to agree to these Terms and Conditions and to perform all of its obligations hereunder.

9) BUYER'S OBLIGATIONS AND COVENANTS. In addition to and not in limitation of any other agreements of Buyer hereunder, Buyer agrees at its sole expense: (a) to use the products in accord with all applicable laws and insurance policies as well as in accord with the best and safest practices recognized in the industry for driving and other operation of the products; (b) to operate and use each of the products within its rated capacity and only for the application for which it was provided, to operate each of the products only in the appropriate environment (including but not limited to weather and/or road conditions) recognized as safe and in accord with best practices in the industry, to follow any instructions, manuals and other materials provided by Seller or the manufacturer of any third-party components utilized in the products, and in the case of damage or defect in the products, to immediately cease operating and using the products until such damage or defect is repaired and immediately report such damage or defect to Seller; (c) to restrict operation of each of the products to safe, careful, competent and trained personnel selected, employed, trained and controlled by Buyer; (d) to properly store the products; (e) that Buyer will not (or permit any party to) misuse or illegally use the products nor permit any of the products; (f) Buyer will not use or permit the use of the products for uses not contemplated or reasonably foreseeable by the Seller; and (g) that Buyer will not alter or permit the alteration of any products without the prior written consent of Seller.

10) ASSIGNMENT. Buyer shall not assign its rights or obligations under this Contract without the prior written consent of Seller, which consent may be withheld for any reason in the sole discretion of Seller. Any attempt at such assignment by Buyer without the prior written consent of Seller shall be deemed null and void. This Contract will be binding upon the parties hereto, and their successors and permitted assigns.

11) SECURITY INTEREST OF SELLER. Title to the products will not pass to Buyer until all required payments have been made to Seller. Until the purchase price and all other applicable costs and expenses are paid in full, Seller reserves a purchase money security interest in the products and the proceeds therefrom, and Seller thereby possesses the rights of a secured party under the Uniform Commercial Code. Upon Seller's request, Buyer shall execute all necessary financing statements and other documents evidencing this security interest with the appropriate state and local authorities. Seller is entitled to and is hereby granted reasonable access to Buyer's locations as necessary to exercise its remedies as a secured party.

12) GOVERNING LAW. This Contract shall be construed, interpreted, and governed by the laws of the State of Minnesota without regard to its conflict of laws principles. The exclusive forum for any disputes arising out of or relating to this Contract shall be any federal or state court sitting in the State of Minnesota. The parties irrevocably consent to such exclusive jurisdiction in such courts and to the proper venue therein.

13) FORCE MAJEURE. Seller does not assume the risk of and shall not be liable for failure to perform any obligation relating to the products caused by civil insurrection, war, fire, strike, labor stoppages or other labor disturbances, acts of God, acts or omissions of Buyer, acts or omissions of the United States Government, floods, epidemics, freight embargoes, shortages of fuel, energy or materials, failure of suppliers or subcontractors to satisfactorily meet scheduled deliveries, or any other cause beyond the reasonable commercial control of Seller.

14) NOTICES. Any notices, consents or other communications required or permitted under this Contract must be in writing and delivered personally, overnight air courier, registered or certified mail or facsimile. Unless otherwise stated in this Contract, notices, consents or other communication will be deemed received (a) on the date delivered, if delivered personally or by facsimile transmission; (b) on the next business day if sent via overnight air courier; or (c) three (3) business days after being sent, if sent by registered or certified mail.

15) SEVERABILITY; WAIVER. The invalidity or unenforceability of any provision of this Contract shall not affect the validity or enforceability of any other provision of this Contract. No waiver of any of the provisions of this Contract shall be deemed, or shall constitute a waiver of any other provision, whether or not similar, nor shall any waiver constitute a continuing waiver. No waiver shall be binding unless executed in writing by the party making the waiver. The Section headings included herein are for the convenience of the parties only and in no way alter, modify, amend, limit or restrict the contractual obligations of the parties.

16) NO THIRD-PARTY BENEFICIARIES; SETOFF. Nothing in this Contract is intended to, or shall, create any third-party beneficiaries, whether intended or incidental, and neither party shall make any representations to the contrary. Seller shall have the right to deduct from any sums it owes to Buyer, any sums or the value of any obligation owed by Buyer to Seller.

17) ENTIRE AGREEMENT. The terms set forth herein constitute the sole terms and conditions of the Contract between Buyer and Seller. Notwithstanding the foregoing or any other term of this Contract, to the extent this Contract conflicts with the terms or conditions of any written distributor agreement between the parties, the written distributor agreement shall control. No other warranty, term, condition or understanding, whether oral or written shall be binding upon Seller, unless hereafter expressed in writing, approved and signed by Seller.

18) SURVIVAL. The provisions of Sections 3, 4, 5, and 7 through 20 shall survive the termination and performance of this Contract.

19) LANGUAGE CLAUSE. The parties acknowledge that the original version of these Terms & Conditions was prepared in English. Any translation of the original English version of these Terms & Conditions into any other language is provided solely as a convenience,

at Seller's sole discretion, or where required by law. If a translation of these Terms & Conditions into any language other than English is prepared or provided by Seller, Buyer, or by any third party for any reason including due to local or national legal requirements, the English version will control to the extent that there is any conflict or discrepancy in meaning between the English version and any translation thereof.

20) SOFTWARE; DATA PLATFORMS. Use of software or data platforms (or use of products incorporating, using or accessing any software or platforms) provided by Superior Industries is subject to the terms of the Superior Industries EULA (available at www.superior-ind.com/EULA) and the Superior Industries Privacy Policy and Terms of Use (available at www.superior-ind.com/Privacy-Policy-Terms-of-Use).

Proposition 65 Warning

WARNING

Breathing diesel engine exhaust exposes you to chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to: www.P65warnings.ca.gov/diesel

superior-ind.com

Superior Industries, Inc.
800-321-1558
PO Box 684 / 315 East state Highway 28
Morris, MN 56267 USA

