


Removable Light Source			
Model No.	Light Source Model Identifier	Input Current(mA)	Input Voltage (VAC)
FBH71500v0-ds/sc	XCD0157A0v00-ds/sc	90	AC220~240
FBH71500v0-ds/sc+LA10217	XCD0157A0v00-ds/sc	90	AC220~240
FBH71500v0-ds/sc+LA10218	XCD0157A0v00-ds/sc	90	AC220~240
FBH71500v0-ds/sc+LA10217+LA10218	XCD0157A0v00-ds/sc	90	AC220~240
FBH71500v1-ds/sc	XCD0157A0v01-ds/sc	90	AC220~240
FBH71500v1-ds/sc+LA10217	XCD0157A0v01-ds/sc	90	AC220~240
FBH71500v1-ds/sc+LA10218	XCD0157A0v01-ds/sc	90	AC220~240
FBH71500v1-ds/sc+LA10217+LA10218	XCD0157A0v01-ds/sc	90	AC220~240

Light source: Removable


Input data refer to removable light source table

Light Source


1、 First, Turn off power at mains supply

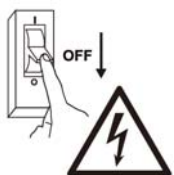


2. unscrew and remove the screw and the cover.

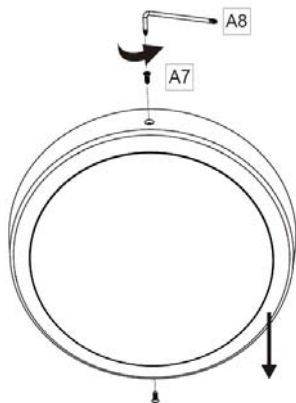

3. turn and remove the diffuser.

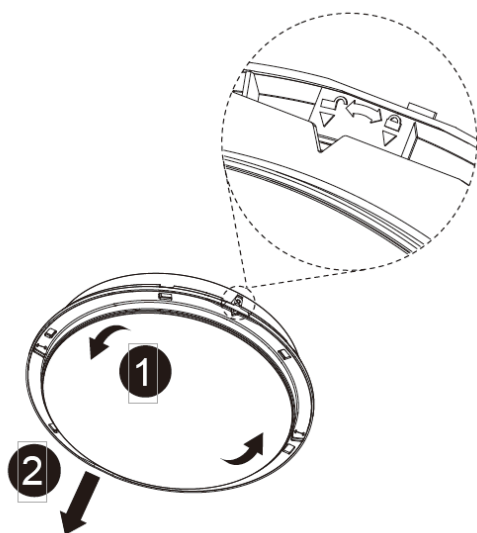

3. remove the wires, than turn and remove the light source.

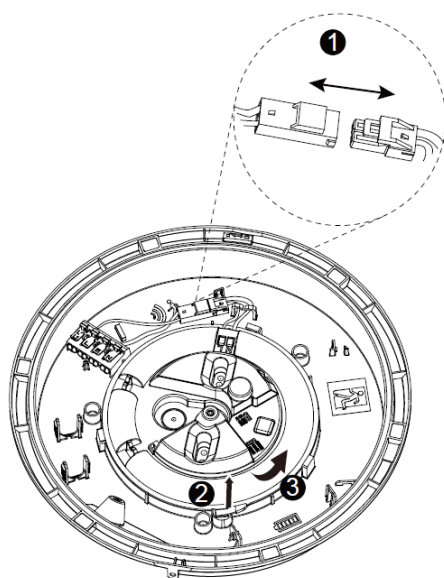

5. Light source

