


SafeWork — Worker Node Wiring

ESP32-S3 (4d_systems_esp32s3_gen4_r8n16) · DWM3000 (UWB) · MAX30102 · BNO08x · pins match config.h

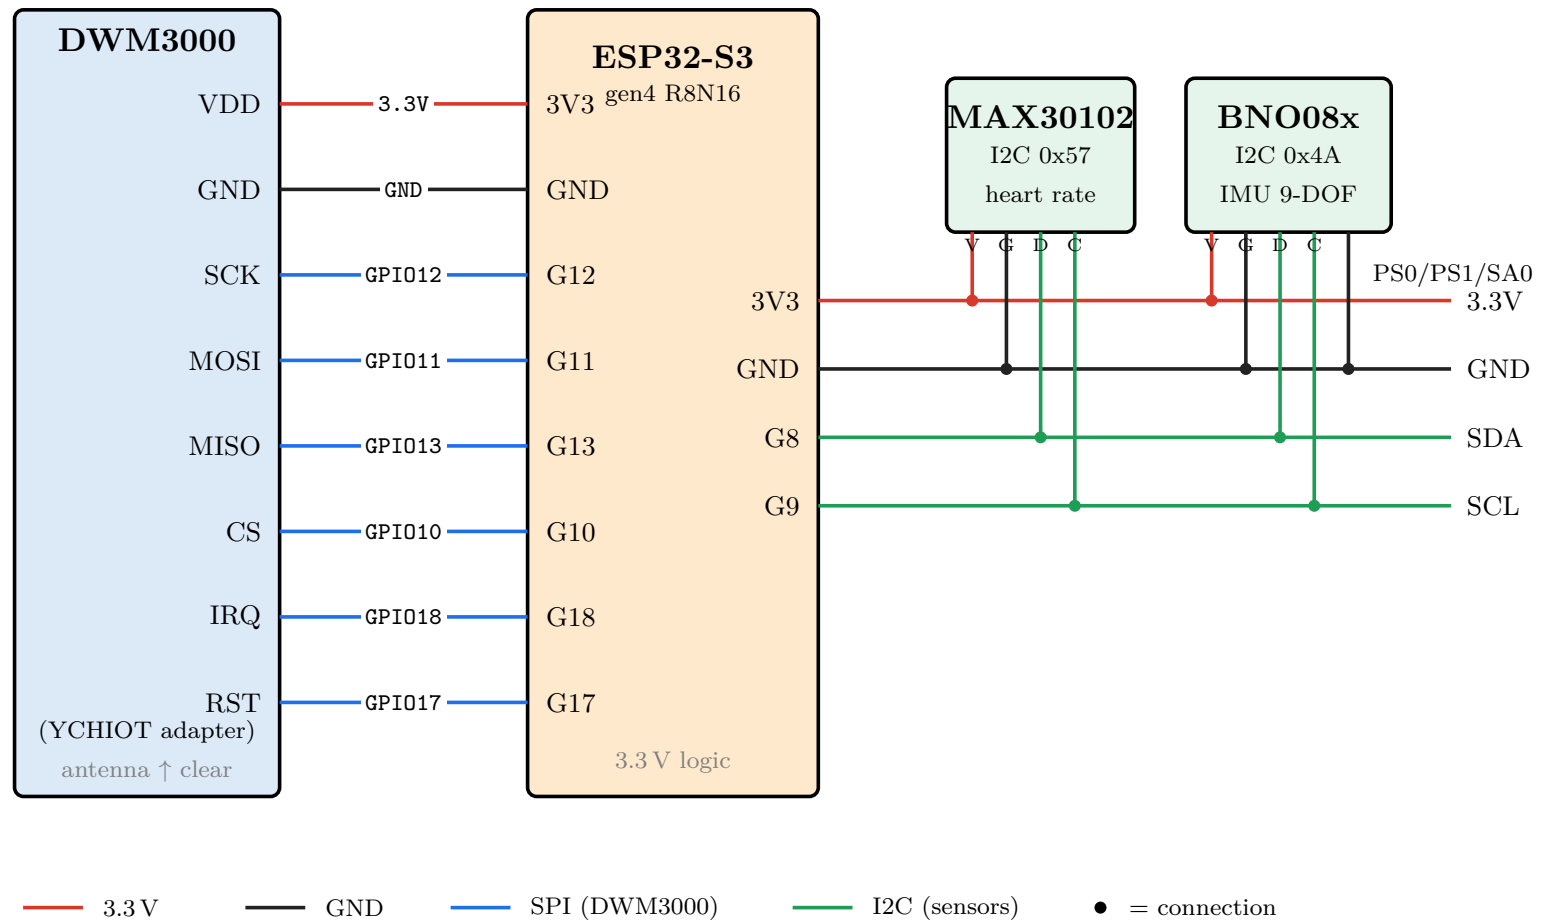

POWER SAFETY: every VIN/VDD is **3.3 V** (ESP32-S3 3V3 pin), common GND — **never 5 V / VIN / USB** (5 V destroys the DWM3000). Measure the 3.3 V rail with a meter and check polarity *before* inserting the module. **BNO08x:** tie PS0=PS1=GND for I2C mode, SA0=GND → 0x4A. **RSTn:** open-drain, never drive HIGH. **Anchor node** = ESP32-S3 + DWM3000 only (the SPI block above), no sensors.