

RS1000 DEV BOARD

IMPINJ.COM/RS1000KIT

GND
TP2

+5V-VDC-IN
GND

GP14-U1-Rx
GP15-U1-Tx

GP25-U2-Rx
GP12-U2-Tx

+3.3V-OUT
GP18-WKUP

GP08-nRESET
GP23-Health

GP24-Status
GP19-GPIO1

GP16-GPIO2
GP26-GPIO3

GP20-GPIO4
J3

GND
TP3

SMA

J1

VCTL

GPIO




102562-01 REV 2.1
COPYRIGHT 2018

A1

FR05-S1-R-0-105

L2 C11 R11 SW1
L1 J5 IDD
+5V TP1
RESET

D9 D1 L4 PWR
L3 J6 HOST
J4

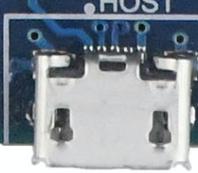

X1
R16
C4
U5
C2
C8
C6
U4
C3
C10