




# Ender-3 Pro 3D Printer

## Instructions for assembly

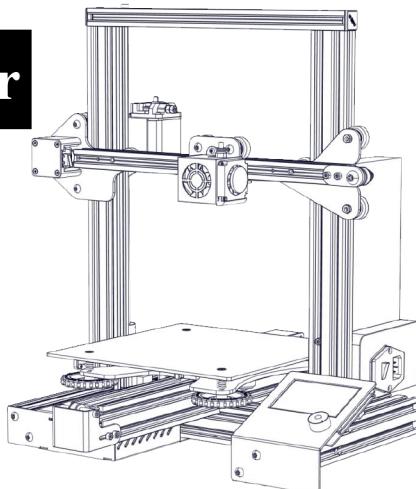

- This guide is for the Ender-3 Pro 3D Printer.
- Select the correct input voltage to match your local mains (230V or 115V).
- Because of software/hardware upgrades and model differences, new revisions may not be listed in this guide.
- Please plug the Power cord into a three-hole power jack.
- Detailed instructions for use are available in the TF card.
- This machine is equipped with a security protection mechanism. Do not manually move the nozzle and printing platform mechanism manually while booting up, otherwise the device will automatically power off for safety!

V.2.1

Basic Parameters			
Model	Ender-3 Pro	Working Mode	Online or TF card offline
Molding Tech.	FDM	File Format	STL,OBJ,AMF
Printing Size	220*220*250mm	Slice Software	Cura, Repetier-Host ,Simplify3D
Printing Speed	≤180mm/s, Normal 30–60mm/s	Power Supply	Input:AC 115V/230V 50/60Hz Output:DC 24V
Precision	±0.1mm	Total Power	270W
Slice Thickness	0.1mm–0.4mm	Filament	1.75mm PLA
Nozzle Diameter	Standard 0.4mm	Operating System	Windows XP/Vista/7/10 MAC, Linux
Nozzle Number	1	Language	English
Nozzle Temp.	≤250°C	Resume Print	YES
Bed Temp.	≤100°C	Filament Detector	NO



SHENZHEN CREALITY 3D TECHNOLOGY CO.,LTD.

11F &amp; Room 1201,Block 3,JinChengYuan,Tongsheng Community,

Dalang,Longhua District,Shenzhen,China,518109

Official Website: www.creality.com

Tel:+86 0755-85234565


E-mail: info@creality.com

cs@creality.com




## List 1

### Assemblies

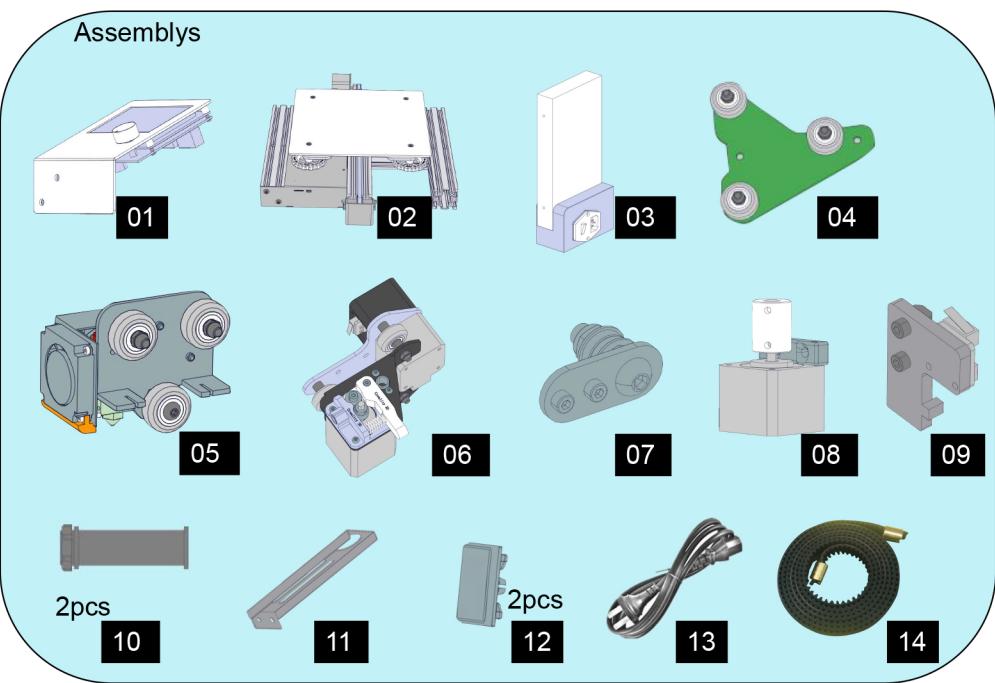


### Sections

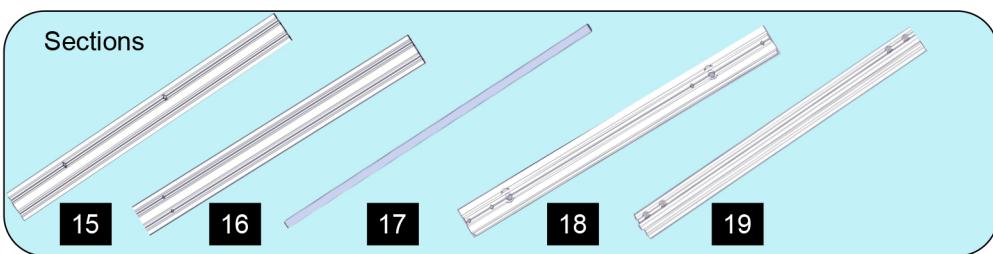



### Fasteners

M5X8	4pcs	M5 T-nut	2pcs
M4X20	2pcs	M5X25	4pcs
M4X16	4pcs	M4X18P	2pcs
M5X45	4pcs		



### Tools

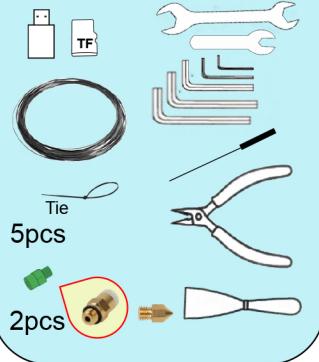




## Step 1

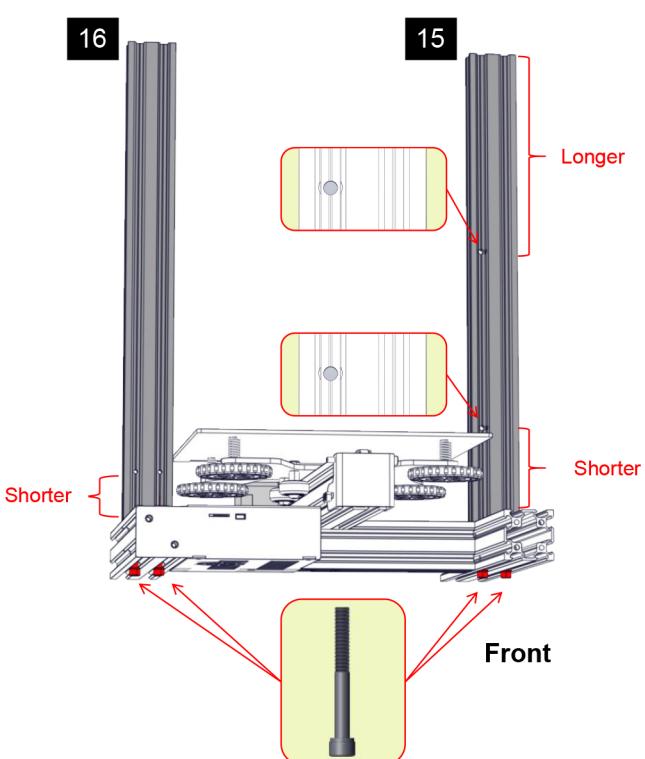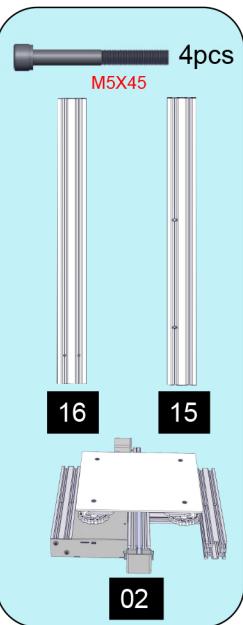

## Step 2

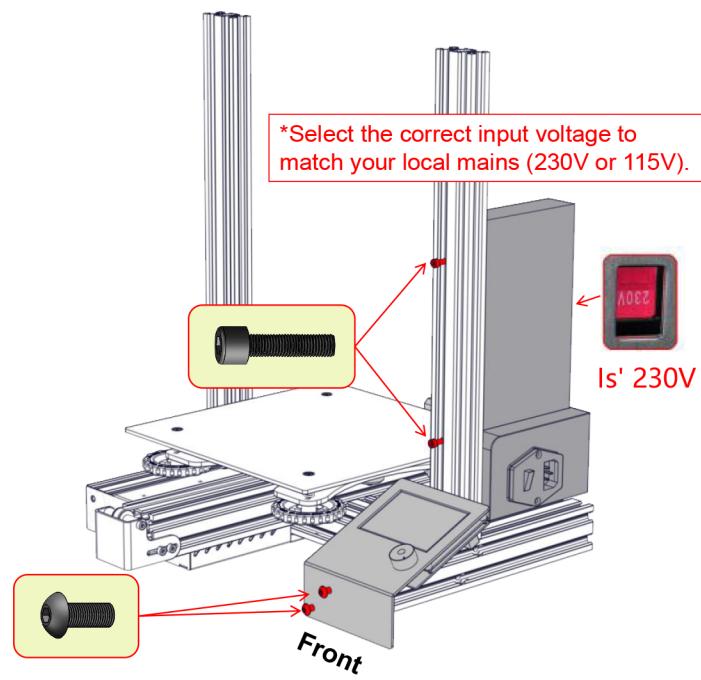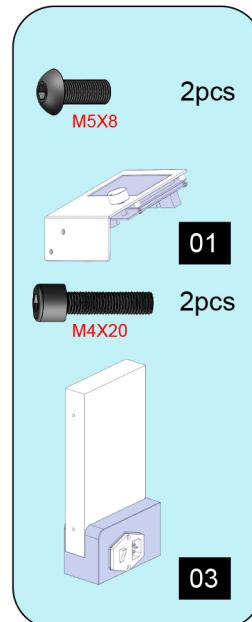

## Step 3

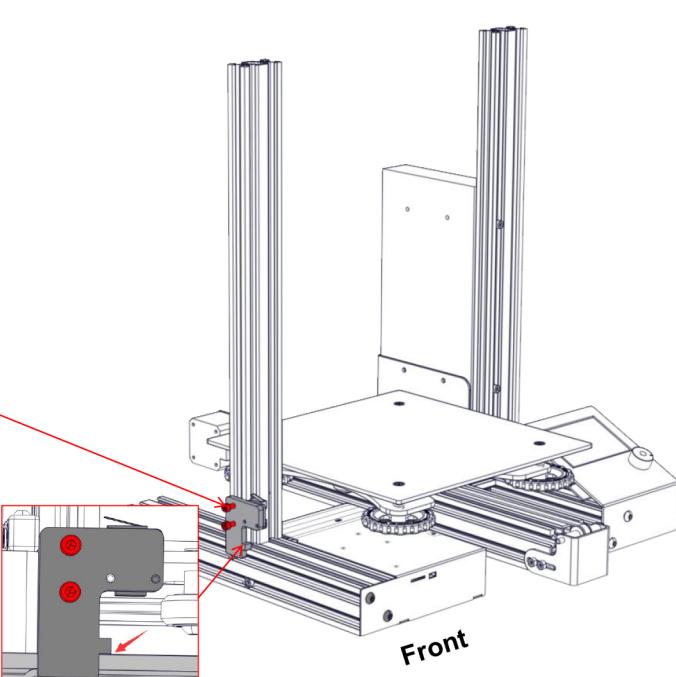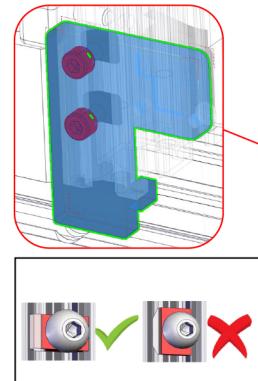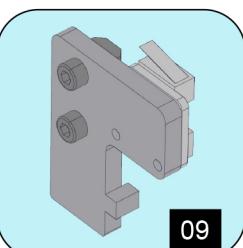

## Step 4

