



THE THINGS
NETWORK



DATACAKE

Primeros pasos en IoT con LoRaWAN



Entorno de desarrollo

- Hardware/Firmware
 - Puerta(opcional): [NUCLEO-F746ZG+LRWAN GS HF1 LoRa](#)
 - Junta de desarrollo:[STM32WL55JC1](#)Firmware STM32WL55JC1x: V1.3.1 +[conductor](#)
 - Placa de circuito impreso Apiar-IoT: Disponible próximamente.
- *Software:*
 - [STMCubeIDE](#)(V:2.2.0)
 - [STM32CubeMX](#)(V:6.18.1)
 - [Tubo STM32WL](#)(V1.6.0/1: Biblioteca para STM32WL55JC)
 - Firmware de la placa de desarrollo STM32WL55JC1x: V1.3.


Preparación del entorno (conjunto de herramientas)

Se recomienda mantener la misma ruta de carpeta y seguir cada paso al pie de la letra.


- Descarga e instala el entorno de desarrollo integrado (IDE) "[STM32CubeIDE](#)".

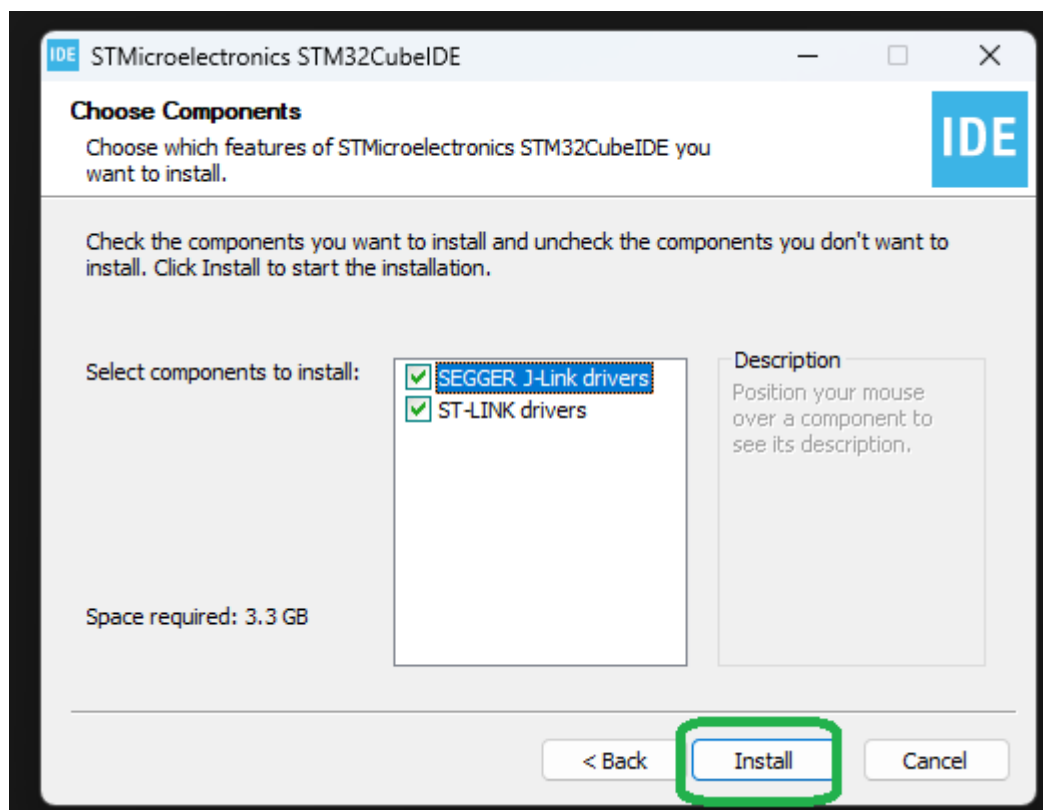
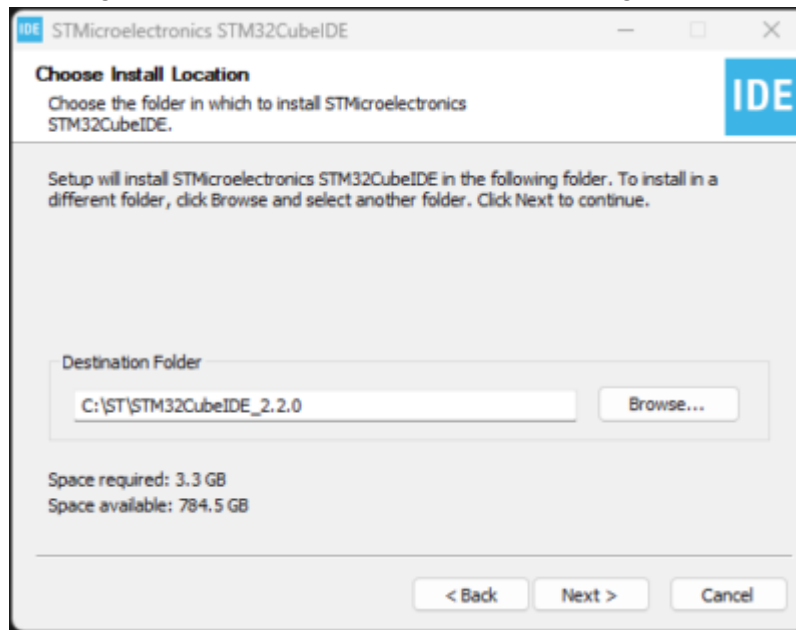


- Crea la carpeta "C:\ST_WS_RP1".
Se recomienda utilizar la misma carpeta y la misma ruta.


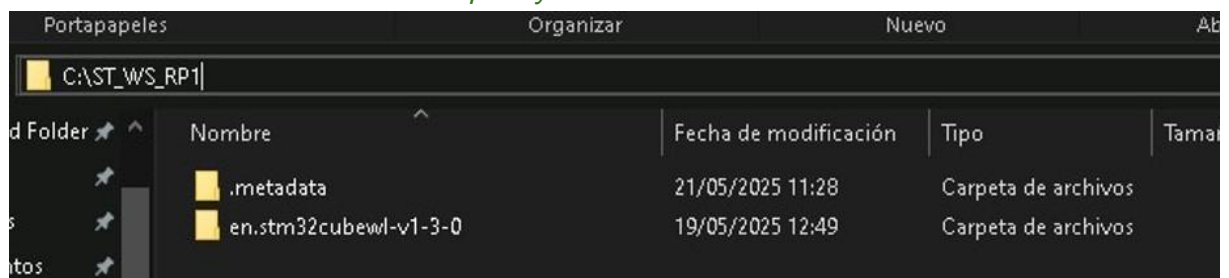




- Crea la carpeta "C:\STSTM32CubeMX-6.18.1", descarga e instala STM32CubeMX(V:6.18.1).

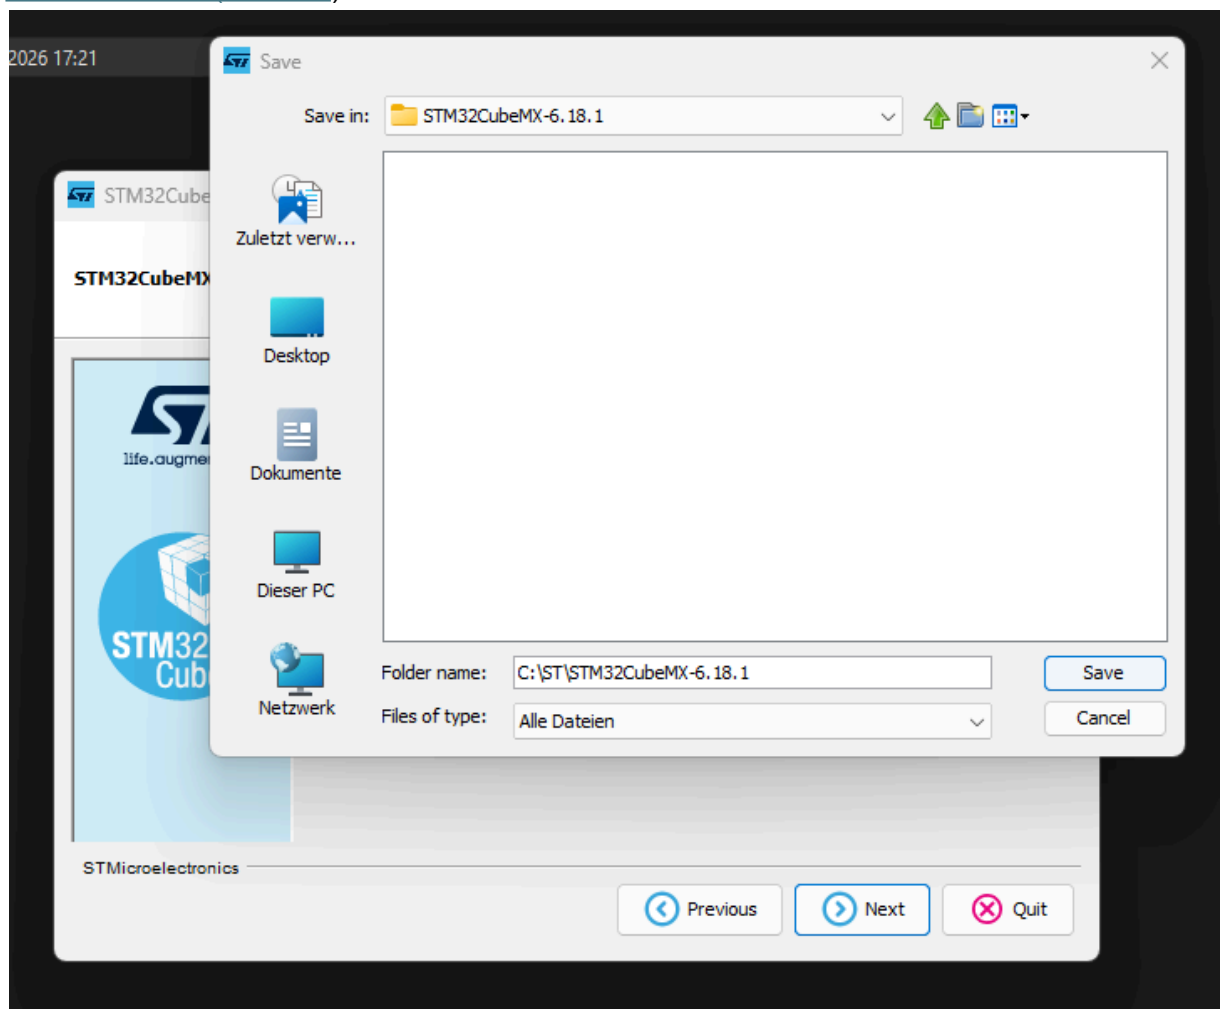

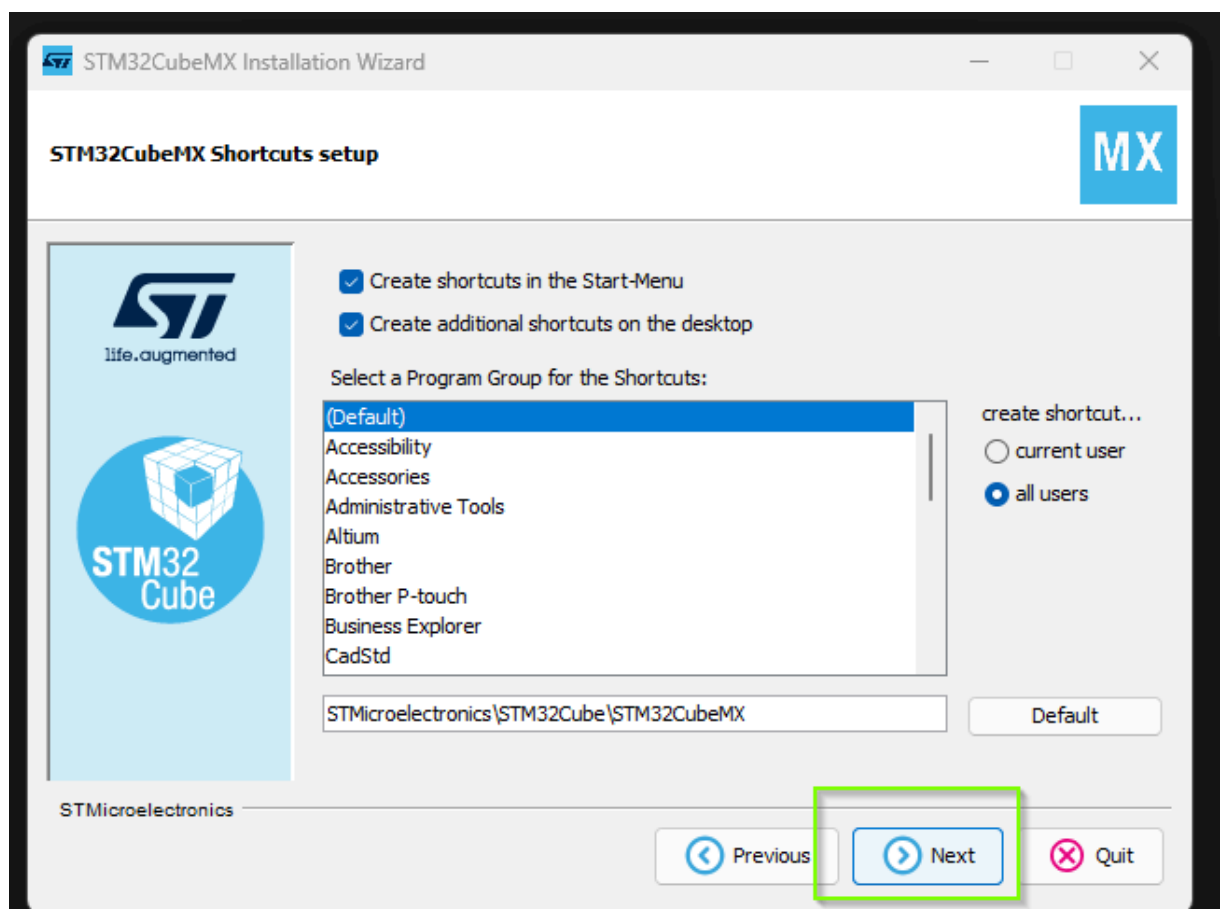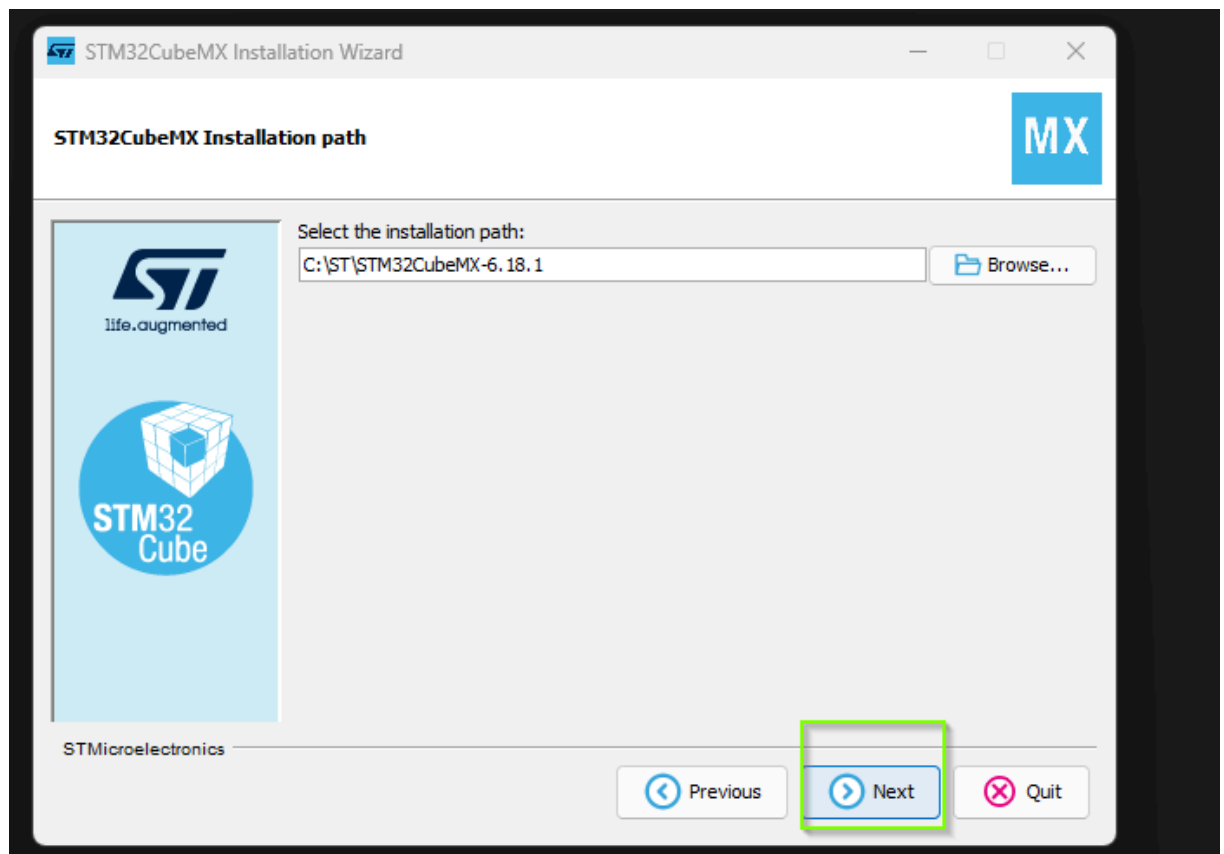



- Iniciando STM32CubeMX

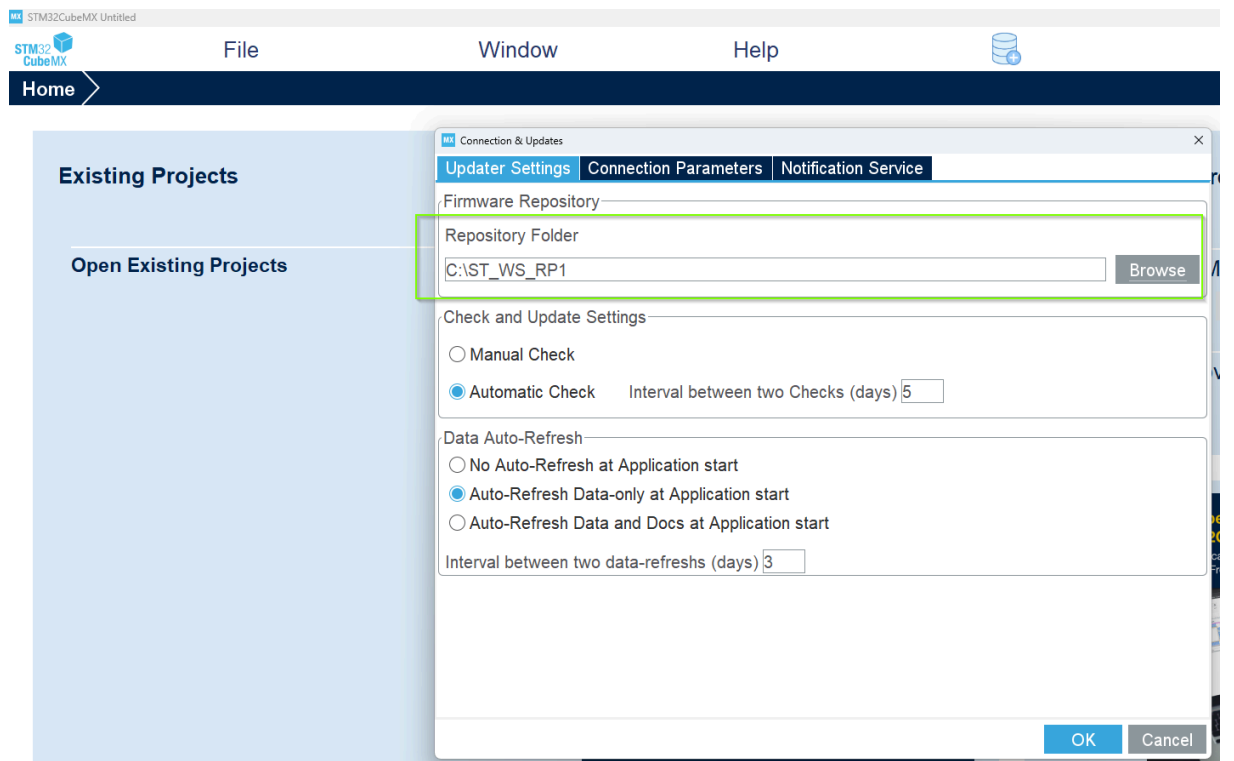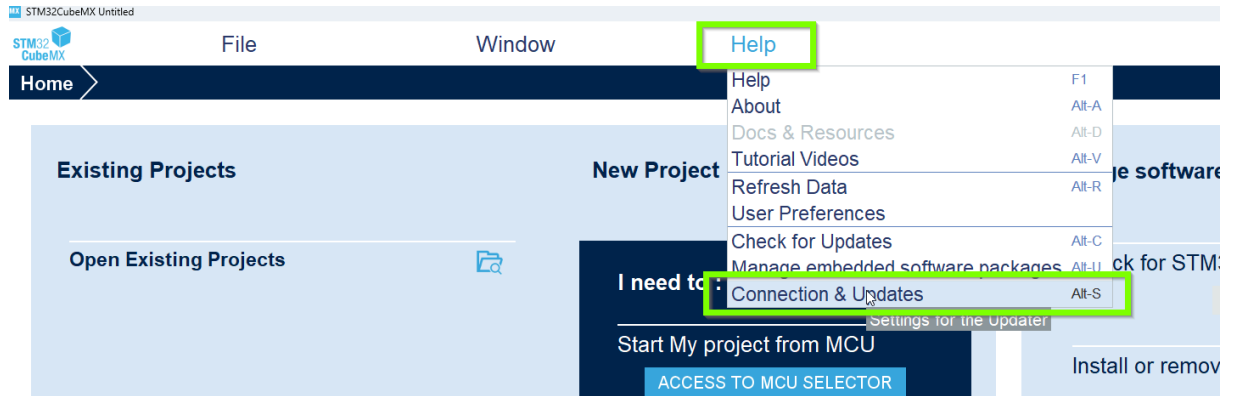

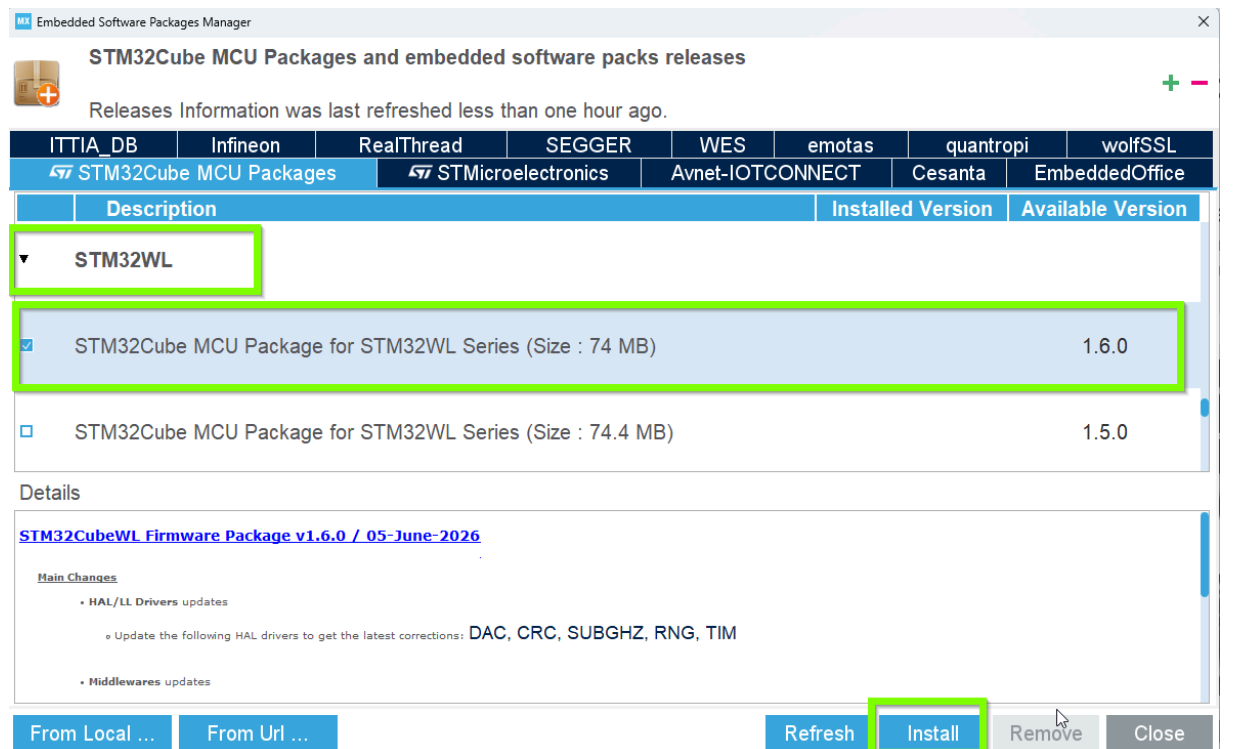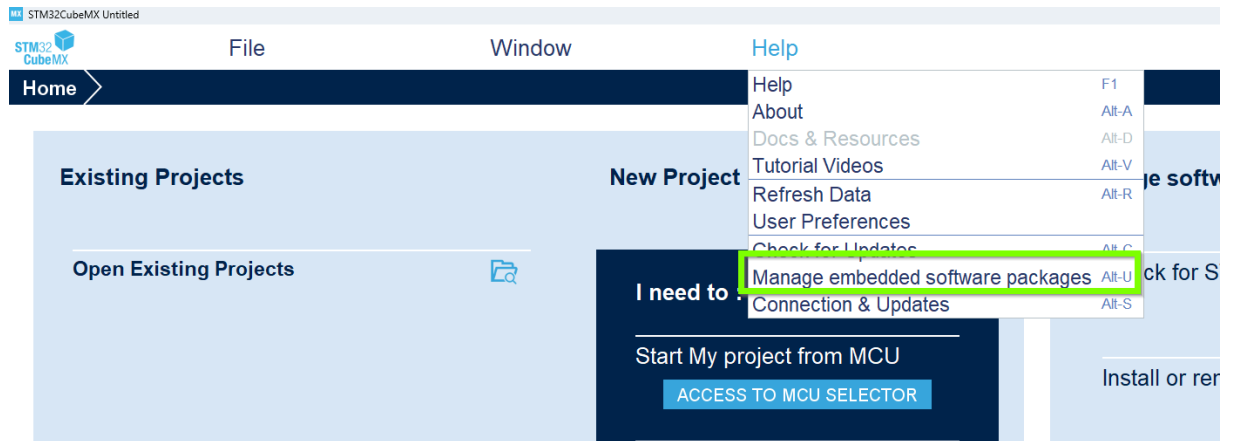

Configuración de LoRaWAN:

- Inicia:
LoRaWAN_End_Node_LBM.iocC:ST_WS_RP1STM32Cube_FW_WL_V1.6.0Proyect
osNUCLEO-WL55JCapplicationsLoRaWANLoRaWAN_End_Node_LBMLoRaWAN_E
nd_Node_LBM.ioc

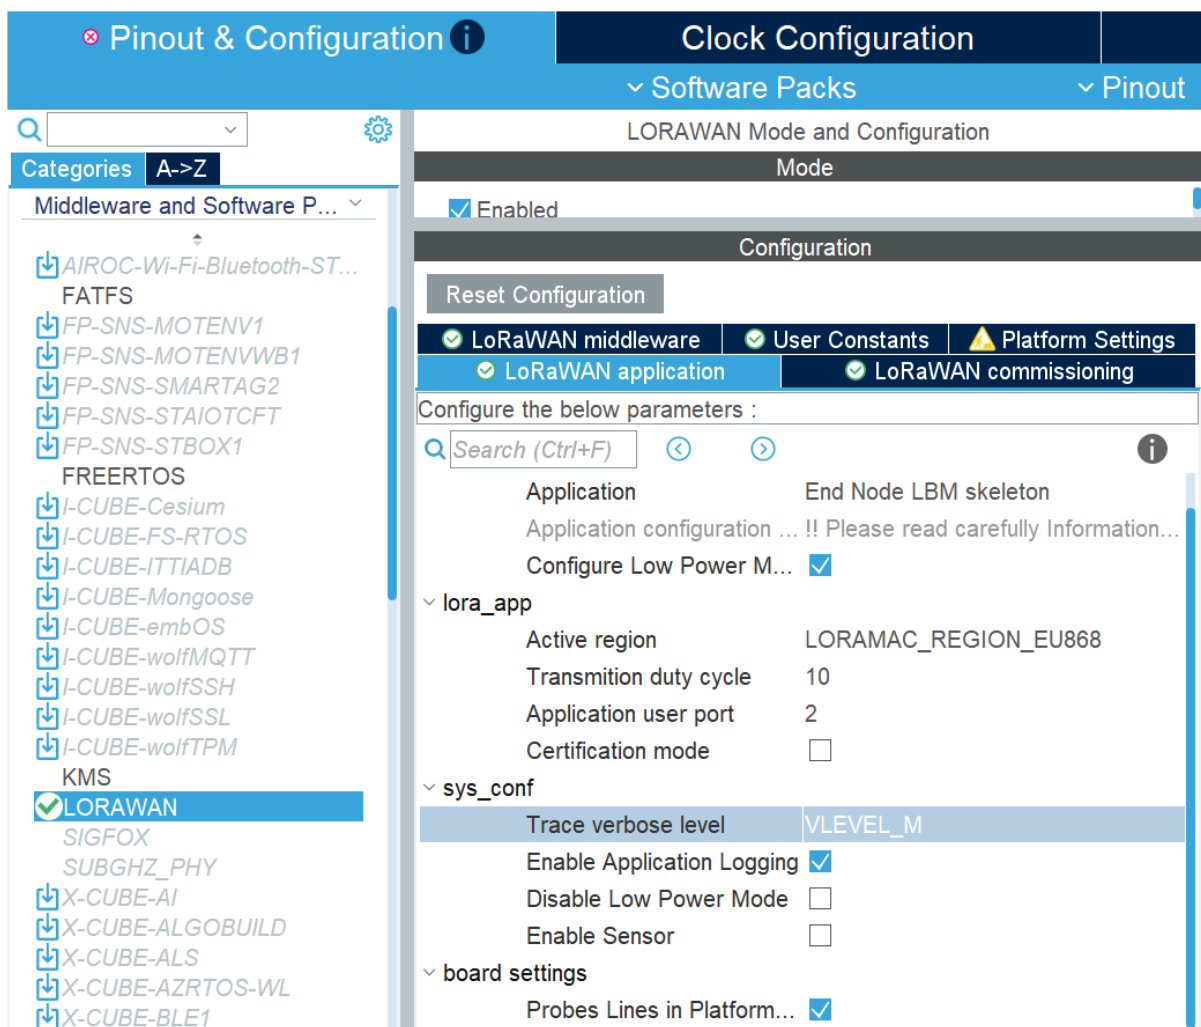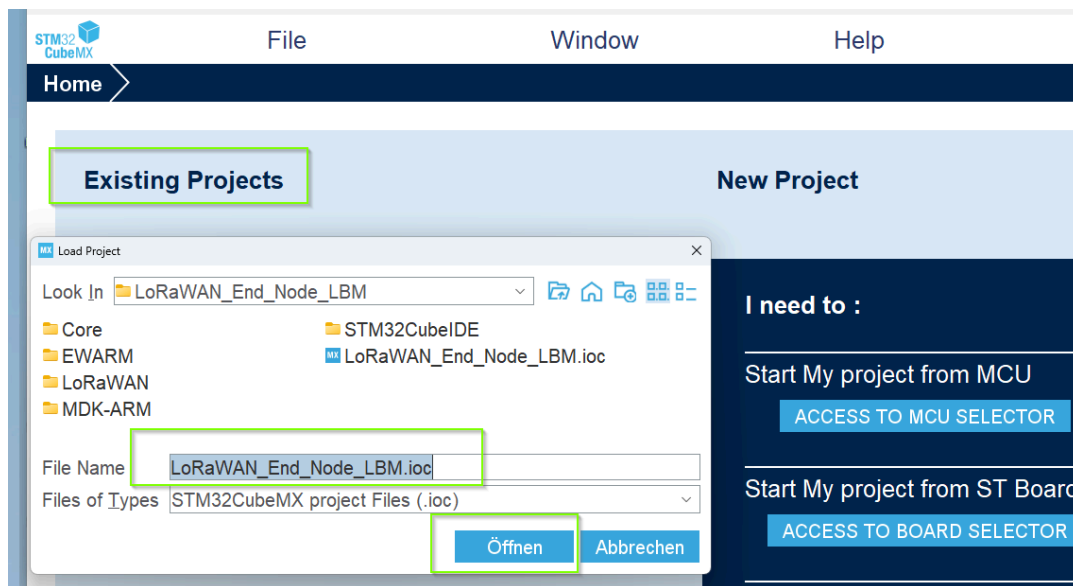

Puesta en marcha de LoRaWAN:

- “App/Join EUI”: Se puede encontrar sobre el microcontrolador.




Importante: El campo "LORAWAN_device EUI" NO debe definirse como "00.00.00.00.00.00". Elíjelo tu mismo.


```
/*
 * End-device IEEE EUI (big endian)
 * When set to 00,00,00,00,00,00,00 DevEui is automatically set
 * with a value provided by MCU platform
 */
#define LORAWAN_DEVICE_EUI
00,00,00,00,00,00,00
```

- “Application key” and “Network key”: elígelo tú mismo.





The screenshot shows the STM32CubeMX IDE interface for configuring a LoRaWAN project. The 'Pinout & Configuration' tab is active, displaying the 'LORAWAN Mode and Configuration' settings. The 'App/Join EUI' field is highlighted in green, showing the value '00,80,E1,15,05,00,D7,53'. The 'File' menu is open, and the 'Save Project' option is highlighted in green. The 'Save Project' option is also highlighted in the 'File' menu.

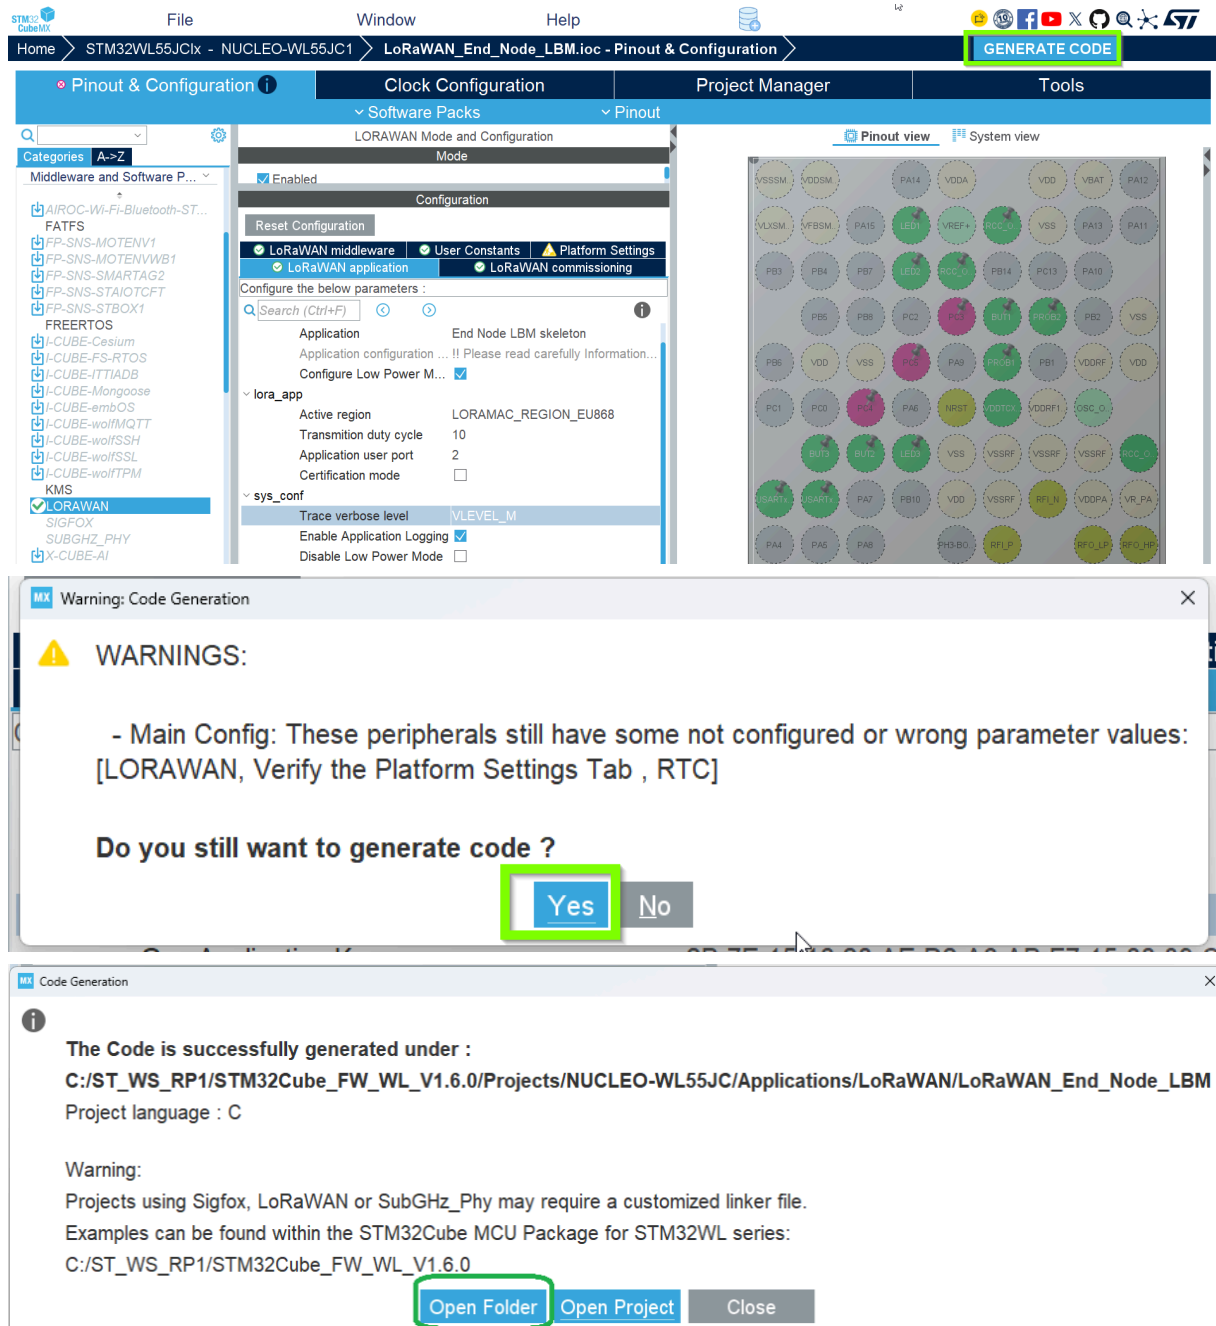


- Inicie el proyecto con STM32cubeIDE.
 "C:/ST_WS_RP1/STM32Cube_FW_WL_V1.6.0/Projects/NUCLEO-WL55JC/Applications/LoRaWAN/LoRaWAN_End_Node_LBM/STM32CubeIDE.project"

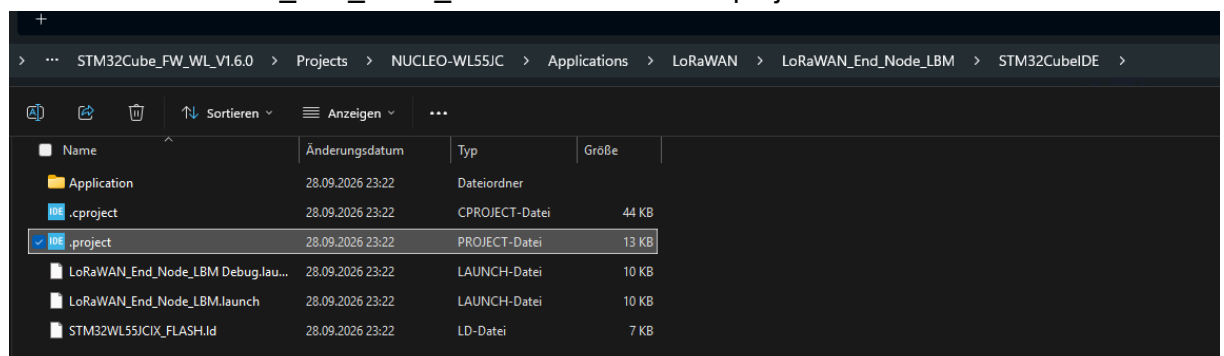

- Seleccione C:\ST_WS_RP1 como espacio de trabajo.

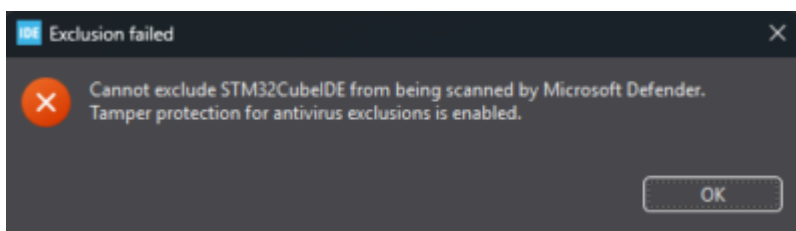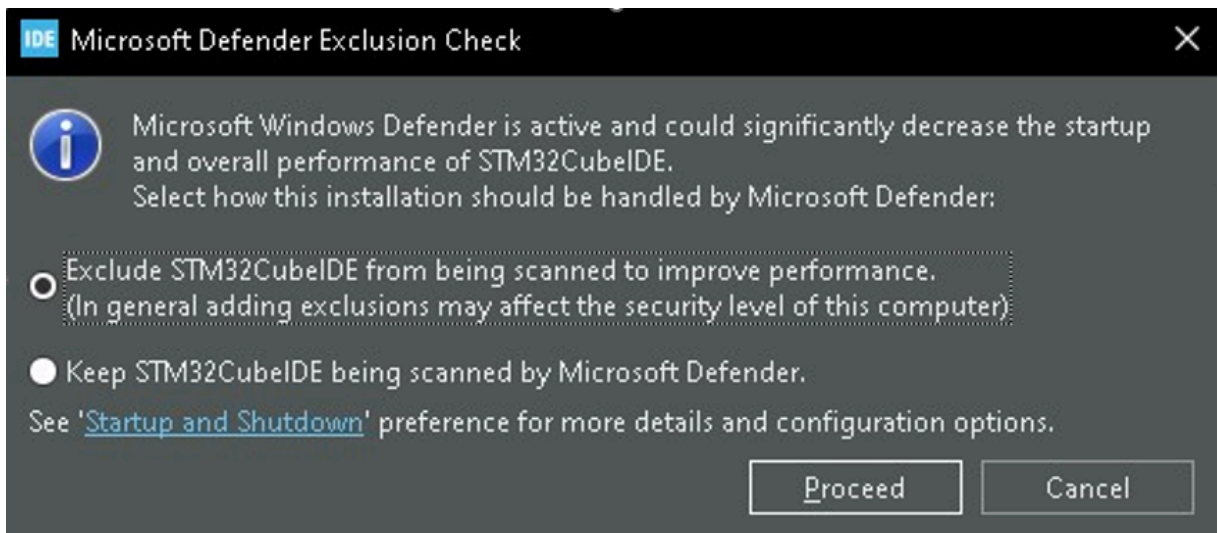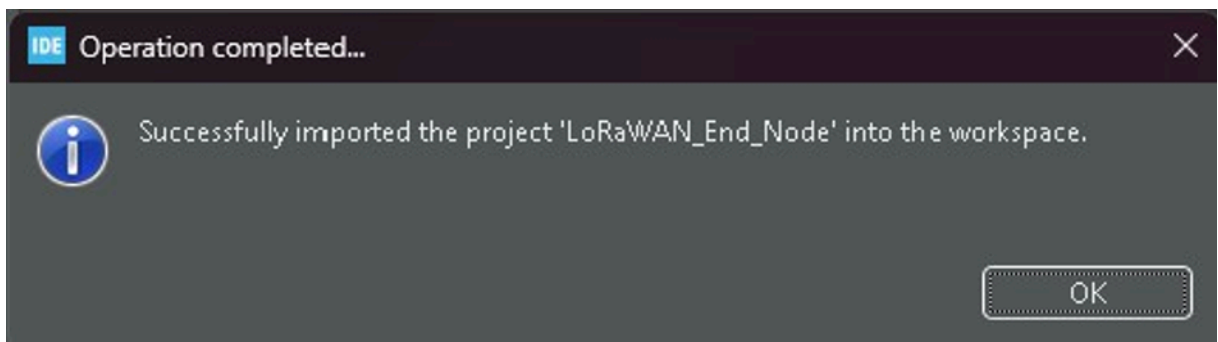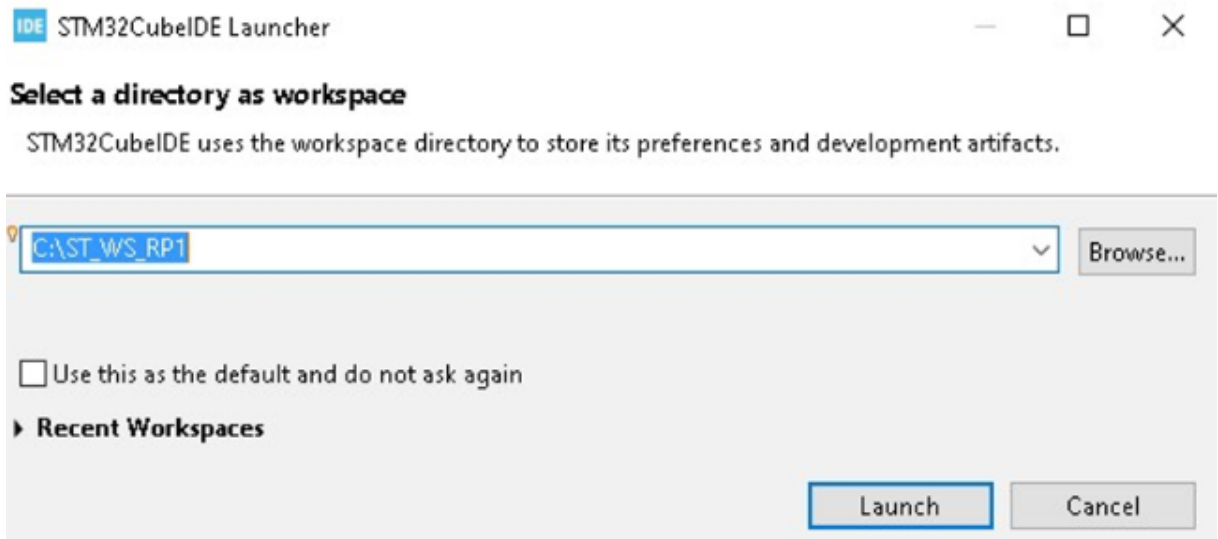

- Compila el proyecto sin errores:

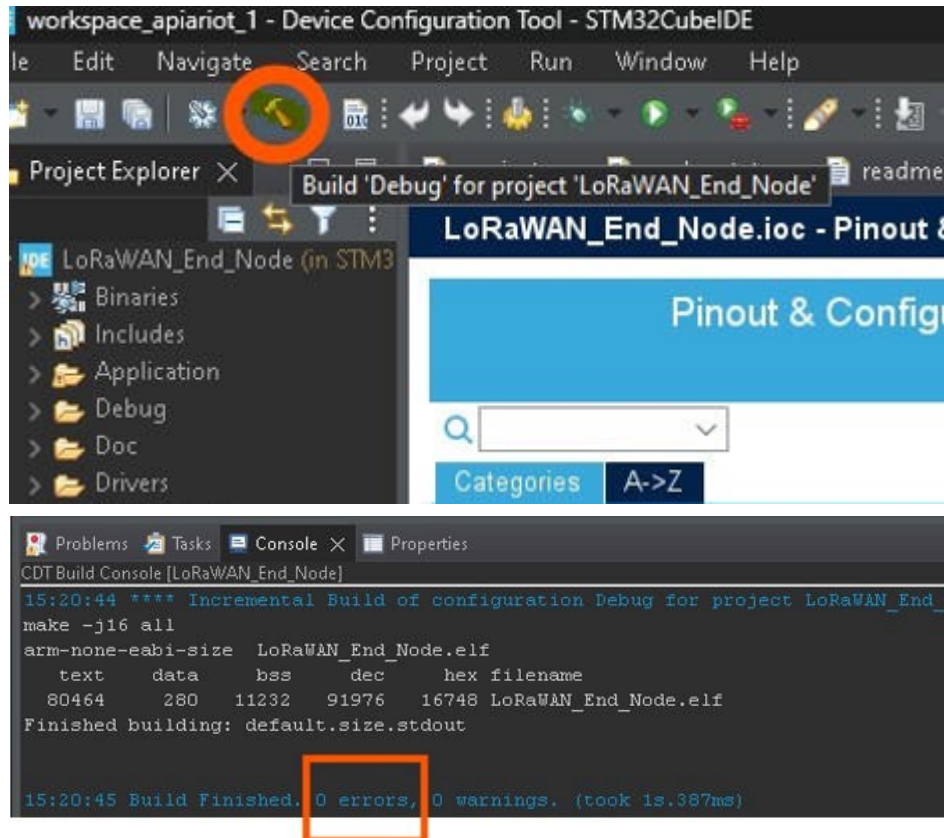

Cambio de código de programación


- Activa la “Low Power Payload” de Cayenne:
- Descomente `/*#define CAYENNE_LPP` en `lora_app.h`*/:

#define CAYENNE_LPP

`"C:\ST_WS_RP1\STM32Cube_FW_WL_V1.6.0\Projects\NUCLEO-WL55JC\Applications\LoRaWAN\LoRaWAN_End_Node_LBM\LoRaWANApp\lora_app.h"`

Un aviso: Cayenne LPP es un formato de datos compacto para codificar datos de sensores para LoRaWAN. Puede encontrar más información en este enlace:

[¿Cuál es “Cayenne Low Power Payload”? 🤔👉](#)


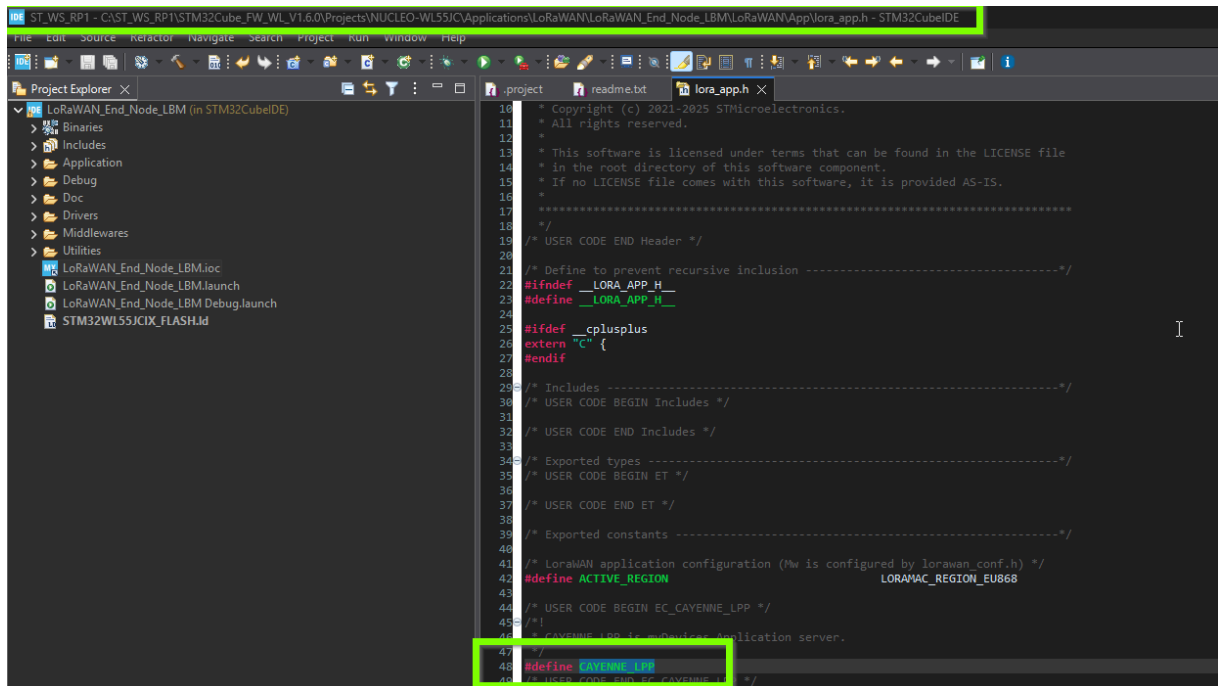


The screenshot shows an IDE window with the file `lora_app.h` open. The Project Explorer on the left shows the project structure for `LoRaWAN_End_Node_LBM`. The main editor displays the code of `lora_app.h`, which includes a copyright notice and various configuration macros. The line `#define CAYENNE_LPP` is highlighted with a green box, indicating it has been uncommented. The code also shows the definition of `ACTIVE_REGION` as `LORAMAC_REGION_EU868`.


```
10  * Copyright (c) 2021-2025 STMicroelectronics.
11  * All rights reserved.
12  *
13  * This software is licensed under terms that can be found in the LICENSE file
14  * in the root directory of this software component.
15  * If no LICENSE file comes with this software, it is provided AS-IS.
16  *
17  * =====
18  */
19  /* USER CODE END Header */
20
21  /* Define to prevent recursive inclusion -----*/
22  #ifndef LORA_APP_H
23  #define LORA_APP_H
24
25  #ifdef __cplusplus
26  extern "C" {
27  #endif
28
29  /* Includes -----*/
30  /* USER CODE BEGIN Includes */
31
32  /* USER CODE END Includes */
33
34  /* Exported types -----*/
35  /* USER CODE BEGIN ET */
36
37  /* USER CODE END ET */
38
39  /* Exported constants -----*/
40
41  /* LoRaWAN application configuration (Mw is configured by lorawan_conf.h) */
42  #define ACTIVE_REGION LORAMAC_REGION_EU868
43
44  /* USER CODE BEGIN EC_CAYENNE_LPP */
45  /*
46  * CAYENNE_LPP is a Cayenne application server.
47  */
48  #define CAYENNE_LPP
49  /* USER CODE END EC_CAYENNE_LPP */
```

Configuración de la Placa


- Crea una nueva configuración para la placa de desarrollo.

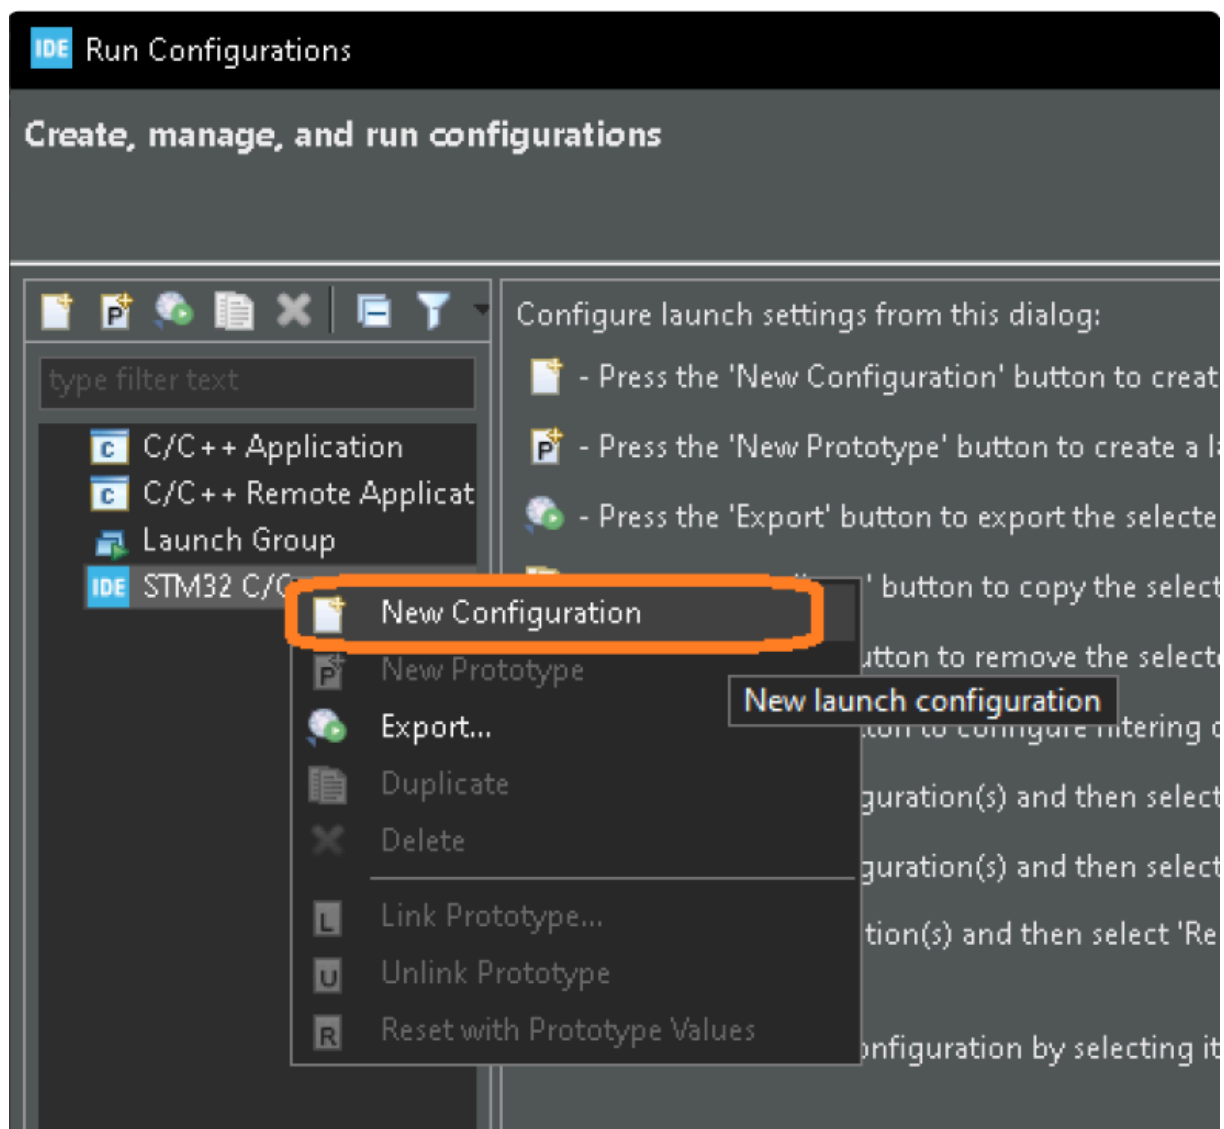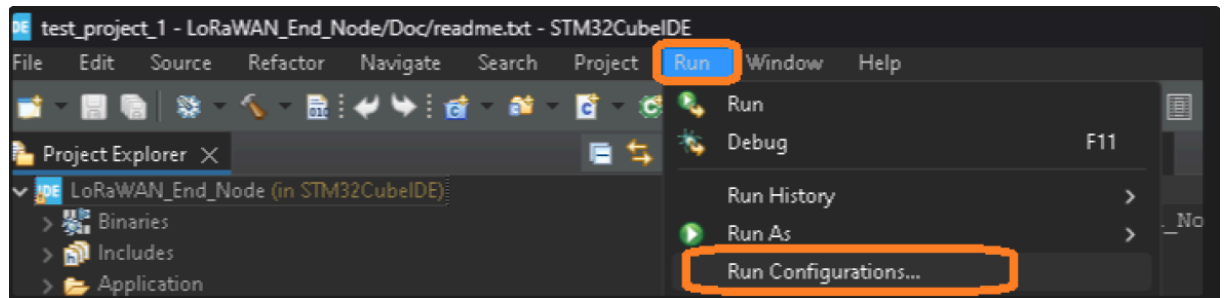


- Nombra tu placa NUCLEO-STIM32WL55

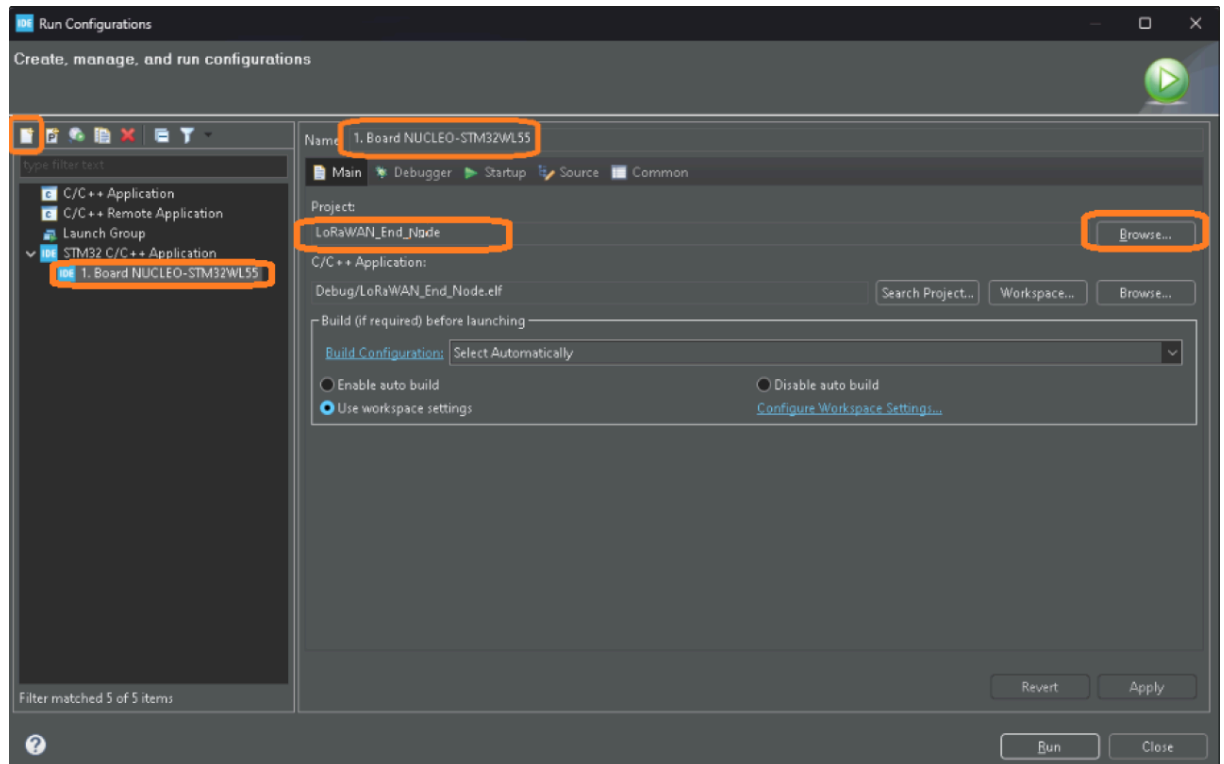


- Agrega en "Initialization Commands" el siguiente comando:
"monitor flash borrado masivo"

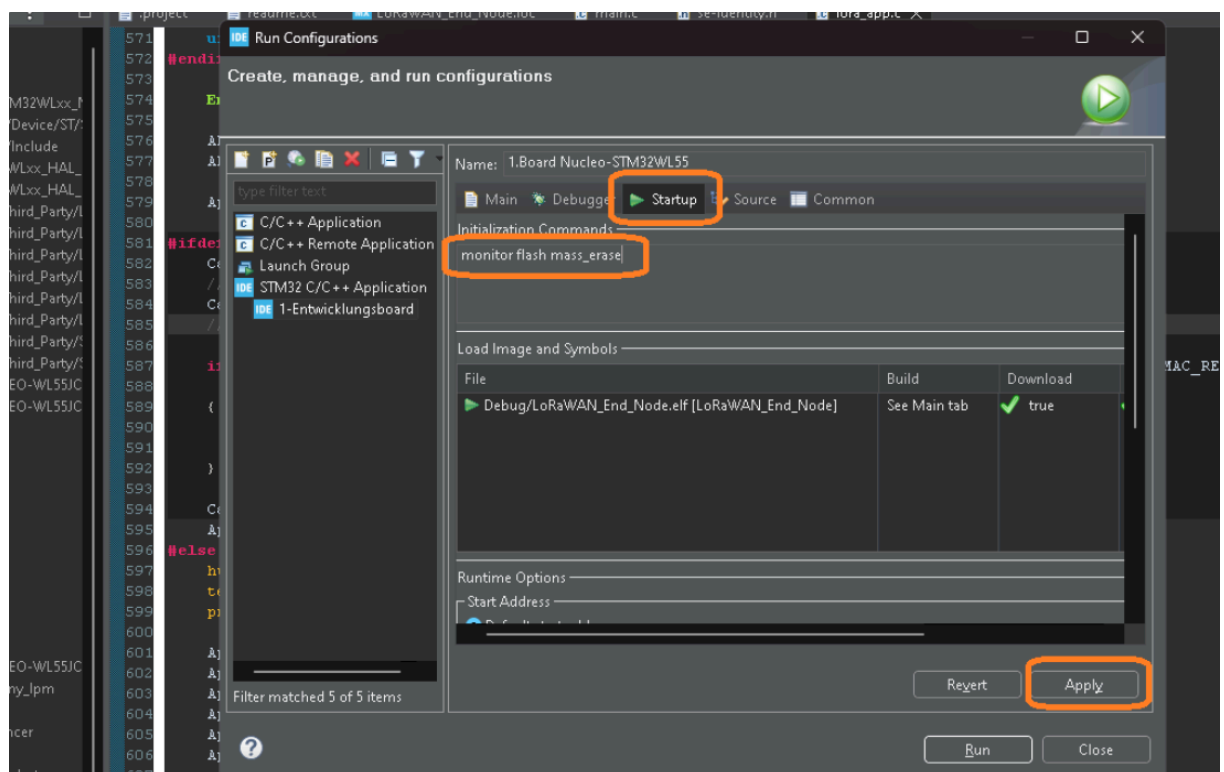

- Conecte la placa de desarrollo al PC mediante USB.

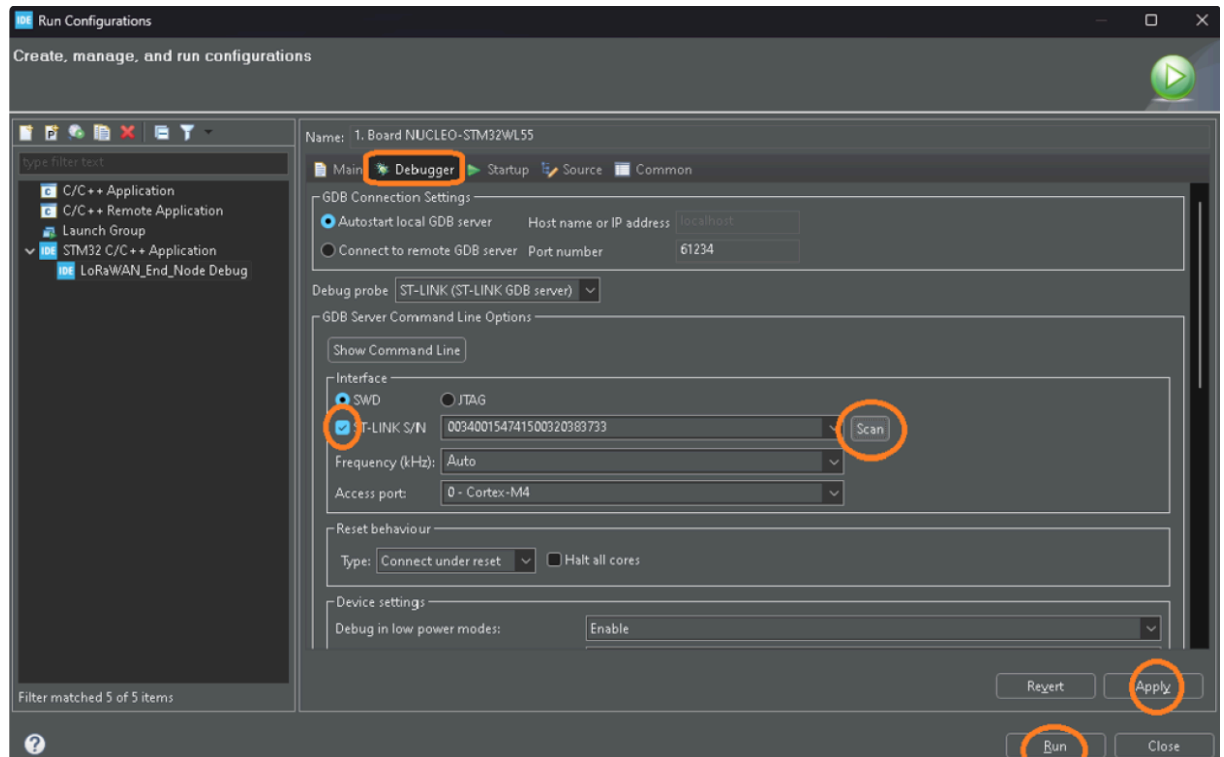


- Guardar la configuración

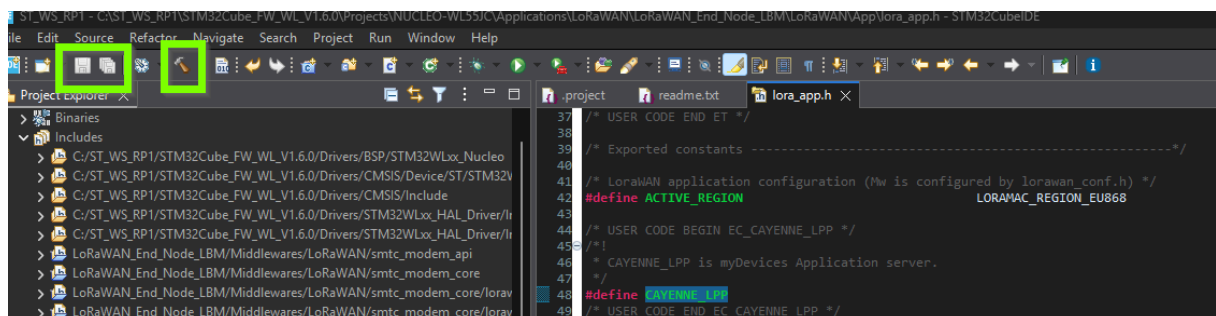



El “The Thing Network” (TTN) / “Stacks”

- [Crear](#) una cuenta para acceder a “[The things network](#)”.
- Seleccione el clúster Europa 1 (para Suiza)

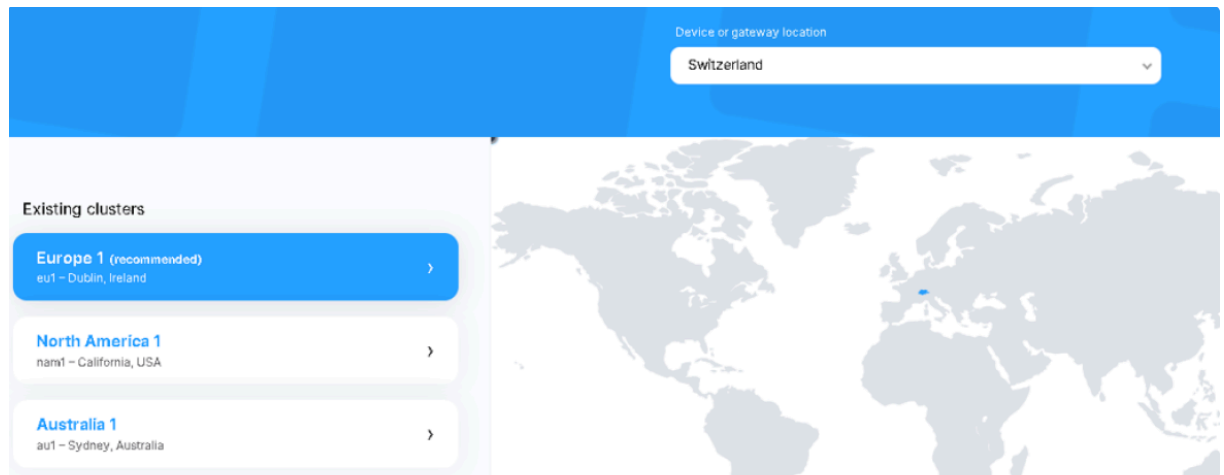

Cluster Für die Schweiz: Europe 1

- Crear una aplicación

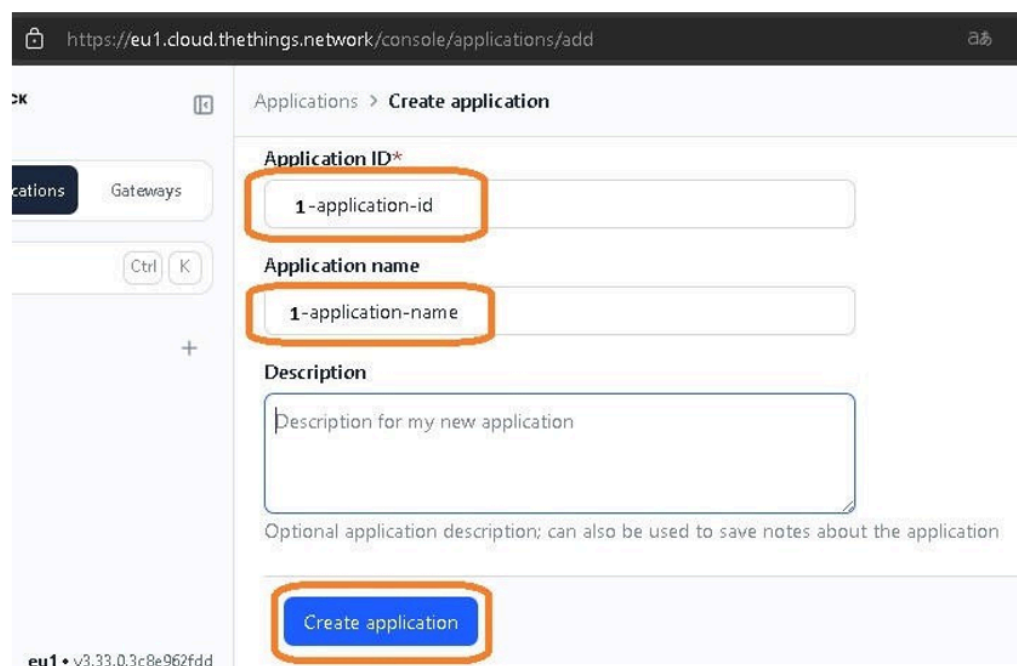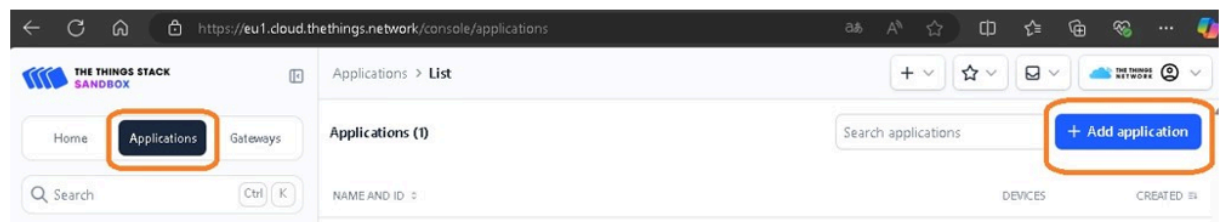

Create application

Within applications, you can register and manage end devices and their network data. After setting up your device fleet, use one of our many integration options to pass relevant data to your external services.

Learn more in our guide on [Adding Applications](#).

Application ID*

my-application-1-test

Application name

my application 1 test

Description

Description for my new application

Optional application description; can also be used to save notes about the application

Application properties

Labels


Select...



Add a label or [create one](#) to categorize your applications

Create application

- Registra el "end device".

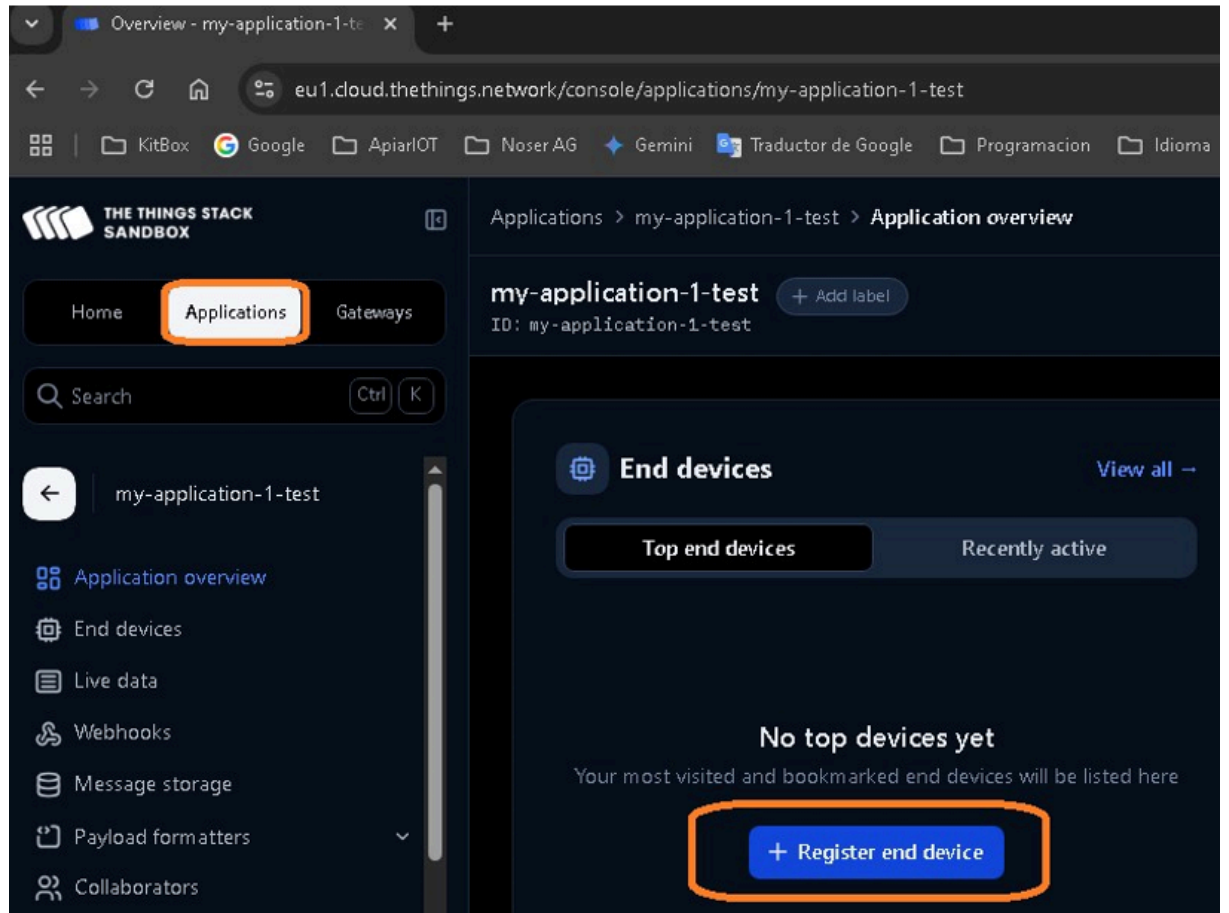

- Tipo de "end device", Marca del "end device", Modelo, Versión de hardware, Versión de firmware, Región del perfil, Plan de frecuencia

Register end device

Does your end device have a LoRaWAN® Device Identification QR Code? Scan it to speed up onboarding.

 Scan end device QR code

 [Device registration help](#)

End device type

Input method

☒ Select the end device in the LoRaWAN Device Repository

☐ Enter end device specifics manually

End device brand  *

STMicroelectronic...

Model  *

NUCLEO-WL55J...

Hardware Ver.  *

1.0

Firmware Ver.  *

LoRaWA...

Profile (Region) *

EU_863_870

NUCLEO-WL55JC1

LoRaWAN Specification 1.0.3, RP001 Regional Parameter (OTAA), Class A



The STMicroelectronics NUCLEO-WL55JC1 is a development board based on the STM32WL55JC microcontroller that comes with a built-in temperature sensor. The NUCLEO-WL55JC1 board supports a wide choice of Integrated Development Environments (IDE) and an expansion connector for Arduino UNO V3. Suitable for rapid prototyping by adding sensors and actuators.

[Product website](#) | [Data sheet](#)

LoRaWAN_End_v1.0.0

LoRaWAN_End_N v1.1.0

LoRaWAN_End_N v1.2.0

Other...

Frequency plan  *

Europe 863-870 MHz (SF9 for RX2 - recommended)

- Buscar la información en "LoRaWAN commissioning"

The screenshot displays the LoRaWAN provisioning interface. On the left, the 'Provisioning information' section contains fields for JoinEUI (00.80.E1.15.05.00.D7.53), DevEUI (11.11.11.11.11.11.11.11), AppKey (22.22.22.22.22.22.22.22.22.22.22.22.22.22.22.22), and End device ID (device-3-d87e). Below these are 'Device properties' and 'After registration' options. On the right, the 'LoRaWAN Mode and Configuration' section shows a list of parameters: LoRaWAN device EUI (11.11.11.11.11.11.11.11), AppJoin EUI (00.80.E1.15.05.00.D7.53), Application key (22.22.22.22.22.22.22.22.22.22.22.22.22.22.22.22), Network key (00.00.00.00.00.00.00.00.00.00.00.00.00.00.00.00), Device Address (00.00.00.00), Network session key (00.80.E1.15.00.0A.D8.7E.00.80...), Application session key (00.80.E1.15.00.0A.D8.7E.00.80...), and LoRaWAN application settings (LoRaWAN commissioning, LoRaWAN middleware, LoRaWAN application). The 'LoRaWAN application' section is currently selected, showing 'Enable Key read access' checked.

Applications > my-application-1-test > End devices > mdfsfdfsf > Device overview

mdfsdfsf ID: mdfsfdfsf + Add label No activity yet • ↑↓ n/a up / n/a down

Device overview Live data Messaging Location Payload formatters **Settings**

End device info

Device repository →



NUCLEO-WL55JC1
STMicroelectronics International NV

Device website Data sheet

Light Pressure Temperature Humidity

Latest decoded payload

See in live data →

No recent activity
There haven't been any uplinks recently in this application

device-3-d87e ID: device-3-d87e + Add label No activity yet • ↑↓ n/a up / n/a down

Network layer

LoRaWAN network-layer settings, behavior and session

Frequency plan ⓘ *

Europe 863-870 MHz (SF9 for RX2 - recommended) | ▾

LoRaWAN version ⓘ *

LoRaWAN Specification 1.0.1 | ▾

Regional Parameters version ⓘ *

TS001 Technical Specification 1.0.1 | ▾

LoRaWAN class capabilities ⓘ

☐ Supports class B

☐ Supports class C

Activation mode ⓘ *

☒ Over the air activation (OTAA)

☐ Activation by personalization (ABP)

☐ Define multicast group (ABP & Multicast)



Session and MAC state reset ⓘ

Reset session and MAC state


Advanced MAC settings ▾

Save changes

- Configure el "Uplink" y el "Downlink" para la "Payload del "End-device".

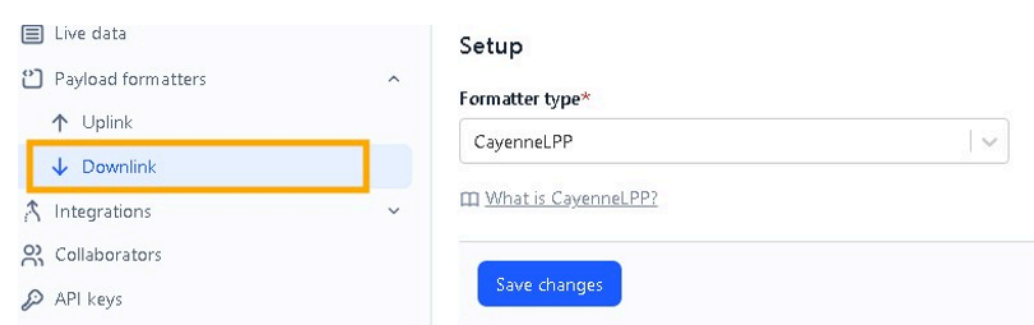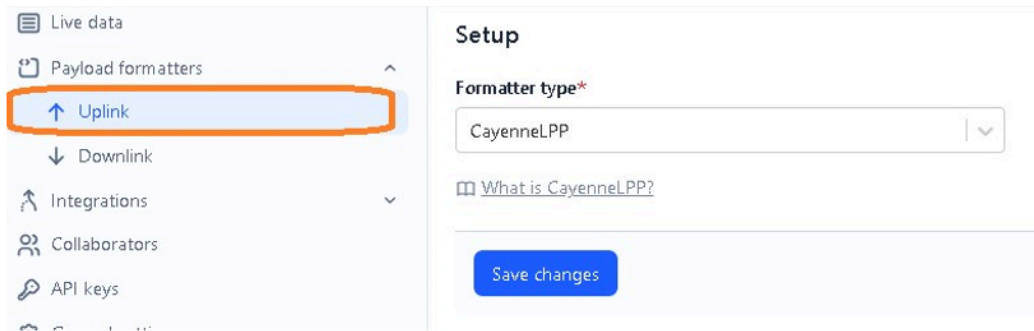

- Sube el programa al tablero.


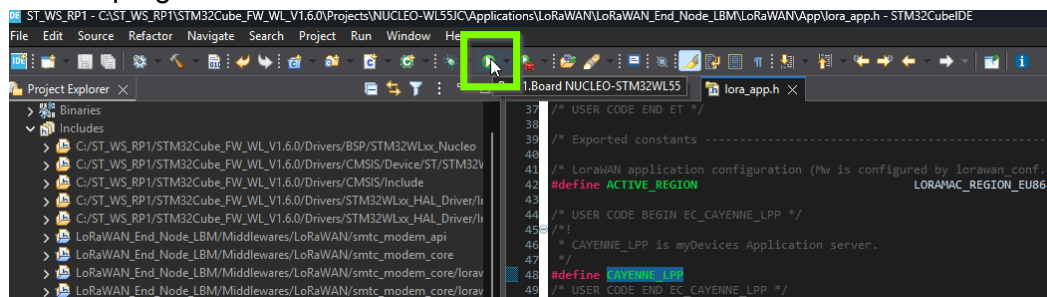


- Compruebe si TTN está recibiendo los datos; de ser así, apague la placa de desarrollo.

TIME	TYPE	DATA PREVIEW	Verbose stream	Export as JSON	Settings
13:37:52	Forward uplink data message	DevAddr: 26 00 FC AF Payload: { battery_voltage: [-], humidity: [-], light: [-], pressure: [-], temperature: [-] } 00 73 27 10 01 67 01 04 02 68 64...			
13:37:52	Successfully processed data message	DevAddr: 26 00 FC AF			
13:37:41	Forward uplink data message	DevAddr: 26 00 FC AF Payload: { battery_voltage: [-], humidity: [-], light: [-], pressure: [-], temperature: [-] } 00 73 27 10 01 67 00 FA 02 68 64...			
13:37:41	Successfully processed data message	DevAddr: 26 00 FC AF			
13:37:33	Forward uplink data message	DevAddr: 26 00 FC AF Payload: { battery_voltage: [-], humidity: [-], light: [-], pressure: [-], temperature: [-] } 00 73 27 10 01 67 01 04 02 68 64...			
13:37:33	Successfully processed data message	DevAddr: 26 00 FC AF			
13:37:26	Forward uplink data message	DevAddr: 26 00 FC AF Payload: { battery_voltage: [-], humidity: [-], light: [-], pressure: [-], temperature: [-] } 00 73 27 10 01 67 01 04 02 68 64...			
13:37:26	Successfully processed data message	DevAddr: 26 00 FC AF			
13:37:16	Forward uplink data message	DevAddr: 26 00 FC AF Payload: { battery_voltage: [-], humidity: [-], light: [-], pressure: [-], temperature: [-] } 00 73 27 10 01 67 00 FA 02 68 64...			
13:37:16	Successfully processed data message	DevAddr: 26 00 FC AF			
13:37:09	Forward uplink data message	DevAddr: 26 00 FC AF Payload: { battery_voltage: [-], humidity: [-], light: [-], pressure: [-], temperature: [-] } 00 73 27 10 01 67 00 FA 02 68 64...			
13:37:09	Successfully processed data message	DevAddr: 26 00 FC AF			

Reenvío de enlace ascendente desde TTN a Datacake

- Configurar webhooks

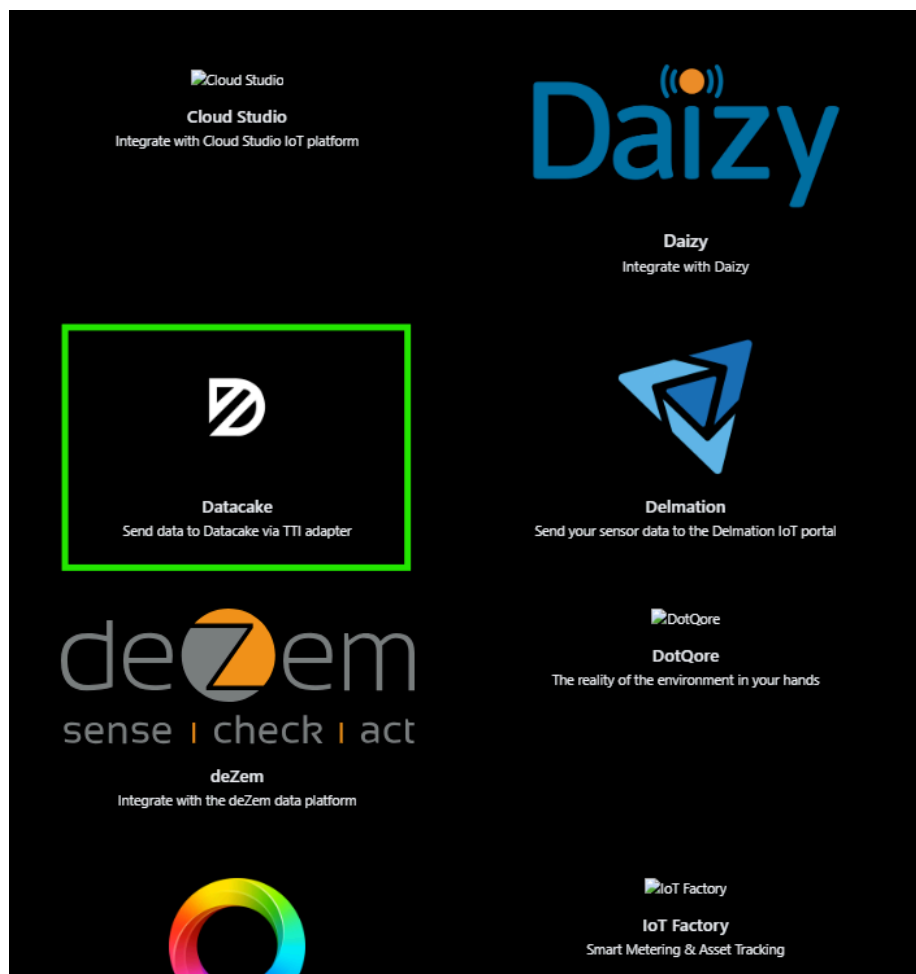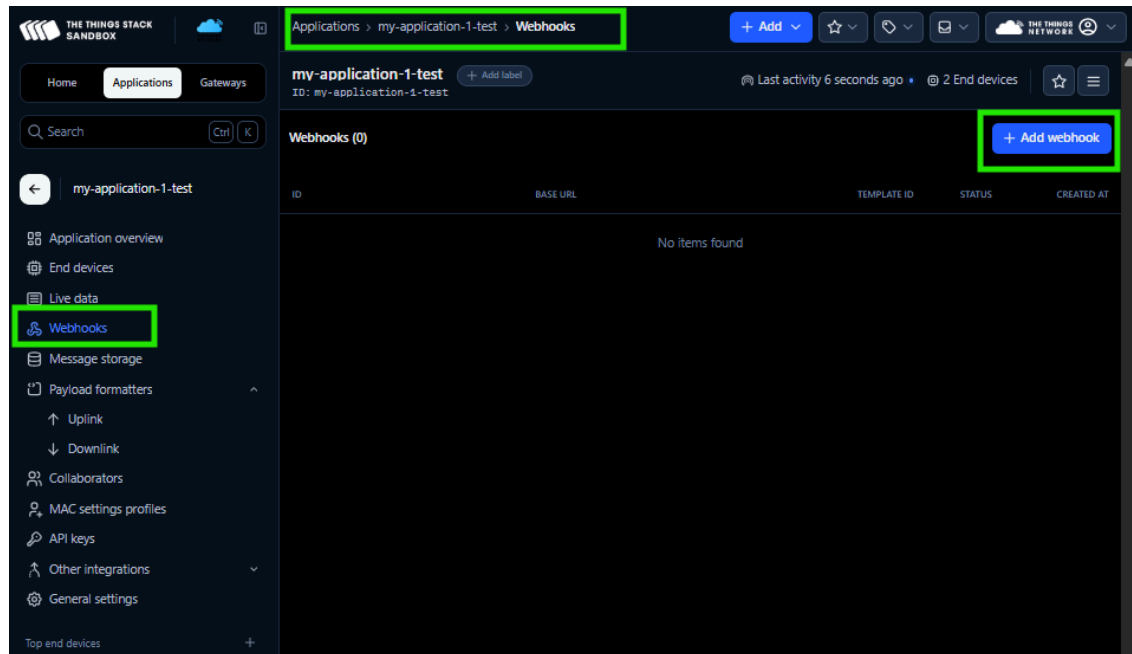

The screenshot shows the 'my-application-1-test' configuration page in the Things Stack Sandbox. The left sidebar contains navigation links: Home, Applications, Gateways, Search, my-application-1-test, Application overview, End devices, Live data, Webhooks, Message storage, Payload formatters, Uplink, Downlink, Collaborators, MAC settings profiles, API keys, Other integrations, and General settings. The main content area is titled 'my-application-1-test' and shows the 'Webhooks' section. The 'Setup webhook for Datacake' form includes a 'Webhook ID' field with the value 'my-new-datacake-webhook-1' and a 'Token' field, which is highlighted with a red rectangle. Below the 'Token' field is a 'Datacake API Token' label and a 'Create Datacake webhook' button.

Applications > my-application-1-test > Webhooks > Add > Datacake

my-application-1-test
ID: my-application-1-test

Setup webhook for Datacake
Send data to Datacake via TTI adapter
[About Datacake](#)

Webhook ID *

my-new-datacake-webhook-1

Token *

Datacake API Token

Create Datacake webhook

- Primero necesitas una cuenta de Datacake para obtener el token.
- Crea tu cuenta en [Datacake](#).

- Y añade un "Usuario de API".

The screenshot shows the Datacake Administration interface. On the left is a sidebar with navigation options: Add Dashboard, Devices (All Devices, Manage Folders), Workspace (Gateways, Reports, Exports, Members, Rule Engine, Zones, Workspace, Integrations). The main content area is titled 'Members' and has tabs for 'In Workspace', 'Invited', and 'API Users'. The 'API Users' tab is selected. In the top right corner, there is a blue button labeled 'Add API User' which is highlighted with a green rectangle. Below the tabs, there is a table titled 'API Users' with columns: API USER, API KEY, and PERMISSIONS. The table contains two entries: 'usuario API Apiarior' and 'api-user-test-1'. Each entry has a 'Copy' and 'Show' button for the API key, and a list of permissions (Basics, Members, Devices, +7 for the first user; Devices for the second).

API USER	API KEY	PERMISSIONS
U usuario API Apiarior API	***** Copy Show	Basics Members Devices +7
A api-user-test-1 API	***** Copy Show	Devices

Add API User



Name *

api-user-test-1

Workspace Permissions

☒ Select All

☐ Basics

Can manage basics like name and logo

☐ Cake Red

Can manage and view Cake Red

☐ Rules

Can manage rules

☐ Reports

Can manage reports

☐ Zones

Can manage zones

☐ Members

Can manage members

☒ Devices

Can add / remove devices

☐ Gateways

Can manage gateways

☐ Dashboards

Can manage dashboards

☐ Exports

Can manage exports

Device Permissions

All devices in workspace



☒ Can view the device and its data

☐ Can edit device metadata

☐ Can edit the device definition

☒ Can record measurements

Add individual device permission

Search

Device name

Filter by tags

Match at least one tag



Search tags...

Cancel

Add API User

- Copia el token para TTN

The screenshot shows the Datacake Administration interface. On the left is a sidebar with navigation links: Add Dashboard, Devices (All Devices, Manage Folders), Workspace (Gateways, Reports, Exports, Members, Rule Engine, Zones, Workspace, Integrations), Organization (Overview, Billing, Administrators, Add White Label Site), and Account (Account Settings). The main content area is titled 'Members' and has tabs for 'In Workspace', 'Invited', and 'API Users'. The 'API Users' tab is selected. It displays a table with columns 'API USER', 'API KEY', and 'PERMISSIONS'. There are two rows: one for 'usuario API Apiarlot' and another for 'api-user-test-1'. The 'API KEY' for 'api-user-test-1' is masked with asterisks, and the 'Copy' button next to it is highlighted with a green box. The 'PERMISSIONS' for 'api-user-test-1' are listed as 'Devices'.

- Ya tienes el token para TTN.

The screenshot shows the Datacake 'Setup webhook for Datacake' page. The breadcrumb trail is 'Applications > my-application-1-test > Webhooks > Add > Datacake'. The page title is 'my-application-1-test' with ID 'my-application-1-test'. The main heading is 'Setup webhook for Datacake' with the subtitle 'Send data to Datacake via TTI adapter' and a link 'About Datacake |'. There are two input fields: 'Webhook ID' with the value 'my-new-datacake-webhook-1' and 'Token' which is empty and highlighted with a green box. Below the 'Token' field is the text 'Datacake API Token'. At the bottom is a blue button labeled 'Create Datacake webhook'.

- Agrega tu dispositivo ahora en Datacake.

The screenshot displays the Datacake web interface. On the left is a sidebar with the user profile 'apiariot eemq@live.com' and various navigation links including 'Add Dashboard', 'Devices', 'Workspace', 'Organization', and 'Account'. The 'Devices' section is active. The main content area is titled 'Fleet > Devices' and features a search bar, a 'Columns' dropdown, and a blue '+ Add Device' button highlighted with a green box. Below these are tabs for 'Overview', 'List', 'Grid', and 'Map'. A table with headers 'DEVICE', 'PRIMARY', 'SECONDARY', 'DEVICE SIGNAL', and 'DEVICE BATTERY' is shown, but it is empty. A message states: 'There are no devices in your workspace, yet. Start by adding your first device using the button above.' At the bottom, it says 'Showing 0 to 0 of 0 results' with a '50 per page' dropdown and a 'Previous' button.

Add Device

You have 4 devices left in your plan. ✕

First, choose the connectivity type of your device.

- ☒  **LoRaWAN**
Choose from 15 LoRaWAN networks
- ☐  **API**
Generic API device with support for MQTT and HTTP connectivity
- ☐  **Pincode Claiming**
Claim an existing device by pincode
- ☐  **Dragino NB-IoT**
Connect Dragino NB-IoT devices
- ☐  **1NCE**
Connect 1NCE devices

Next

- Utilice el servidor de red: eu1.cloud.thethings.network (Suiza)

Add LoRaWAN Device

You have 4 devices left in your plan. X

STEP 1
Product

STEP 2
Network Server

STEP 3
Devices

STEP 4
Plan

Datacake Product

You can add devices to an existing product on Datacake, create a new empty product or start with one of the templates. Products allow you to share the same configuration (fields, dashboard and more) between devices.

New Product from template

Create new product from a template

Existing Product

Add devices to an existing product

New Product

Create new empty product

Device Template

Datacake supports LoRaWAN devices from different manufacturers out of the box without complex configuration and setup.

caye

All Manufacturers

Cayenne LPP Starting Template

Datacake

Datacake

Back

Next

SCHRITT 1
Produkt

SCHRITT 2
Netzwerk-Server

SCHRITT 3
Geräte

SCHRITT 4
Plan

Netzwerk-Server

Bitte wählen Sie den LoRaWAN Network Server, mit dem Ihre Geräte verbunden sind.

☐		Datacake LNS AUTOMATIC SETUP Einfach starten und skalieren mit einem verwalteten LNS	Uplinks	Downlinks
☒		The Things Stack V3 TTN V3 / Things Industries	Uplinks	Downlinks
☐		netmore ThingPark	Uplinks	Downlinks
☐		KPN	Uplinks	Downlinks
☐		LORIOT	Uplinks	Downlinks
☐		ChirpStack	Uplinks	Downlinks
☐		Helium Verwenden Sie Ihre eigene Konsole	Uplinks	Downlinks
Anzeigen von 1 bis 6 von 14 Ergebnissen			Vorherige	Weiter

[Zurück](#)

[Weiter](#)

You have 5 devices left in your plan. ✕

Add LoRaWAN Device

STEP 1
Product

STEP 2
Network Server

STEP 3
Devices

STEP 4
Plan

Add Devices

Manual

Import from The Things Stack

Please provide one or multiple LoRaWAN device EUIs along with the corresponding names they should have on Datacake.

Alternatively, you can choose to upload a CSV file that contains the DevEUI, device Name, location, and a set of tags. For more information on how to format the file, please refer to [our documentation](#).

📎 Drag and drop a .csv file here or click to choose one

DEVEUI

NAME

LOCATION

TAGS



00 80 E1 15 05 00 D7 53

8 bytes

Name1

Location

Add tag

Ac

+ Add another device

Back

Next

You have 5 devices left in your plan. ✕

Add LoRaWAN Device

STEP 1
Product

STEP 2
Network Server

STEP 3
Devices

STEP 4
Plan

Your organization plan (5 / 5 remaining)

Free

7 days data retention
500 datapoints / day

Back

Add 1 device

- Vuelve a activar tu "End Node".

The screenshot shows the Datacake dashboard interface. On the left is a sidebar with navigation options: 'Add Dashboard', 'Devices' (with 'All Devices' selected), 'Manage Folders', 'Workspace' (containing 'Gateways', 'Reports', 'Exports', 'Members', 'Rule Engine', 'Zones', 'Workspace', 'Integrations'), and 'Organization'. The main panel is titled 'DATA CAKE' and 'Fleet > Devices'. It features a 'Devices' section with tabs for 'Overview', 'List', 'Grid', and 'Map'. The 'List' tab is active, displaying a table with columns 'DEVICE', 'PRIMARY', and 'SECONDARY'. A single device is listed with ID '00.80.E1.15.05.00.D7.53', which is highlighted with a green box. Below the table, it says 'Showing 1 to 1 of 1 results'.

DEVICE	PRIMARY	SECONDARY
00.80.E1.15.05.00.D7.53	N/A	N/A

This screenshot shows the configuration page for a specific device in the Datacake dashboard. The browser address bar displays 'app.datacake.de/apiariot/devices/d/a7b3b80b-1c1b-42d8-ac99-d23ef0f5ab4b/t/dashboard-0'. The sidebar is identical to the previous screenshot. The main panel shows the device's details: 'Fleet > 0080E115000AD87E', the device ID '00.80.E1.15.05.00.D7.53', 'Serial Number 0080E115000AD87E', and 'Last update Sun Sep 27, 2026 21:38:05 GMT+02:00'. Below this, there are tabs for 'Dashboard', 'History', 'Downlinks', 'Configuration' (highlighted with a green box), 'LoRaWAN', 'Debug', and 'Permissions'.

- Espere hasta que se reciban los datos.

apiariot
eemq@live.com

+ Add Dashboard

Devices

All Devices

Manage Folders

Workspace

Gateways

Reports

Exports

Members

Rule Engine

Zones

Workspace

Integrations

Organization

Overview

Billing

Administrators

+ Add White Label Site

Account

Account Settings

Support

Documentation

Changelog

Basic device settings and metadata

Product & Hardware

Product settings and hardware-specific configurations

Fields

Configure measurement fields and data structure

Integrations

Third-party connections and data exports

Danger Zone

Device deletion and destructive actions

+ Add Field

Fields

Fields describe the data the device will store.

Live data

NAME	IDENTIFIER	TYPE	ROLE / SEMANTIC	CURRENT VALUE	LAST UPDATE
Temperature Sensor 0	TEMPERATURE_SENSOR_0	Numeric		0 °C	1 minute ago
Analog Input 0	ANALOG_INPUT_0	Numeric		0	1 minute ago
GPS 1	GPS_1	Location	Location	0.000000, 0.000000	1 minute ago

Suggested Fields

The device's decoder returned fields that have not yet been created on the product. You can review and create them from here.

Delete All Suggestions

IDENTIFIER	GUESSED TYPE	FIRST SEEN	LAST SEEN	LAST VALUE
TEMPERATURE_SENSOR_1	Numeric	4 minutes ago	2 minutes ago	22
HUMIDITY_2	Numeric	4 minutes ago	2 minutes ago	50
BAROMETER_0	Numeric	4 minutes ago	2 minutes ago	1.000

Configuration Fields

Configuration fields hold a static value and can have a product-wide default value, that can be overwritten on a device level. They can be accessed in decoders.

+ Add Configuration Field

NAME	IDENTIFIER	FIELD TYPE	DESCRIPTION	VALUE
------	------------	------------	-------------	-------

No fields have been created, yet

Create configuration fields to define configuration variables.

Add Field

Fields define the schema of the data the device stores.

Type

Numeric

Name

Temperature Sensor 1

Identifier

TEMPERATURE_SENSOR_1

The field identifier is a unique string that can consist of uppercase letters, numbers and underscores. Once a field has been created, the identifier can not be changed.

Unit

Optional

Role

None

Assign roles to highlight key measurement fields across the platform; each role is limited to one field per product.

Semantic

None

Assign semantic fields to standardize data across devices.

Formula

Optional


Formulas can be used to perform calculations on values from other fields. Fields that have a formula can not be written to from a decoder or via the API.

☐ Use Formula

Cancel

Add Field

- Ahora debería poder ver los datos de su placa de desarrollo en Datacake.

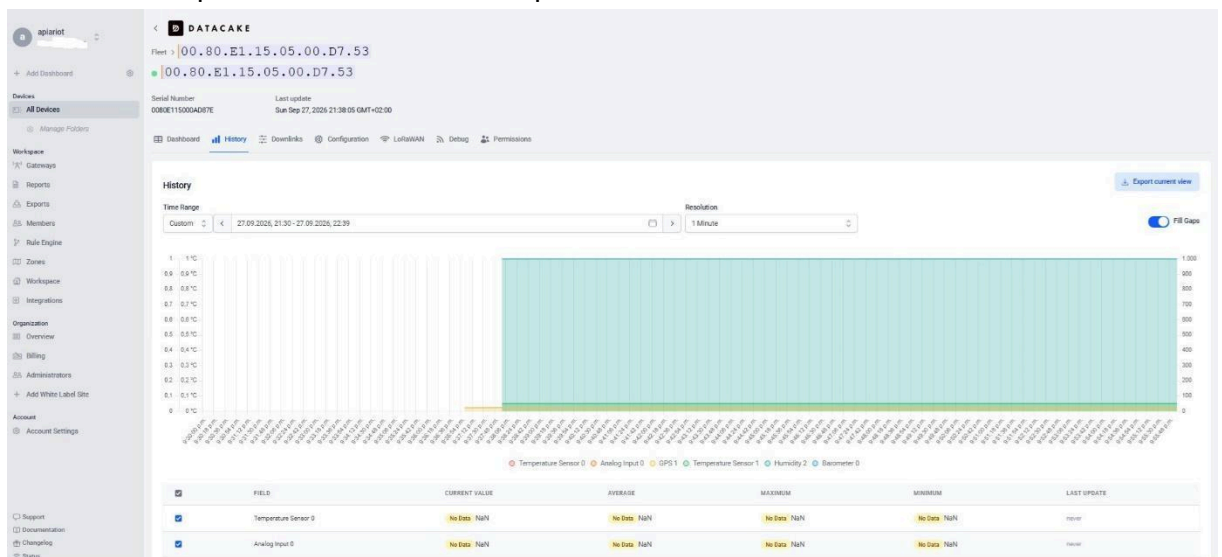

- Y también en TTN

The screenshot shows the TTN console interface for a device named 'device-3-d87e'. The 'Live data' tab is active, displaying a list of events. The events are as follows:

TIME	TYPE	DATA PREVIEW
15:39:06	Schedule data downlink for transmission	DevAddr: 26 08 C7 5C RxD Delay: 5
15:39:06	Forward uplink data message	DevAddr: 26 08 C7 5C Payload: { battery_voltage: [-], humidity: [-], light: [-], pressure: [-], temperature: [-] } 00 03 04 7C 01 67 00 0C 02 01 FE FPort: 2 Data rate: SF8BW12S SNR: 12 RSSI:
15:39:06	Successfully processed data message	DevAddr: 26 08 C7 5C
15:39:06	Schedule data downlink for transmission	DevAddr: 26 08 C7 5C RxD Delay: 5
15:39:06	Forward uplink data message	DevAddr: 26 08 C7 5C Payload: { battery_voltage: [-], humidity: [-], light: [-], pressure: [-], temperature: [-] } 00 03 04 7C 01 67 00 0C 02 01 FE FPort: 2 Data rate: SF12BW12S SNR: 9.8 RSSI:
15:39:06	Successfully processed data message	DevAddr: 26 08 C7 5C
15:39:40	Forward join-accept message	DevAddr: 26 08 C7 5C JoinEUI: 00 00 E1 15 05 30 FC 63 DevEUI: 00 00 E1 15 05 30 FC 63
15:39:39	Successfully processed join-request	DevAddr: 26 08 AB 2C JoinEUI: 00 00 E1 15 05 30 FC 63 DevEUI: 00 00 E1 15 05 30 FC 63
15:39:38	Accept join-request	DevAddr: 26 08 C7 5C JoinEUI: 00 00 E1 15 05 30 FC 63 DevEUI: 00 00 E1 15 05 30 FC 63

At the bottom of the console, a message states: 'Console: Events cleared'.