GEM OPERATION MANUAL (EQUIPMENT SIDE)

CONTENTS


1. HARDWARE CONNECTION DIAGRAM 1


2. COMMUNICATION PANEL 2

2-1. Control Tag 2

2-2-1. Send Message Tag 4

2-3. Process Program Tag 5


3. EQGUI FUNCTIONS 6

3-1. HSMS Parameters Tag 6

3-2. TOOL Tag 7



4. SETTING 11

4-1. Set Equipment IP Address 11

1. HARDWARE CONNECTION DIAGRAM


The hardware connection diagram of this GEM system (equipment side) is shown below:

PC TYPE 1 (MG605-01S)

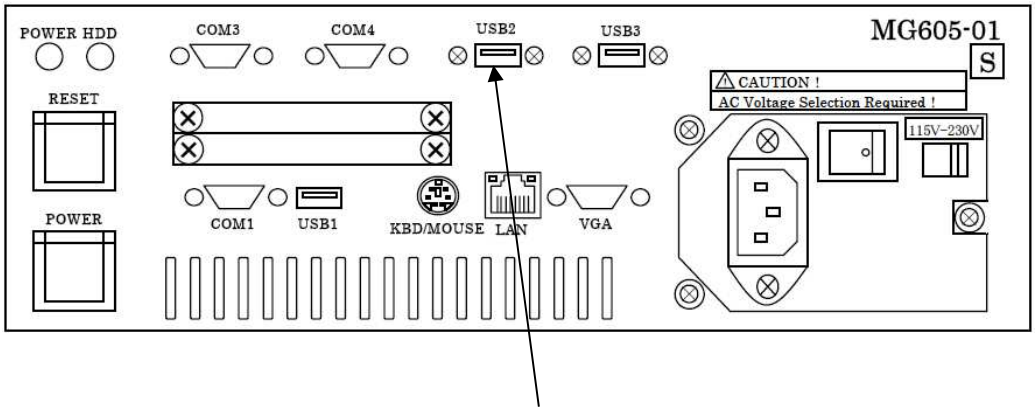

LAN Port（Use with GEM）
10BaseT/100BaseTX

PC TYPE 2 (MGD1N-Y1)

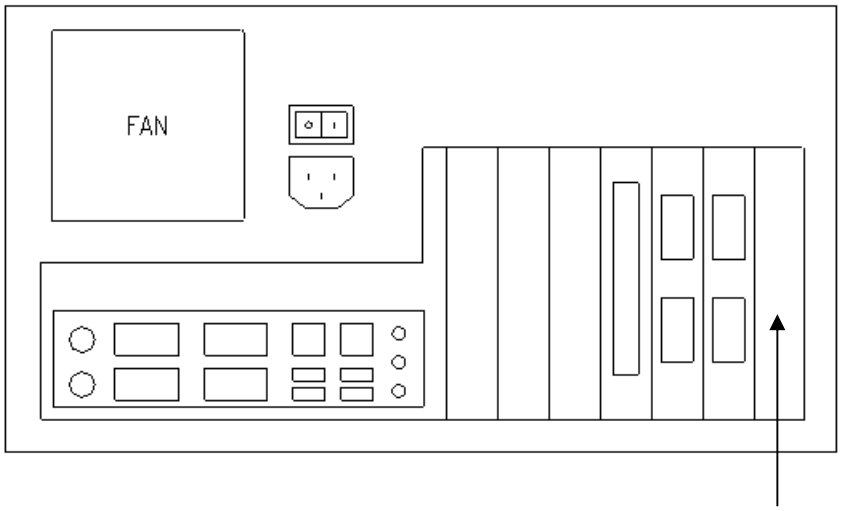


LAN Port（Use with GEM）
10BaseT/100BaseTX

2. COMMUNICATION PANEL

2-1. Control Tag

This panel is used for starting Host Communication Service and setting attributes.

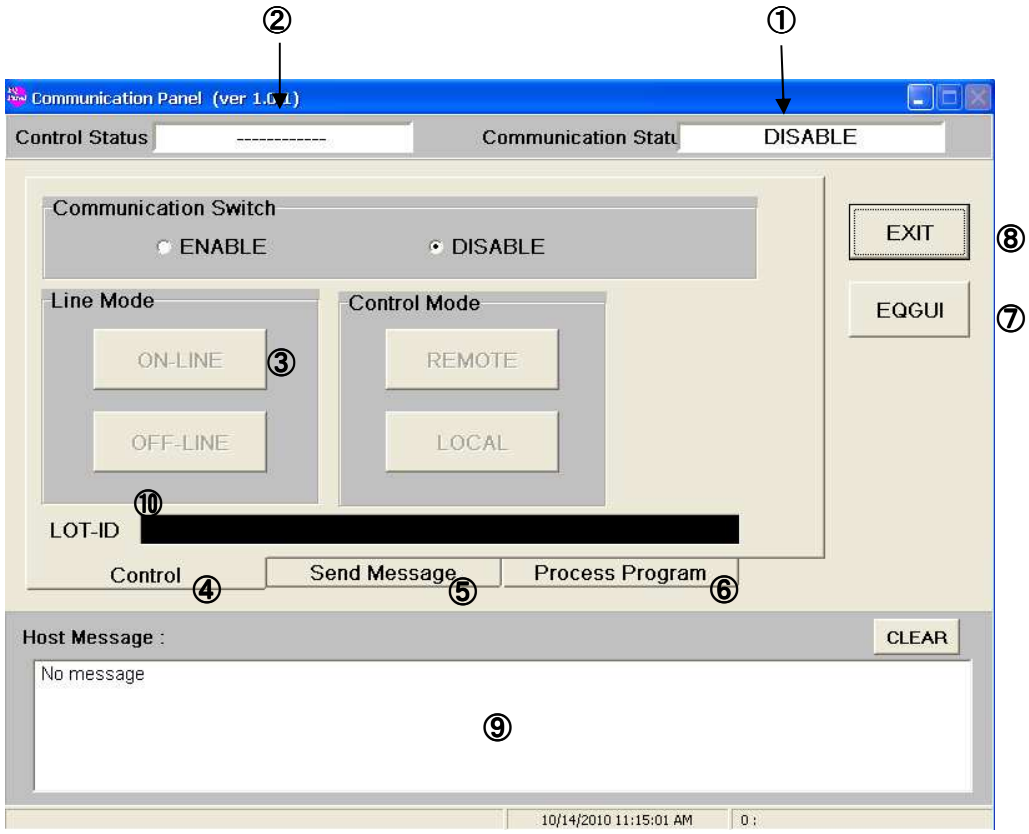

① Communication Status	（Details on next page）	Current control status is displayed.
② Control Status	（Details on next page）	Current communication status is displayed.
③ Control Status SW	ONLINE-REMOTE ONLINE-LOCAL EQUIPMENT-OFFLINE	Pushing on the letters of each item will change over to each control mode.
④ Control Tag	This window is displayed.	Pushing on the letter area will change over the operation panel.
⑤ Send Message Tag	Terminal service window is displayed.	
⑥ Process Program Tag	PP operation window is displayed.	
⑦ EQGUI	Explanation in Chapter 3	You carry out communication setting of HSMS here.
⑧ EXIT	End processing	Return to the menu.
⑨ HOST MESSAGE.	Receive Host Message	Upon receipt of a message from host computer, the following window will be displayed for verification of the contents. After verification, push the CLEAR button, and the window will be cleared.
⑩ LOT-ID	Use with LOT-ID Function. Lot-ID number is displayed.	

Communication Status	
Disable	Communication services disable status. If changed over to DISABLE in INCOM mode, all messages are deleted even during processing and all further operations for the running transaction are terminated.
Not Communicating	Error status. Data communication itself cannot be performed. Communication settings (EQGUI), communication hardware and cable check are required.
Communicating	Communication services enable status. SECS-II communication service functions in this status.


The following control status changes on condition that the communication status is "Communicating" / ENABLE status.

Control Status
Equipment-Off Line (Default)
No service is provided in this status. To start services, it is necessary to change to ONLINE status.
Attempt-On Line (OFF-LINE)
Changing to ONLINE status. (Although it is described as ONLINE, ONLINE is not established yet.) In the normal condition, ONLINE status is immediately attained. If the switch is changed over to OFFLINE in this status or unable to connect with host computer, it takes a while before the status is changed. (due to time-out setting)
Host-Off Line
This is the status that ONLINE is not permitted by host computer. It stands by in this status. Thereafter, host computer controls transition to ONLINE status.
On Line-Local
This is the mode that an operator directly controls the equipment. No restrictions are given to the equipment operation. During operation in this mode, alarm/event report/trace data report is sending to host computer. In this mode, terminal message panel service can also be executed.
On Line-Remote
This is the mode that host computer processes linked with the equipment. No restrictions are given to the equipment operation. During operation in this mode, alarm/event report/trace data report is sending to host computer. In this mode, terminal message panel service can also be executed.

2-2-1. Send Message Tag

This panel allows sending a message to host computer.


Maximum 7 send messages can be recorded. By pushing the SEND button for any line, the message on that line can be sent to host computer.

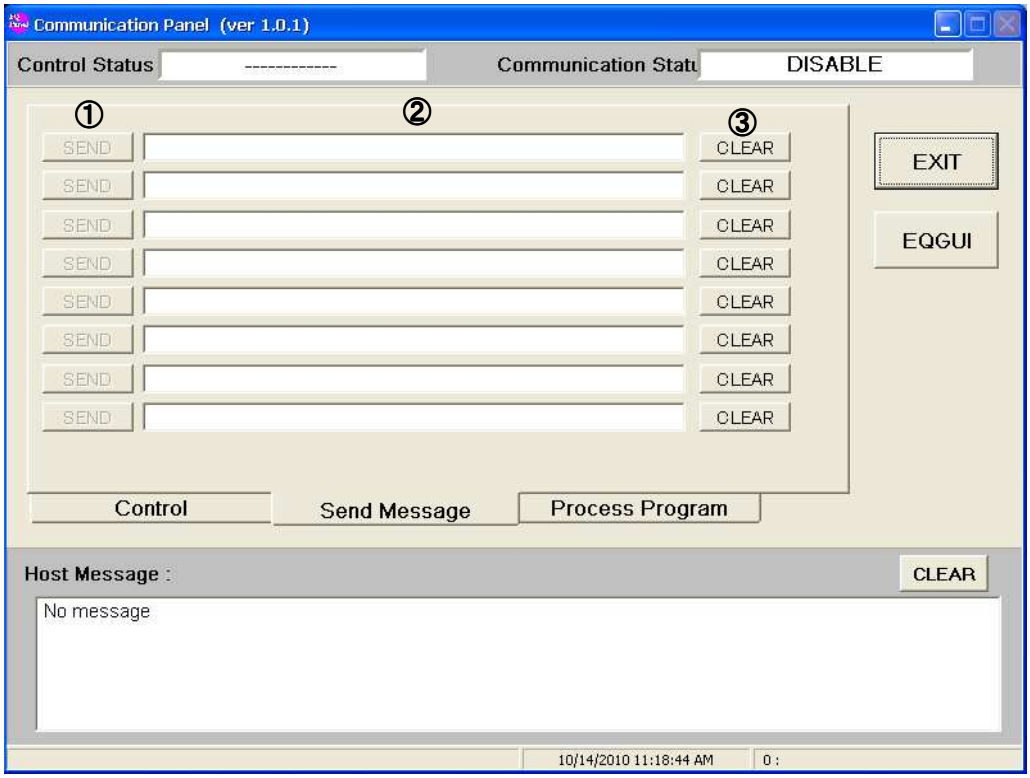

① "SEND" button	A recorded character string data is sent to host computer by pushing this button.
② Send Message Item	A character string is input and recorded with "Enter" key. (Max. 160 characters)
③ "CLEAR" button	A recorded character string is deleted.

2-3. Process Program Tag

The upload and download of Process Program are able to operate a manual from this screen.
(The mold data of an intelligent system is process program.)

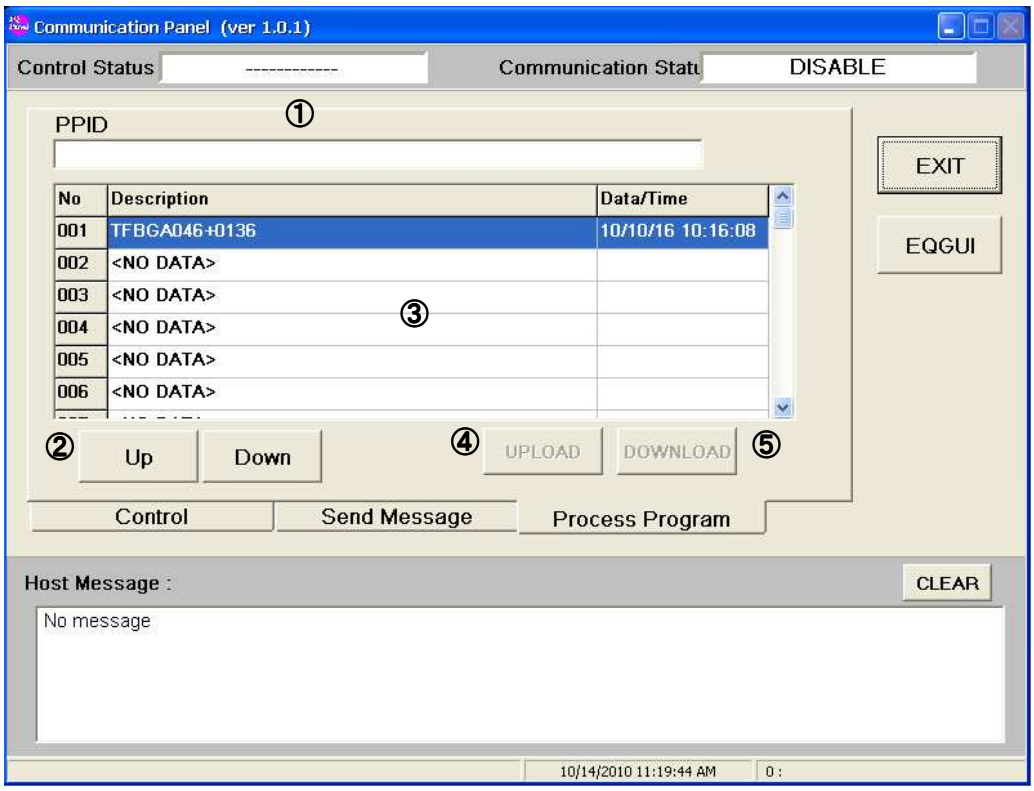

① "PPID" input item	Input PPID name that you want to upload or download.
② "Select" button	List of PPID that is recorded to Intelligent system is displayed.
③ Drop Down List	Choose PPID name from a list.
④ "UPLOAD" button	Upload PPID and PPBODY to a host with this button.
⑤ "DOWNLOAD" button	Download PPID and PPBODY from a host.

＊PPID：Save Item Name of Mold Data、PPBODY：Mold Data

About the action of download:

PPID that prepared newly does the record from the top with an order to the sky item of a listing.
If there is not the item of the sky in a listing processing becomes an error.
To the case that there is PPID of the same name already data is done a superscription.

3. EQGUI FUNCTIONS

3-1. HSMS Parameters Tag


Set up a HSMS communication parameter with "EQGUI" of "EQPanel".

Procedures:

① Push a "EQGUI" button, after " Protocol parameters " is opened.

② After start-up of "EQGUI", HSMS Parameters Tag Menu Set window is displayed.

The " HSMS Paramaters" will be operated according to the setting on this file from the next start-up. To make the setting enabled, start again.

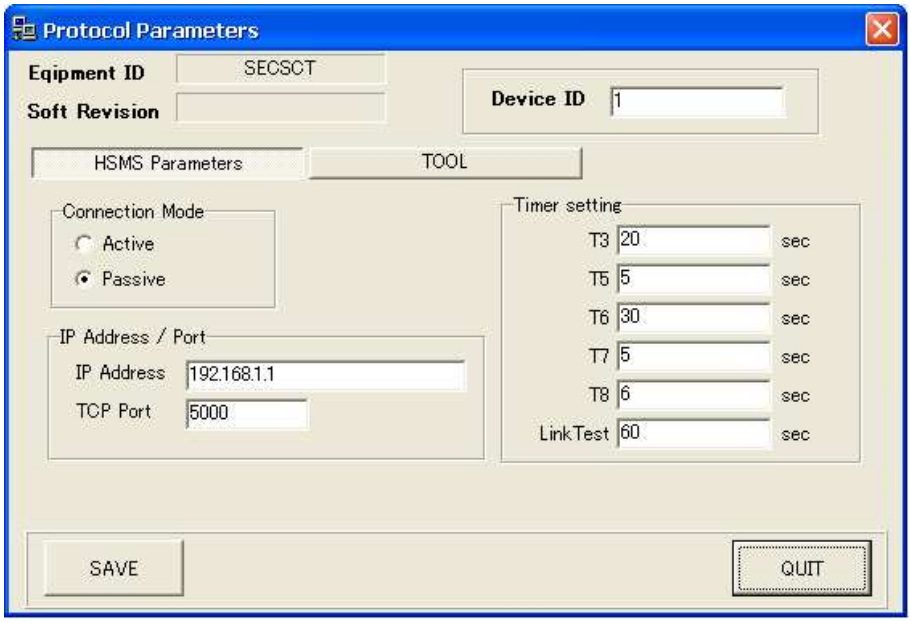

③ The left SET window will appear. After changing the parameters, push the "Save" button at the lower left.


④ Thereafter, push the SAVE button on each window, and the EQGUI will be terminated.
The "HSMS Paramaters" will be operated according to the setting on this file from the next start-up. To make the setting enabled, start again.

3-2. TOOL Tag

Procedures:

① Push a "EQGUI" button of left under part, after " Protocol Parameters " is opened.

② After Push TOOL Tag, TOOL Menu window is displayed.

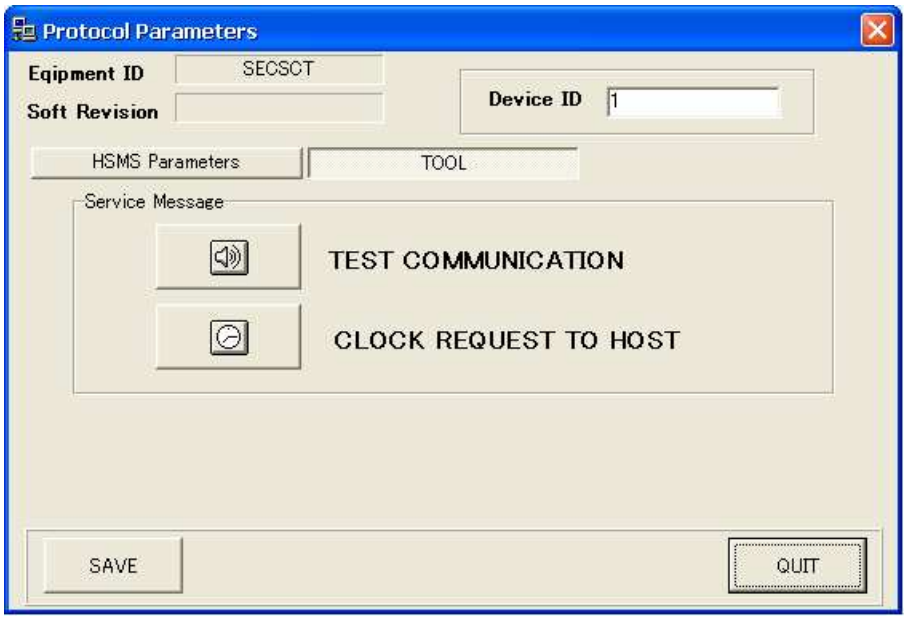

③ Can execute the following service by pushing a button of this menu.

TEST COMMUNICATION	Send S1F1 message to the host for communication test.
CLOCK REQUEST TO HOST	The clock transmission request to the host, and sets to the equipment.


※Both operations can only at the ON-LINE mode.

Three mode password function

This chapter explains a 3 mode password.

Input the password

The following dialogue is displayed when select EQPanel by a main menu of an intelligent system.

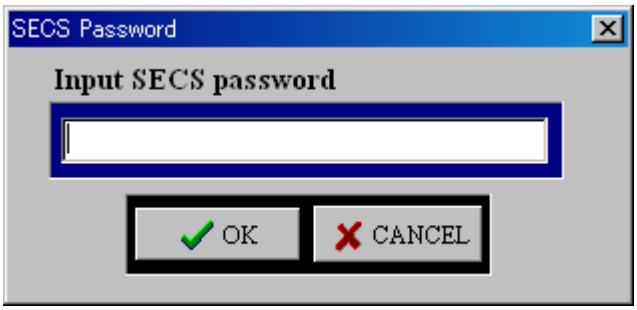

Input a password of one among three kinds of passwords and click the OK button, or click CANCEL button.

1) In case click CANCEL button

Operate with the operator mode.

2) In case input the Maintenance password.

The mode that can operate only enabled item by the maintenance password

3) In case input the Engineer password.

The mode that can operate only enabled item by the Engineer and maintenance password


4) In case input the Administrator password.

All operation possible.

*) Initial introduction, do not set a password. In this case, all operation enabled for the password that input without relation.

Change the password

1) Log on the EQPanel by Engineer password or Administrator password.
2) Click the EQGUI button.
3) Click the TOOL tag.
4) Click the SECS PASSWORD SETTINGS

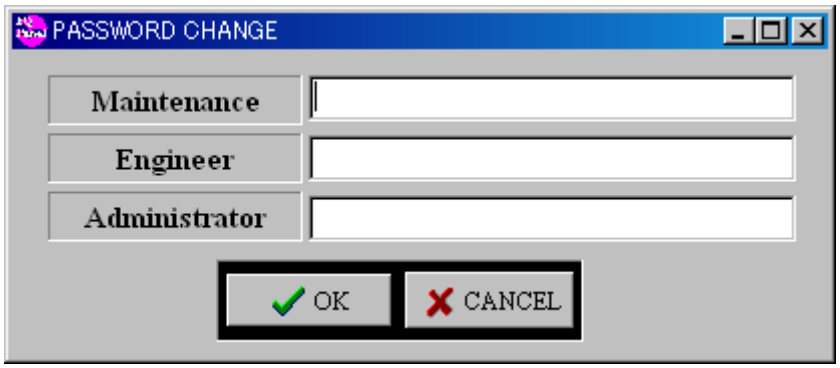

After Input the new password, click the OK button.

*) In case log on the engineer password, do not change Administrator password.

When forgot the password

1.Open the “MyComputer” -> ”Local disk(C:)” -> ”Program files” -> “TOWA” -> CDTServer” folder.
2.Double click the EQPanel.ini file. (“EQPanel” on indication)
3.Automatically open the EQPanel.ini by NotePad.exe.
4. Look for the Security section of EQPanel.ini.


[Security]
3ModePassword=1
3ModePasswordName1=Maintenance
3ModePasswordStr1= ← Maintenance password
3ModePasswordName2=Engineer
3ModePasswordStr2= ← Engineer password
3ModePasswordName3=Administrator
3ModePasswordStr3= ← Administrator password

4. SETTING


4-1. Set Equipment IP Address

1. Close the Intelligent System.


2. Show Screen Keyboard
   1) Turn on the “On-Screen Keyboard”.
   「Start」—「All Programs」—「Accessories」—「Accessibility」—「On-Screen Keyboard」

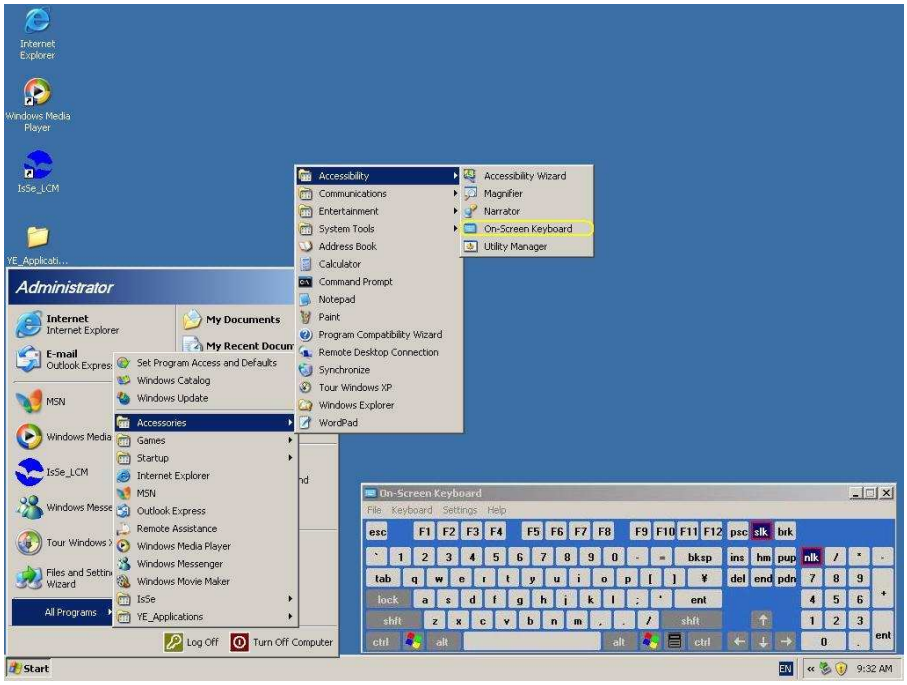

3. 1) For Windows XP, select **Local Area Connection「2」**, and then click **Change settings of this connection** in the Network Tasks field.

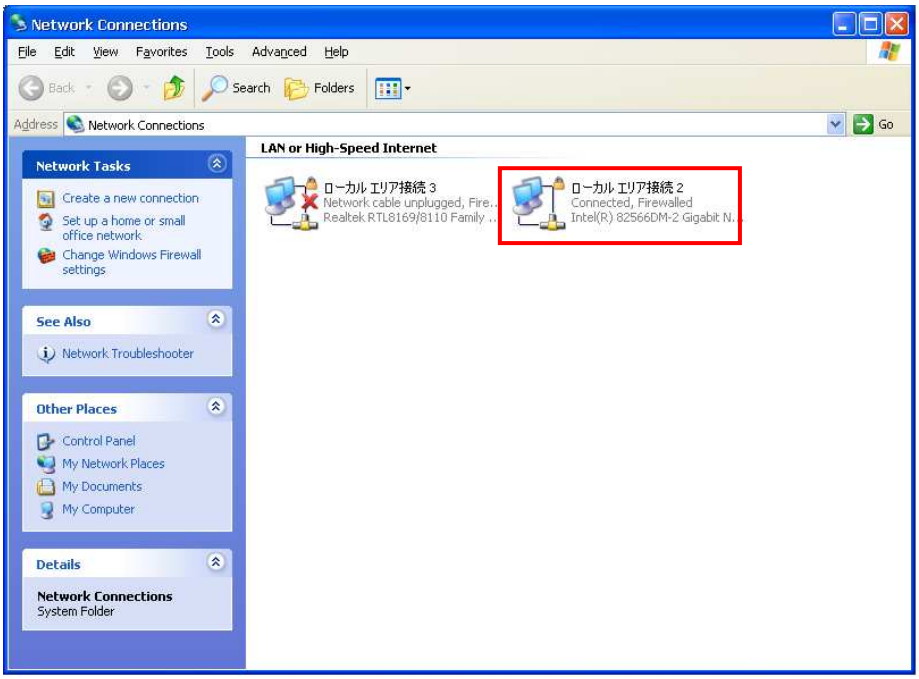

2) Select the **Internet Protocol (TCP/IP)** check box in the General Tab Page, and then click the **Properties** Button.

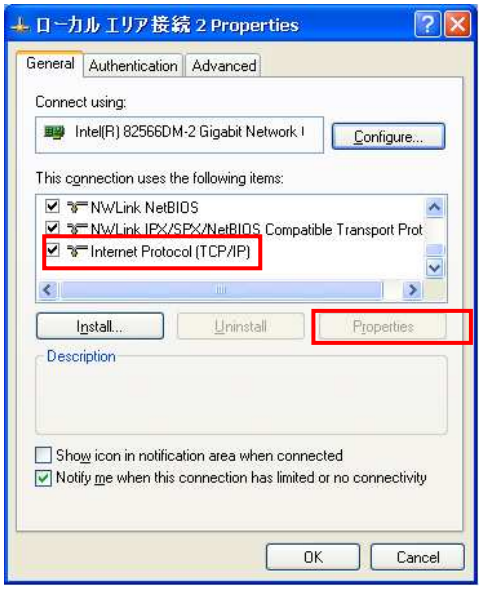

3) The **Internet Properties (TCP/IP)** Dialog Box will open.
Input Equipment IP Address.

