
Thundercomm

Empowering Every IoT Device with Our Technology

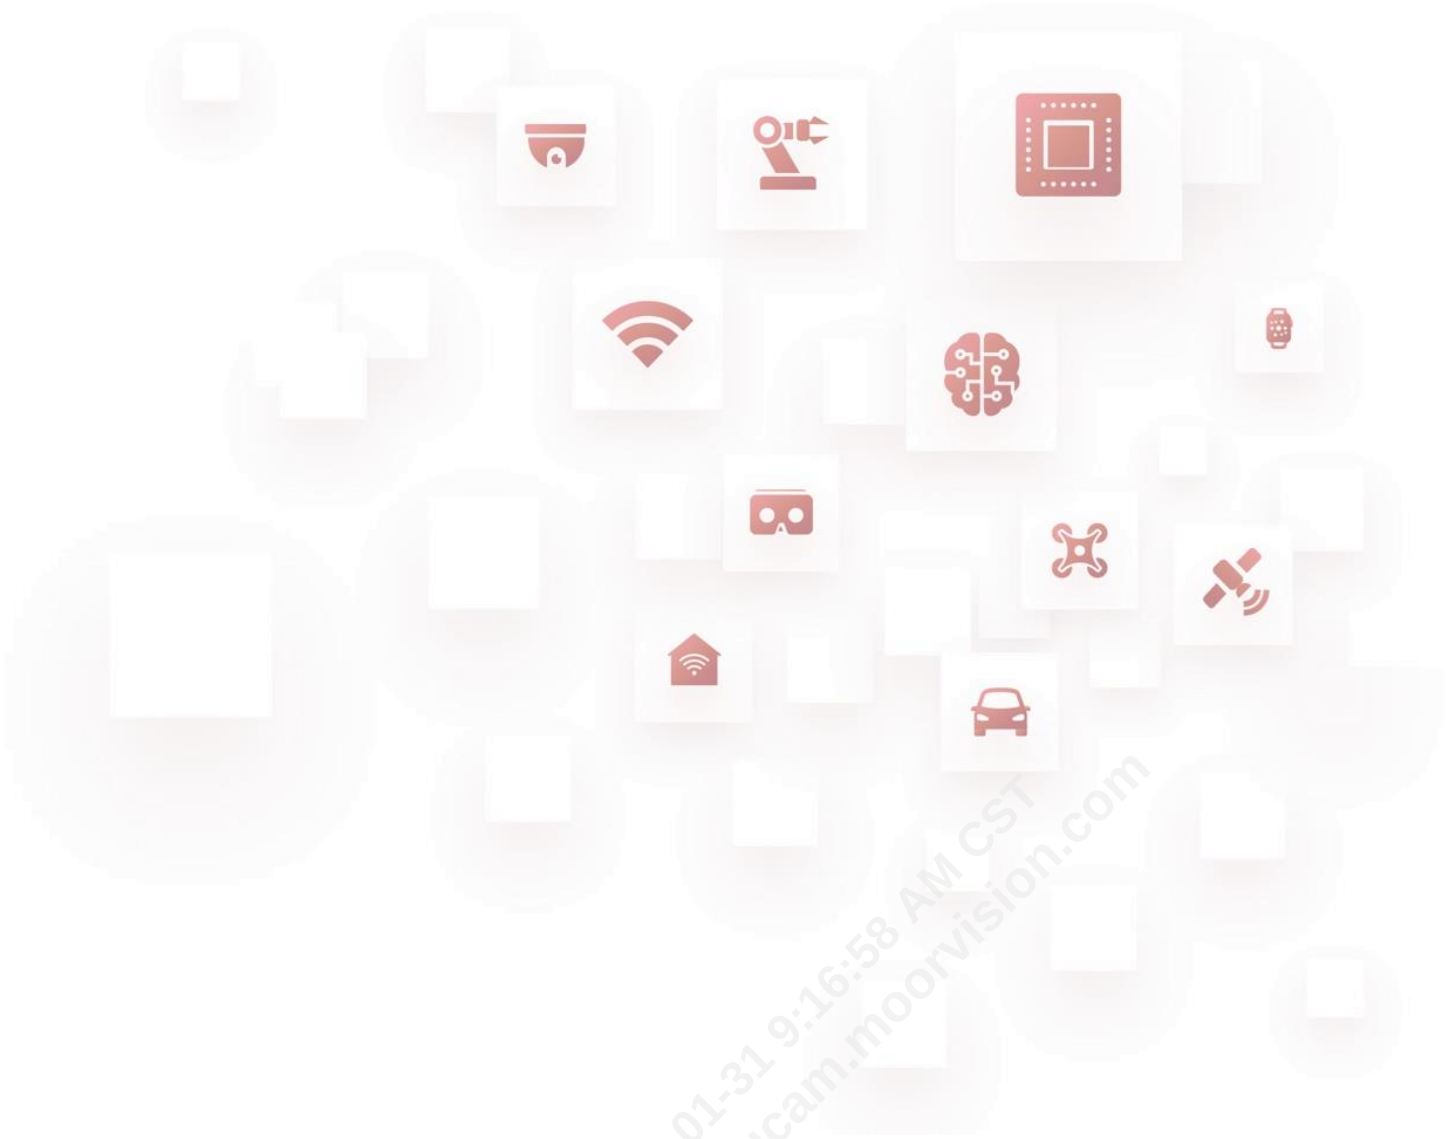

2025-01-31 9:16:58 AM CST
Stefan@camera.moorvision.com

Thundercomm TurboX C410/C610 Open Kit Linux Embedded

Software Release Notes

Rev V1.1
Dec 10, 2021

DN: tc-gle-2411
SDK Version: LE1.0.FC3.r001005

Revision History

Revision	Date	Description
1.0	Nov 08, 2021	Initial release.
1.1	Dec 10, 2021	• Update commands in Step 2 of 4.8.1. Flash Fastboot image. • Add a note of flashing tool at the beginning of 4.8.2. Flash FlatBuild image.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Copyright© 2021 Thundercomm Technology Co., Ltd. All rights reserved.

Table List

Table 2-1. Hardware and software requirement to install and run the LE SDK

Table 4-1. LE SDK Information

Table 6-1. Sanity test report

Table 6-2. Stability test report

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Copyright© 2021 Thundercomm Technology Co., Ltd. All rights reserved.

About This Document

- Illustrations in this documentation might look different from your product.
- Depending on the model, some optional accessories, features, and software programs might not be available on your device.
- Depending on the version of operating systems and programs, some user interface instructions might not be applicable to your device.
- Documentation content is subject to change without notice. Thundercomm makes constant improvements on the documentation of the products, including this guidebook.
- Function declarations, function names, type declarations, attributes, and code samples appear in a different format, for example, `cp armcc armcpp`.
- Code variables appear in angle brackets, for example, `<number>`.
- Button, tool, and key names appear in bold font, for example, click **Save** or press **Enter**.
- Commands to be entered appear in a different font; on the host computer use $ as shell prompt, while on the target device use # as shell prompt, for example,

```
$ adb devices
# logcat
```

- Part of the code that does not contain instructions appear in a different format, for example,

```
SUBSYSTEM=="usb", ATTR{idVendor}=="18d1", MODE="0777", GROUP="adm"
```

- Folders and files are formatted in italic, for example, *turbox_flash_flat.sh*.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Copyright© 2021 Thundercomm Technology Co., Ltd. All rights reserved.

Table of Contents

Chapter 1. Introduction ..... - 2 -

Chapter 2. System Requirements ..... - 3 -

Chapter 3. Development Environment Setup ..... - 4 -

3.1. Ubuntu 16.04 (64-bit) installation ..... - 4 -

3.2. Tools and USB driver installation ..... - 4 -

3.3. Required Building Environment ..... - 5 -

Chapter 4. Get Started with LE SDK ..... - 7 -

4.1. LE SDK information ..... - 7 -

4.2. Block diagram ..... - 7 -

4.3. SDK source tree structure ..... - 7 -

4.4. Download LE SDK ..... - 8 -

4.5. SDK version update ..... - 9 -

4.6. Build image ..... - 9 -

4.7. Pack ROM package ..... - 10 -

4.8. Flash images to board ..... - 10 -

Chapter 5. Features ..... - 14 -

5.1. Presented features ..... - 14 -

5.2. New Features ..... - 16 -

5.3. On-going features ..... - 16 -

Chapter 6. Test Report ..... - 17 -

6.1. Sanity test (QCS610 OPK) ..... - 17 -

6.2. Stability test ..... - 18 -

6.3. Power test ..... - 18 -

Chapter 7. Known Issues ..... - 19 -

Appendix 1. Notices ..... - 20 -

Appendix 2. Trademarks ..... - 22 -

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Chapter 1. Introduction

This document provides information on detailed steps to obtain, build, and program QCS610 LE (Linux Embedded) SDK (Software Development Kit) into the TurboX C410/C610 open kit.

➲ **NOTE:** "TurboX" referred to herein is the English text of our registered trademark TURBOX.

The LE SDK supports the Linux operating system on the Thundercomm TurboX SOM. The LE SDK aims to provide a simple and flexible development platform to rapidly build IoT (Internet of Things) products with the QTI chipsets. The LE SDK provides the build framework, software components, tools, and sample applications to evaluate the platform and build software images for the target product.

The LE SDK is based on the Yocto Project 2.6 release and follows several of its development principles. The Yocto Project is used by the LE SDK to build framework.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Chapter 2. System Requirements

Table 2-1 lists the hardware and software required to install and run the LE SDK.

Table 2-1. Hardware and software requirement to install and run the LE SDK

Hardware / Software Requirements	Source / Vendor	Function
Standalone hardware system minimum requirement: • 8 GB RAM • Quad core CPU ➲ **NOTE:** System with lower hardware specifications will increase compilation time. About an hour is the compilation time for a system with 16 GB RAM and Intel i7-2600 @3.4 GHz.	-	SDK build machine
Ubuntu 16.04 Long Term Support (LTS) Linux distribution for 64 bit architecture	Ubuntu Community/ Canonical, Ltd.	SDK build host Operating System (OS)
Repository (Repo)	SDK Open Source Project	SDK source management tool
Python 2.7.12 with sqlite3 module	Python.org	Building subsystem

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Chapter 3. Development Environment Setup

This chapter introduces the setup of a Linux development environment on an Ubuntu host machine.

Prerequisites:

Ensure your building host meet the following requirements:

- Host machine Linux distro – 16.04 LTS or 18.04 LTS
- Minimum 300 GB free disk space
- tar v1.27 or newer
- Privileges to install utilities
- Install the host packages

3.1. Ubuntu 16.04 (64-bit) installation

Step 1. Install Ubuntu 16.04 to the computer following the instructions at:
http://www.ubuntu.com/download/desktop/install-ubuntu-desktop.

Step 2. To update the software, execute the following command:

```
$ sudo apt-get update
```

3.2. Tools and USB driver installation

This section provides instructions on installing **ADB** (Android Debug Bridge) (V1.0.41 or later), **Fastboot**, and USB drivers to your host computer.

The **Fastboot** is a tool used to flash images to the board by communicating with the boot loader.

The **ADB** is a tool installed on the host computer to access the device Unix shell, then help to push, modify, debug, and tweak device system files from the host computer.

3.2.1. ADB and Fastboot tools installation

To install **ADB** and **Fastboot**, execute the following commands.

```
$ sudo apt-get install android-tools-adb
$ sudo apt-get install android-tools-fastboot
```

3.2.2. USB driver installation and configuration

To install and configure USB drivers, follow the steps below:

Step 1. Set up the udev rules on a Linux computer.

1. Login as **root/sudo**.

   ```
   $ cd /
   ```

2. Navigate to the directory */etc/udev/rules.d/*.

   ```
   $ cd /etc/udev/rules.d/
   ```

3. Create the file *99-android.rules.*

   ```
   $ sudo touch 99-android.rules
   ```

4. Enter the following command get edit permission to file *99-android.rules*.

```
$ sudo chmod 777 /etc/udev/rules.d/99-android.rules
```

5. Enter *99-android.rules* by running the following command.

```
$ vim 99-android.rules
```

6. Input `i` to enter edit mode and add the following content to the file.

```
SUBSYSTEM=="usb", ATTR{idVendor}=="18d1", MODE="0777", GROUP="adm"
SUBSYSTEM=="usb", ATTR{idVendor}=="05c6", MODE="0777", GROUP="adm"
```

7. Press **ESC** key to exit the edit mode.
8. Enter `:wq` to save the change and exit.

Step 2. Restart the udev service by executing the following commands.

```
$ sudo chmod a+r /etc/udev/rules.d/99-android.rules
$ sudo service udev restart
```

Step 3. Connect the board to your computer with an USB cable, and power on the target board to start the system. Wait for several seconds then input `$ adb devices`. The device is correctly detected with the following information displayed on your screen.

```
$ adb devices
List of devices attached
7050372c       device
```

➲ **NOTE:** Avoid connecting the device to the PC with a USB hub. Connect the device to the PC directly via a USB cable.

3.3. Required Building Environment

Follow the steps below to configure the building environment by install the proper version GCC/G++ and Linux package dependencies.

3.3.1. Java 8

Step 1. Check the version. Run the following commands to ensure Java 8 is installed.

```
$ java -version
openjdk version "1.8.0_131"
OpenJDK Runtime Environment (build 1.8.0_131-8u131-b11-0ubuntu1.16.04.2-b11)
OpenJDK 64-Bit Server VM (build 25.131-b11, mixed mode)
```

Step 2. Version update

With a 1.7 version preinstalled, run the following commands to upgrade it to version 1.8.

```
$ sudo apt-get update
$ sudo apt-get install openjdk-8-jdk
```

➲ **NOTE:** The Java 8 should be used along with Ubuntu 16.04.

Thundercomm Confidential
2021-5-31 9:16:58 AM CST
Stefan.Lucas moorvision.com

3.3.2. Linux package dependencies

Step 1.Install the dependency libraries to the host computer.

```
$ sudo apt-get install git-core gnupg flex bison build-essential zip curl zlib1g-dev
gcc-multilib g++-multilib libc6-dev-i386 lib32ncurses5-dev x11proto-core-dev libx11-
dev lib32z1-dev libgl1-mesa-dev libxml2-utils xsltproc unzip fontconfig libxml-
simple-perl texinfo gawk chrpath
```

Step 2.Set **bash** as default shell tool.

```
$ sudo rm /bin/sh
$ sudo ln -sf /bin/bash /bin/sh
```

➲ **NOTE**: For more information on building environment dependencies, refer to AOSP documents at: *https://source.android.com/setup/build/initializing*.

3.3.3. Install repo

Run the following command to install repo.

```
$ sudo apt-get install repo
```

3.3.4. Configure git global variable

Configure user name and email.

```
$ git config --global user.email "<User Email>"
$ git config --global user.name "<User Name>"
```

➲ **NOTE:** Replace the `<User Email>` and `<User Name>` with the email address and user name you have registered at Thundercomm Website.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Chapter 4. Get Started with LE SDK

4.1. LE SDK information

Table 4-1. LE SDK Information

SDK Version	Baseline	Baseline Distribution	OS Version
LE1.0.FC3.r001005	QCS610.LE.1.0	CS3.8 0.0.130.2	Linux Embedded 1.0

4.2. Block diagram

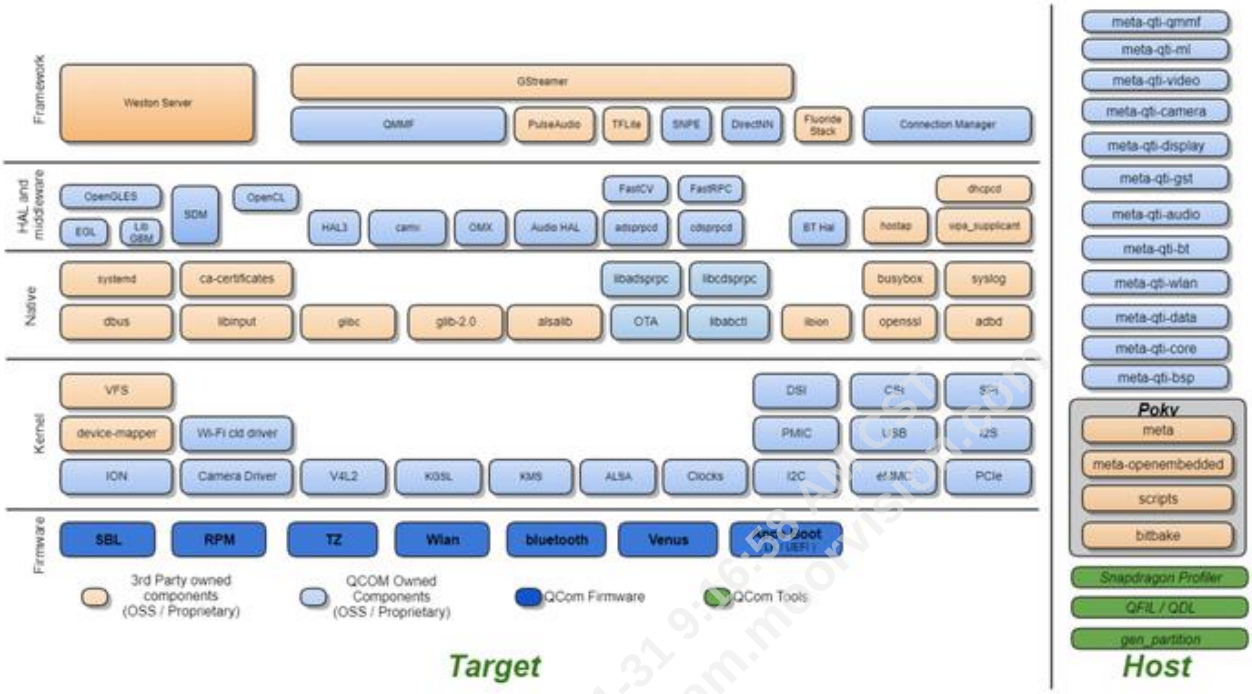


Figure 4-1.Block Diagram

4.3. SDK source tree structure

```
SDK.Turbox_C610.LE1.0_FC3/
├── about.html -> common/about.html           //SDK version info(Product,
Distribution,Components, …)
├── adsp_proc             //aDSP image is released as a binary and no build compilation is
needed
├── aop_proc              //AOP image is released as a binary and no build compilation is
needed
├── apps_proc
   ├── build-qti-distro-fullstack-virtualization-debug           /* Directory of temporary
                                                    fileand image files generated by
compilation */
   ├── disregard
   ├── downloads                          //Software packages required for compilation
   ├── poky                          //Yocto's recipe directory
   ├── prebuilt_HY11                     //Qcom privatized software package
   ├── setup-environment -> poky/qti-conf/set_bb_env.sh    //Script for set the build
environement
   ├── src                           /* AP source code, such as linux kernel, filesystem,
vendor,                                                                  OTA, etc. */
   ├── sstate-cache
   └── syncbuild.sh
```

```
├── boot_images           //BOOT image is released as a binary and no build compilation is
needed
├── BP-CODE                    //BP binary files
├── btfm_proc             //BTFM image is released as a binary and no build compilation is
needed
├── cdsp_proc             //cDSP image is released as a binary and no build compilation is
needed
├── common/config/emmc/partition.xml                        eMMC partition file
├── contents.xml -> common/contents.xml              //image contents file
├── modem_proc            //MODEM image is released as a binary and no build compilation
is needed
├── trustzone_images      //TZ image is released as a binary and no build compilation is
needed
├── turbox
│   └── tools
│       ├── build_script                        //SDK build script(android build, zip, …)
│       └── flash_tools                              //Flash tools files(qdl, …)
├── turbox_build.sh -> turbox/tools/build_script/common/turbox_build.sh       //SDK build
file.
├── turbox_flash.sh -> turbox/tools/build_script/device/turbox_flash.sh       //Fastboot
flash tool
├── venus_proc            //VIDEO image is released as a binary and no build compilation
is needed
├── wdsp_proc             //wDSP image is released as a binary and no build compilation is
needed.
└── wlan_proc             //WLAN image is released as a binary and no build compilation is
needed.
```

4.4. Download LE SDK

Follow the steps below to activate an account and download the SDK code.

4.4.1. Account activation

Add the account/password information to *$HOME/.netrc* by running the following command.

```
$ echo "machine partner.thundercomm.com login <User Email> password <password>" >> ~/.netrc
```

➲ **NOTE:** Please use the email and password you have registered at www.thundercomm.com to replace **<User Email>** and **<password>** in the above command.

4.4.2. Download the LE SDK code

Follow the steps below to download the LE SDK:

Step 1.Initialize the repository.

```
$ repo init -u https://partner.thundercomm.com/sdkgit/a/manifest -b SDK.turbox-c610-
le1.0-dev -m turbox-c610-le1.0-v2-dev.release.FC3.r001005.xml --repo-
url=https://partner.thundercomm.com/sdkgit/a/tools/repo --repo-branch=stable --no-
repo-verify
```

Step 2.Synchronize the source code.

```
$ repo sync -c -j8 --no-tags
```

4.5. SDK version update

If you have downloaded the old-version SDK, there are two ways to download the new SDK fast.

Option 1. Upgrade the local old folder to a new release

Navigate to the old local code folder. You can run the repo init command of new release as *4.4.2.Download the LE SDK code*, then run `repo sync -j4 -c --no-tags` to receive the new code.

Option 2. Download the new SDK source code to a new folder (recommended)

Create a new folder, and run `repo init` with `-reference` value.

For example:

```
$ repo init -u https://partner.thundercomm.com/sdkgit/a/manifest -b SDK.turbox-c610-le1.0-dev -m turbox-c610-le1.0-v2-dev.release.FC3.r001005.xml --repo-url=https://partner.thundercomm.com/sdkgit/a/tools/repo --repo-branch=stable --no-repo-verify --reference=<old_sdk_code_path>
$ repo sync -j4 -c --no-tags
```

➲ **NOTE:** In `--reference=<old_sdk_code_path>`, the `old_sdk_code_path` is the absolute path of your old SDK folder. For example:

```
--reference=/home/host/turbox-c610-le1.0-dev.es.r000002
```

4.6. Build image

To compile the AP code, run the following script file according to your image version in the root directory.

- Build debug version:

```
$ ./turbox_build.sh -a -l -v debug
```

- Build perf version:

```
$ ./turbox_build.sh -a -l -v perf
```

➲ **NOTE**: UART debug cannot be used in perf/user version.

- Run the following commands to rebuild *kernel* additionally (if necessary).

```
$ export SHELL=/bin/bash
$ cd apps_proc
$ MACHINE=qcs610-odk-64 DISTRO=qti-distro-fullstack-virtualization-debug
$ source poky/qti-conf/set_bb_env.sh
$ bitbake -fc make_bootimg qti-multimedia-image
```

➲ **NOTE**: The default *boot.img* has verify enabled and cannot be flashed unless the kernel is rebuilt. Hence, when rebuilding only the kernel, you need to flash the *boot.img.noverity* which has verify disabled, refer to *turbox_flash.sh* to flash the *boot.img.noverity*.

- Run the following commands to rebuild *dtbo* additionally (if necessary).

```
$ export SHELL=/bin/bash
$ cd apps_proc
$ MACHINE=qcs610-odk-64 DISTRO=qti-distro-fullstack-virtualization-debug
$ source poky/qti-conf/set_bb_env.sh
$ bitbake -fc cleanall linux-msm && bitbake linux-msm
```

Thundercomm Confidential

4.7. Pack ROM package

Step 1. Run the following command to update common information according to your image version.

- **Debug version:**

```
$ ./turbox_build.sh -u --uci-imf -v debug
```

- **Perf version:**

```
$ ./turbox_build.sh -u --uci-imf -v perf
```

➲ **NOTE:** The command is successfully executed with the following log displayed.

```
- update_common_info.py:======  UPDATE COMMON INFO COMPLETE=======
```

Step 2. Run the following command to pack the ROM package. You can find the packed ROM package at *turbox/output*. Replace `<debug/perf>` with debug or perf.

- Pack Fastboot image

```
$ ./turbox_build.sh --zip_fastboot_build -l -v <debug/perf>
```

- Pack FlatBuild image

```
$ ./turbox_build.sh --zip_flat_build -l -v <debug/perf>
```

➲ **NOTE:** Customers can also get the ROM package provided by Thundercomm from:

- **For debug version:**
  - *FlatBuild_TurboX_C610_xx.xx_LE1.0.R.debug.FC3.r001005.zip*

    md5: 81f3ae2bab7642945b1073d1465e1937
  - *FastbootBuild_TurboX_C610_xx.xx_LE1.0.R.debug.FC3.r001005.zip*

    md5: 537821cb1773bdc89210d7f6bb1654c9
- **For perf version:**
  - *FlatBuild_TurboX_C610_xx.xx_LE1.0.R.perf.FC3.r001005.zip*

    md5sum: cd14de154f5c9af37c09d9ff07e7faf2
  - *FastbootBuild_TurboX_C610_xx.xx_LE1.0.R.perf.FC3.r001005.zip*

    md5sum: 5e7367fd0ba018144acd2e5c0c31a4a5

4.8. Flash images to board

➲ **NOTE**: If the device fails to boot up after image flash with **Fastboot**, try to flash the **FlatBuild** image again with *turbox_flash_flat.sh*.

4.8.1. Flash Fastboot image

Step 1. Enter the **Fastboot** mode. Two options are available for your selection:

Option 1. Run the following commands when the device is in ADB mode.

```
$ adb root
$ adb reboot bootloader
```

Option 2. Alternatively, you can proceed with the steps below to enter the **Fastboot** mode.

1) Power off the device.

Thundercomm Confidential

2) Hold the **Volume down** button and press the **Power on** button for about 5 seconds.

3) Release the **Volume Down** button.

To check if the device has entered the **Fastboot** mode, run the following command:

```
$ fastboot devices
```

Successful with the following output displaying on the shell:

```
7050372c fastboot
```

Step 2. Flash images.

Execute the commands below to flash images to the board. Replace **<folder name of image package>** with the actual image package name of your product.

```
$ cd <folder name of image package>
$ bash ./turbox_flash.sh -r -v <debug/perf>
```

➲ **NOTE**: Enter **./turbox_flash -h** to acquire detailed usage.

```
$ ./turbox_flash -h
Usage:
  bash ./turbox_flash.sh [options] [options]
  The images except gpt,userdata,persist will be flashed if no options input
Description:
  flash images with fasboot
Options:
  -h, --help   display this help message
  -v, --variant <debug/perf/user>    set the build variant.(default: debug)
  -f, --force  gpt,persist and userdata will be flashed.
             User data and calibration data(BT/WIFI MAC address, etc..) will be
erased.
  -r, --reboot      reboot the device automatically after flashing completed.
  -b, --nonhlos     flash all bp images(xbl,rpm,ftfm,tz,dsp,modem,pmic).
  -a, --hlos       flash all ap
images(aboot,bootimage,recovery,system,vendor,cache,mdtp).
  --all       flash all images
Example:
  ./turbox_flash.sh
     Flash the images except gpt,userdata,persist.
  ./turbox_flash.sh --force
     Flash all images.
  ./turbox_flash.sh --hlos
     Flash all ap images.
```

4.8.2. Flash FlatBuild image

➲ **NOTE**: As the partition information is upgraded in the SDK FC3 version, fastboot or QFIL tool must be used to perform an upgrade. If *turbox_flash_flat.sh* is used in the upgrade from FC2 to FC3, then the device may be unable to boot up upon completion of flashing, due to that *turbox_flash_flat.sh* cannot erase all the partition information.

Follow the steps below to flash FlatBuild image.

Step 1. Download the flashing tool: *turbox_flash_flat.sh*.

Step 2. Flash the device

1. Prepare the FlatBuild images.

   Check if the images are ready, then copy the *turbox_flash_flat.sh* to image folder.

   Replace **<folder name of image package>** with the actual image package name of your product.

```
$ cp turbox_flash_flat.sh <folder name of image package>
$ cd <folder name of image package>
$ chmod +x turbox_flash_flat.sh
```

2.Enter **9008 Mode**.

a. Power off the the device by disconnecting the power cable and USB cable.

b. Connect the power cable.

c. Hold the **Force USB Boot** button.

d. Press the **Power on** button and wait for about 3 seconds.

e. Release the **Force USB Boot** button and **Power on** button.

f. Connect the Type-C USB cable to an Ubuntu computer.

To check if your device has entered the **9008 Mode**, run the following command:

```
$ lsusb
……
Bus 001 Device 042: ID 05c6:9008 Qualcomm, Inc. Gobi Wireless Modem (QDL mode)
…… .
```

3.Start to flash the FlatBuild images.

Run the following command under the image folder.

```
sudo ./turbox_flash_flat.sh -x patch0.xml,rawprogram_unsparse0.xml -
f ./prog_firehose_ddr.elf -i ./ -s eMMC
```

If the flashing process is successful, the following log will be printed.

```
15:41:09: INFO:      _           (done)
15:41:09: INFO:     | |
15:41:09: INFO:   __| | ___  _ __   ___
15:41:09: INFO:  / _` |/ _ \| '_ \ / _ \
15:41:09: INFO: | (_| | (_) | | | |  __/
15:41:09: INFO:  \__,_|\___/|_| |_|\___|
15:41:09: INFO: {All Finished Successfully}

15:41:09: INFO: Overall to target 201.617 seconds (20.88 MBps)
15:41:09: INFO: {percent files transferred 100.00%}
```

4.Reboot the device.

a. Power off the device by disconnecting the power cable and USB cable.

b. Connect the power cable to the board.

c. Hold the **Power on** button and wait for about 3 seconds.

d. Connect the Type-C USB cable and check the adb device by implement the following command.

```
$ adb devices
List of devices attached
b237534       device
```

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Chapter 5. Features

5.1. Presented features

This section describes the key software features that have been included in earlier versions.

- **SDK**
  - Yocto Thud (v2.6)
  - GCC toolchain (v8.2.0)
  - glibc (v2.28)
  - systemd (v1.239)
  - OpenEmbedded Linux
- **Platform**
  - Linux Kernel 4.14
  - 64-bit only
  - Azure and Docker
  - UBWC
  - OTA
  - HY22
  - DTB Overlay
- **CV**
  - FastCV
  - OpenCV (v3.4.3)
- **Security**
  - DM-Verity
  - SELinux
  - KASan
  - FDE
  - VBLE
  - Non-Root Processes
  - Linux Full Disk encryption
- **Connectivity**
  - WLAN 802.11ac
  - USB 3.1 Gen 1
  - Bluetooth 5.0

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

- **Storage**
  - eMMC
- **Multimedia**
  - GStreamer Framework
  - Hexagon-SDK
- **Camera**
  - Staggered HDR (v2&v3.8)
  - IRLED
  - LDC and EIS
  - Dual Independent Cameras
- **Video**
  - JPEG DMA Engine
  - H264 & HEVC encode and decode
- **Audio**
  - AAC, PCM and MP3 (only playback) Encode and Playback
  - Audio + Hands Free Profile concurrency
- **Display**
  - DP
  - LCD
- **Graphics**
  - OpenGL ES 3.2
  - OpenCL 2.1
- **AI**
  - BENCHMARK APP
  - AI Inferencing using SNPE v1.36
  - AI Inferencing using TFlite 2.0
  - Tflite supports NNAPI delegate offloading graph processing to DSP

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

5.2. New Features

This section describes the new key software features that will be included in this SDK version.

- Image rotation (with GStreamer) through GPU dynamically.
- Image rotation (with GStreamer) through VPU before recording (static).
- Force sensor mode to bypass default logic.
- Allow manual disablement of IR cut filter when IR LED is off.
- Enable software-based fuel gauge solution for battery operated devices.
- Wi-Fi needs to support WPA3 in AP mode.
- Record 1080p@30 AVC mp4 file new command:

```
gst-launch-1.0 -e qtiqmmfsrc name=camsrc camera=0 ! video/x-
raw\(memory:GBM\),format=NV12,width=1920,height=1080,framerate=30/1 ! queue !
omxh264enc ! queue ! h264parse ! mp4mux ! queue ! filesink
location="/data/h264_cam_0.mp4"
```

5.3. On-going features

None.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Chapter 6. Test Report

6.1. Sanity test (QCS610 OPK)

Table 6-1. Sanity test report

Test Case	Result
Flash_fastboot flash	Pass
Flash_QDL flash	Pass
Disable verity	Pass
Boot_adb reboot	Pass
Boot_adb reboot bootloader	Pass
Boot_fastboot reboot	Pass
Memory Information	Pass
Power_suspend	Pass
Incremental-OTA	Pass
64-bit userspace	Pass
Storage_SDcard detection	Pass
Storage_SDcard file push/pull	Pass
Multimedia_GST_recorder_4k_30_AVC_MP4_mux	Pass
Multimedia_GST_recorder_4k_30_HEVC_MP4_mux	Pass
Multimedia_GST_recorder_1080p_30_AVC_filesave	Pass
Multimedia_GST_Snapshot_One 1080p AVC mp4 muxed video with JPEG snapshots	Pass
Multimedia _GST_Overlay_1080p_30 YUV with UserText overlay	Pass
Multimedia _GST_Display_1080p_30 Live preview on a local display	Pass
Multimedia _GST_Display_1080p_30 Live preview over TCP/RTSP	Pass
Camera_LDC/ ZOOM	Pass
Camera_Dual Independent Cameras（IMX577）	Pass
Audio_1-6 D-MIC recoder individually	Pass
Audio_1-6 channels recoder concurrency with GST	Pass
Audio_1-6 channels recoder concurrency with parecord	Pass
Display_DP	Pass
Display_LCD	Pass

Thundercomm Confidential

Test Case	Result
Display_Weston Color Bar	Pass
USB_Type-C functionality	Pass
USB_Type-A functionality	Pass
USB_Micro for UART	Pass
Ethernet_RJ45 connect	Pass
Ethernet_ Ping test	Pass
Connectivity_Bluetooth	Pass
Connectivity_ Wi-Fi_connect to AP	Pass
AI inferencing via TFlite 2.0	Pass

6.2. Stability test

Table 6-2. Stability test report

Test Case	Result
System Reboot	Target met
BT reboot	Target met
WiFi reboot	Target met
SD card	Target met

6.3. Power test

For more information, please contact FAE.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Chapter 7. Known Issues

- **Face Detection** demo is unstable.
- HDMI IN does not work on C410 SOM.
- External Audio Codec 9341 fails to register probabilistically.
- Wi-Fi AP mode does not work.
- `adb root` is a must after the device boots up.
- Weston Server, as opensource, cannot be a non-root process.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Appendix 1. Notices

Thundercomm may have patents or pending patent programs covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries to service@thundercomm.com.

THUNDERCOMM PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

Changes are made periodically to the information herein; these changes will be incorporated in new editions of the publication. To provide better service, Thundercomm reserves the right to improve and/or modify the products and software programs described in the manuals, and the content of the manual, at any time without additional notice.

The software interface and function and hardware configuration described in the manuals included with your development board or system on module might not match exactly the actual configuration of that you have purchased. For the configuration of the product, refer to the related contract (if any) or product packing list, or consult the distributor for the product sales. Thundercomm may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Thundercomm product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Thundercomm or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

The information of this document should not be as any invitation for offer or any advice to the visitors. Please consult the professional comments from the sales consultant prior to do any actions of investment or purchase.

Thundercomm may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Thundercomm Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Thundercomm product, and use of those Web sites is at your own risk. Thundercomm shall not be responsible for the content of the third party.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

This document is copyrighted by Thundercomm and the property right of the date mentioned in this document, including but not limited trademarks, patents, copyrights, trade name etc. are not covered by any open-source license. Thundercomm may update this document at any time without notice.

Anyone doesn’t have the right to amend, reprint, republication, reproduce, transmit, distribute or any other way to use this document in business or public purpose without the prior written consent by Thundercomm.

E-mail messages sent to Thundercomm via the Internet are not guaranteed to be completely secure.Thundercomm shall not be liable for any loss incurred by the surfer when transmitting any information

Thundercomm Confidential

over the Internet or for any loss incurred by Thundercomm when sending any information over the Internet at your request.

Thundercomm has all rights under other relevant exemptions provided by laws and regulations, and Thundercomm's failure to claim or delay in claiming such rights shall not be deemed to be a waiver of such rights by Thundercomm.

Thundercomm reserves the right of final interpretation of this document.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com

Appendix 2. Trademarks

Thundercomm, Thundercomm TurboX, TURBOX, Thundersoft turbox are trademarks of Thundercomm Corporation or its associate companies in China and/or other countries. Intel, Intel SpeedStep, Optane, and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft, Windows, Direct3D, BitLocker, and Cortana are trademarks of the Microsoft group of companies. Mini DisplayPort (mDP), DisplayPort, and VESA are trademarks of the Video Electronics Standards Association. The terms HDMI and HDMI High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. Wi-Fi, Wi-Fi Alliance, WiGig, and Miracast are registered trademarks of Wi-Fi Alliance. USB-C is a registered trademark of USB Implementers Forum. All other trademarks are the property of their respective owners.

Thundercomm Confidential
2025-01-31 9:16:58 AM CST
Stefan_ucam.moorvision.com