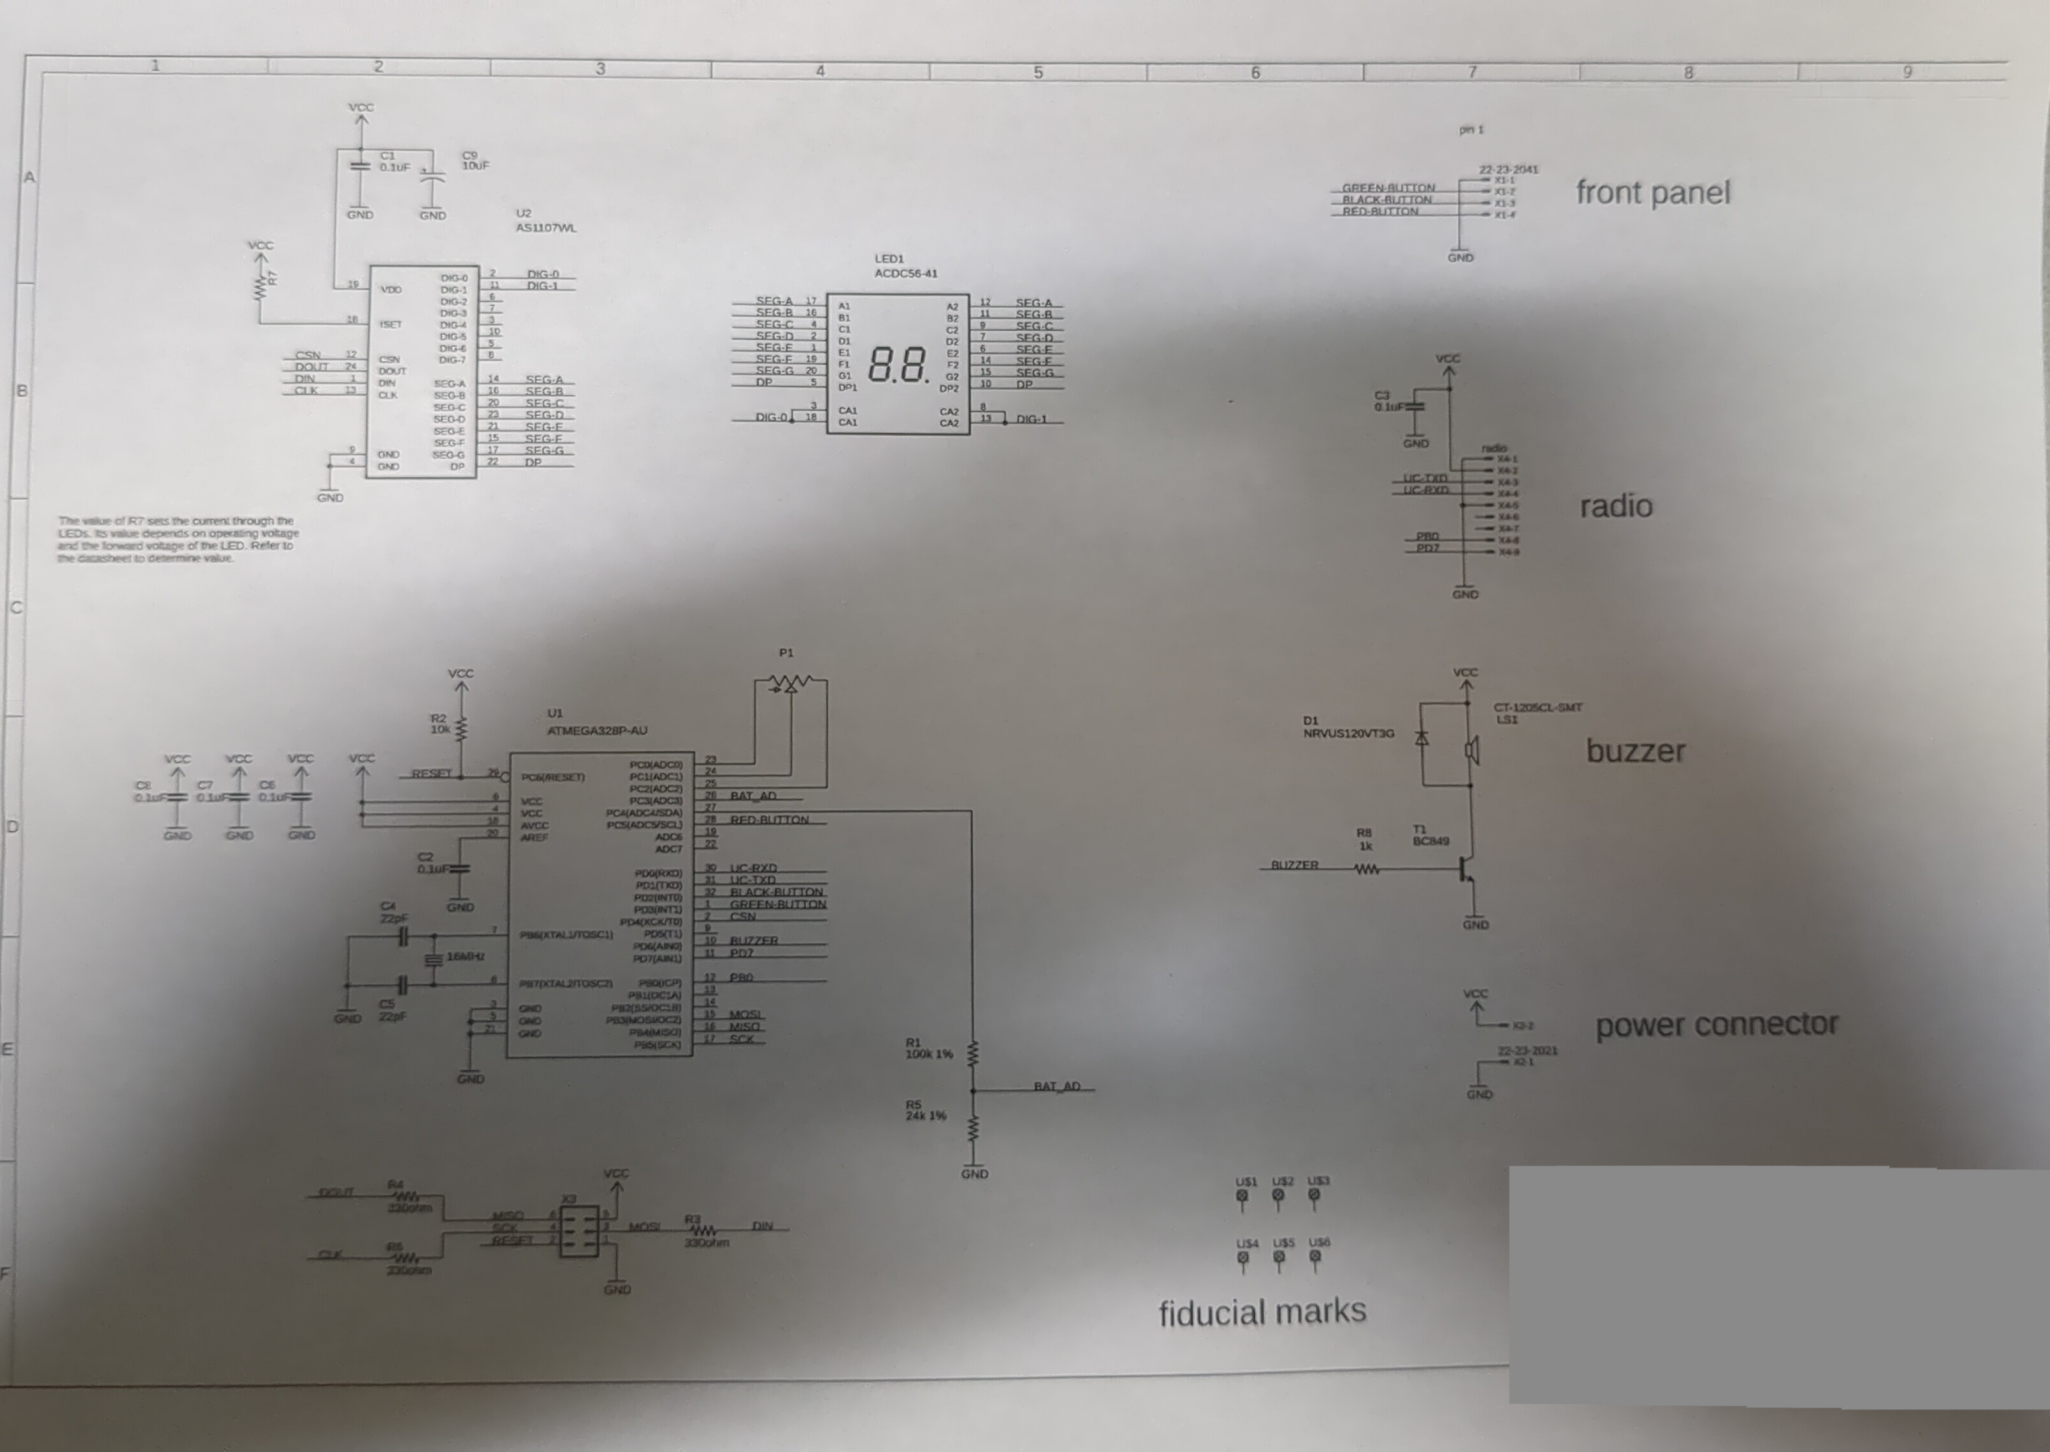

front panel
radio
buzzer
power connector
fiducial marks
U1
ATMEGA328P-AU
U2
AS1107WL
LED1
ACDC56-41
P1
R1
100k 1%
R5
24k 1%
R2
10k
R7
C1
0.1uF
C9
10uF
C2
0.1uF
C3
0.1uF
C4
22pF
C5
22pF
C6
0.1uF
C7
0.1uF
C8
0.1uF
16MHz
D1
NRVUS120VT3G
CT-1205CL-SMT
LS1
R8
1k
T1
BC849
R4
330ohm
R5
330ohm
R3
330ohm
X3
22-23-2041
22-23-2021
GREEN-BUTTON
BLACK-BUTTON
RED-BUTTON
BAT_AD
BUZZER
MOSI
MISO
SCK
RESET
DIN
DOUT
CLK
CSN
U$1
U$2
U$3
U$4
U$5
U$6
VCC
GND
The value of R7 sets the current through the LEDs. Its value depends on operating voltage and the forward voltage of the LED. Refer to the datasheet to determine value.