
HMI DESIGNING

Updated 01 Dec. 2022

OPENING HMI

- Check all the errors on motors and main board.
- Check all of motor numbers are responding.
- Energize the motors one by one.
- If there is an error, ask user to open/close HMI. “Continue without energizing the motors”
- If there is an error, do not energize the motors.

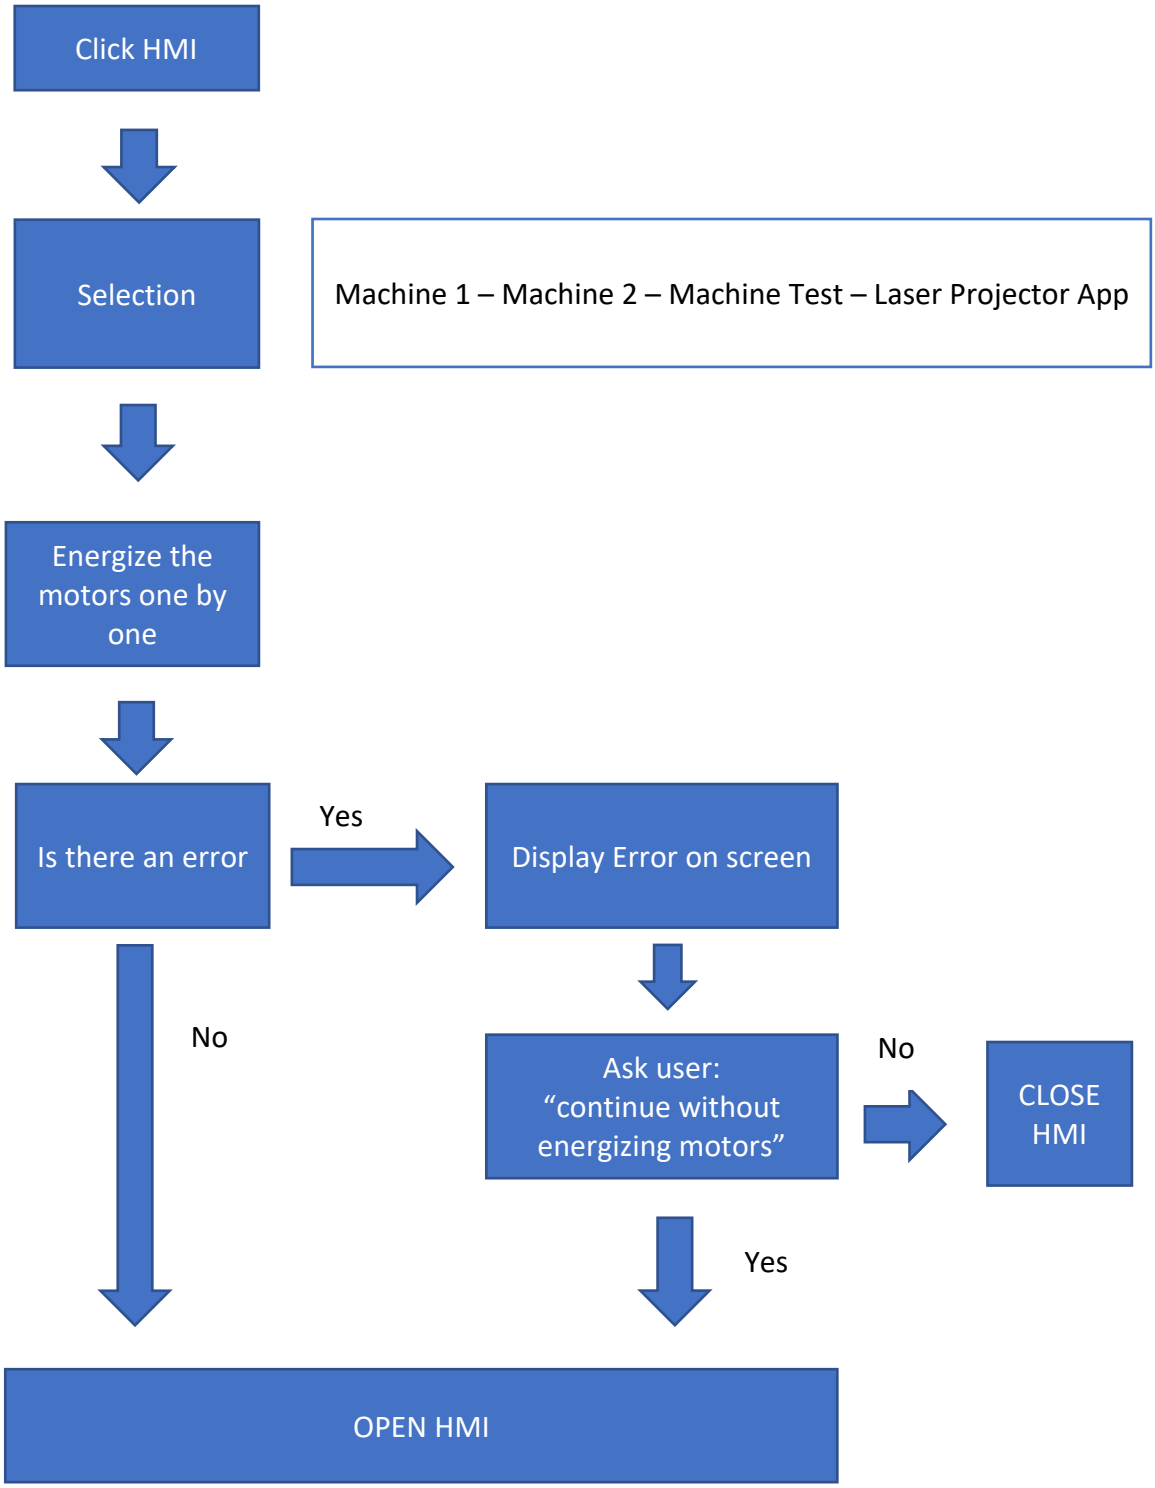


- The first machine is being defined from motor number 1 to 405.
- The second machine is being defined from motor number 406 to 485.
- 1st machine active →2nd machine is not active

  2nd machine active→1st machine is not active

- Motor Number 1 is being directly connected to main PCB.


Communication cable connections shown below:

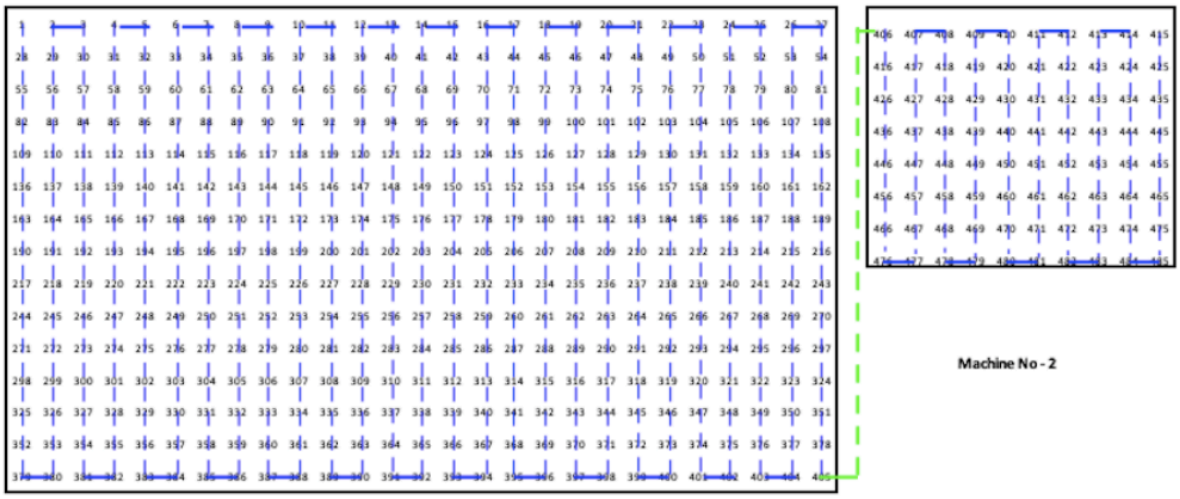

Machine No - 1

Machine No - 2

The numbering of the motors shown below:

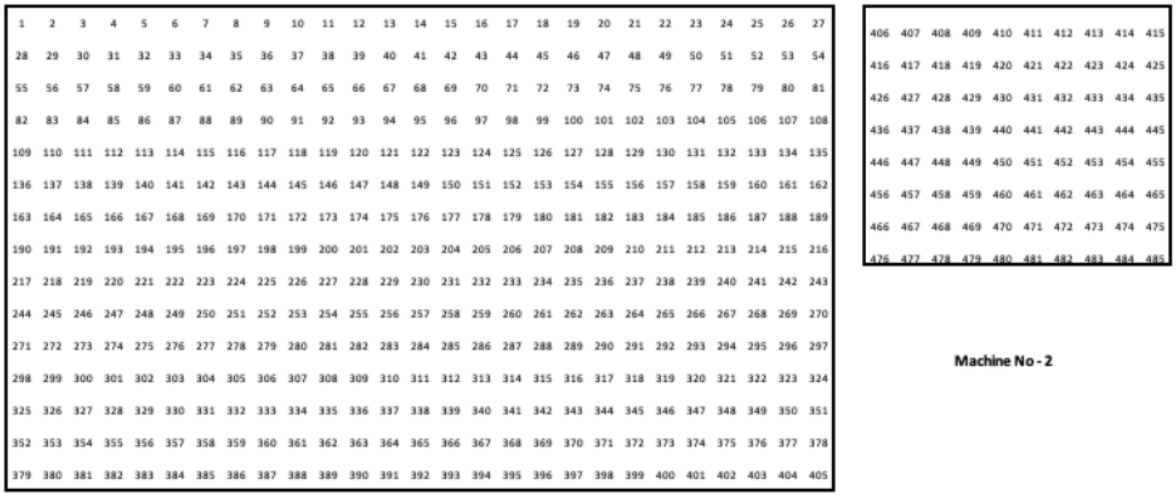

Machine No - 1

Machine No - 2


ERRORS

Write the errors over the file: the settings/errors.txt


Error Date: day/month/year
Error Time: hour.min.sec
Error Explanation:
Error Code/Name:

Errors:

1- Power Error (Show: “Motors couldn’t be energized”). More than one motor are not powered up.

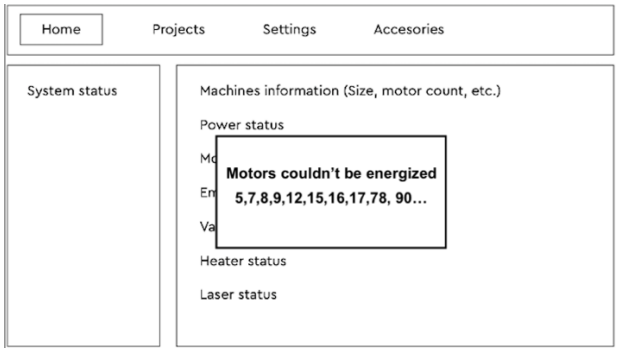

2- Motor Power Error (Show: “Motor number … was not powered”)

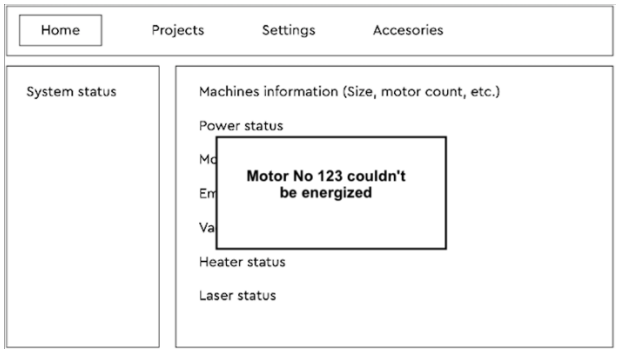

3- Motor Communication Error (Show: “Motor number … is not responding”)
4- Main Board Error (Show: “Main board not responding”)
5- Motor Number Repeating (Show: “Motor number … is repeating”)
6- Stalling Error (Show: “Motor number … stalled. It is delayed”)
7- Motor Invalid Error:
It is the error that motor is not working and the error is not defined.
8- Laser Calibration Error
9- Laser Temperature Error
10- Laser Invalid Error