
Step 1. Wiring

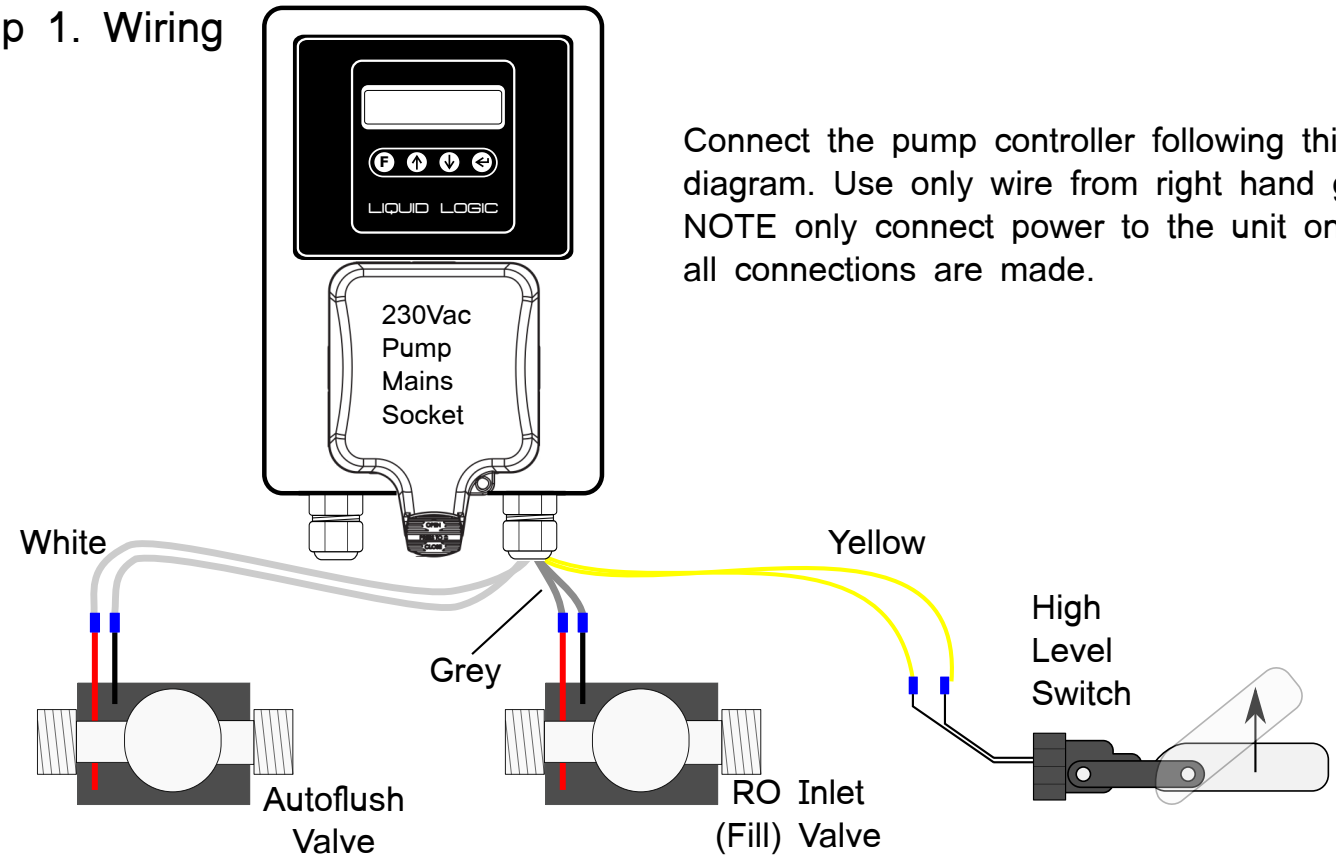


Connect the pump controller following this diagram. Use only wire from right hand gland. NOTE only connect power to the unit once all connections are made.

Step 2. Filling

To start filling the tank simply press the 'F' (Fill) button briefly. This will activate the RO inlet solenoid valve, allowing water to fill the tank, until the float switch detects that the tank is full.

Press 'F' (Fill) button to start filling.
System will open Autoflush valve for 5 mins (in every hour) to clean RO.

The Autoflush valve will then close when flushing has finished and controller will continue to fill via the RO Inlet valve. The mains socket will now turn on the 230Vac booster pump.

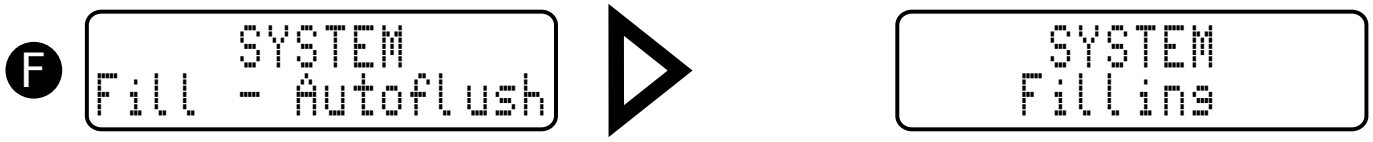

When the tank water level rises sufficiently to activate the level switch, filling is stopped. All valves are closed.



To manually stop the tank filling, press the 'F' (Fill) button briefly. The display will remove the 'Fill' message.



Note 1: The solenoid valve will be turned off if the unit detects a loss of mains water pressure (below 10 PSI).