Use the upgrade dog to upgrade the AP82 series products


1. Download the prepared Code Bin or Flash Bin file Down Loader to the Flash of the upgrade dog.

2. First connect the Micro USB port of the upgrade dog to supply power to the upgrade dog.

3. Connect the USB male connector of the upgrade dog to the product's USB port (the GPIO_B2/B3 port of the chip).

4. Power on the PCBA of the product to automatically upgrade. During the upgrade process, the green light flashes and the upgrade is successful and the green light is on continuously.

Bin file Down Loader interface, please click to upgrade to download

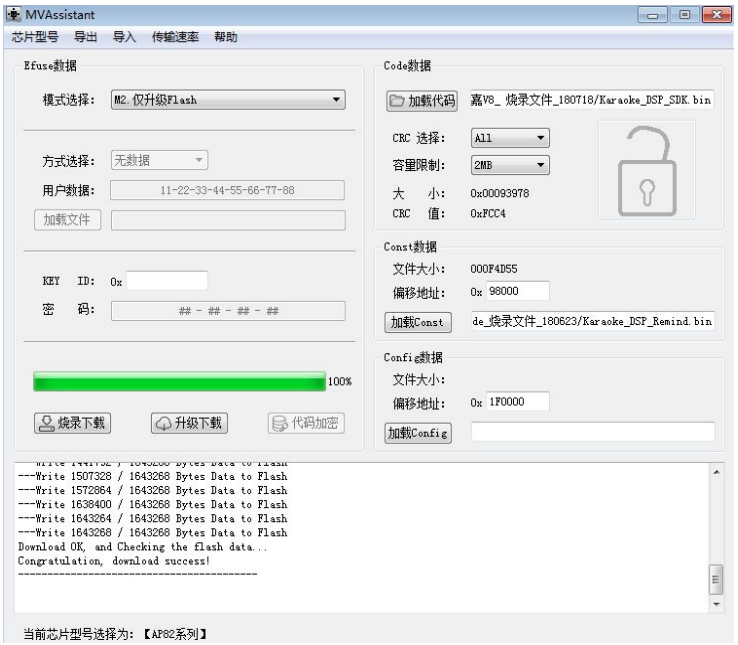

The connection method of the upgrade dog is as shown in the figure below

