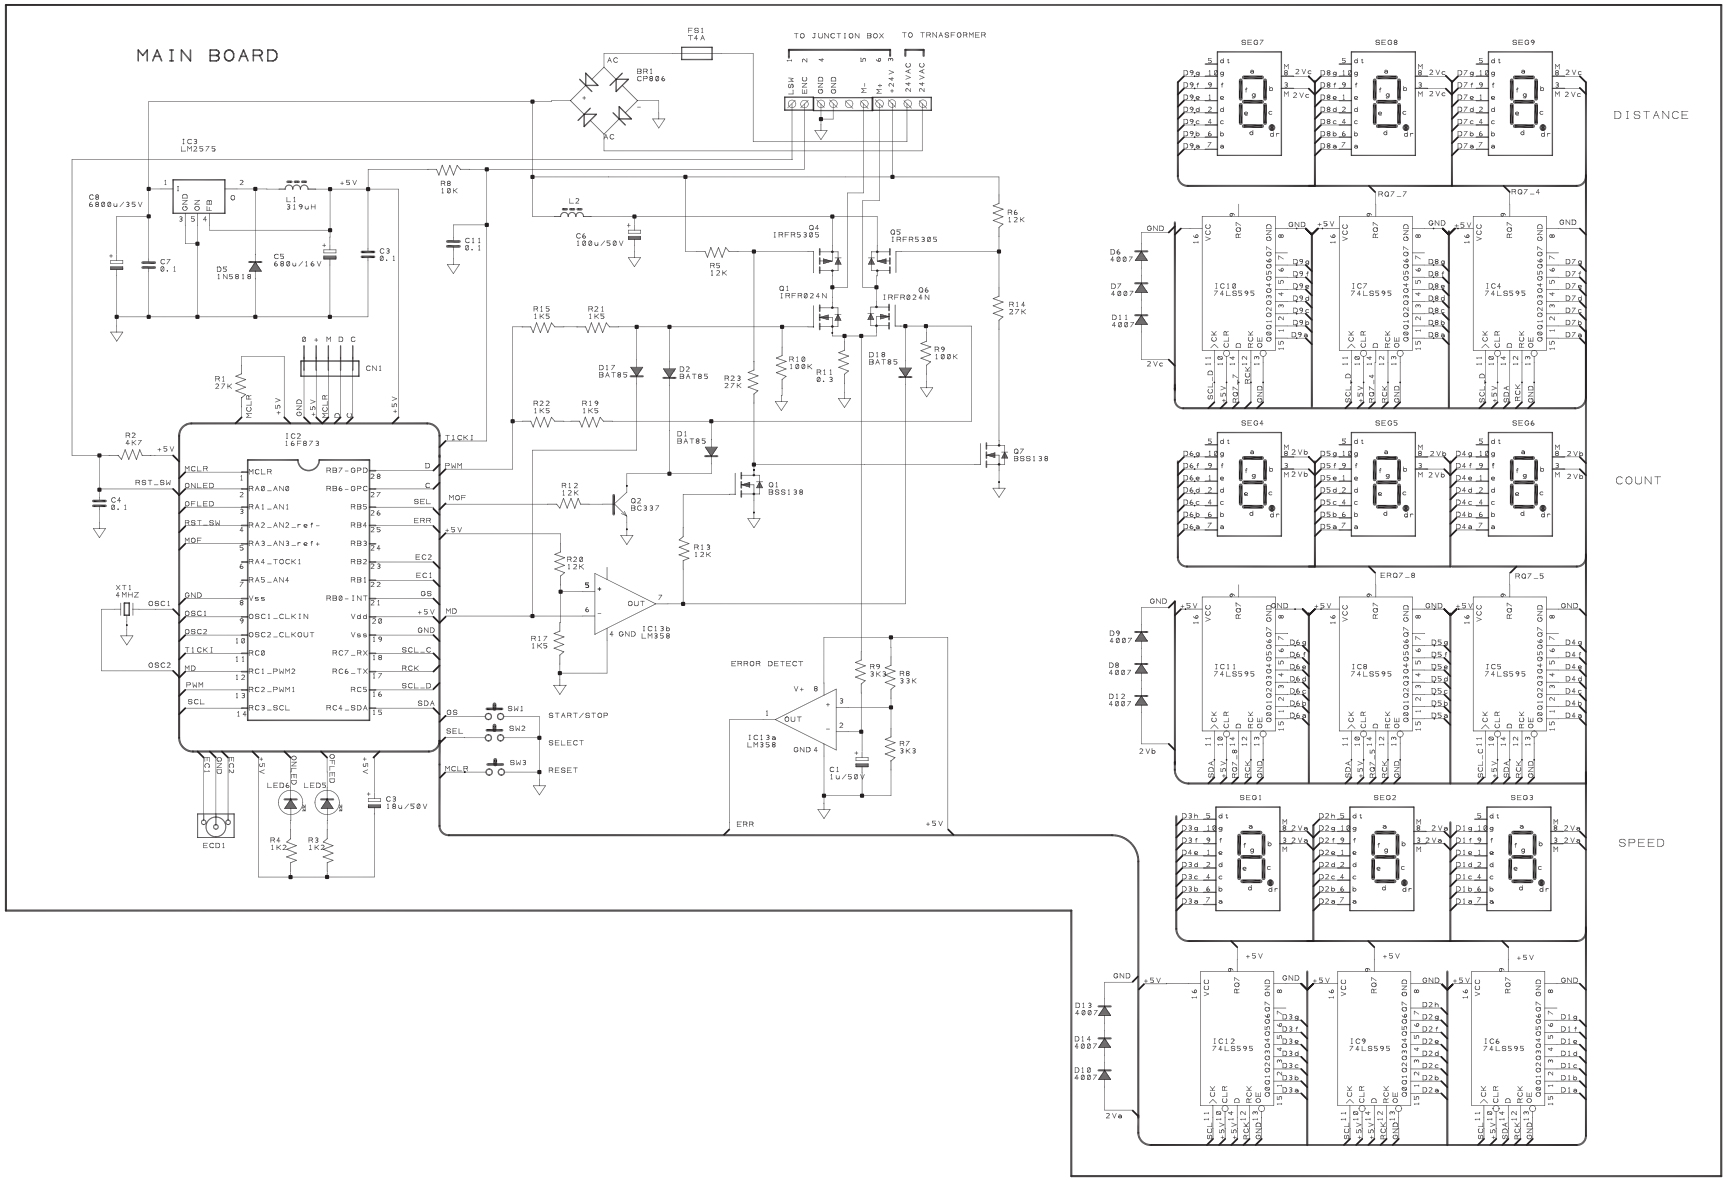

MAIN BOARD
TO JUNCTION BOX
TO TRNASFORMER
DISTANCE
COUNT
SPEED
START/STOP
SELECT
RESET
ERROR DETECT
DC SERVO DRIVER