
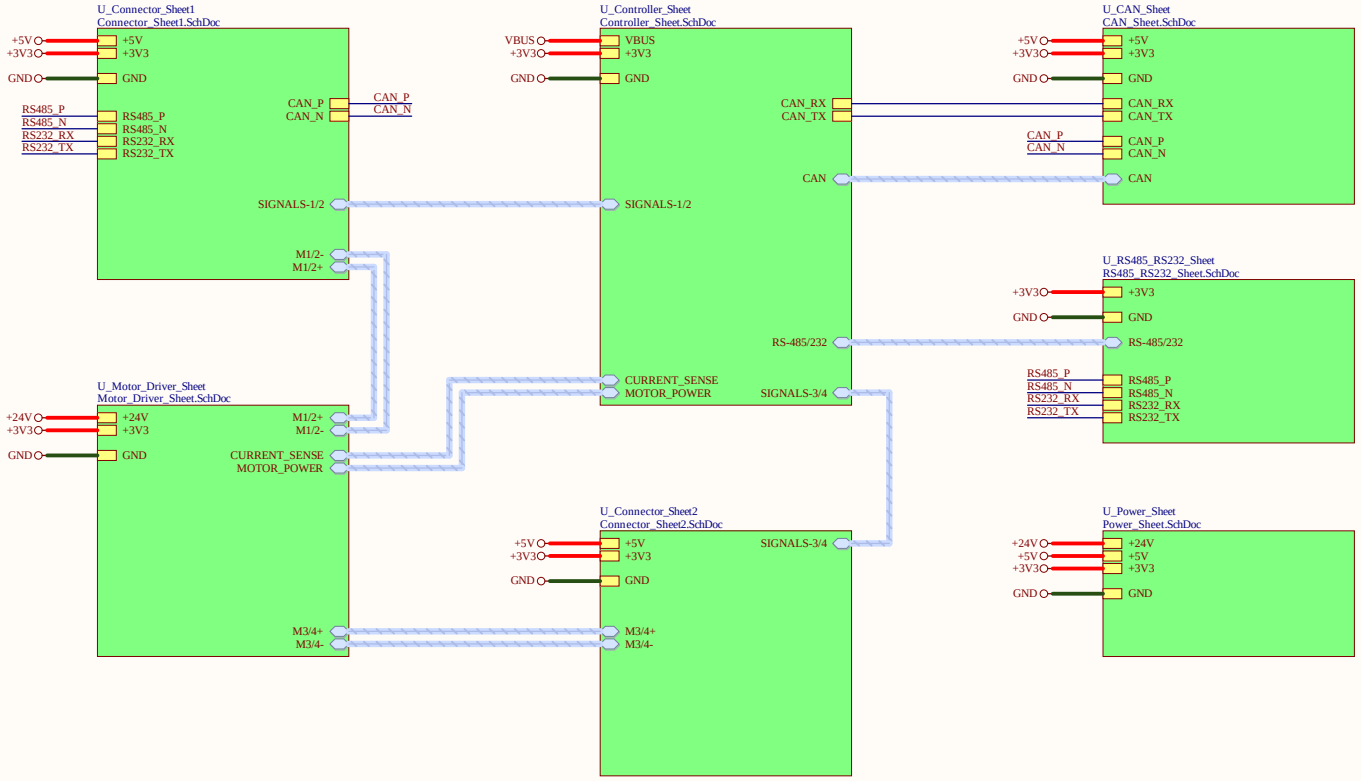



Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.

Title: Top_Sheet.SchDoc	
File: BLDC-Board-v1.0.PrjPcb	
Date: 8/8/2024	Page Num: 1
Drawn By: Huzaifa Ali	Page Total: 8

24V INPUT

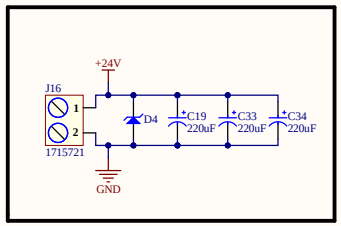


5V 3A BUCK

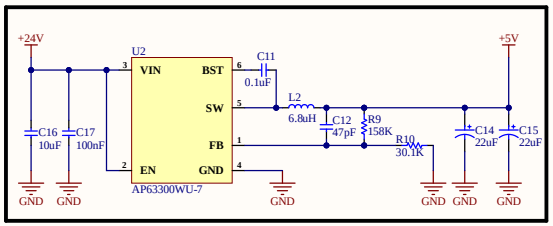


3A

3.3V 1.5A BUCK

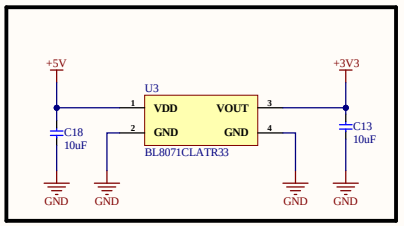



1.5A

TEST POINTS

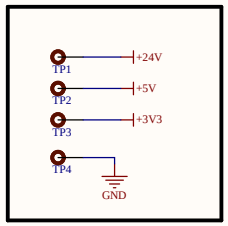

LEDs

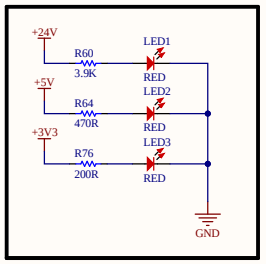





Cannot open file D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg. File does not exist.

Title: Power_Sheet.SchDoc	
File: BLDC-Board-v1.0.PrjPcb	
Date: 8/8/2024	Page Num: 2
Drawn By: Huzaifa Ali	Page Total: 8


CRYSTAL

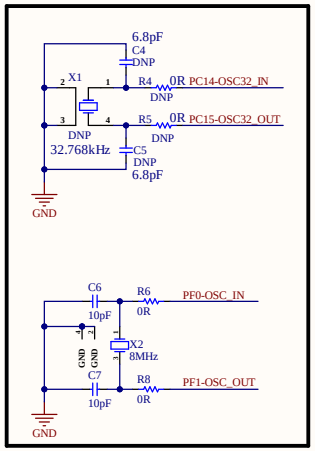


DEBUG

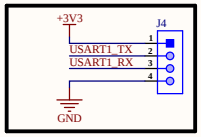


SWD PORT

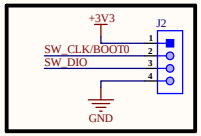


BOOT

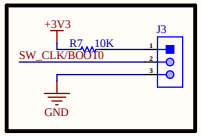

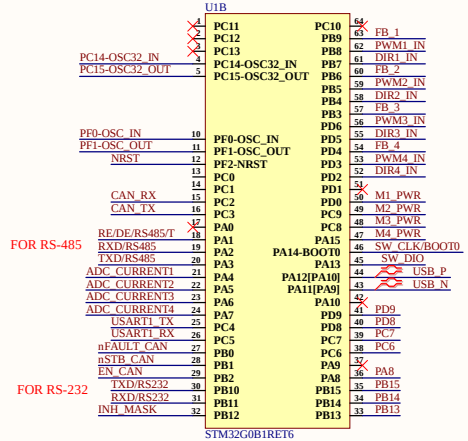


FOR RS-485


FOR RS-232

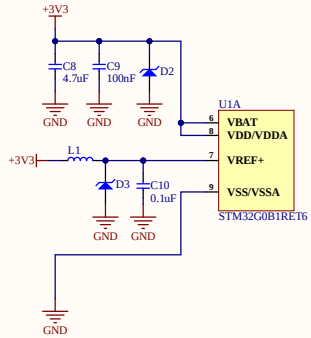


USB

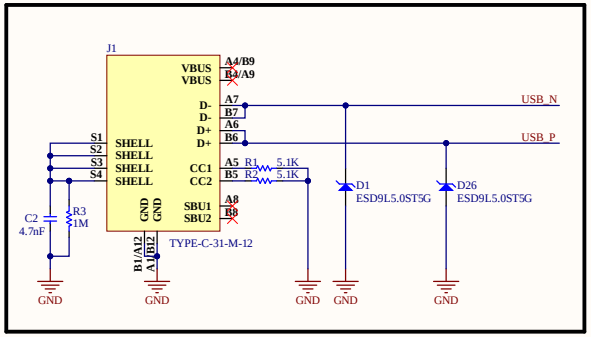


RESET

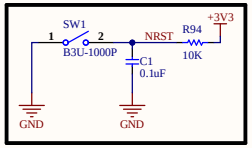



DIO ADC

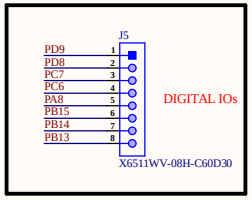


DIGITAL IOs REQUESTED BY CLIENT

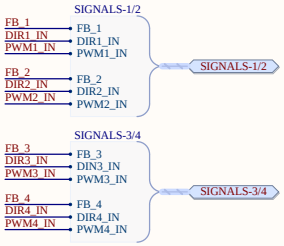

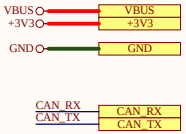

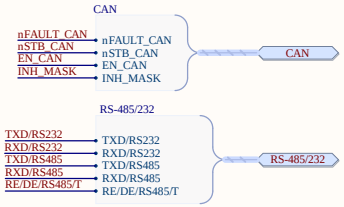


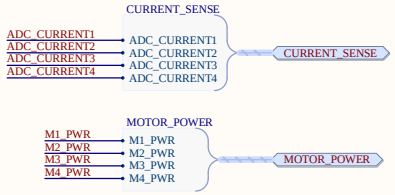


Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.

Title: Controller_Sheet.SchDoc	
File: BLDC-Board-v1.0.PrjPcb	
Date: 8/8/2024	Page Num: 3
Drawn By: Huzaifa Ali	Page Total: 8


CAN BUS

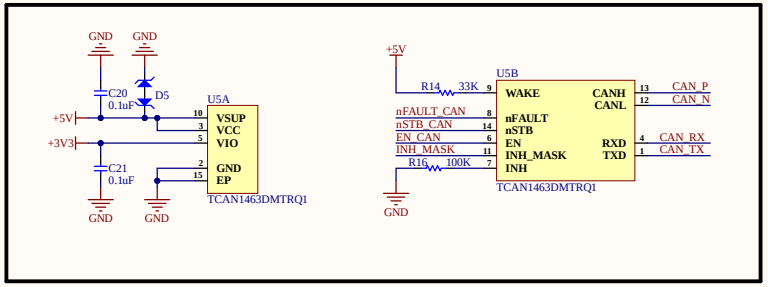


CAN TERMINATION

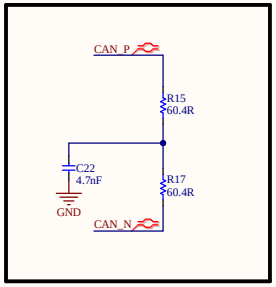









Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.

Title: CAN_Sheet.SchDoc	
File: BLDC-Board-v1.0.PrjPcb	
Date: 8/8/2024	Page Num: 4
Drawn By: Huzaifa Ali	Page Total: 8

RS485 TO UART

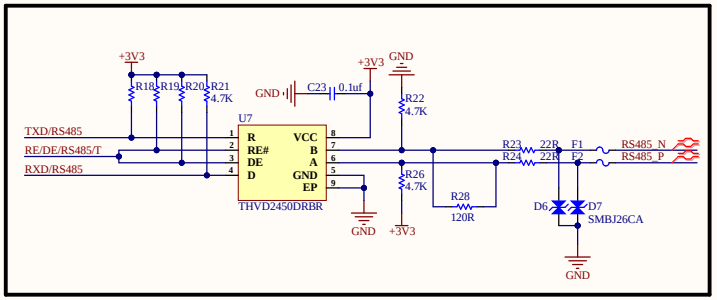

RS232 TO UART

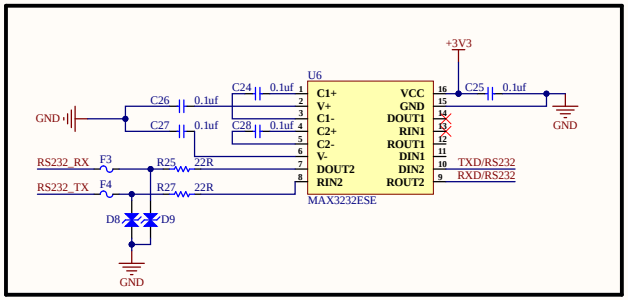

RS-485/232

TXD/RS232 → TXD/RS232
RXD/RS232 → RXD/RS232
TXD/RS485 → TXD/RS485
RXD/RS485 → RXD/RS485
RE/DE/RS485/T → RE/DE/RS485/T

→ RS-485/232

RS485_N → RS485_N
RS485_P → RS485_P

RS232_RX → RS232_RX
RS232_TX → RS232_TX


+3V3 → +3V3

GND → GND


Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.

Title: RS485_RS232_Sheet.SchDoc		
File: BLDC-Board-v1.0.PrjPcb		
Date: 8/8/2024	Page	Num: 5
Drawn By: Huzaifa Ali	Page	Total: 8

CURRENT SENSE

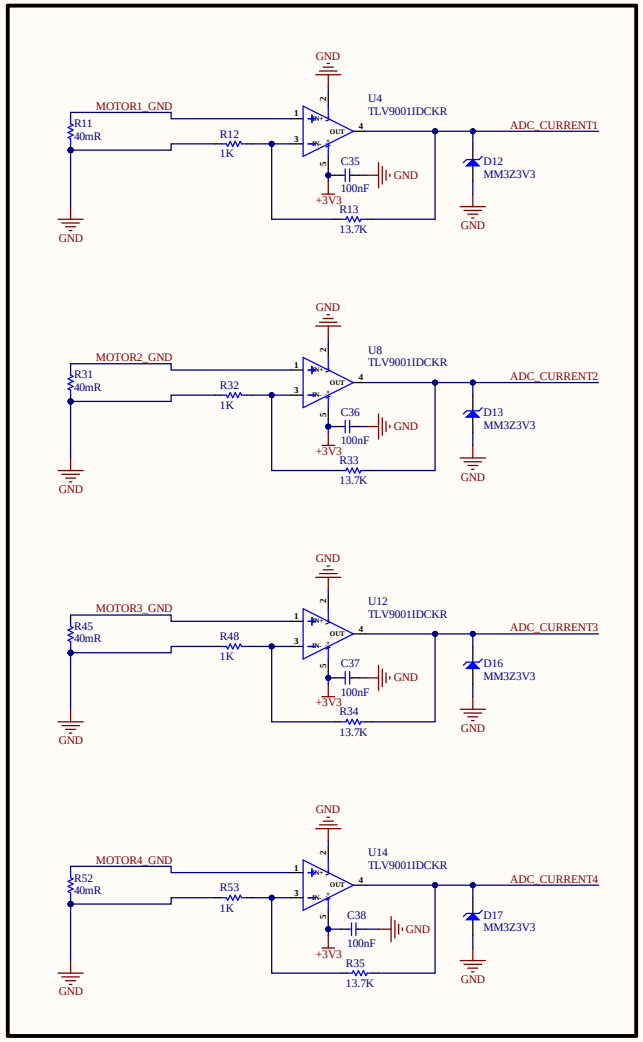

MOTOR POWER REALY

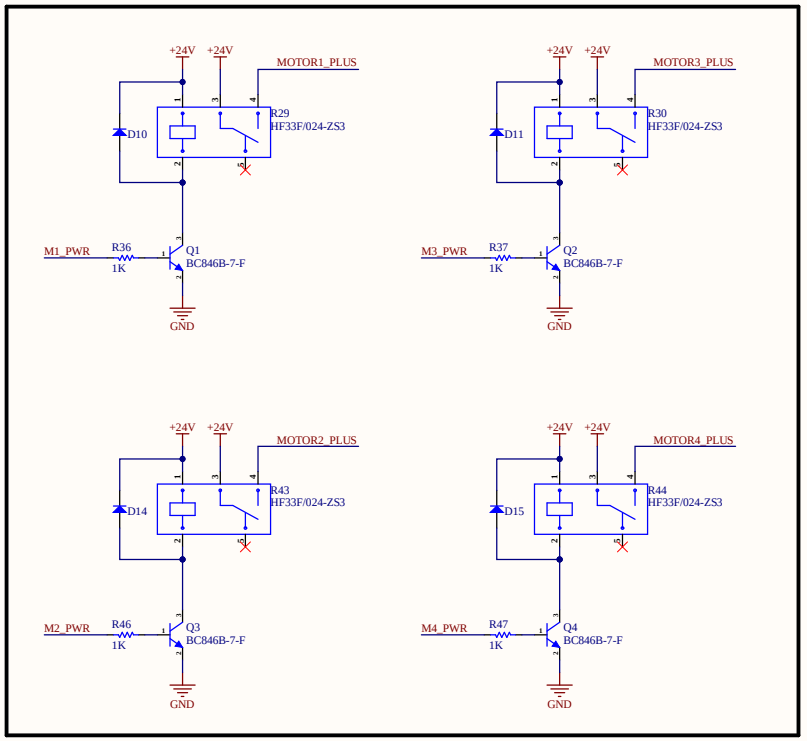

Vout = (1+ 13.7k/1k) * 0.16v(max)
@4A
Vout = 3.19V

MOTOR_POWER
M1_PWR
M2_PWR
M3_PWR
M4_PWR
MOTOR_POWER

M1/2-
MOTOR1_GND
MOTOR2_GND
MOTOR1_GND
MOTOR2_GND
M1/2-

M1/2+
MOTOR1_PLUS
MOTOR2_PLUS
MOTOR1_PLUS
MOTOR2_PLUS
M1/2+

M3/4-
MOTOR3_GND
MOTOR4_GND
MOTOR3_GND
MOTOR4_GND
M3/4-

M3/4+
MOTOR3_PLUS
MOTOR4_PLUS
MOTOR3_PLUS
MOTOR4_PLUS
M3/4+


CURRENT_SENSE
ADC_CURRENT1
ADC_CURRENT2
ADC_CURRENT3
ADC_CURRENT4
ADC_CURRENT1
ADC_CURRENT2
ADC_CURRENT3
ADC_CURRENT4
CURRENT_SENSE


+24V
+3V3
GND
+24V
+3V3
GND

Cannot open file
D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg.
File does not exist.


Title: Motor_Driver_Sheet.SchDoc	
File: BLDC-Board-v1.0.PrjPcb	
Date: 8/8/2024	Page Num: 6
Drawn By: Huzaifa Ali	Page Total: 8


MOTOR SIGNALS

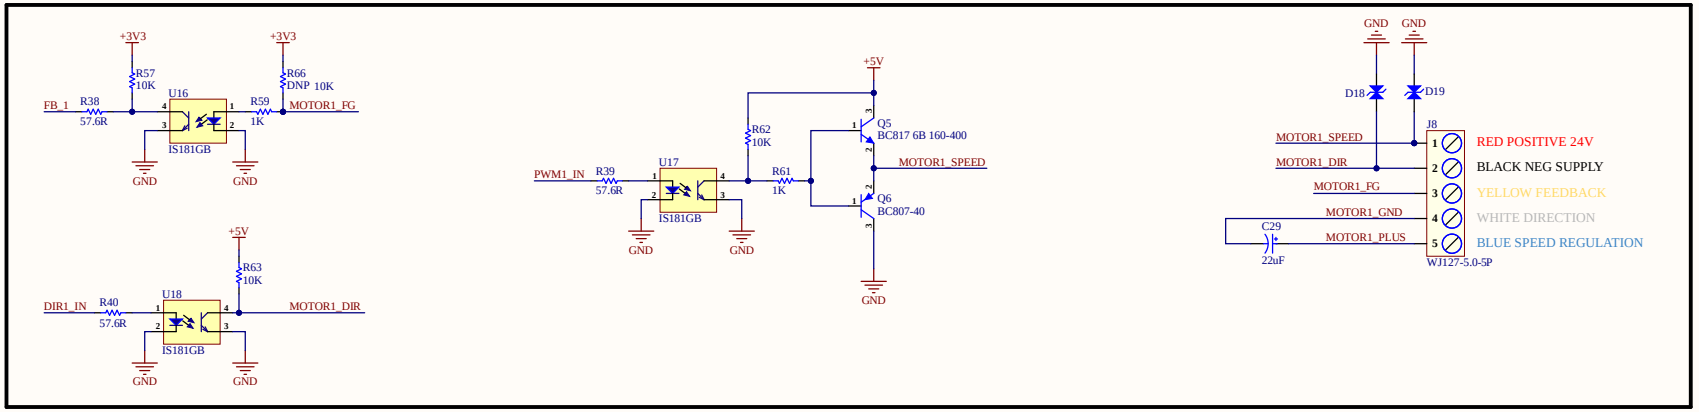


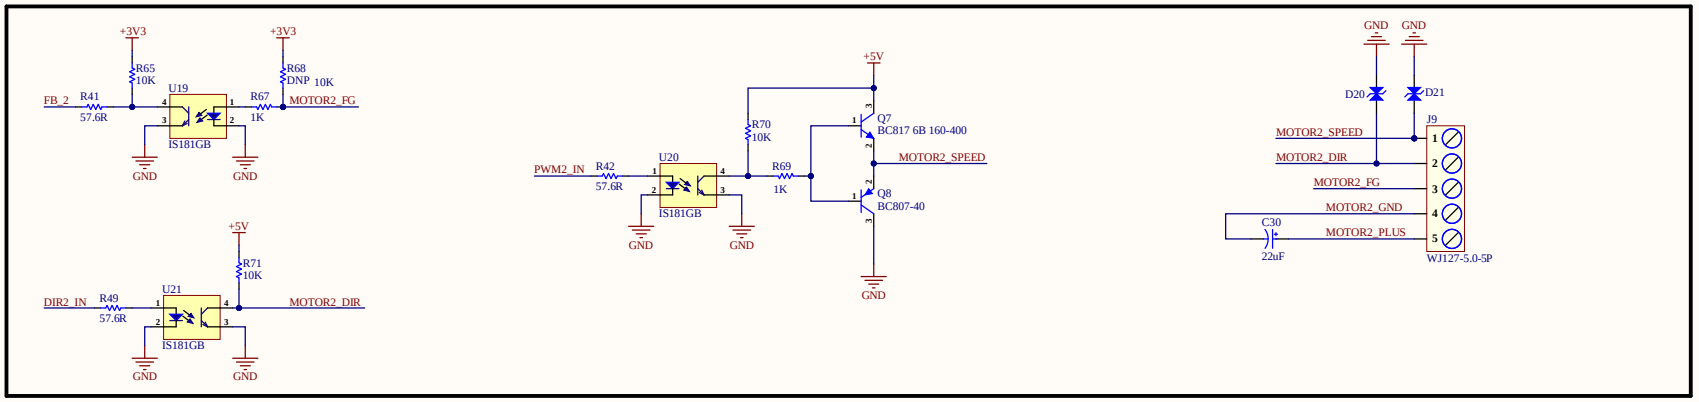



CAN RS-485CAN RS-232

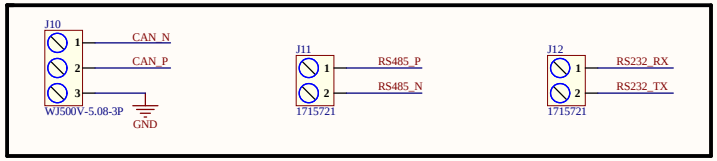











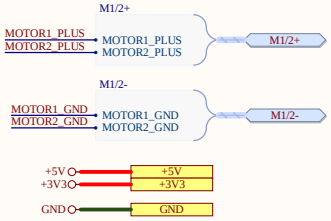



Cannot open file D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg. File does not exist.

Title: Connector_Sheet1.SchDoc	
File: BLDC-Board-v1.0.PrjPcb	
Date: 8/13/2024	Page Num: 7
Drawn By: Huzaifa Ali	Page Total: 8

MOTOR SIGNALS

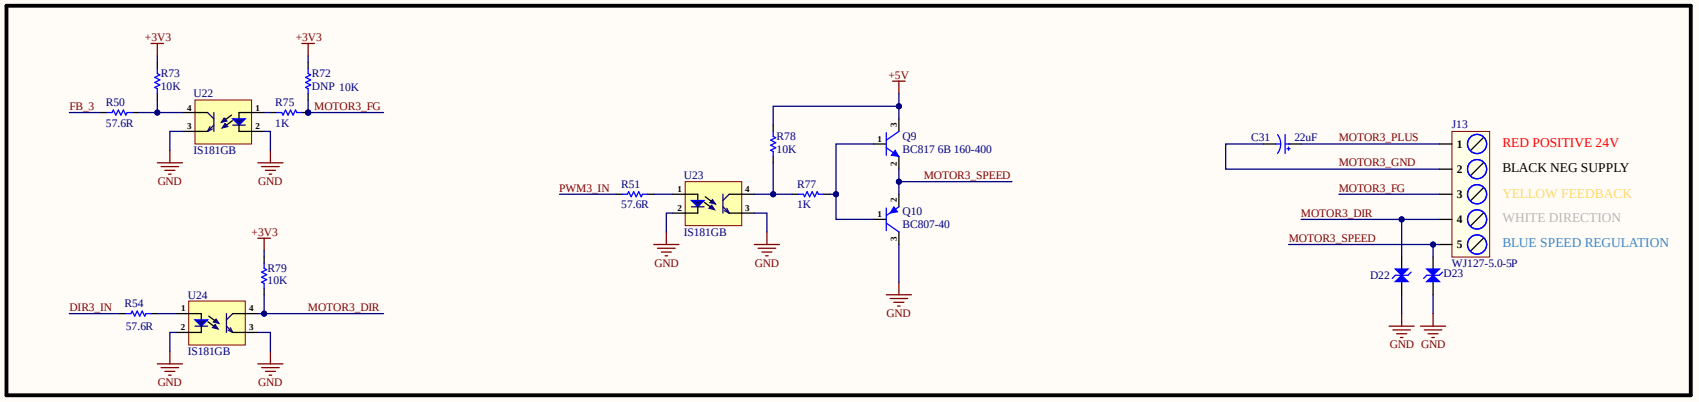

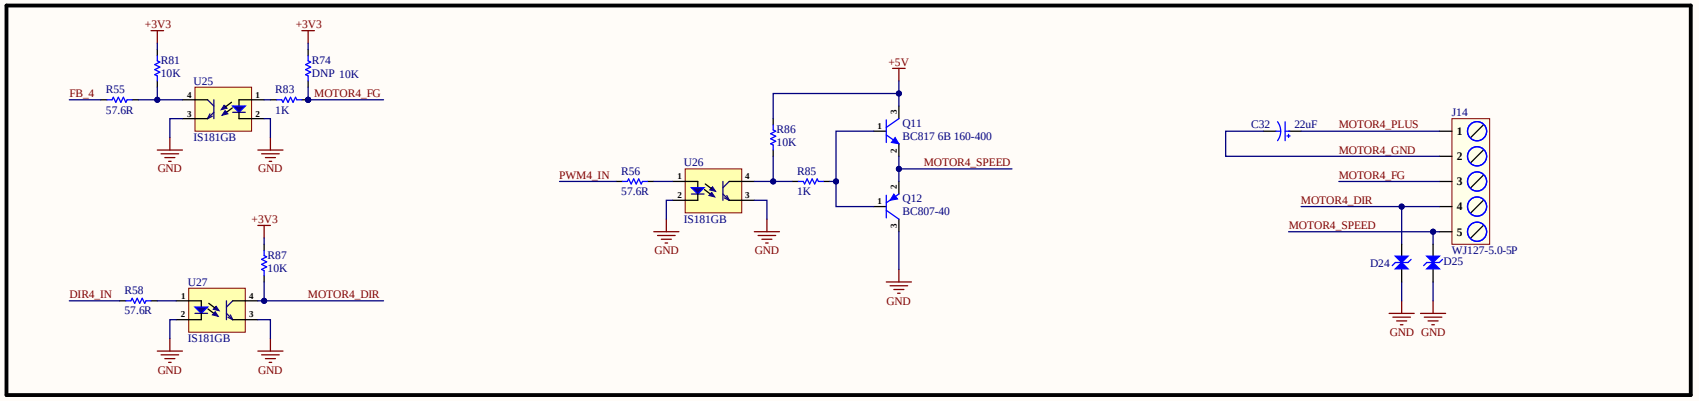



Cannot open file D:\eSpark-Consultants\eSpark-Hardware\Altium Template\espark-consulting-group-800x300.jpg. File does not exist.

Title: Connector_Sheet2.SchDoc	
File: BLDC-Board-v1.0.PrjPcb	
Date: 8/13/2024	Page Num: 8
Drawn By: Huzaifa Ali	Page Total: 8