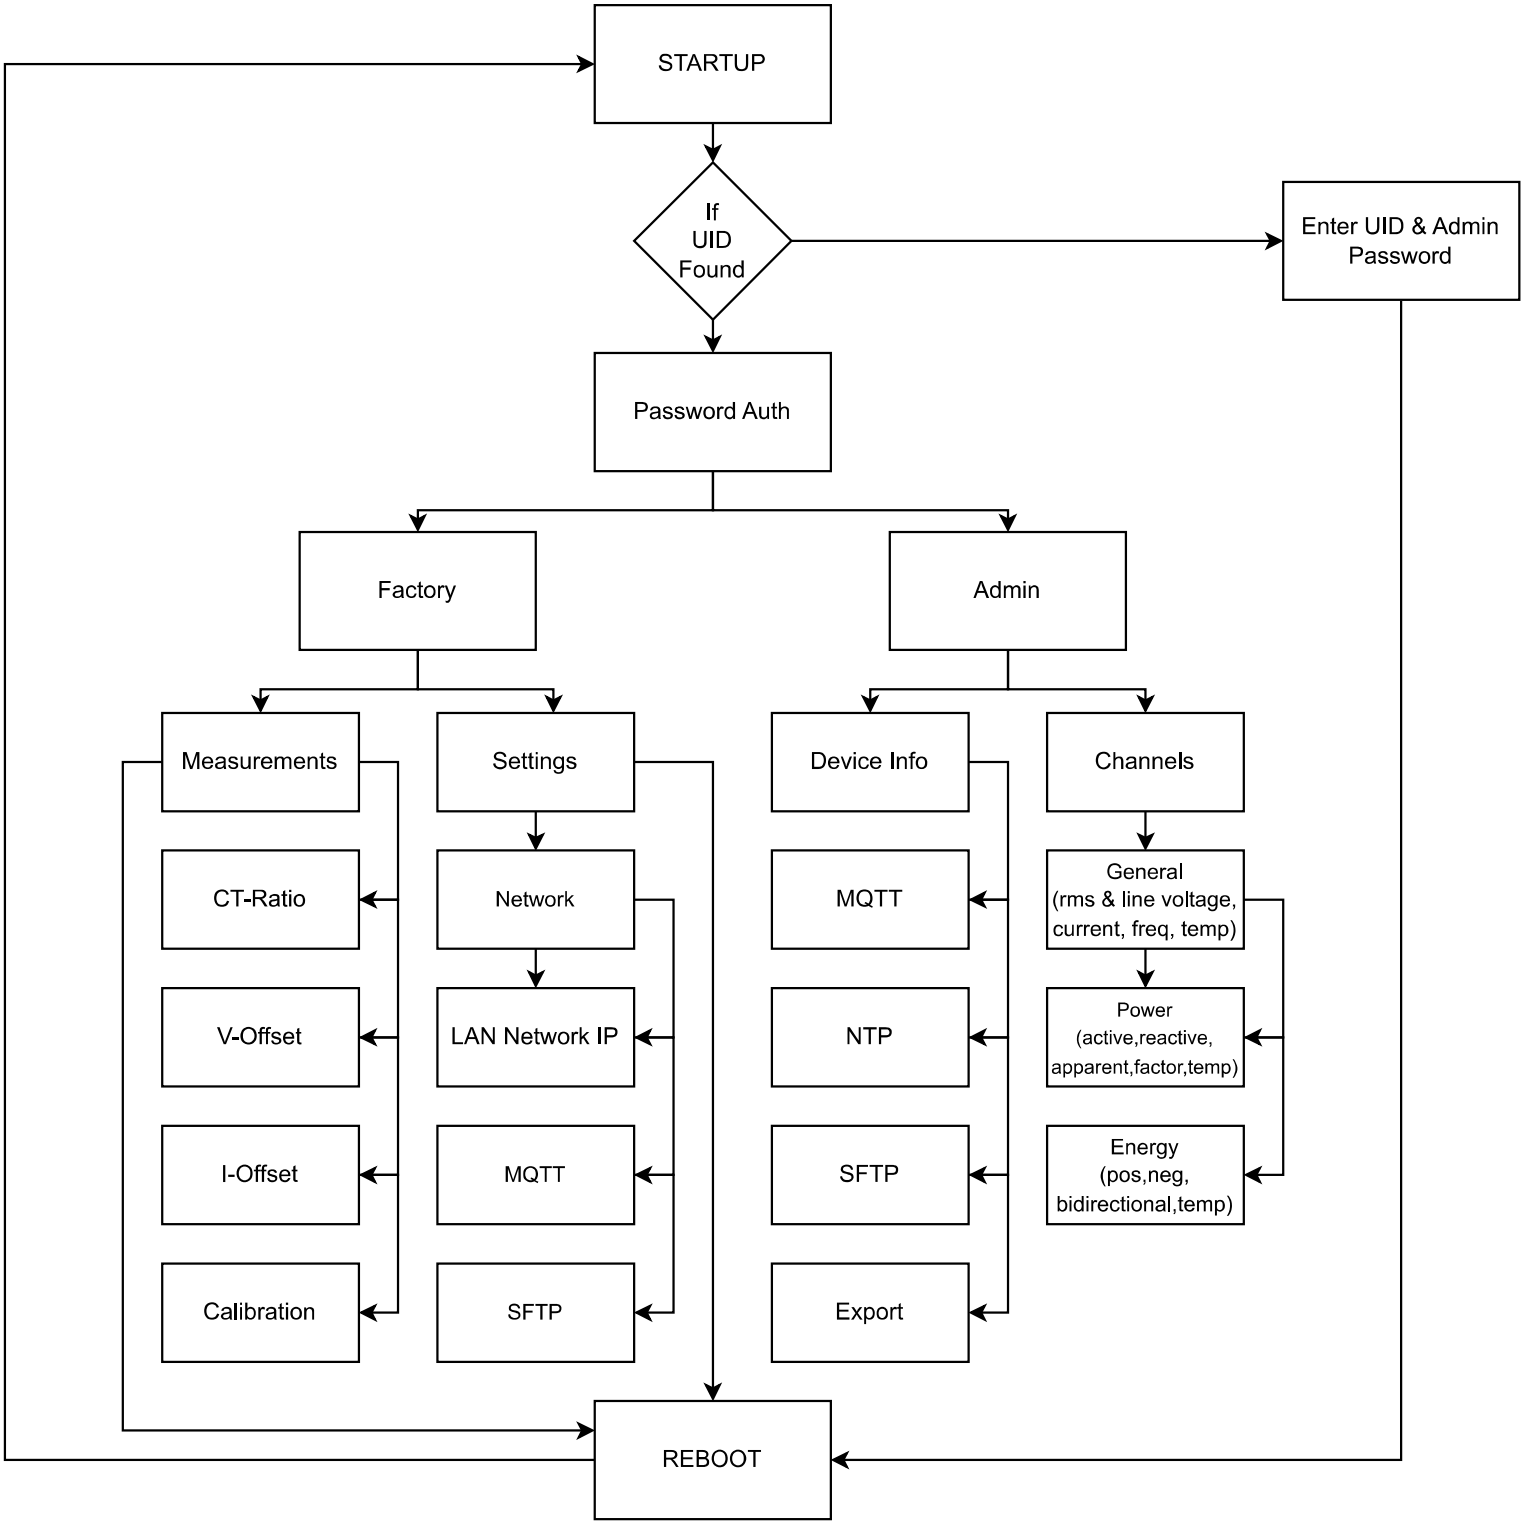
STARTUP
If UID Found
Enter UID & Admin Password
Password Auth
Factory
Admin
Measurements
Settings
Device Info
Channels
CT-Ratio
Network
MQTT
General (rms & line voltage, current, freq, temp)
V-Offset
LAN Network IP
NTP
Power (active,reactive, apparent,factor,temp)
I-Offset
MQTT
SFTP
Energy (pos,neg, bidirectional,temp)
Calibration
SFTP
Export
REBOOT