## Settings Menu Cont'd

**PRESS AND HOLD ENTER TO EXIT SETTINGS MENU**

Press up to display the next settings menu item, 'Pressure Threshold'. Press enter to change the Pressure Theshold.

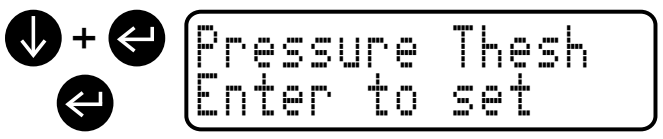


Use up/down to change.
'Off' Disables pressure sensor warnings
'Cal' calibrates for a new filter, press enter to start calibration. Note: you can adjust this value manually with up/down. Press enter again to go back to the settings menu.

---

Press up to display the next settings menu item, 'Total Flow Threshold'. This sets the water life warning for the RO. Press enter to set this value. eg. 600KL

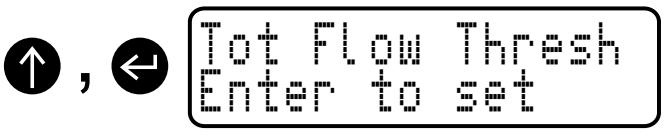


Use up/down to set the total water use which will give a warning when reached. Then press enter again to go back to the settings menu.

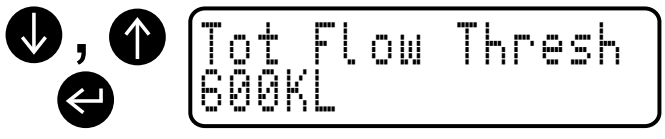


---

Press up to display the next settings menu item, 'TDS RO Limit'. TDS readings over this value from the RO will stop filling. Press enter to change the 'TDS RO Limit'.

Use up/down to set.
'Off' disables TDS control.
Set from 1-50 TDS. Then press enter again to go back to the settings menu.

---

Press up to display the next settings menu item, 'TDS DI Limit'. TDS readings over this value from the DI will stop filling. Press enter to change the 'TDS DI Limit'.

Use up/down to set.
'Off' disables TDS control.
Set from 1-10 TDS. Then press enter again to go back to the settings menu.

---

Press up to display the next settings menu item, 'Battery Shutdown'. This enables or disables shutdown if the battery voltage goes below 10.5V. Press enter to change.

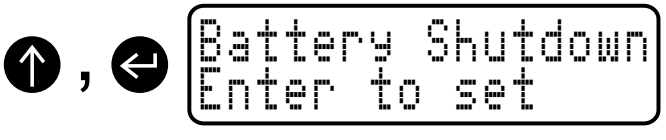


Use up/down to set.
'Off' disables battery shutdown
'On' enables battery shutdown. Enter saves.
**PRESS AND HOLD ENTER TO EXIT.**