
Step 1. Wiring

Connect the pump controller following this diagram.
NOTE only fit the fuse once all connections are made.

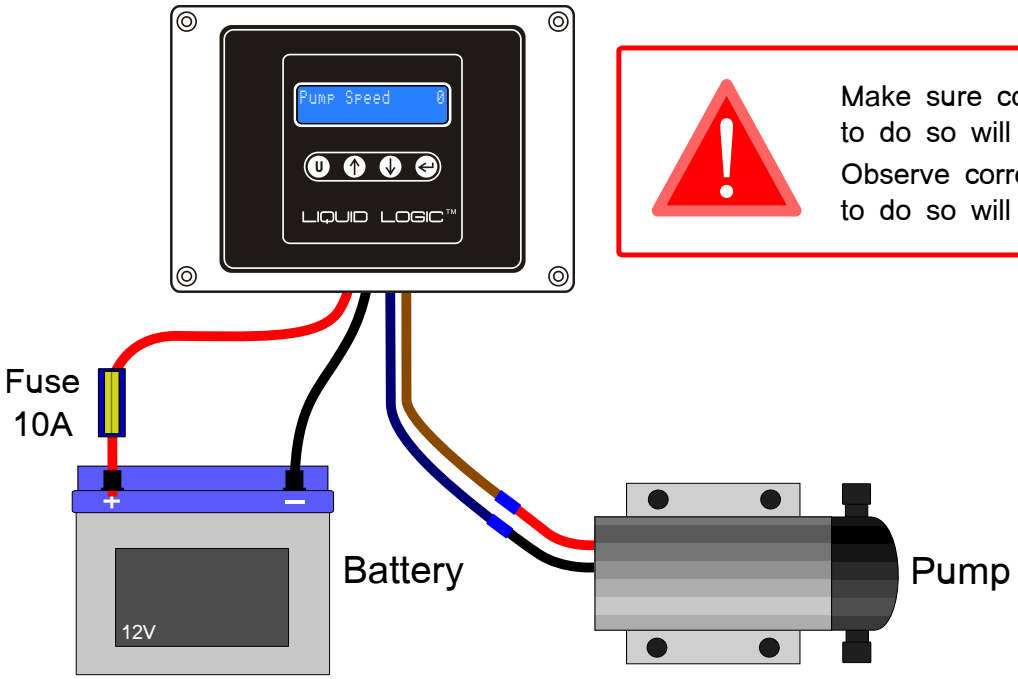

Make sure correct fuse is fitted inline. Failure to do so will result in damage to the unit.
Observe correct battery polarity. Failure to do so will result in damage to the unit.

Step 2. Set Up - AutoCal


Connect your hose and brush to the pump.

Turn on the controller by pressing the user, up or down button. Keep the button held until the display lights up.

Press up until the display shows 50.




Press and hold up and enter to go into 'Dead End' calibration.

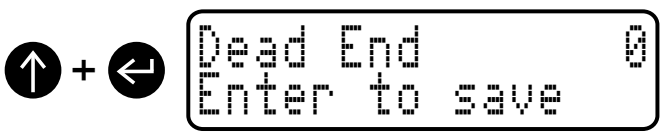


Press down to select AutoCal, then enter to start.



The controller indicates it is calibrating.

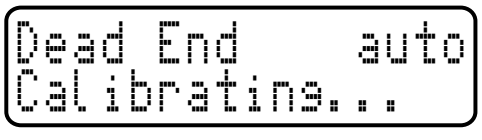

After several moments the calculated Dead End value is shown. Press enter to save.

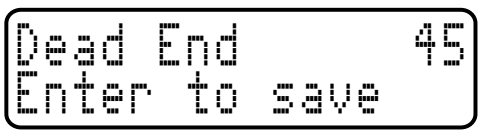

To adjust Dead End value manually follow these steps and use up and down keys.

Your controller is ready to deliver water to your pole and you are ready to start cleaning windows.