
Use


Press up or down to set a suitable flow of water.



Press enter to display the current TDS values after the RO and after the DI.

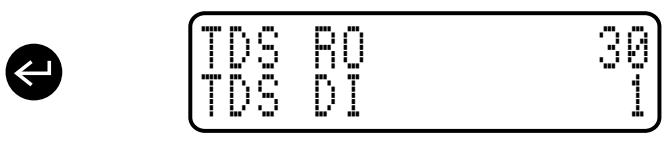


Press enter again to display:
Leisure battery voltage. Above 11V is ok
Vehicle voltage. Should increase when engine is running.

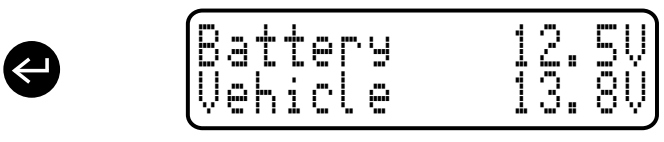

Press enter again to display:
Total water used since last pre-filter change and zeroing of counter.
Overall amount of water used since install.



Press enter again to display:
Pressure of mains water in PSI.
Temperature of water to hose (degrees C).

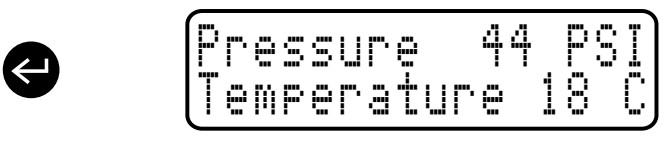

Press enter again to go back to pump speed (in percentage 0-99%)

