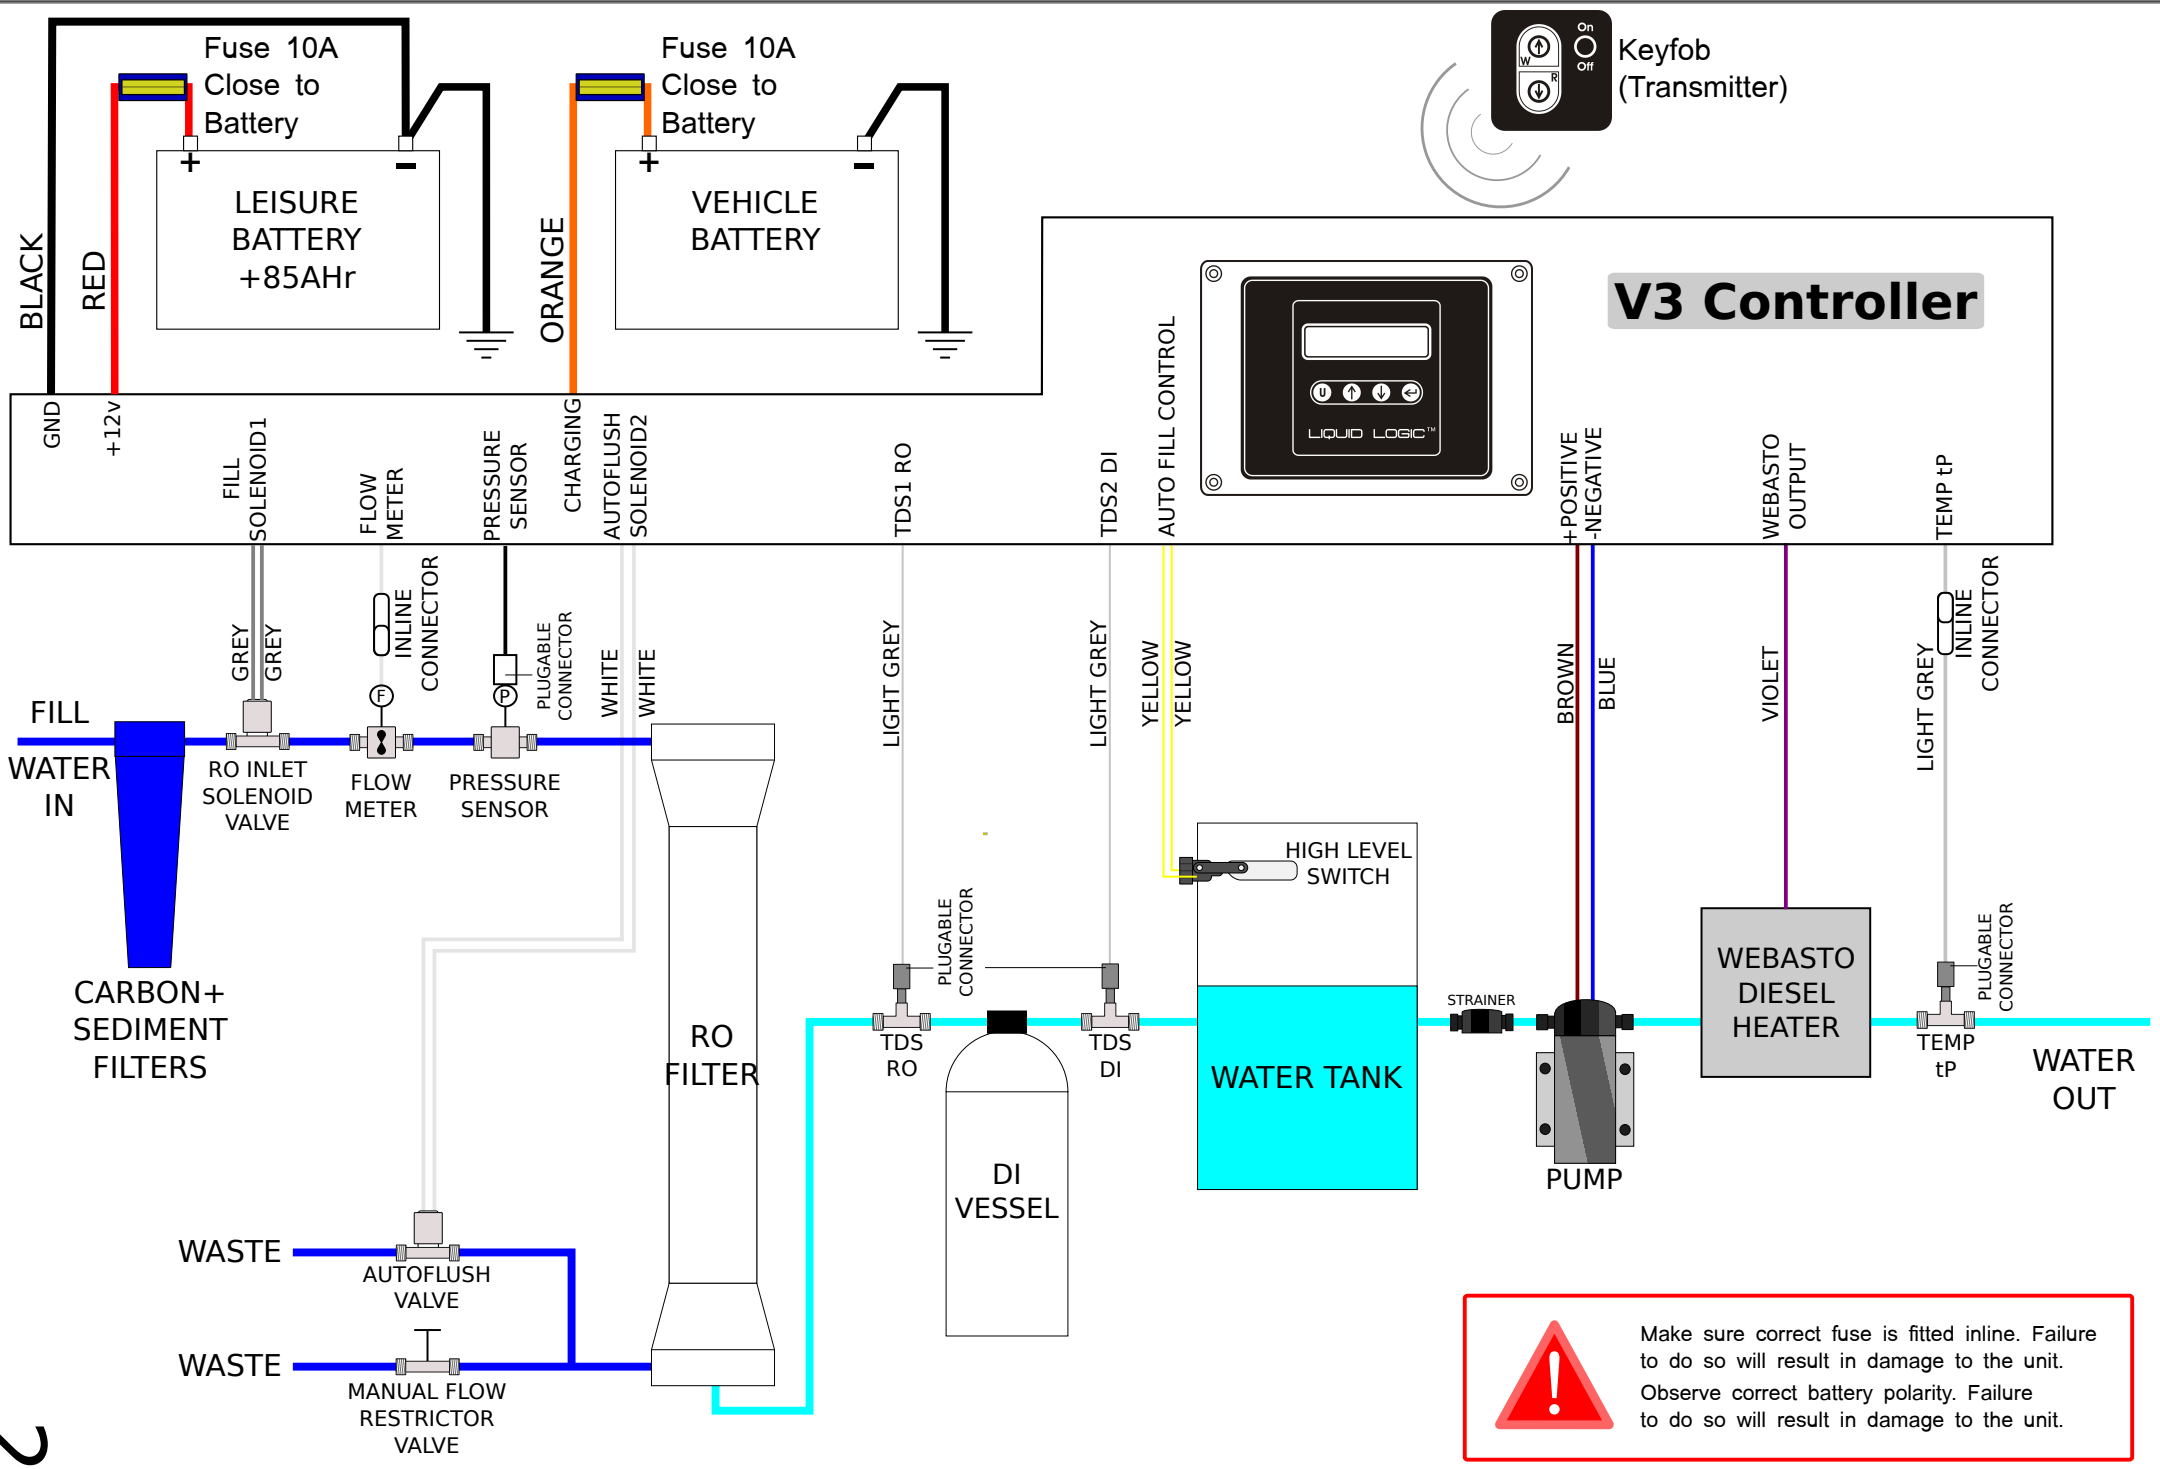


Make sure correct fuse is fitted inline. Failure to do so will result in damage to the unit.

Observe correct battery polarity. Failure to do so will result in damage to the unit.