Step 1. Fitting Instructions

ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE OPENING UNIT.
ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE CONNECTING THE PUMP

This S2 unit is supplied already wired. There is no need to disconnect any wires. Follow these instructions carefully and refer to the wiring diagram.

IT IS RECOMMENDED THAT YOUR S2 IS FITTED AGAINST A WALL OR SIMILAR VERTICAL SURFACE.

1. Ensure the S2 is NOT PLUGGED into the MAINS SUPPLY.

2. Remove the top cover by loosening the four corner screws. These screws are quarter turn. Using a large pozidrive screw driver, push the screw down and through a quarter turn then release. The screw should pop up. DO NOT continuously turn.

3. Carefully remove the top cover. Replace any keycaps on the controller switches carefully.

4. Screw unit to the wall or vertical surface through the four ready drilled holes in the corners of the back box.

5. Carefully replace the top cover and tighten the four corner screws quarter turn screws, using the reverse procedure to instruction 2. above.


You are now ready to control your pump.

NOTE: Only switch on MAINS SUPPLY to the 230Vac 5A Mains Plug once front cover has been re-fitted.

DISCLAIMER
Unit must be installed by a competent electrician or electrical engineer. Failure to comply with these instructions could invalidate your warranty.

Wiring Diagram

Connect the pump controller following this diagram and the Fitting Instuctions.

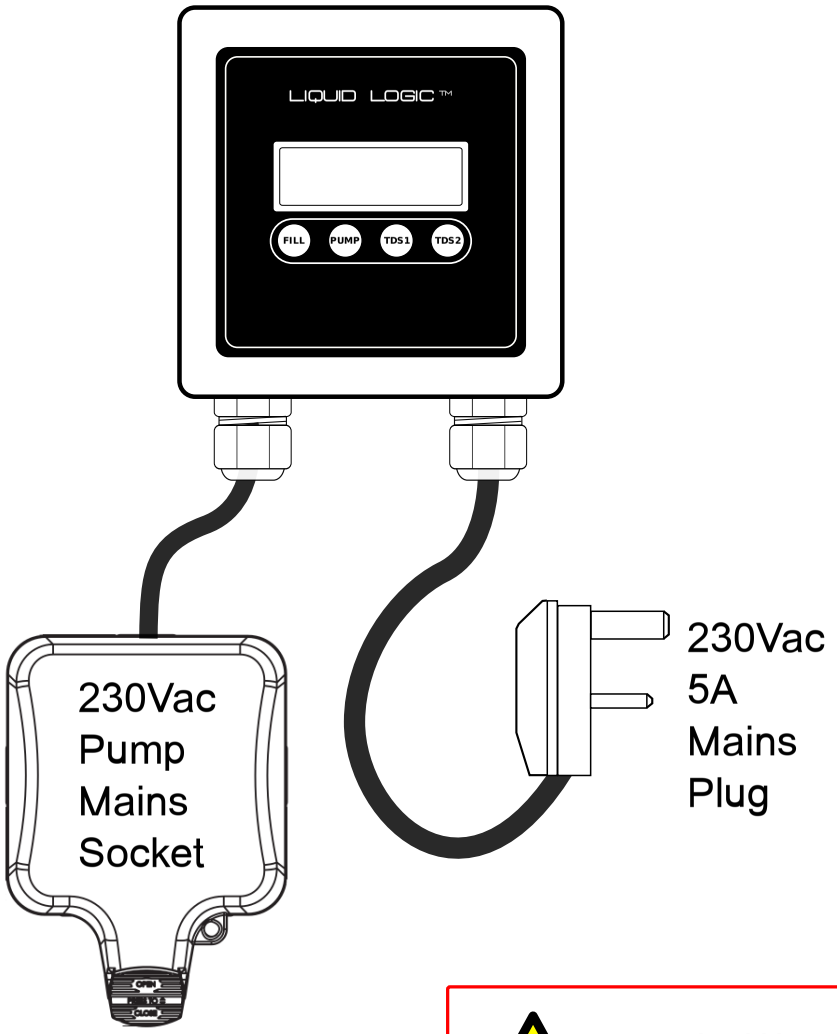

Connect your 230Vac mains powered pump by plugging in to this socket,

ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE OPENING UNIT.

Operating Warnings

Set up your system carefully. Follow these instructions very closely and pay close attention to the warnings and diagrams.

The S2 is fused at 5A. Always fit the correct 5A quick blow mains fuse. The S2 can control pumps up to 1000VA (1000W). DO NOT USE THE S2 WITH PUMPS GREATER THAN 1000VA.

Although the S2 and the Pump Mains Socket are supplied in waterproof enclosures, the mains plug IS NOT WATERPROOF. Do not plug the mains plug into a socket that could become wet during pumping as this will prove extremely hazardous.

CLOSE 230Vac PUMP MAINS SOCKET BEFORE TURNING ON S2 AND PUMP IF CONNECTION CAN GET SPLASHED OR WET IN USE.

KEEP 230Vac 5A MAINS PLUG DRY AND WELL AWAY FROM ANY WATER OR MOISTURE.

Specification	Value
Mains Supply Voltage	90 - 260 Vac
Pump Voltage	90 - 260 Vac
Fuse Rating	5A Quick Blow
Maximum Pump Power	1000VA
Enclosure Material	ABS
Water Resistance	IP65 (S2 box and socket)
Dimensions - S2	120 x 120 x 55(mm)
Working Temperature	0 to 40 Deg C

DISCLAIMER
THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES TO ANY PRODUCT HEREIN TO IMPROVE RELIABILITY, FUNCTION OR DESIGN. THE MANUFACTURER DOES NOT ASSUME ANY LIABILITY ARISING OUT OF THE APPLICATION OR USE OF ANY PRODUCT OR CIRCUIT DESCRIBED HEREIN.

Operator Controls

The controller is equipped with the following controls.


User Buttons

Start/Stop filling — FILL


Start or stop pump — PUMP

Display TDS1 value — TDS1

Display TDS2 value — TDS2

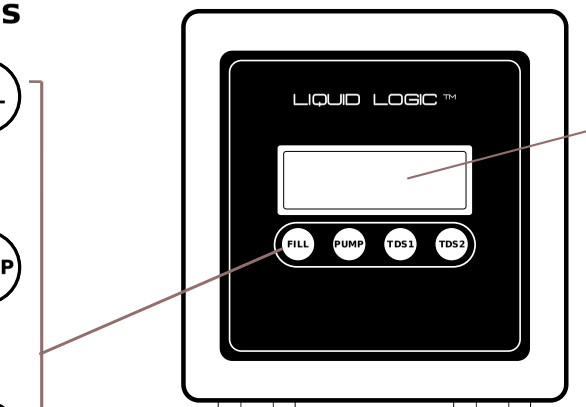

4 Digit display

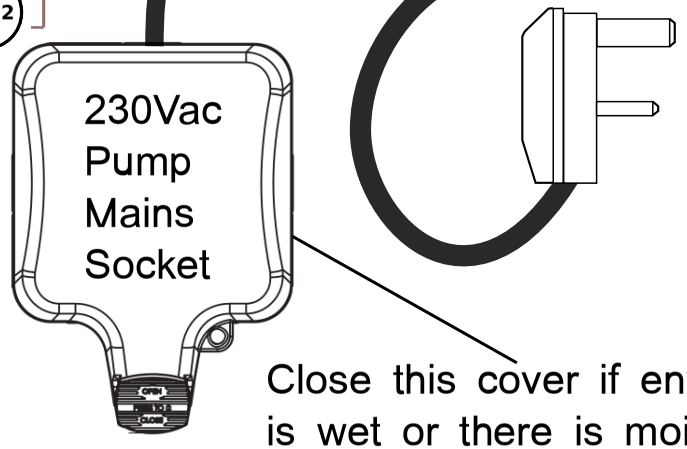

Close this cover if environment is wet or there is moisture

ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE OPENING UNIT.

ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE MAKING CONNECTIONS TO PUMP

Set Up - Tank Filling

To start filling the tank simply press the 'FILL'. This will activate the pump and the solenoid valve, allowing water to fill the tank, until the float switch detects that the tank is full.

FILL

FILL

While the pump and solenoid valve are on and the tank is filling, the display will flash the message FILL. Whilst FILL is active the unit will keep filling every time the level switch drops, hence maintaining the correct level.

FILL

To manually stop the tank filling, press the 'FILL' button again. The display will stop showing the FIL message and display message STOP.

FILL

STOP

To manually turn the pump on (over riding the FILL operation) press the PUMP button. The display will change to ON.

PUMP

ON


To manually turn the pump off (over riding the FILL operation) press the PUMP button. The display will change to OFF.

PUMP

OFF

Additional Wiring

Wire the solenoid valve and float switch following this diagram. Use only the wires shown.

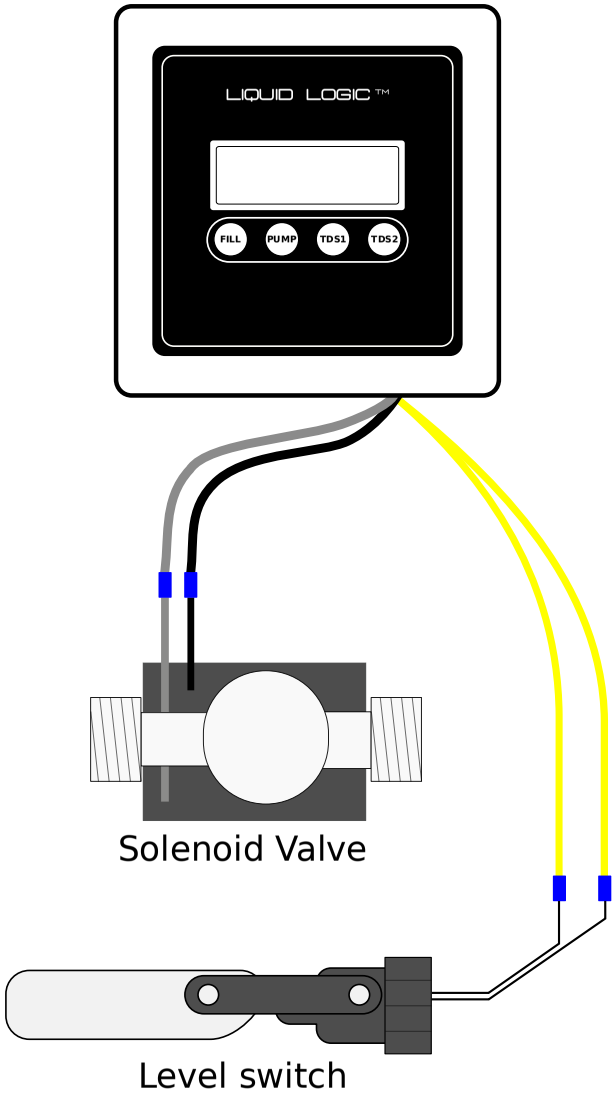

Set Up - TDS (Total Dissolved Solids)

The TDS* function provides an indication of the water purity. The TDS values displayed are in ppm** (impurities in parts per million). The TDS meter is intended to check pure water and has a max reading of 50ppm.

We recommend TDS1 probe be fitted after the RO (reverse osmosis) filter. You can then check the RO is working correctly.

We recommend TDS2 probe be fitted after the DI (de-ionising) vessels. You can then check DI vessels are working.

For good cleaning a TDS of below 5ppm after the DI is recommended.

Press TDS1 to monitor TDS1 reading (in ppm).

TDS1 → tds1, 0020

Press TDS2 to monitor TDS2 reading (in ppm).

TDS2 → tds2, 0003

A TDS reading greater than 50ppm will display high.


HIGH

* Unit must be installed by a competant electrician or technician. Failure to comply with these instructions could invalidate your warranty.

** Probe must be undamaged, clean and free from dirt. Readings are only accurate to +/-2.5% of displayed value when dissolved solid is NaCl.

Additional Wiring

Fit the TDS probes in John Guest 1/2" equal tee (not supplied) as shown on the diagram.

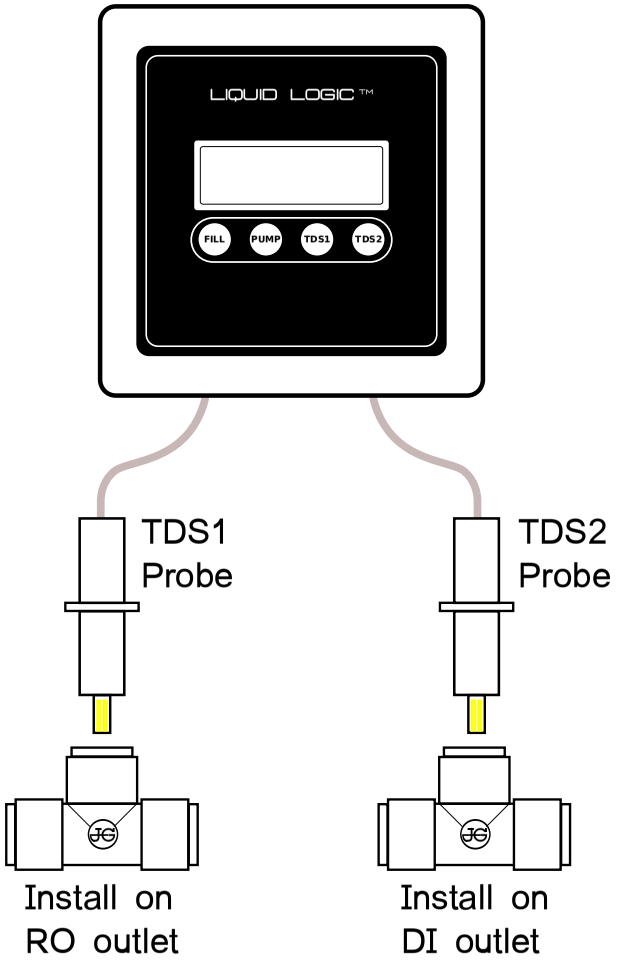

Take care when handling TDS probes. Do not damage gold plated contacts as this will affect TDS accuracy.
Ensure gold plated contacts are clean before use. Clean with ISOPROPANOL alcohol (IPA) and a soft cloth.
Dirty contacts will affect TDS accuracy, clean with IPA if readings appear to deviate over time.