Step 1. Fitting Instructions

ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE OPENING UNIT.
ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE CONNECTING THE PUMP

This S2 unit is supplied already wired. There is no need to disconnect any wires. Follow these instructions carefully and refer to the wiring diagram.

IT IS RECOMMENDED THAT YOUR S2 IS FITTED AGAINST A WALL OR SIMILAR VERTICAL SURFACE.

1. Ensure the S2 is NOT PLUGGED into the MAINS SUPPLY.

2. Remove the top cover by loosening the four corner screws. These screws are quarter turn. Using a large pozidrive screw driver, push the screw down and through a quarter turn then release. The screw should pop up. DO NOT continuously turn.

3. Carefully remove the top cover. Replace any keycaps on the controller switches carefully.

4. Screw unit to the wall or vertical surface through the four ready drilled holes in the corners of the back box.

5. Carefully replace the top cover and tighten the four corner screws quarter turn screws, using the reverse procedure to instruction 2. above.


You are now ready to control your pump.

NOTE: Only switch on MAINS SUPPLY to the 230Vac 5A Mains Plug once front cover has been re-fitted.

DISCLAIMER
Unit must be installed by a competent electrician or electrical engineer. Failure to comply with these instructions could invalidate your warranty.

Wiring Diagram

Connect the pump controller following this diagram and the Fitting Instuctions.

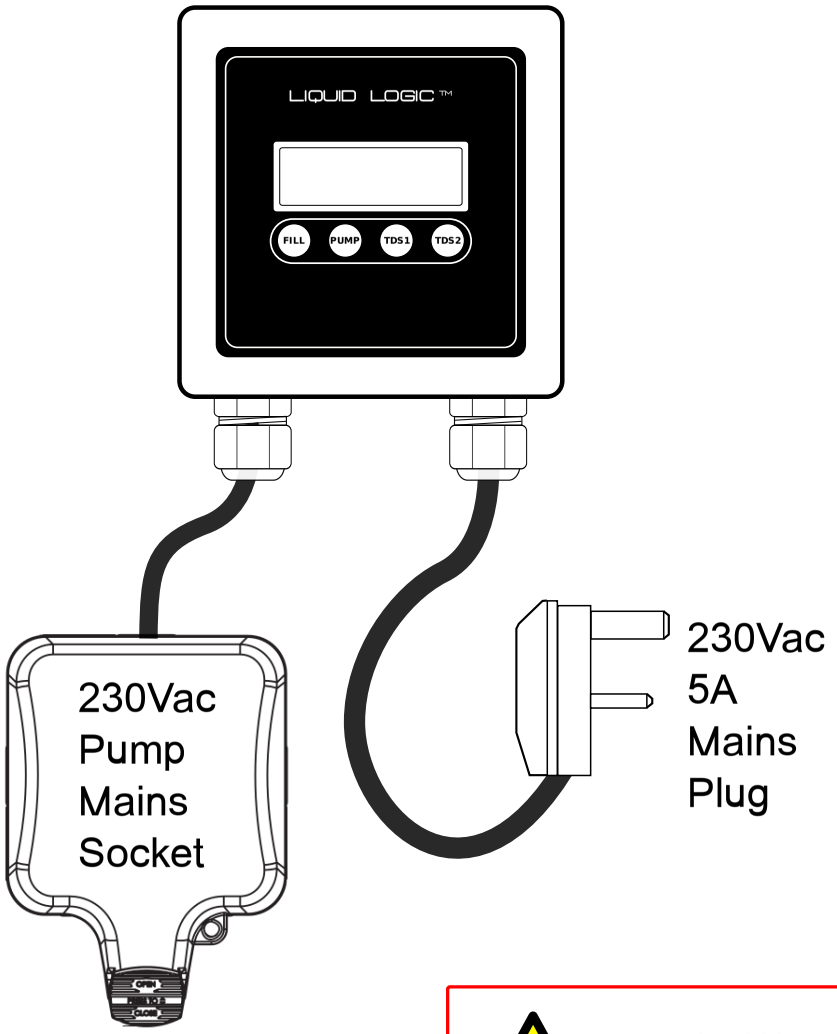

Connect your 230Vac mains powered pump by plugging in to this socket,

ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE OPENING UNIT.