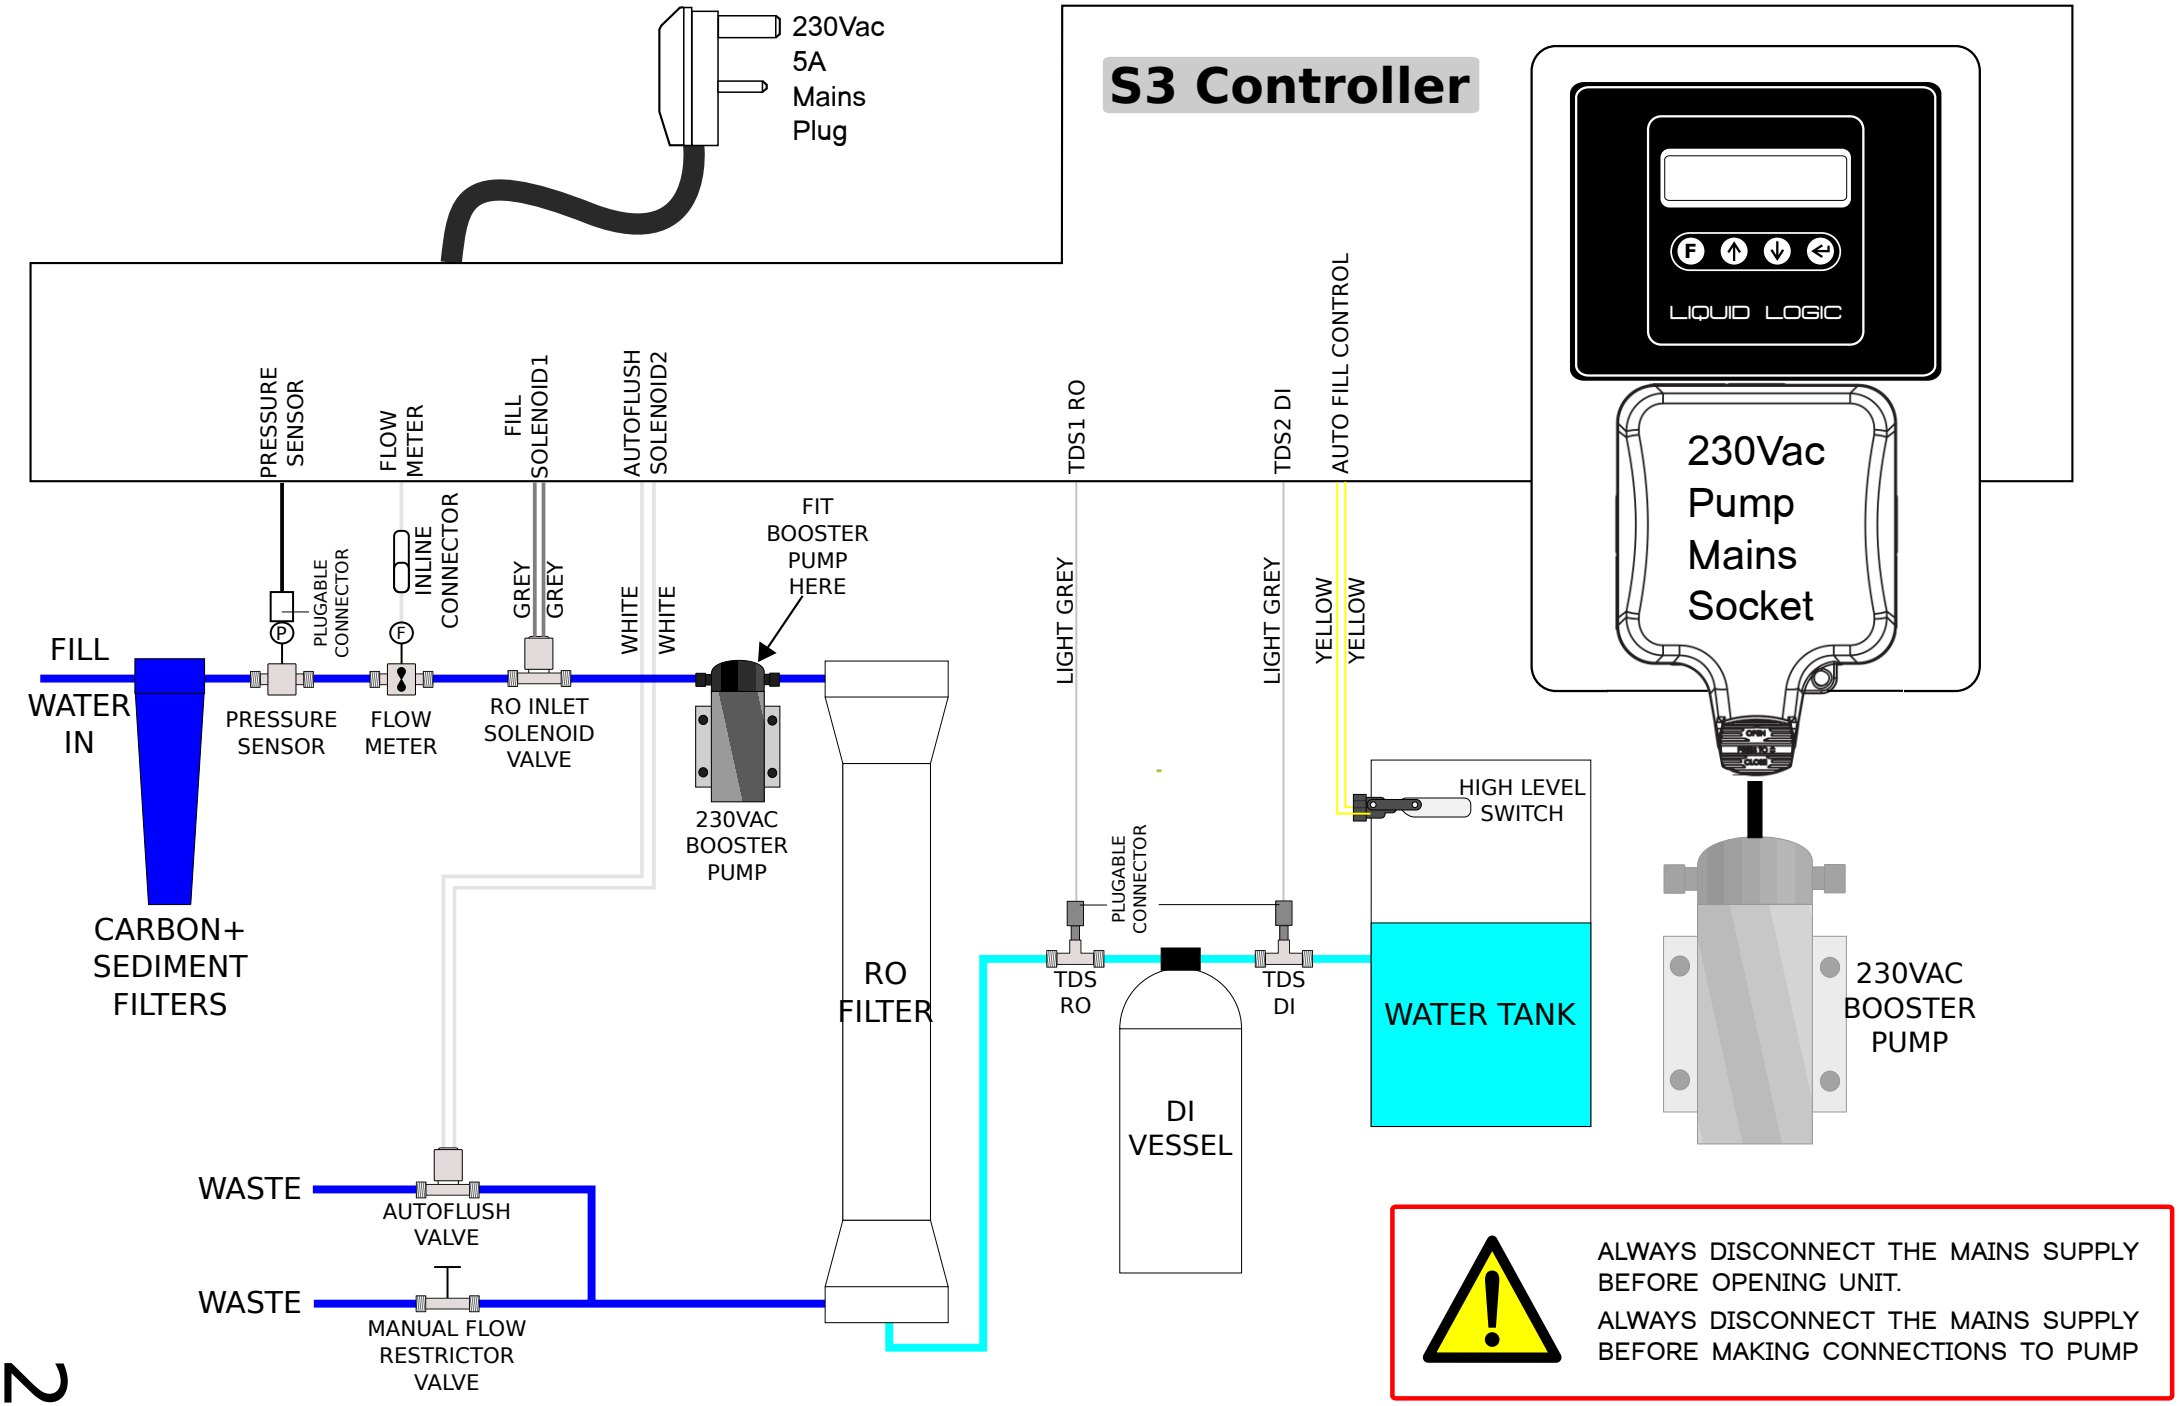


ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE OPENING UNIT.

ALWAYS DISCONNECT THE MAINS SUPPLY BEFORE MAKING CONNECTIONS TO PUMP