

IOT Speaker v1.3


Battery Peripheral connect to “J1” Connector Shown in image below

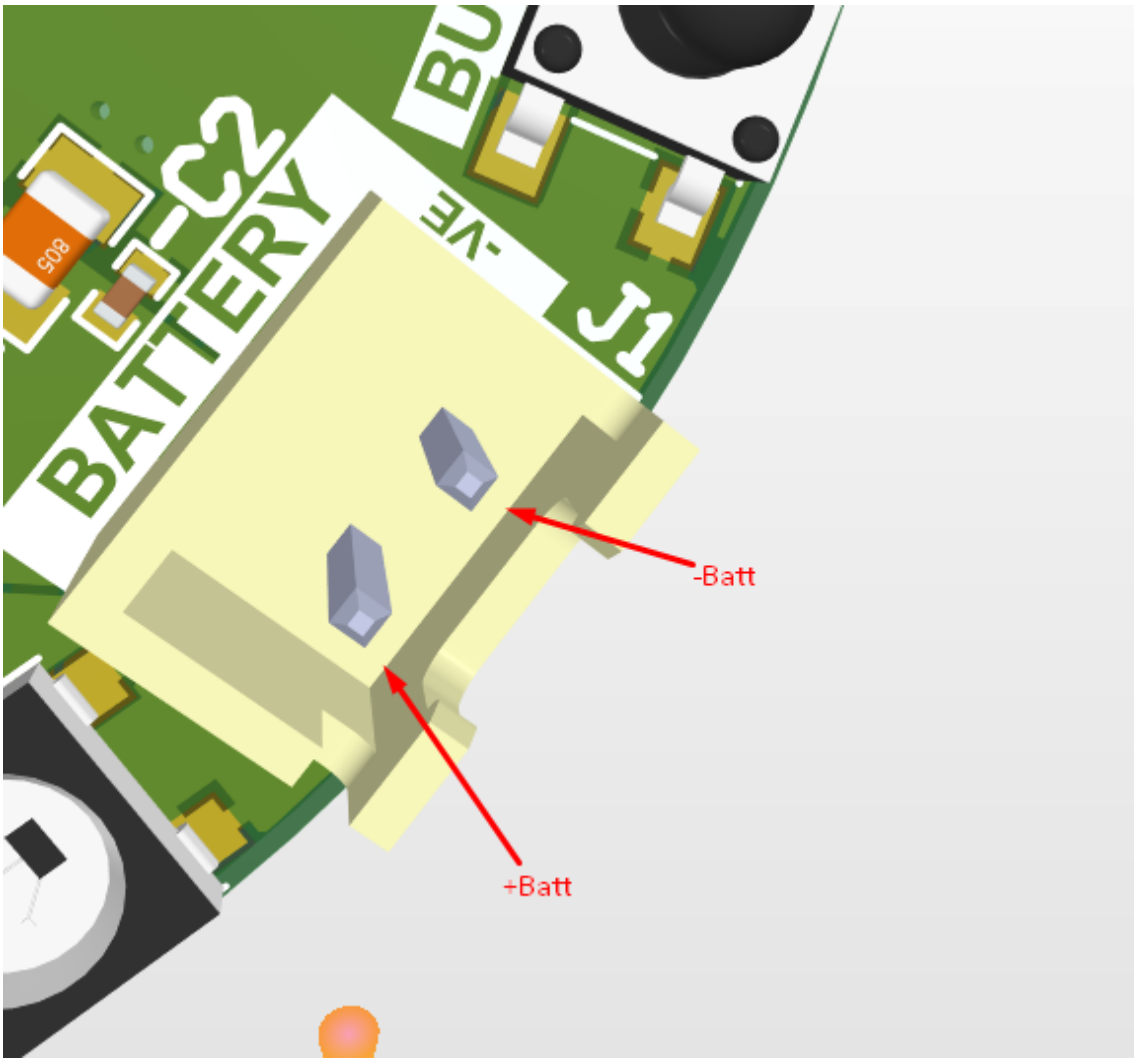

Speaker Peripheral Connect to “J9” Header shown in image below

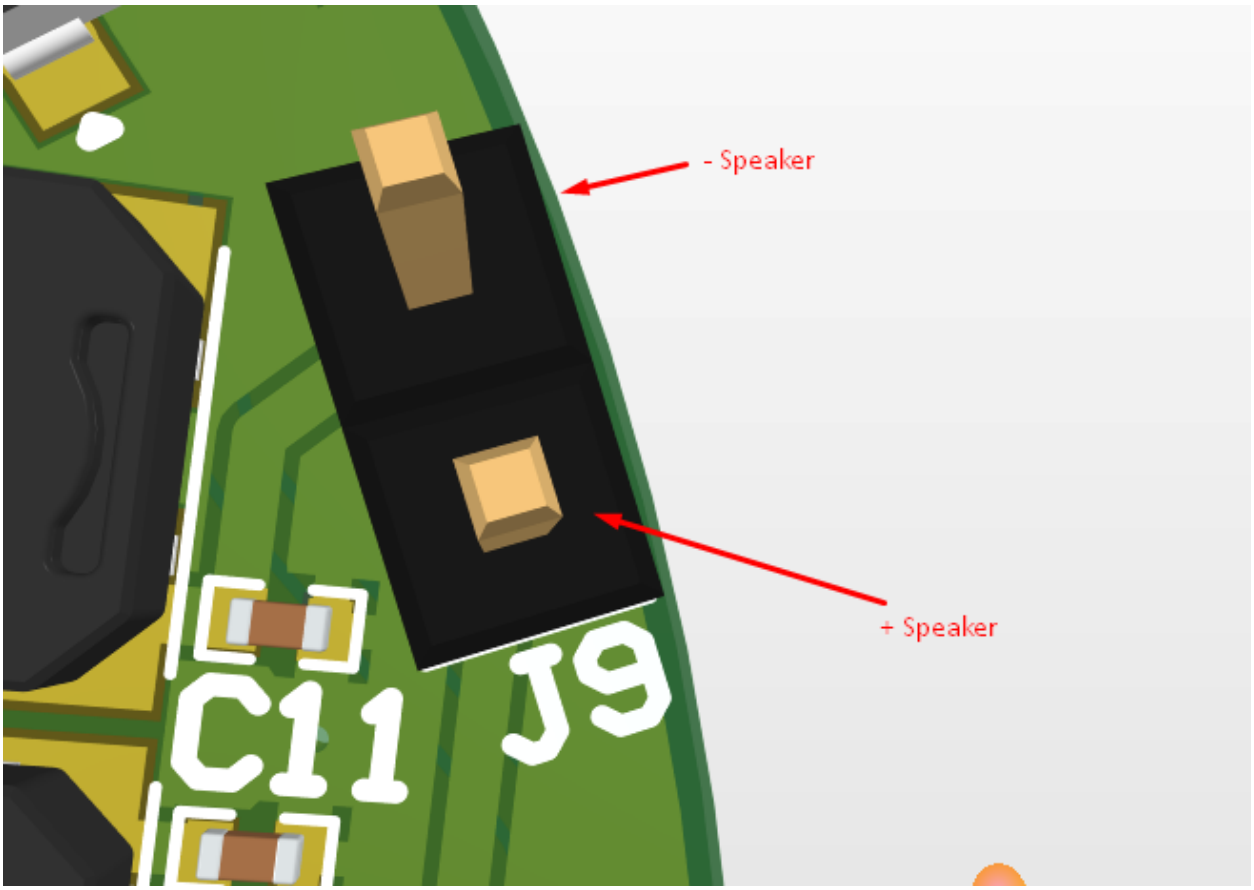

adaptor peripheral Connect to “J2” Connector

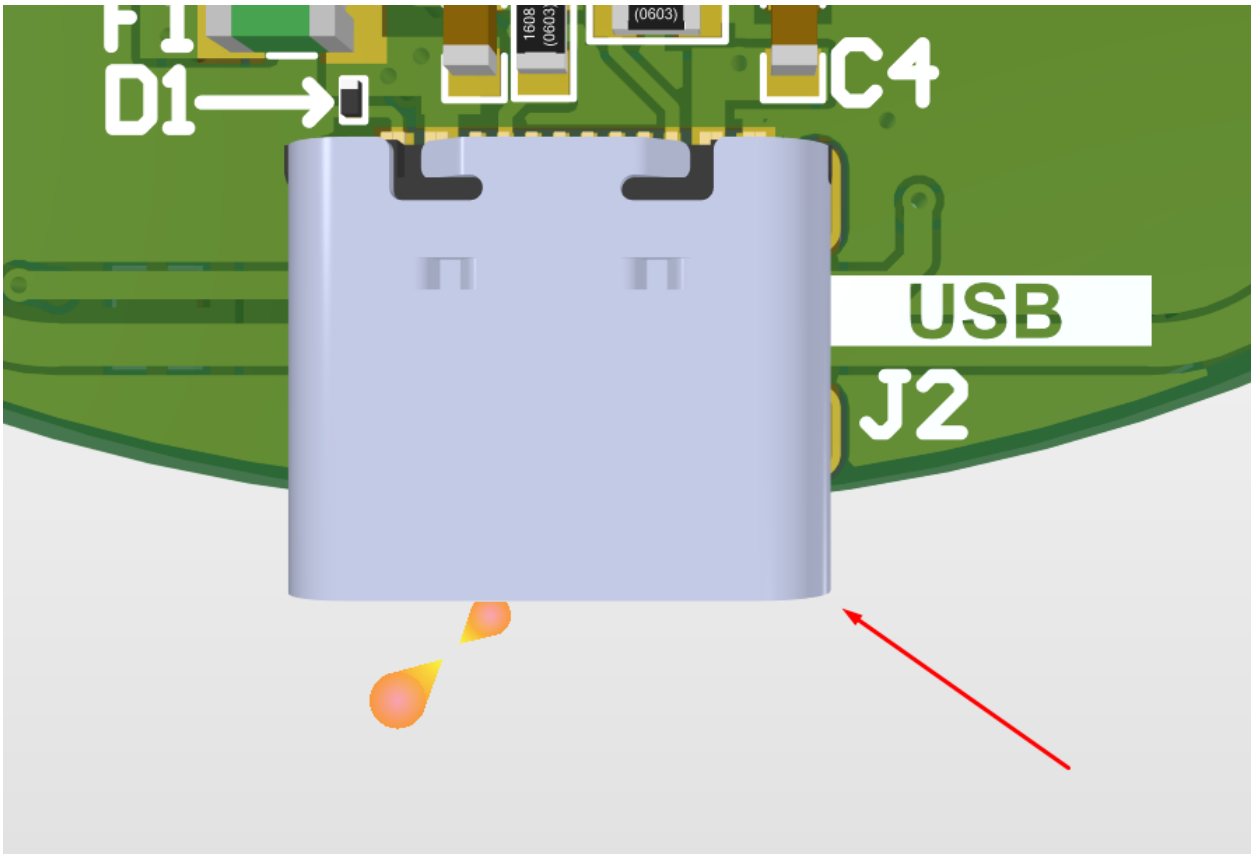

Programmer connect to J3 Connector Shown in image below

