

Design Requirements

Cooling Capacity **90,000 BTU/h**
 Configuration **Downflow**

- R-32 chlorine-free refrigerant
- High-efficiency Copeland scroll compressor(s)
- Copper tube / aluminum fin coils
- High-capacity, steel-cased filter dryer
- High- and Low-pressure switches
- Lugged electrical contactor
- Single-point power
- Color Coded Wiring
- Foil Faced Internal Insulation
- Heavy-gauge, galvanized-steel cabinet
- UV-resistant powder-paint finish
- Full perimeter base rail

Unit Electrical Data

Power Supply **208-230/3/60 VOLT/PH**
 Total Unit MCA **49.9/49.9 A**
 Total Unit MOP **60/60 A**
 Indoor Motor HP **3.5 HP**
 Total Unit FLA **11.70/11.70 A**
 • Blower FLA **11.7**
 SCCR **5 kA**

Model Number: DVH0903D000126C

Code String: DVH0903DXXXJXMDCEFEXXX

Tag: 7.5-Ton - MZVAV - HGRH - 208/3 - 0kW

Cooling Performance *4

Total Capacity **102,928 BTU/h**
 Sensible Capacity **79,341 BTU/h**
 Cooling Stages **Variable**
 Refrig Type **R-32**
 Compressor Type **Daikin Scroll**
 Pressure Switches **High & Low Pressure (std)**
 Cooling Design Temp(db) **95.00°F**
 Entering Air Temp(db) **80.00°F**
 Entering Air Temp(wb) **67.00°F**
 Leaving Air Temp(db) **60.00°F**
 Leaving Air Temp(wb) **58.00°F**
 Efficiency **20.0 IEER/12.4 EER**

Heating Performance *4

Total Capacity **137,800 BTU/h**

Rated Heating Performance

Heat Type **Heat Pump**
 LAT (47°F) **93.10**
 COP (47°F) **3.85**
 BTU/h (47°F) **90000 @ 70°F Indoor DB**
 LAT (17°F) **86.20**
 COP (17°F) **2.5**
 BTU/h (17°F) **63000 @ 70°F Indoor DB**

Supply Air Blower Performance

ACFM **3600 cfm**
 SCFM **3600 cfm**
 ESP **1.00 IWG**
 Hot Gas Reheat **0.17 IWG**
 Ultra Low-Leak Downflow Economizer For DDC Controls W/ Enthalpy Sensor **0.07 IWG**
 Total ESP **1.24 IWG**
 Blower Type **Direct Drive - Standard Static**
 Elevation **0 ft**

Physical Attributes

Base Unit Oper. Weight (lbs) **1293**
 Filter(s) **20"X25"X2" Qty: 2**
25"X25"X2" Qty: 2

Outdoor sound (db) at 60 Hz									
Model	A-Weighted	63	125	250	500	1000	2000	4000	8000
090	76.3	-	75.5	70.4	66.4	62.3	59.3	57.1	44.1

db - decibel

Notes:

1 Outdoor sound data is measured in accordance with AHRI standard 270.

2 Measurements are expressed in terms of sound power. Do not compare these values to sound pressure values because sound pressure depends on specific environment factors which normally do not match individual applications. Sound power values are independent of the environment and therefore more accurate.

3 A-weighted sound ratings filter out high and very low frequencies, to better approximate the response of average human ear. A-weighted measurements for Daikin units are taken in accordance with AHRI standard 270.

4 All air temps are measured at the unit's inlet and outlet. Air temps are not measured at the coil.

HGRH Performance

ODDB	EATDB	EATWB	CFM	TC	SHR	SHC	LATDB	LATWB	EARH	LARH	MR
95.00	70.00	61.00	2550	23100	-	-	70.00	57.80	0.60	0.48	21.80
95.00	70.00	64.00	2550	36600	-	-	70.00	59.30	0.72	0.54	34.50
95.00	70.00	67.00	2550	49900	-	-	70.00	60.90	0.86	0.60	47.10

* HGRH table is closet available data for entered leaving air temperature.

* For Daikin NEXIO MAX models equipped with Hot Gas Re-Heat(HGRH), the sensible capacity can be modulate between 0 to the value shown on the part load performance tables in the spec sheet at any given conditions.

* For the table above, to show maximum humidity removal we have assumed SHR of 0(sensible capacity=0) resulting in Total Capacity = Latent Capacity.

HGRH Performance Notation Reference


- ODDb - Outdoor Dry Bulb Temperature(°F)
- EATDB - Entering Air Dry Bulb Temperature(°F)
- EATWB - Entering Air Wet Bulb Temperature(°F)
- TC - Total Capacity(BTU/h)
- SHC - Sensible Heat Capacity(BTU/h)
- SHR - Sensible Heat Ratio
- LATDB - Leaving Air Dry Bulb Temperature(°F)
- LATWB - Leaving Air Wet Bulb Temperature(°F)
- EARH - Entering Air Relative Humidity(%)
- LARH - Leaving Air Relative Humidity(%)
- MR - Moisture Removal(lbs/h)

LIST OF ACCESSORIES




Model Number: DVH0903D000126C; Code String: DVH0903DXXXJXMDCEFEXXX; Tag: 7.5-Ton - MZVAV - HGRH - 208/3 - 0kW;


Accessories					
Fld Inst	Fct Inst	Item #	Description	Dimensions	Lbs
	Y	DSC250E58YH02FI	Non Fused Disconnect Switch	Fact Inst	5
	Y	BRC1NRV72	Nav Controller		N/A
	Y	HGDRMDV01FI	Hinged Panels		34
Y		0270L01154	24" Roof Curb		174
	Y	CONVOUTFNPM	Non Powered GFCI Convenience Outlet	Fact Inst	2
Y		0130L00223	Outdoor Temperature		N/A
	Y	TTBCKHE02FI	Thru-The-Base Connections		1
	Y	0270L03173	Ultra Low-Leak Downflow Economizer For DDC Controls W/ Enthalpy Sensor		N/A
	Y	HAILGDBEVFI	Hail Guard		N/A
Y		0130L00221	DDC Space Enthalpy Sensor Duct Mounted		N/A
	Y		Hot Gas Reheat	1	N/A
			Base Unit Oper. Weight		1293
			Total Weight		1509

CORNER WEIGHTS DIMENSIONS

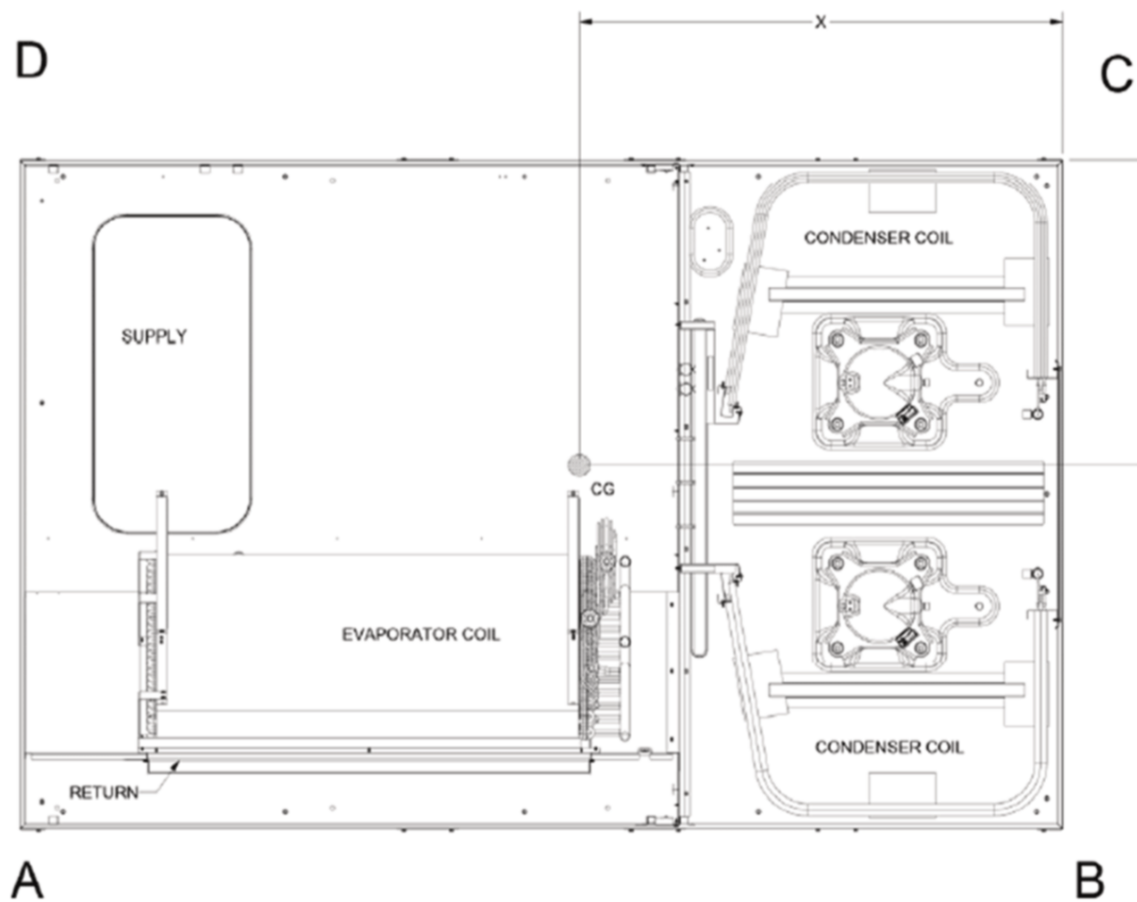

Model	Shipping Weight (lbs)	Operating Weight (lbs)	Corner Weights (lbs)				Length	Width
			A	B	C	D	X (in)	Y (in)
DVH0903D	1293	1365	329	269	442	254	42.10	27.90

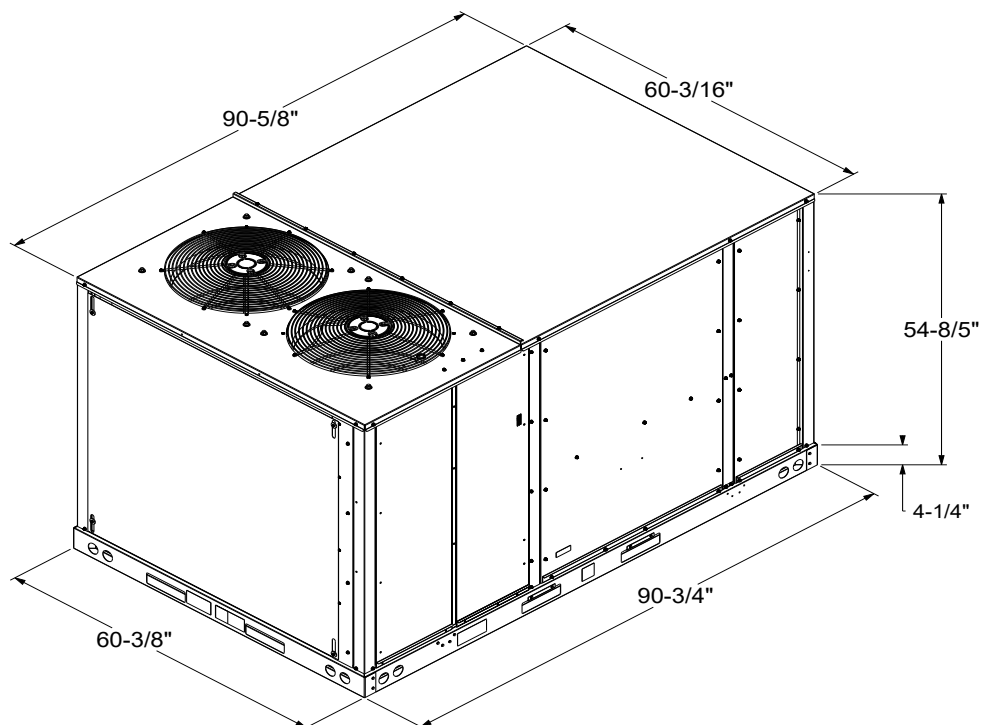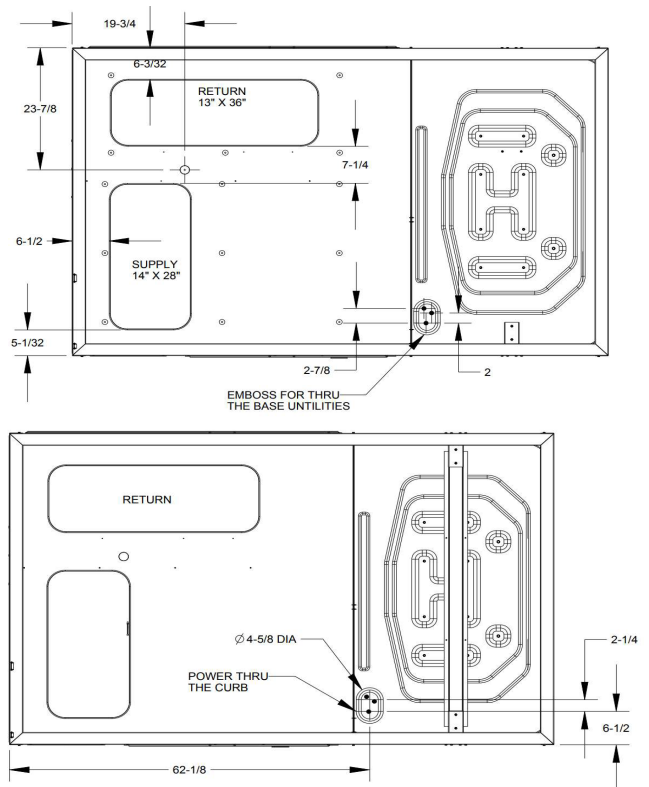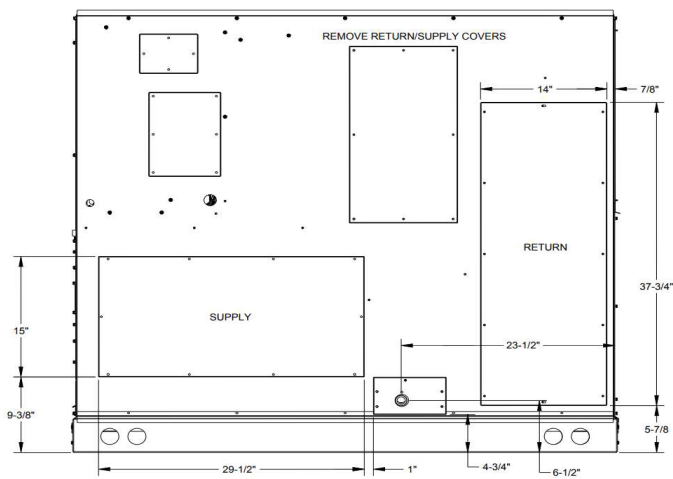

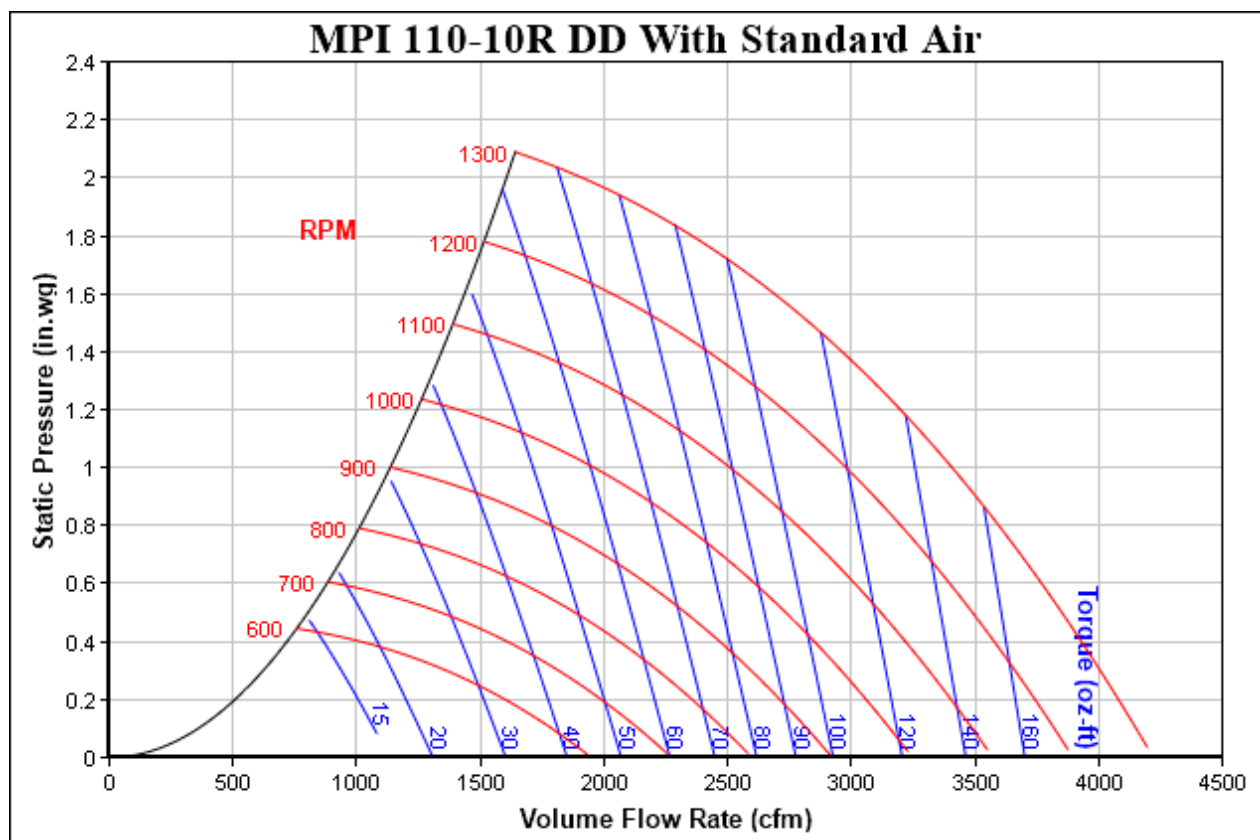



RH DUCT

Relative Humidity, Duct, Thermistor

The ACI Relative Humidity with Thermistor Duct Series utilizes a thermoset polymer capacitive sensing element with a factory fitted hydrophobic filter to improve its moisture resistance. The sensing elements multilayer construction also provides excellent resistance in applications where dust, dirt, oils and common environmental chemicals are found. The RH duct sensors include on board DIP switches which allow the user to select the desired output signal and can be powered by AC or DC power sources. Each unit also contains 0%, 50%, and 100% test options to verify that the transmitter is both working and wired properly. Field calibration can be performed by using the increment and decrement calibration DIP switches without the need to replace the sensing element. These enhancements provide increased flexibility and outstanding long-term reliability without the need to replace the sensors in the field. Duct

configurations feature a weatherproof Euro style enclosure with a gasketed cover and conformally coated circuit boards for increased moisture resistance in high humidity environments. The sensor is protected by a stainless-steel sintered filter. Three point NIST Calibration Certificates are available.

Applications: Humidification, Dehumidification, Supply / Discharge / Return Air, Economizers, Clean Rooms, Data Centers, Process Control, Schools, Hospitals, Office Buildings

The ACI RH Thermistor Duct is covered by ACI's Five (5) Year Limited Warranty. The warranty can be found in the front of ACI's Sensors & Transmitters catalog, as well as on ACI's website, www.workaci.com.

PRODUCT SPECIFICATIONS

RH Supply Voltage (Reverse Polarity Protected):	4-20 mA: 250 Ohm Load: 15 - 40 VDC / 18 - 28 VAC 500 Ohm Load: 18 - 40 VDC / 18 - 28 VAC
RH Supply Current (VA):	0-5 VDC: 12 - 40 VDC / 18 - 28 VAC 0-10 VDC: 18 - 40 VDC / 18 - 28 VAC
RH Output Load Resistance:	Voltage Output: 8 mA maximum (0.32 VA) Current Output: 24 mA maximum (0.83 VA)
RH Output Signal:	4-20 mA: 700 Ohms maximum 0-5 VDC or 0-10 VDC: 4K Ohms Minimum
RH Accuracy @ 77°F (25°C):	2-wire: 4 - 20 mA (Factory Default) 3-wire: 0-5 or 0-10 VDC and 4 - 20 mA (Field Selectable)
RH Measurement Range	+/- 1% over 20% RH Range between 20 to 90% +/- 2%, 3%, or 5% from 10 to 95%
Operating RH Range:	0-100%
Operating Temperature Range:	0 to 95% RH, non-condensing (Conformally Coated PCB's)
Storage Temperature Range:	-40 to 140°F (-40 to 60°C)
RH Stability Repeatability Sensitivity:	-40 to 149°F (-40 to 65°C)
RH Response Time (T63):	Less than 2% drift / 5 years 0.5% RH 0.1% RH
RH Sensor Type:	20 Seconds Typical
RH Transmitter Stabilization Time:	Capacitive with Hydrophobic Filter
RH Connections Wire Size:	30 Minutes (Recommended time before doing accuracy verification)
RH Terminal Block Torque Rating:	Screw Terminal Blocks (Polarity Sensitive) 16 (1.31 mm ²) to 26 AWG (0.129 mm ²)
RH NIST Test Points:	4.43 to 5.31 lb-in (0.5 to 0.6 Nm)
Nominal Thermistor Resistive Output @ 77°F (25°C) (Lead Wire Colors) Non-Linear NTC (Negative Temperature Coefficient):	Default Test Points: 3 Points (20%, 50% & 80%) 1% NIST Test Points: 5 Points within selected 20% Range (ie. 30%-50% are 30, 35, 40, 45 & 50)
Thermistor Accuracy 32-158°F (0-70°C):	RHx-1.8K Series: 1.8KΩ (Red/Yellow) RHx-10KS Series: 10KΩ (White/Blue)
Thermistor Power Dissipation Constant:	RHx-3K Series: 3KΩ (White/Brown) RHx-10K-E1 Series: 10KΩ (Gray/Orange)
Thermistor Sensor Response Time (T63):	RHx-AN Series (Type III): 10KΩ (White/White) RHx-20K Series: 20KΩ (Brown/Blue)
Lead Wire Length Conductor Size:	RHx-AN-BC Series: 5.238KΩ (White/Yellow) RHx-50K Series: 50KΩ nominal (Brown/Yellow)
Insulation Rating:	RHx-CP Series (Type II): 10KΩ (White/Green) RHx-100KS Series: 100KΩ (Black/Yellow)
Enclosure Specifications (Material, Flammability, Temperature, NEMA/IP Rating):	RHx-CSI Series: 10KΩ (Green/Yellow)
Sensing Tube Material Filter Material:	+/- 0.36°F (0.2°C) except 10K-E1 Series: +/- 0.54°F (0.3°C)
Sensing Tube Dimensions (Length x Diameter):	1.8K Series: +/- 0.9°F (0.5°C) @ 77°F (25°C) & +/- 1.8°F (1.0°C) from 32 to 158°F (0 to 70°C)
Product Dimensions (L x W x D):	3 mW/°C except 1.8K Series: 1 mW/°C; 10K-E1 Series: 2 mW/°C
Product Weight:	10 Seconds nominal
Agency Approvals:	14" (35.6 cm) 22 AWG (0.65 mm)
	Etched Teflon (PTFE) Colored Leads Mil Spec 16878/4 Type E
	"EH" Enclosure: ABS Plastic; UL94-V0; -40 to 140°F (-40 to 60°C)
	"4X" Enclosure: Polystyrene Plastic; UL94-V2; -40 to 158°F (-40 to 70°C); NEMA 4X (IP 66)
	"EH" Enclosure: 304 Series Stainless Steel 304 Series Stainless Steel
	"4X" Enclosure: Schedule 40 PVC (White) Slotted PVC without filter
	"EH" Models with Sintered Filters: 7.75" (196.85 mm) x 0.75" (19.05 mm)
	"4X" Models: 7.20" (182.88 mm) x 0.84" (21.34 mm)
	See drawings on back of data sheet
	A/RHx-xx-D Series: 1.22 lbs. (0.55 kg) A/RHx-xx-D-4X Series: 0.50 lbs. (0.227 kg)
	CE, RoHS2, WEEE






Call: 1-888-967-5224 | Web: www.workaci.com

HUMIDITY | ##






DIMENSIONAL DRAWING

Euro Enclosure [EH]

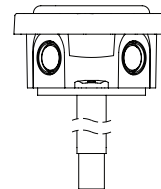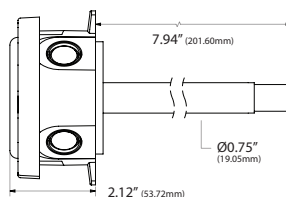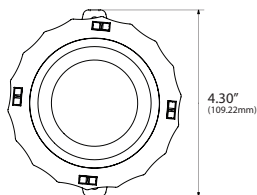

NEMA 4X Enclosure [4X]

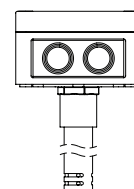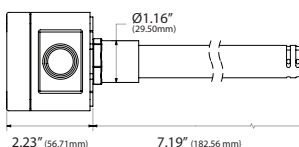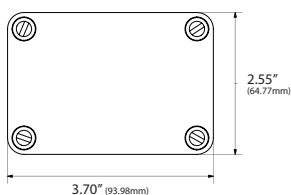

Front View

Right View

Top View

CUSTOM ORDERING

Model # Example: A/ RH2 CP D NIST

A. Sensor Series No Selection Required

A/

B. Accuracy Select One (1)

RH1 = +/-1% (Specify a 20% Range between 20 to 90% RH)
RH2 = +/-2% | RH3 = +/-3% | RH5 = +/-5%

C. Temperature Sensor Select One (1)

1.8K | 3K | 10KS | AN (Type III) | AN-BC | CP (Type II) | CSI | 10K-E1 | 20K | 50K | 100KS

D. Configuration Select One (1)

D = Duct (Euro Enclosure) | D-4X (NEMA 4X Enclosure)

E. Output Signal Select One (1)

--- = 4 to 20 mA (Default) | 0 to 10 VDC (Field Selectable) | 0 to 5 VDC (Field Selectable)

F. NIST (Temperature & RH) Select One (1)

--- = No NIST Certificate | NIST = NIST Certificate (3 Points)

Note: Outputs are field selectable between 4-20 mA, 0-5 VDC & 0-10 VDC

MODEL

A/

ACCESSORIES ORDERING

Model # Example: A/SINTERED FILTER

Model #	Item #	Description
A/SINTERED FILTER	143433	3/8" Sintered Filter for RH Duct/Stainless Plate/Remote Probe





RH OUTSIDE AIR

Relative Humidity, Outside Air, Thermistors

The ACI Relative Humidity with Thermistor Outside Air Series utilizes a thermoset polymer capacitive sensing element with factory applied hygroscopic filter to deliver a proportional analog current or voltage output signal. The hygroscopic filter provides added resistance to moisture, dust, and other chemicals for greater long term reliability. The RH Outside Air transmitter features integral DIP switches for field selection of the proper output signal and supply voltage to meet your applications requirements. Each unit also contains 0%, 50%, and 100% test options to verify that the transmitter is both working and wired properly. Field calibration also can be performed by using the increment and decrement calibration DIP switches without the need to replace the sensing element. These enhancements provide increased flexibility and outstanding long-term reliability. Outside Air configurations feature a

weatherproof Euro style enclosure with gasketed cover and conformally coated circuit boards for added moisture and chemical resistance. Three point NIST Calibration Certificates are available.

Applications: Monitor Outdoor Air Humidity, Economizer Control, Psychrometric calculations such as Enthalpy and Dew point, Wash down Applications

The ACI RH Thermistor Outside Air is covered by ACI's Five (5) Year Limited Warranty. The warranty can be found in the front of ACI's Sensors & Transmitters catalog, as well as on ACI's website, www.workaci.com.

PRODUCT SPECIFICATIONS

RH Supply Voltage	4-20 mA: 250 Ohm Load: 15 - 40 VDC / 18 - 28 VAC 500 Ohm Load: 18 - 40 VDC / 18 - 28 VAC	
(Reverse Polarity Protected):	0-5 VDC: 12 - 40 VDC / 18 - 28 VAC 0-10 VDC: 18 - 40 VDC / 18 - 28 VAC	
RH Supply Current (VA):	Voltage Output: 8 mA maximum (0.32 VA) Current Output: 24 mA maximum (0.83 VA)	
RH Output Load Resistance:	4-20 mA: 700 Ohms maximum 0-5 VDC or 0-10 VDC: 4K Ohms Minimum	
RH Output Signal:	2-wire: 4 - 20 mA (Factory Default) 3-wire: 0-5 or 0-10 VDC and 4 - 20 mA (Field Selectable)	
RH Accuracy @ 77°F (25°C):	+/- 1% over 20% RH Range between 20 to 90% +/- 2%, 3%, or 5% from 10 to 95%	
RH Measurement Range:	0-100%	
Operating RH Range:	0 to 95% RH, non-condensing (Conformally Coated PCB's)	
Operating Temperature Range:	-40 to 140°F (-40 to 60°C)	
Storage Temperature Range:	-40 to 149°F (-40 to 65°C)	
RH Stability Repeatability Sensitivity:	Less than 2% drift / 5 years 0.5% RH 0.1% RH	
RH Response Time (T63):	20 Seconds Typical	
RH Sensor Type:	Capacitive with Hydrophobic Filter	
RH Transmitter Stabilization Time:	30 Minutes (Recommended time before doing accuracy verification)	
RH Connections Wire Size:	Screw Terminal Blocks (Polarity Sensitive) 16 (1.31 mm ²) to 26 AWG (0.129 mm ²)	
RH Terminal Block Torque Rating:	4.43 to 5.31 lb-in (0.5 to 0.6 Nm)	
RH NIST Test Points:	Default Test Points: 3 Points (20%, 50% & 80%) 1% NIST Test Points: 5 Points within selected 20% Range (ie. 30%-50% are 30, 35, 40, 45 & 50)	
Nominal Thermistor Resistive Output @ 77°F (25°C)	RHx-1.8K Series: 1.8KΩ (Red/Yellow)	RHx-10KS Series: 10KΩ (White/Blue)
(Lead Wire Colors):	RHx-3K Series: 3KΩ (White/Brown)	RHx-10K-E1 Series: 10KΩ (Gray/Orange)
	RHx-AN Series (Type III): 10KΩ (White/White)	RHx-20K Series: 20KΩ (Brown/Blue)
	RHx-AN-BC Series: 5.238KΩ (White/Yellow)	RHx-50K Series: 50KΩ nominal (Brown/Yellow)
	RHx-CP Series (Type II): 10KΩ (White/Green)	RHx-100KS Series: 100KΩ (Black/Yellow)
	RHx-CSI Series: 10KΩ (Green/Yellow)	
Thermistor Accuracy 32-158°F (0-70°C):	+/- 0.36°F (0.2°C) except 10K-E1 Series: +/- 0.54°F (0.3°C)	
	1.8K Series: +/- 0.9°F (0.5°C) @ 77°F (25°C) & +/- 1.8°F (1.0°C) from 32 to 158°F (0 to 70°C)	
Thermistor Power Dissipation Constant:	3 mW/°C except 1.8K Series: 1 mW/°C; 10K-E1 Series: 2 mW/°C	
Thermistor Sensor Response Time (T63):	10 Seconds nominal	
Lead Wire Length Conductor Size:	14" (35.6 cm) 22 AWG (0.65 mm)	
Insulation Rating:	Etched Teflon (PTFE) Colored Leads Mil Spec 16878/4 Type E	
Enclosure Specifications (Material, Flammability, Temperature, NEMA/IP Rating):	"-EH" Enclosure: ABS Plastic; UL94-V0; -40 to 140°F (-40 to 60°C)	
	"-4X" Enclosure: Polystyrene Plastic; UL94-V2; -40 to 158°F (-40 to 70°C); NEMA 4X (IP 66)	
Sensing Tube Dimensions (Length x Diameter):	"-EH" Models: 3.00" (76.20 mm) x 1.125" (28.75 mm)	
	"-4X" Models: 4.73" (120.14 mm) x 0.845" (21.46mm)	
Product Dimensions (L x W x D):	See drawings on back of data sheet	
Product Weight:	A/RHx-xx-O Series: 0.59 lbs. (0.27 kg) A/RHx-xx-O-4X Series: 0.45 lbs. (0.204 kg)	
Agency Approvals:	CE, RoHS2, WEEE	






Call: 1-888-967-5224 | Web: www.workaci.com

HUMIDITY | ##






DIMENSIONAL DRAWING

Euro Enclosure [EH]

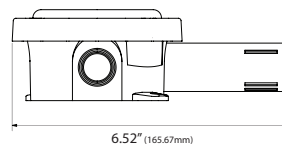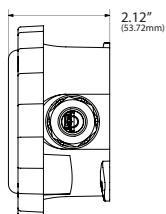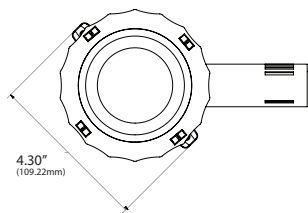

NEMA 4X Enclosure [4X]

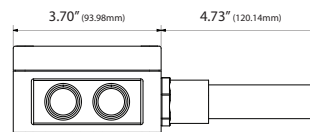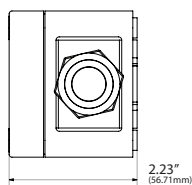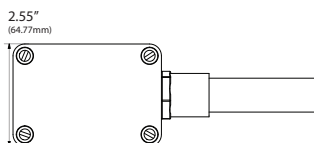

Front View

Right View

Top View

CUSTOM ORDERING

Model # Example:

A/ RH2 CP O NIST

MODEL

A. Sensor Series No Selection Required

A/

B. Accuracy Select One (1)

RH1 = +/-1% (Specify a 20% Range between 20 to 90% RH)
RH2 = +/-2% | **RH3** = +/-3% | **RH5** = +/-5%

C. Temperature Sensor Select One (1)

1.8K | **3K** | **10KS** | **AN** (Type III) | **AN-BC** | **CP** (Type II) | **CSI** | **10K-E1** | **20K** | **50K** | **100KS**
D. Configuration Select One (1)

O = Outside Air (Euro Enclosure) | **O-4X** = Outside Air (NEMA 4X Enclosure)

E. Output Signal Select One (1)

---- = 4 to 20 mA (Default) | 0 to 10 VDC (Field Selectable) | 0 to 5 VDC (Field Selectable)

F. NIST (Temperature & RH) Select One (1)

---- = No NIST Certificate | **NIST** = NIST Certificate (3 Points)

Note: Outputs are field selectable between 4-20 mA, 0-5 VDC & 0-10 VDC




Micromet

Date:


Submitted To:

Job:

Notes:

Specification Sheet for Daikin Medium Cabinet 7.5 to 12.5 Ton
Knocked down 24" Tall Roof Curb

Part Number:
Daikin PN: 0270L01154
Micromet PN: CRBK-DKN34SA-2411

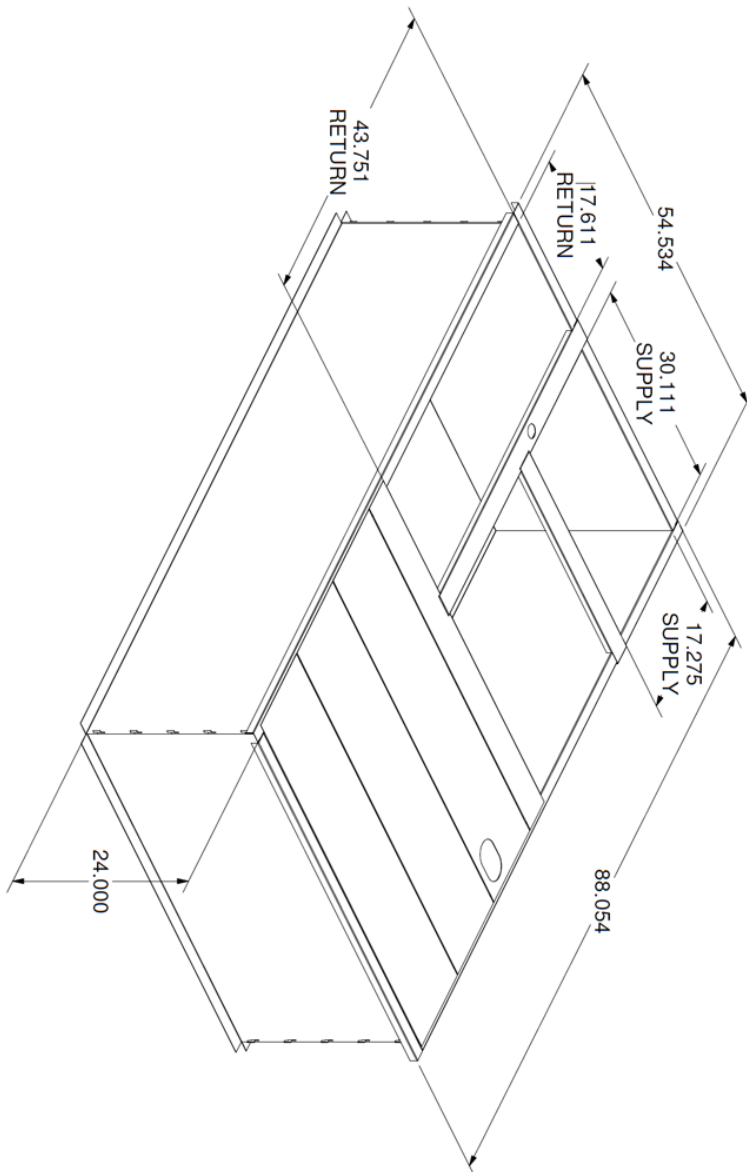

Notes:

1. Roof curb ships knocked down for field assembly. Package includes plastic corrugated end caps.
2. Curb includes wood nailer, attached to curb sides and ends, and gasket package shipped inside of curb package.
3. Deck pans include 1" – 1.5 lb. density insulation.
4. Curb sides and ends are constructed of 18 gauge galvanized steel.


Product Operating Weight:

174 Lbs


The information contained in this drawing is the sole property of Micromet Corporation. Any reproduction in part or whole without the written permission of Micromet Corporation is prohibited.


Indianapolis_3035 N. Shadeland Ave., Indianapolis, IN 46226_800.MMC.HVAC • Sparks_905 Southern Way, Sparks, NV 89431_800.884.4MMC • Longview_201 Kodak Blvd., Longview, TX 75602_903.248.4800


9									8		7		6		5		4		3		2		1																																																									
DAIKIN P/N		MICROMETL P/N		INSTALL		CONTROLLER		ACTUATOR		MIXED AIR SENSOR		DRY BULB SENSOR		ENTHALPY SENSOR		WIRING DIAGRAM		ECN		REV		ZONE		DESCRIPTION		CHK		ENG		DATE																																																		
0270L02832		ECH-DKN33CB-WCES		FIELD		HONEYWELL W7220A		HONEYWELL MS3105		HONEYWELL C7250A		N/A		HONEYWELL C7250A		SHEET 12		2533750		A				INITIAL RELEASE, REF R06944				BC		10-15-25																																																		
0270L02831		ECD-DKN34CB-WCDS		FIELD		HONEYWELL W7220A		HONEYWELL MS3105		HONEYWELL C7250A		HONEYWELL C7250A		N/A		SHEET 12																																																																
0270L02833		ECD-DKN34CB-W00S		FIELD		DDC (NOT INCLUDED)		SIEMENS 987-105/M10 OR GMA151.1PDP/M10		N/A		N/A		N/A		SHEET 13																																																																
0270L03087		ECH-DKN33CB-WCES		FIELD		SIEMENS POL224.00		SIEMENS 987-105/M10 OR GMA151.1PDP/M10		9901-1619		N/A		SIEMENS QFR9530		SHEET 14																																																																
0270L03088		ECD-DKN34CB-WCDS		FIELD		SIEMENS POL224.00		SIEMENS 987-105/M10 OR GMA151.1PDP/M10		9901-1619		SIEMENS QAR9530		N/A		SHEET 14																																																																
FOR DVH PRODUCTS, REFER TO THIS TABLE																																																																																
DAIKIN P/N		MICROMETL P/N		INSTALL		CONTROLLER		ACTUATOR		MIXED AIR SENSOR		DRY BULB SENSOR		ENTHALPY SENSOR		WIRING DIAGRAM																																																																
0270L02833		ECD-DKN34CB-W00S		FIELD		DAIKIN PCB EB22001 (NOT INCLUDED)		SIEMENS 987-105/M10 OR GMA151.1PDP/M10		N/A		N/A		N/A		SHEET 15																																																																
NOTES :																																																																																
1. SUPPLIER PACKAGING MUST COMPLY WITH DAIKIN SPECIFICATION S4900110.																																																																																
2. SUPPLIER 2D BARCODE MUST COMPLY WITH DAIKIN SPECIFICATION S4900070.																																																																																
3. PACKAGE MUST INCLUDE VENDOR INSTALLATION INSTRUCTIONS AND THE LATEST REVISIONS OF IOQ-7170 (FOR SIEMENS ACTUATOR) AND IOQ-7075 (FOR HONEYWELL ACTUATOR).																																																																																
4. INSULATION TO BE ALUMINUM FOIL FACING ON ONE SIDE REINFORCED WITH FIBERGLASS SCRM LAMINATED TO UL RATED KRAFT. FIBERGLASS MATERIAL MUST MEET DAIKIN SPECIFICATION S4900108. MINIMUM R-VALUE OF 1.8. NOMINAL THICKNESS OF 0.500".																																																																																
5. MUST PASS DAIKIN RAIN TEST. LESS THAN 3 OUNCES OF WATER AFTER AN HOUR AT 2 IN-H2O ON RETURN.																																																																																
6. MUST PASS DAIKIN SHIPPING TESTS: T-154, WHEN FACTORY INSTALLED WITH SUPPLIER PACKAGING.																																																																																
7. EXTERIOR PANELS & HOOD TO BE FABRICATED FROM .036 GALVANIZED STEEL, PRE-PAINTED SANDSTONE BEIGE PER DAIKIN SPECIFICATION S4900007.																																																																																
8. (REF) SHIPPING DIMENSIONS: 54.25L X 35.25W X 36.00H, 103 LBS.																																																																																
9. MUST BE TITLE 24 COMPLIANT & CLASS 1A AMCA 511 CERTIFIED.																																																																																
10. ALL WIRES TO BE 20 GAUGE, 105 DEG C 600V RATED, ALL WIRES TO BE UL AND CSA APPROVED AND MARKED WITH MANUFACTURERS IDENTIFICATION AND TEMPERATURE RATING.																																																																																
CLASSIFIED CHARACTERISTICS - MUST BE CONTINUOUSLY MONITORED AND CONTROLLED USING STATISTICAL PROCESS CONTROL (SPC) RUN CHARTS. REFER TO MSP 822-01 REV 13 OR NEWER FOR DETAILS.														COMPONENTS AND MATERIALS SPECIFIED HEREIN SHALL COMPLY WITH GOODMAN S4800170 MATERIALS OF CONCERN SPECIFICATION. COMPONENTS AND MATERIALS SPECIFIED HEREIN SHALL CONFORM TO THE APPLICABLE SECTION OF GOODMAN MSP 860-01 WORKMANSHIP STANDARD.																																																																		
① - CRITICAL CHARACTERISTIC. REQUIRES USE OF SPC AND ONGOING CPK > 1.33														CONFIDENTIAL PROPERTY OF DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, INC. OR ITS AFFILIATES. NOT TO BE DISCLOSED TO OTHERS, COPIED, OR USED FOR ANY PURPOSE EXCEPT AS AUTHORIZED IN WRITING. MUST BE RETURNED UPON DEMAND.																																																																		
② - SIGNIFICANT CHARACTERISTIC. REQUIRES USE OF SPC AND ONGOING CPK > 1.00														ON COMPLETION OF ORDER, OR OTHER PURPOSE FOR WHICH IT WAS LENT.																																																																		
IF SPC INDICATES PROCESS IS NOT CONTROLLED OR IF THE MINIMUM CPK VALUE CANNOT BE MET, 100% INSPECTION IS REQUIRED.																																																																																
9									8									7									6									5									4									3									2									1								

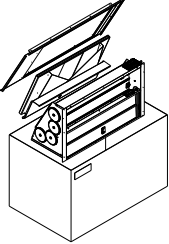



DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, INC.	
DRAWING TO BE INTERPRETED IN ACCORDANCE WITH ASME Y14.100/Y14.5	TITLE
ULL ECONOMIZER, DOWNFLOW MD CHASSIS	
DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.	
DWN BY: HCL-BB	SCALE: NTS
CREATE DATE: 01-09-25	SHEET: 1 OF 15
DWG. NO. R07323	A

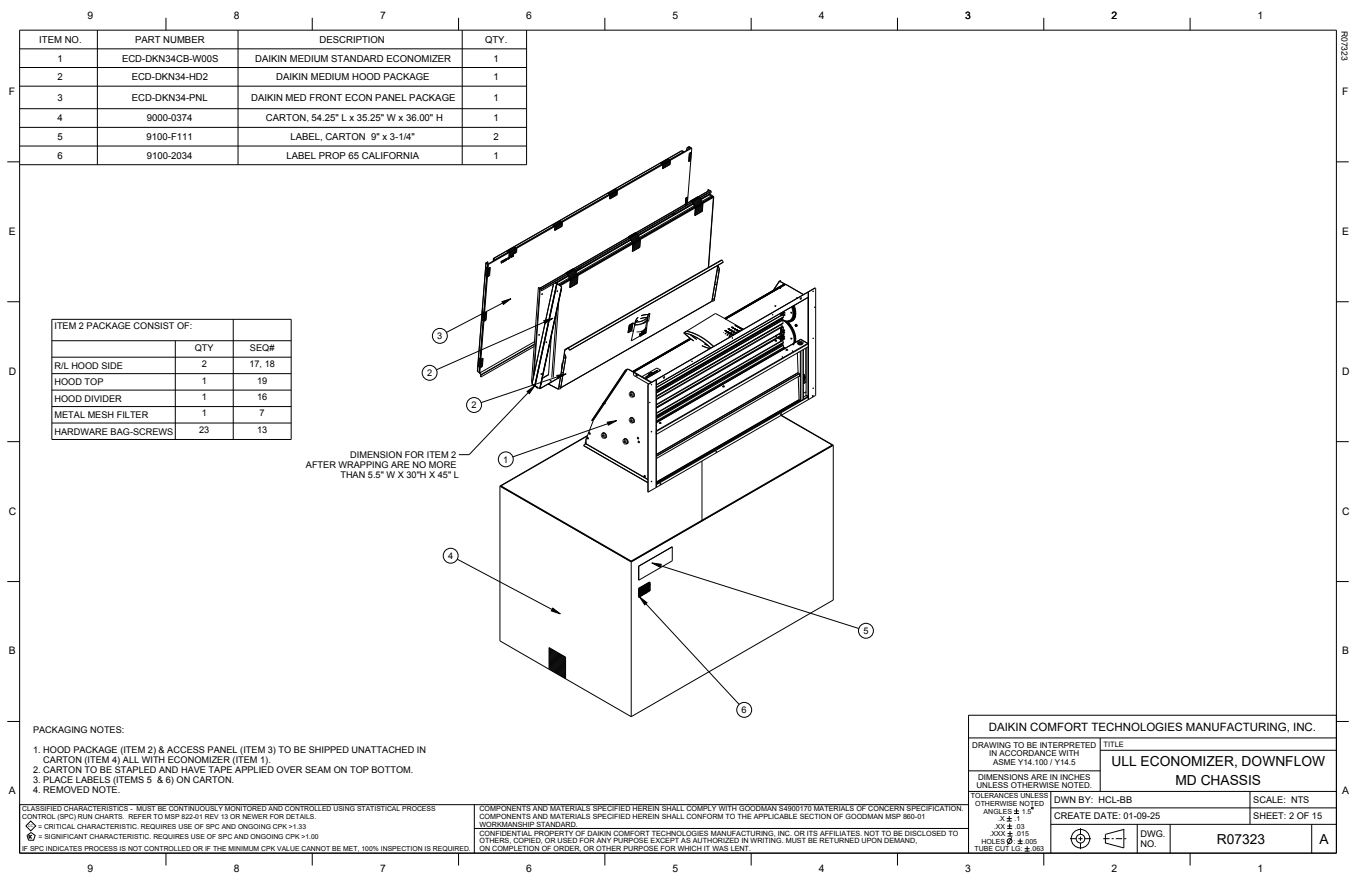


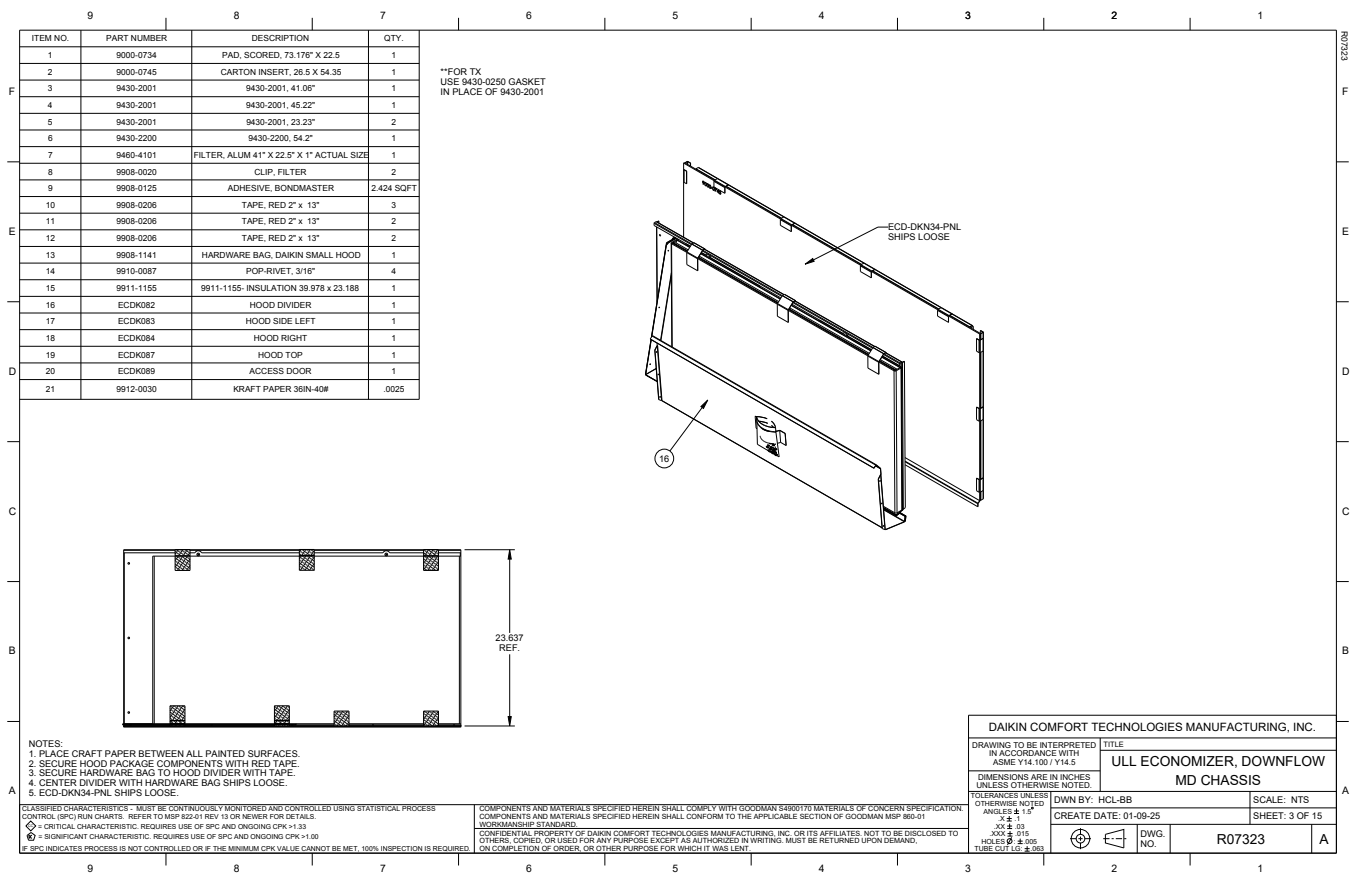


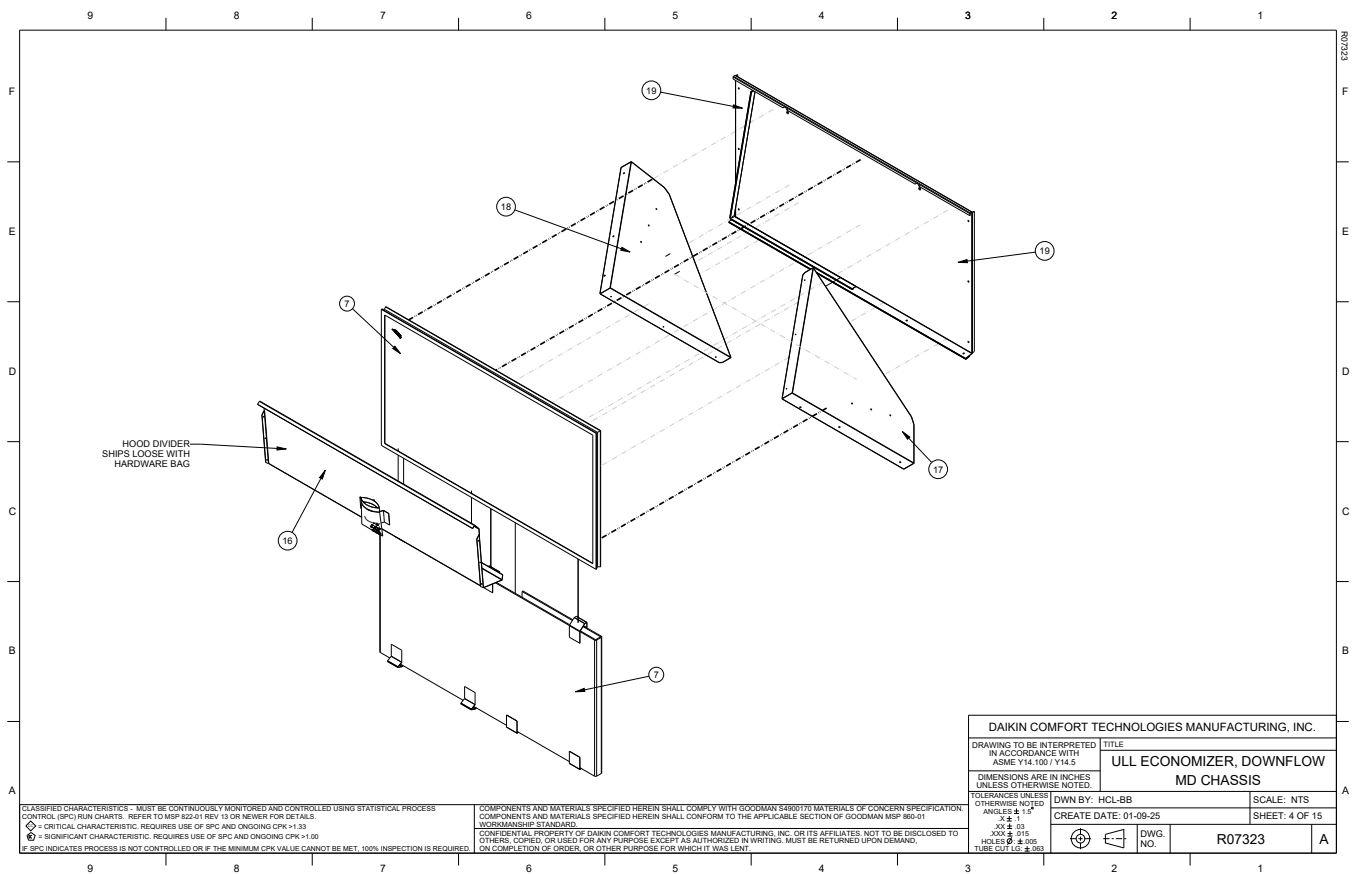


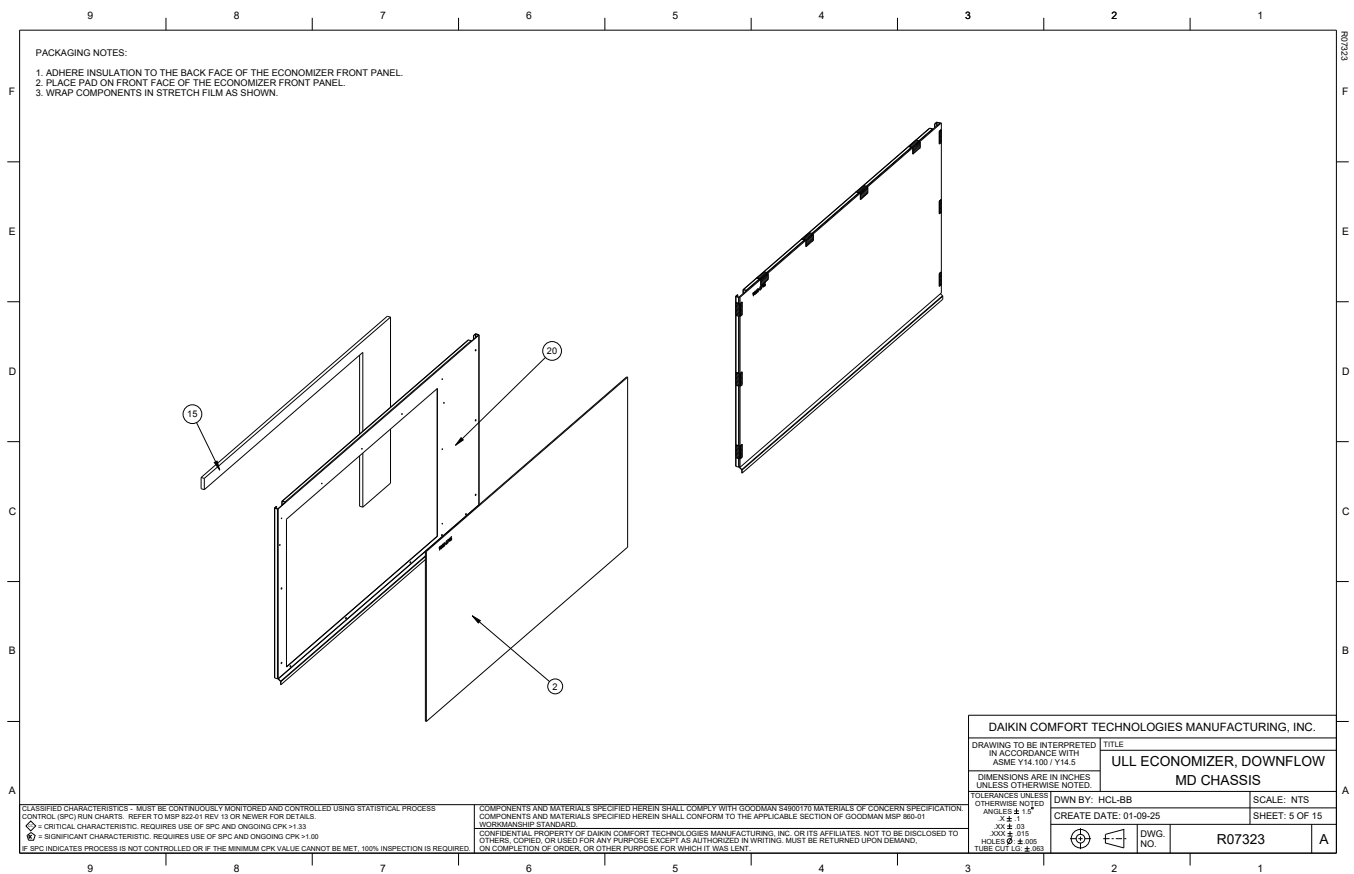


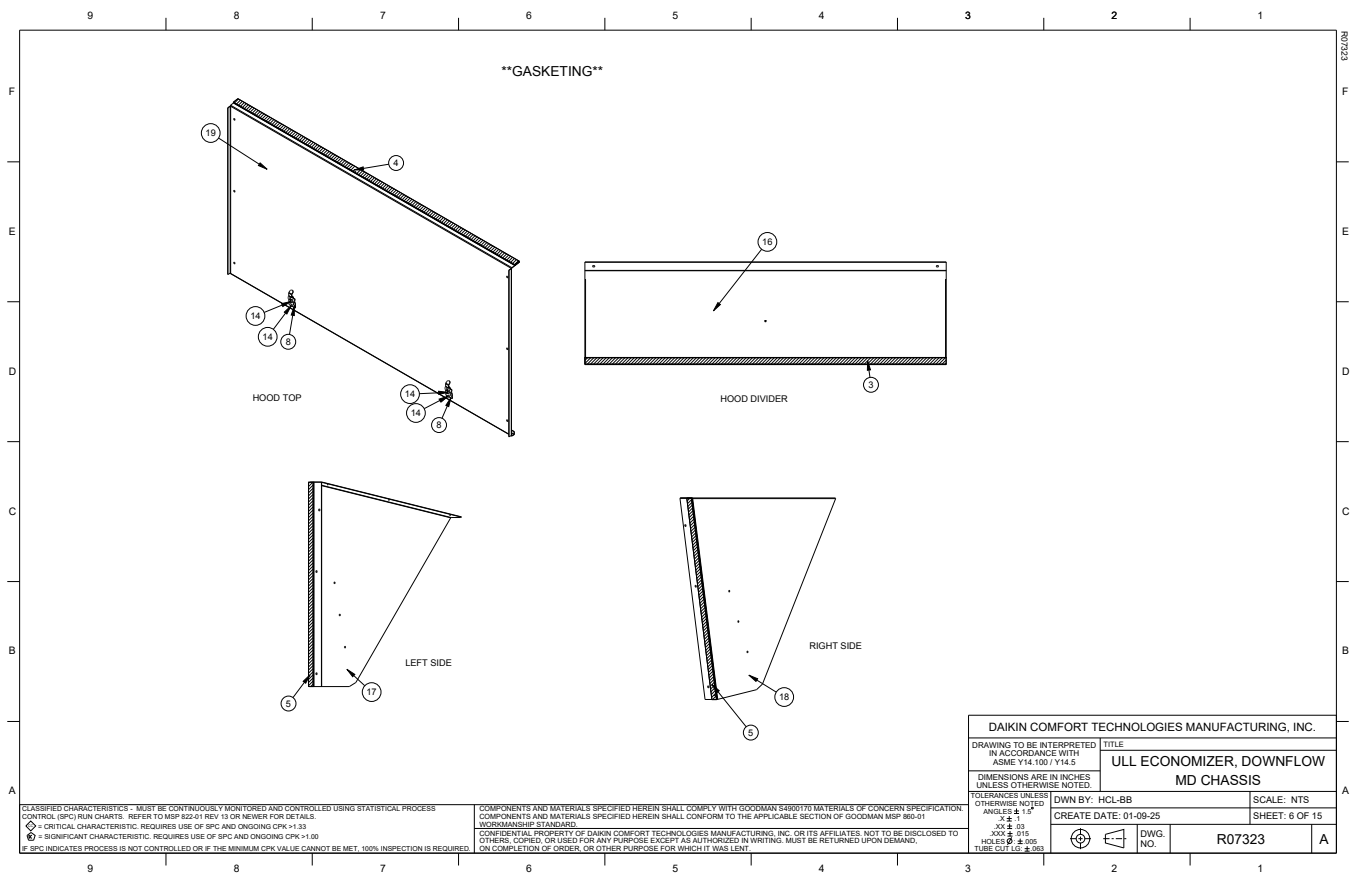


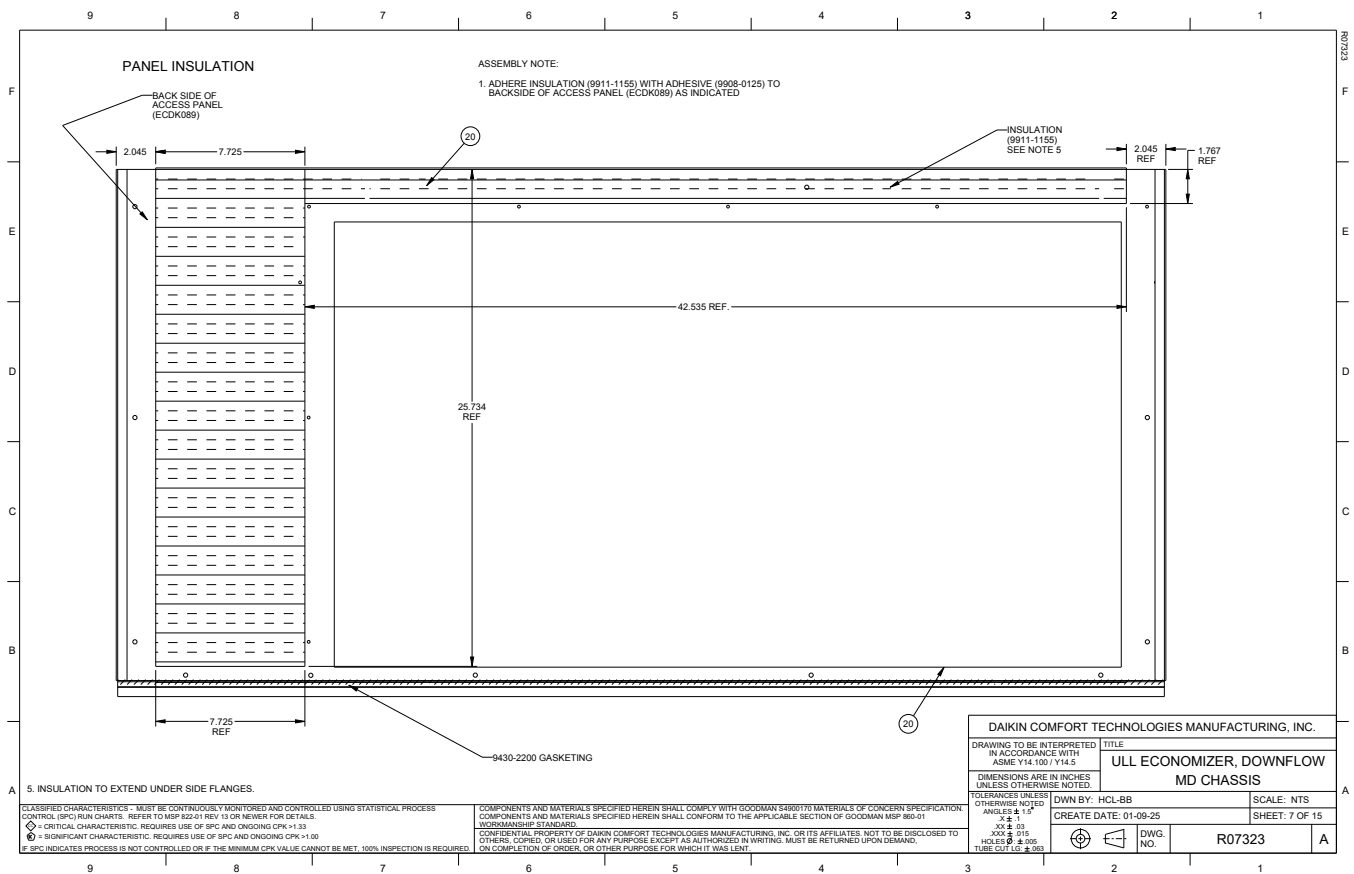


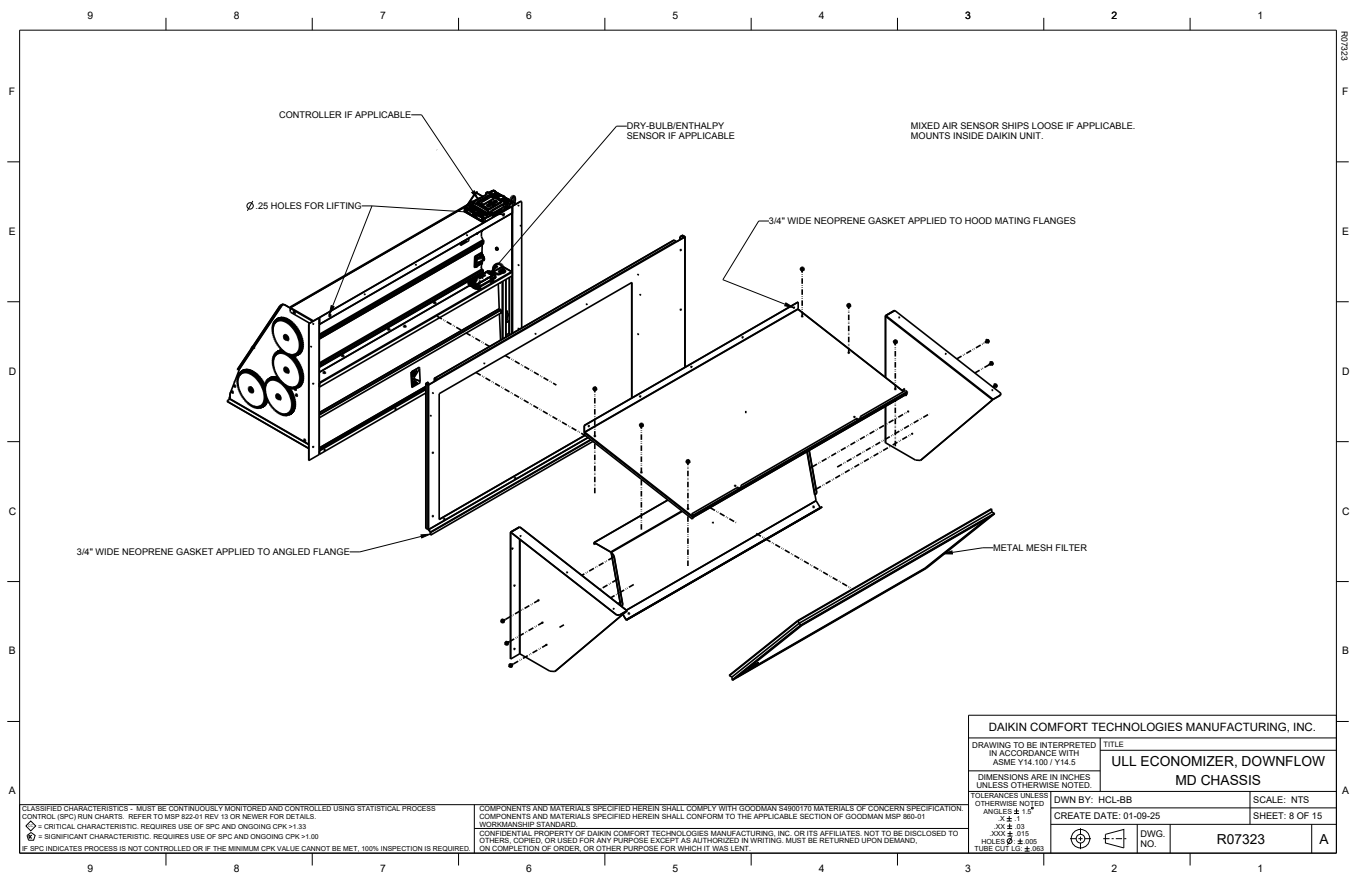


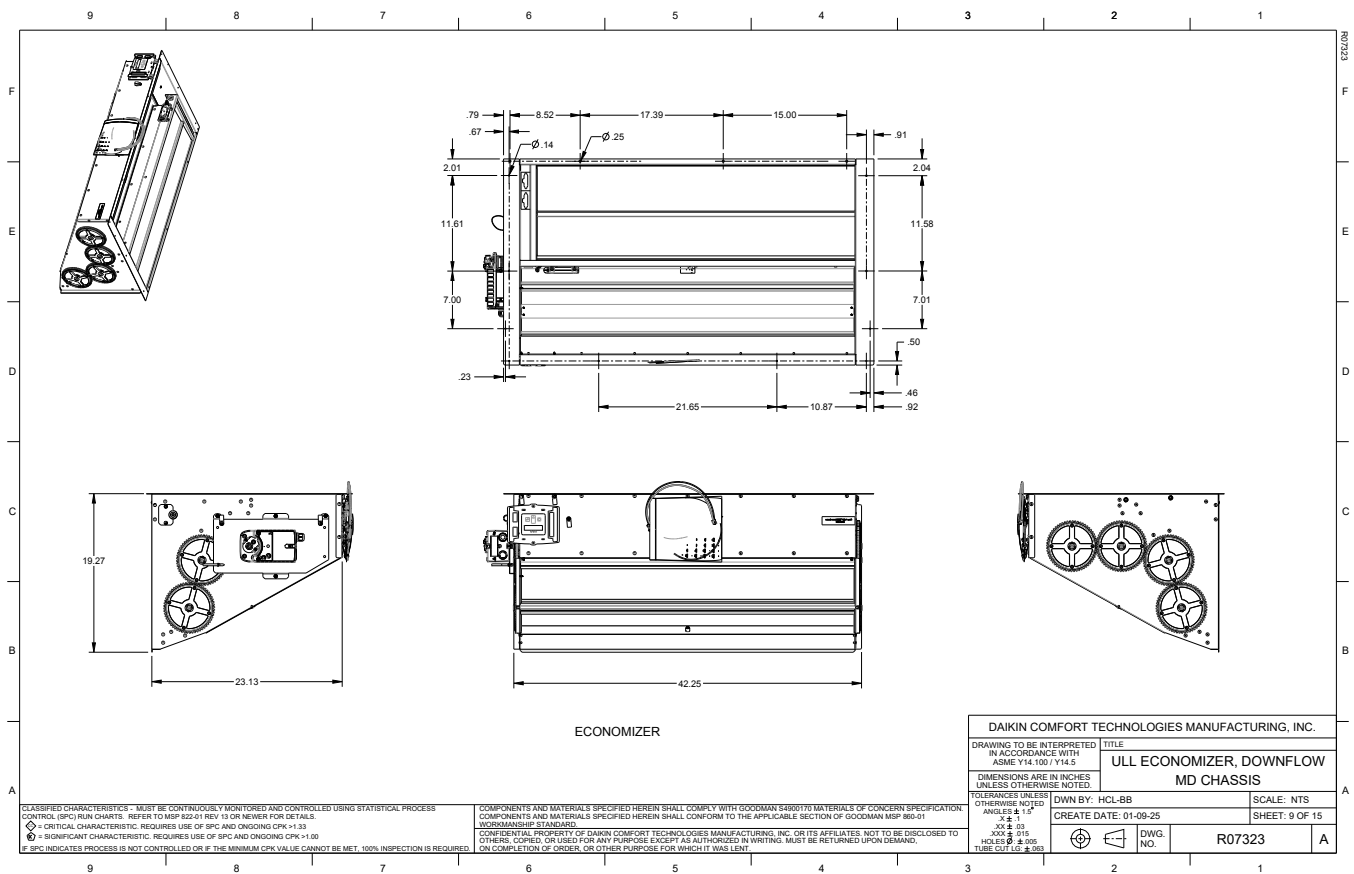


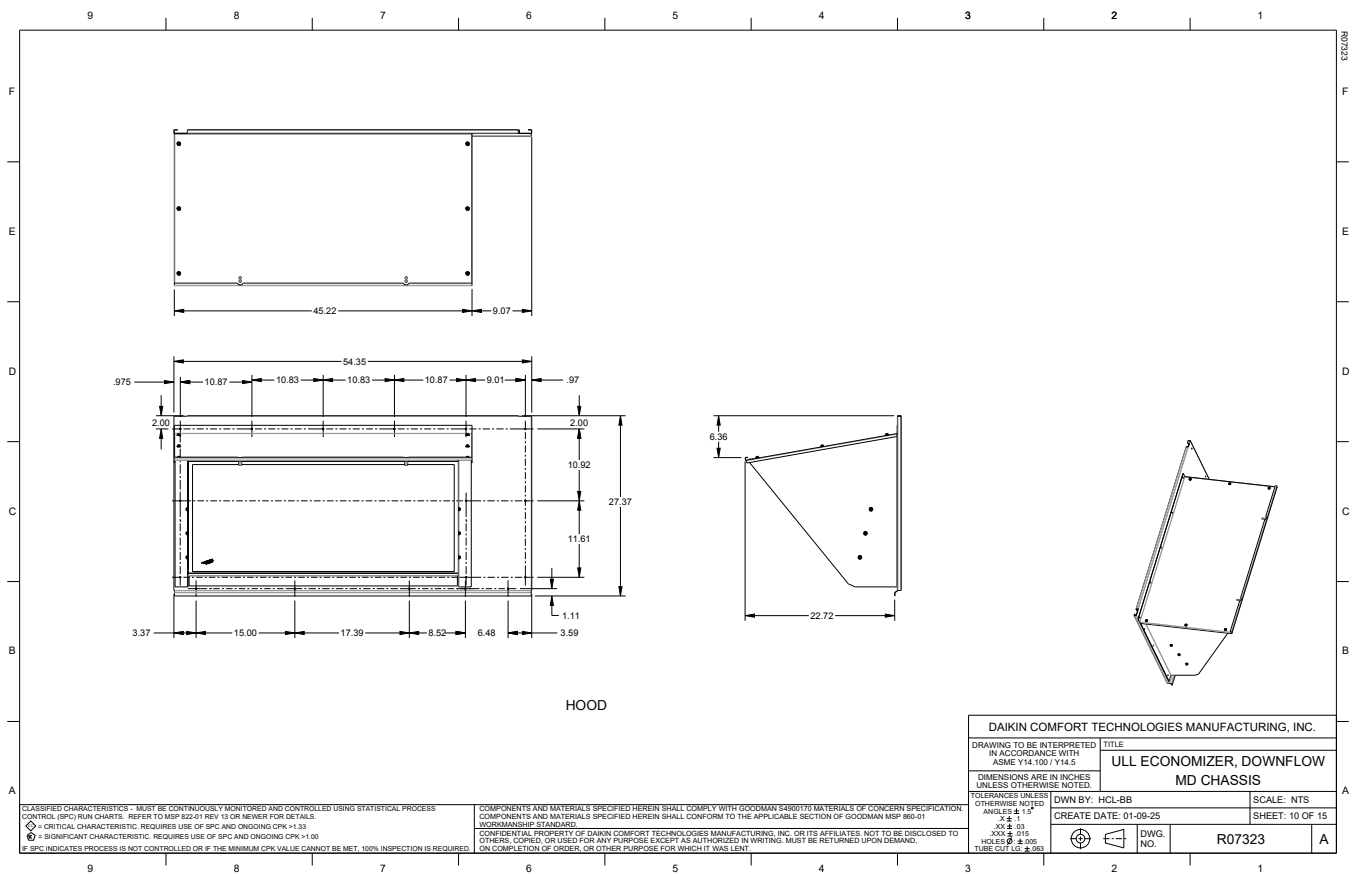


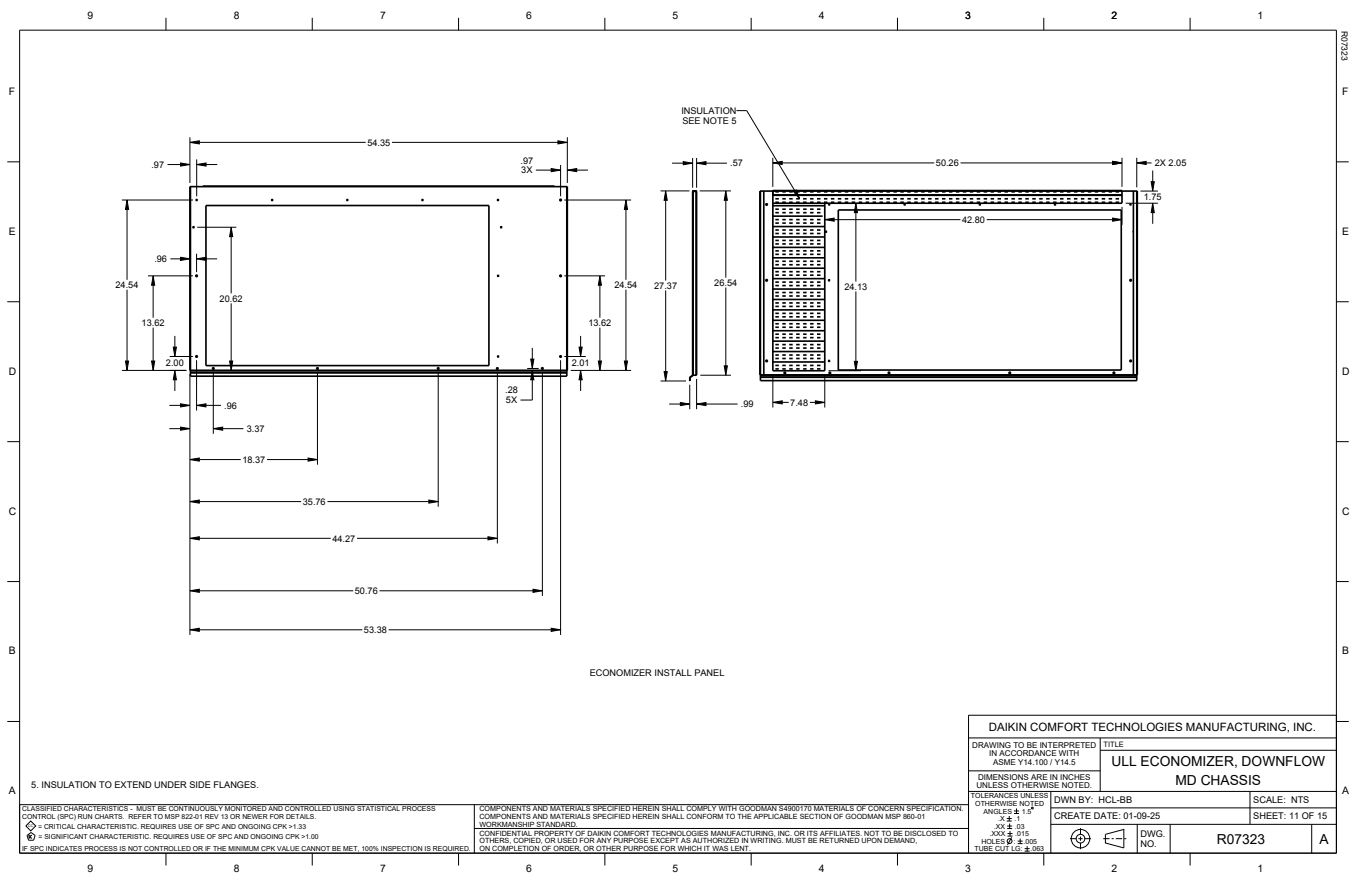

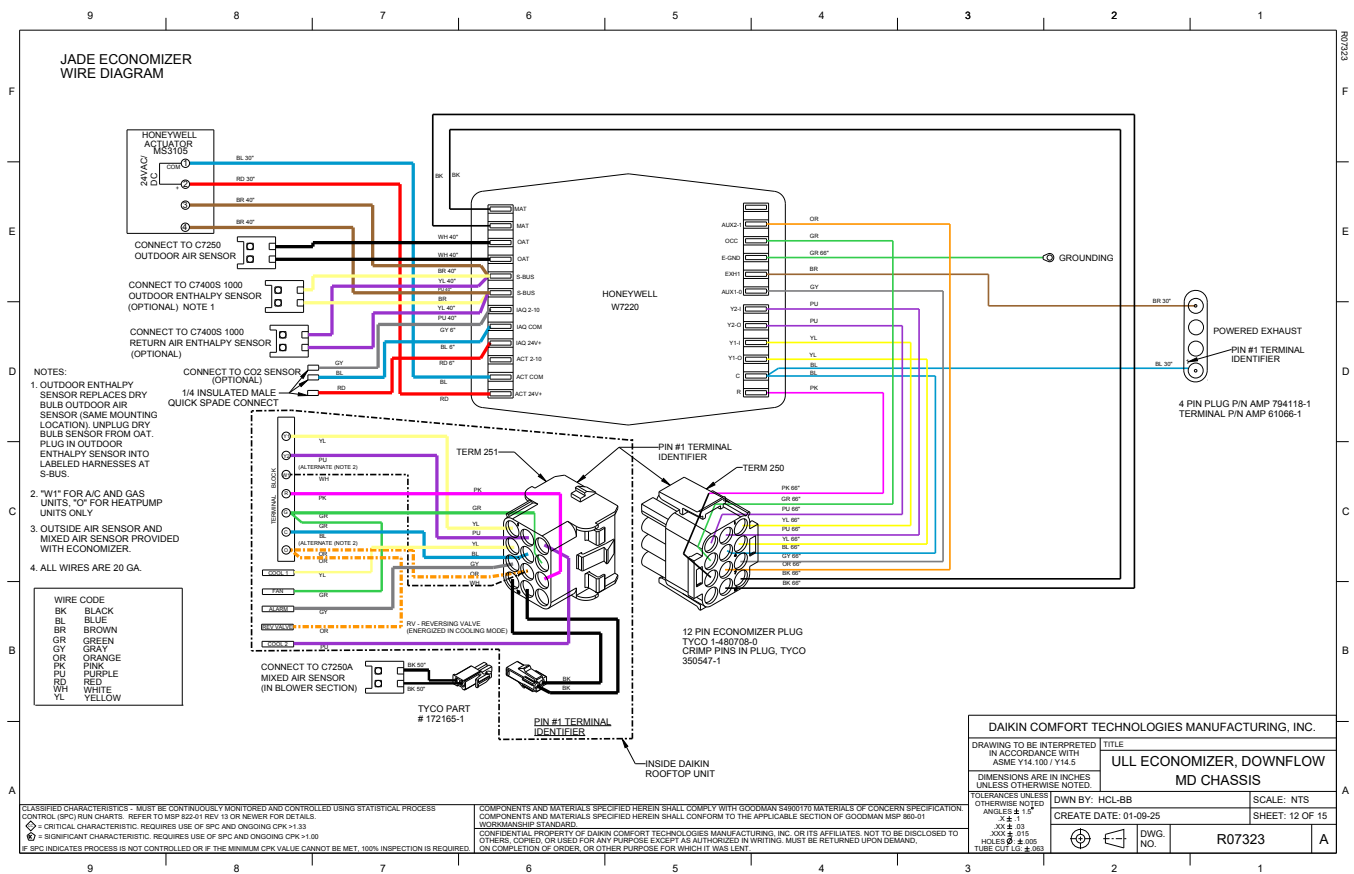

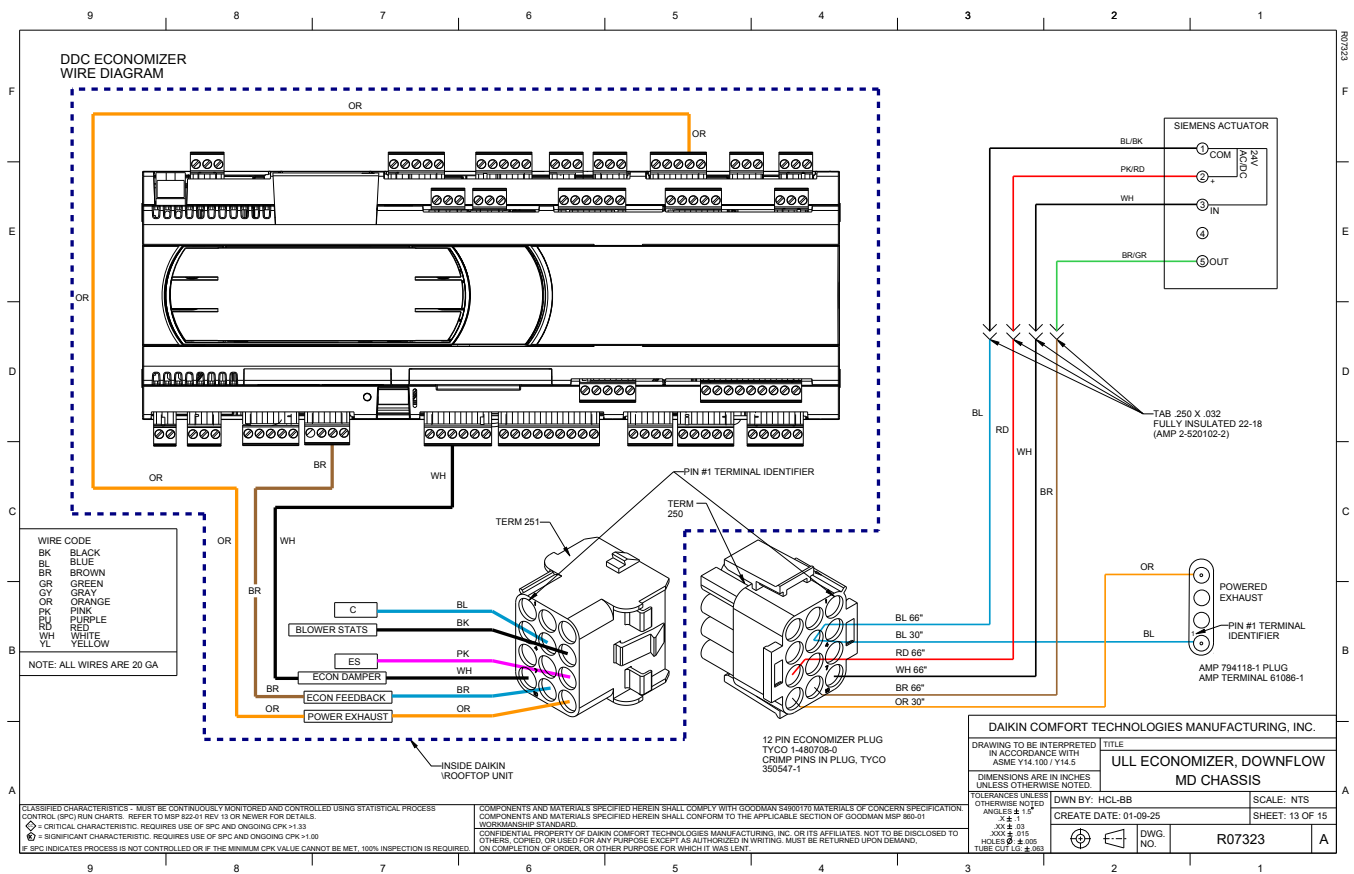

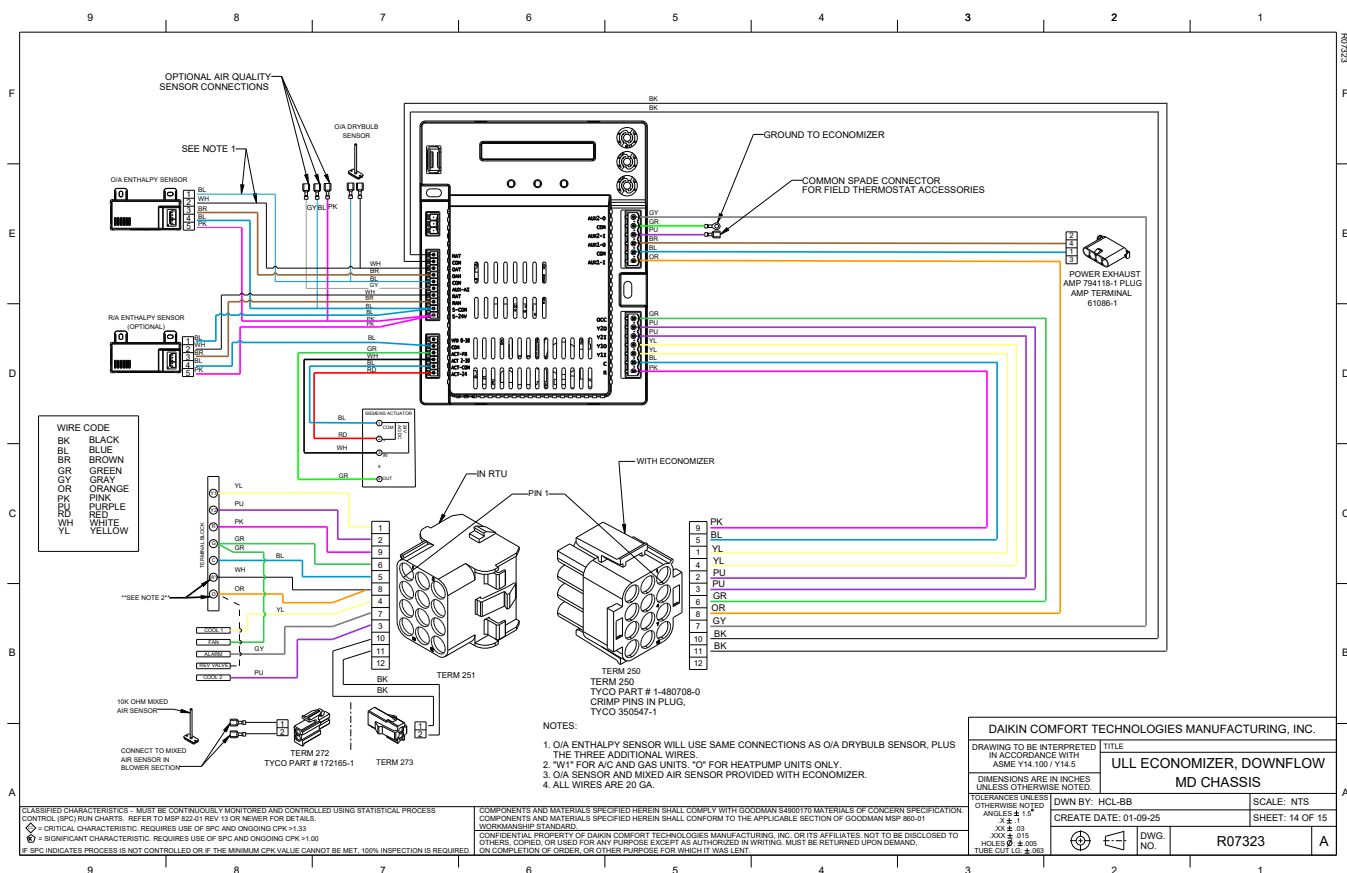

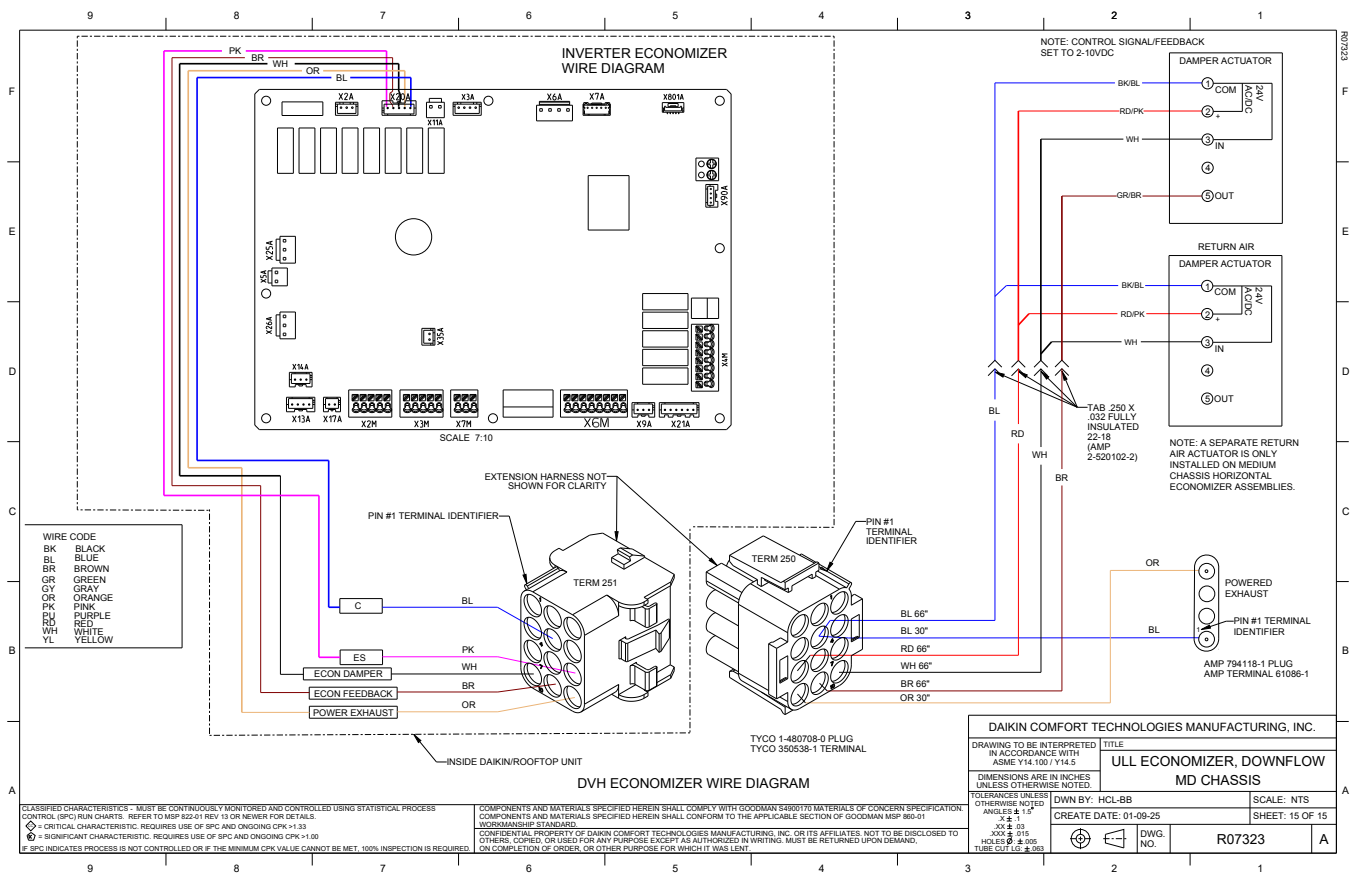

ATTENTION INSTALLING PERSONNEL

As a professional installer you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is **your** responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed here take precedence.

WARNING

HIGH VOLTAGE!

TO AVOID THE RISK OF ELECTRICAL SHOCK, WIRING TO THE UNIT MUST BE POLARIZED AND GROUNDED.



WARNING

HIGH VOLTAGE!



TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, DISCONNECT ELECTRICAL POWER BEFORE SERVICING OR CHANGING ANY ELECTRICAL WIRING.



IMPORTANT!

- A GFCI receptacle is different from conventional receptacles. In the event of a ground fault, a GFCI will trip and quickly stop the flow of electricity to prevent serious injury.
- A GFCI receptacle does NOT protect against circuit overloads, short circuits, or shocks. For example, you can still be shocked if you touch bare wires while standing on a non-conducting surface such as a wood floor.
- Your unit has been built with either a powered or non-powered 115V / 15A GFCI outlet for your convenience. This is to only be used while servicing the unit.
- Use this GFCI with copper or copper-clad wire. Do not use it with aluminum wire.
- Do not install this GFCI receptacle on a circuit that powers life support equipment because if the GFCI trips it will shut down the equipment.
- The GFCI receptacle must be kept dry by a weather proof cover and box at all times.
- Test the outlet before use to make sure it has not incurred any damage during shipping. Perform the *Operation Check* listed in this manual.


GFCI Features

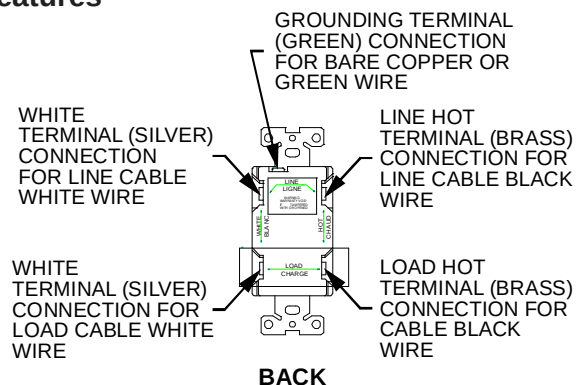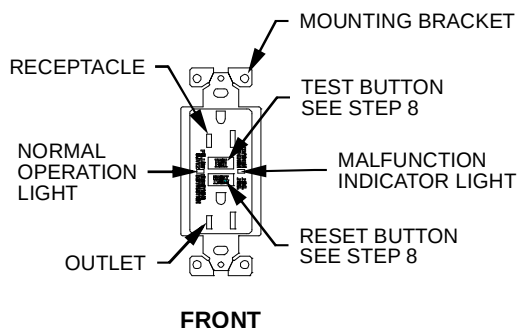


SCREW (TERMINAL) COLORS:
GREEN = GROUNDING TERMINAL
SILVER = WHITE TERMINALS
BRASS = HOT TERMINALS



Your unit will have either a **powered** or **non-powered** GFCI outlet. If your unit has a factory-installed powered convenience outlet, the outlet is ready for use once the unit is installed and operating. See figure below for component locations of the powered outlet.

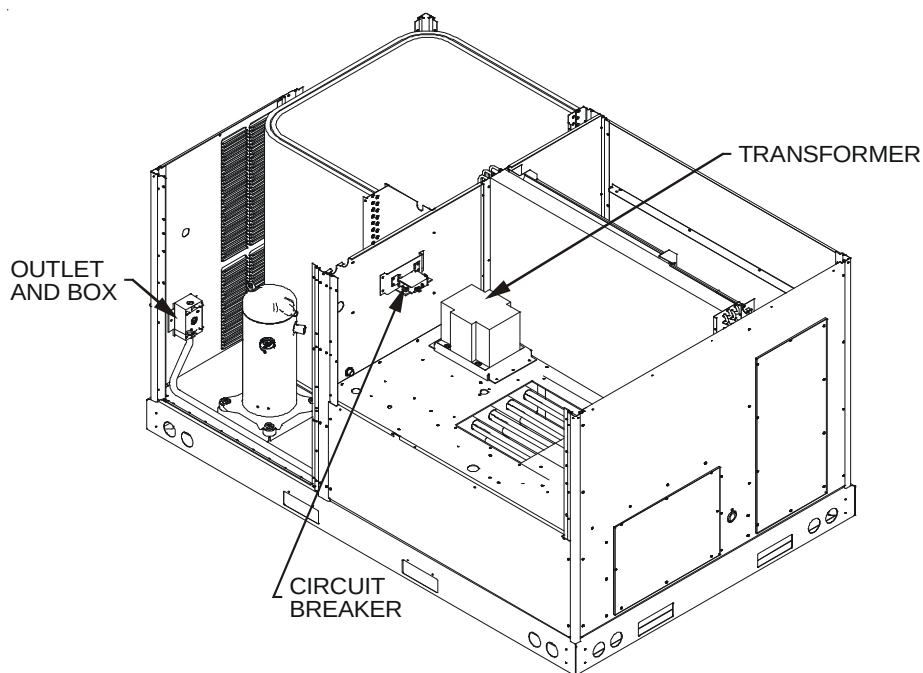


If the power for either needs to be altered from 230V to 208V, please review and follow the instructions listed on the outlet wiring diagram next to the unit diagram. Ensure unit power is OFF before making any wiring changes. See diagram below for your convenience.

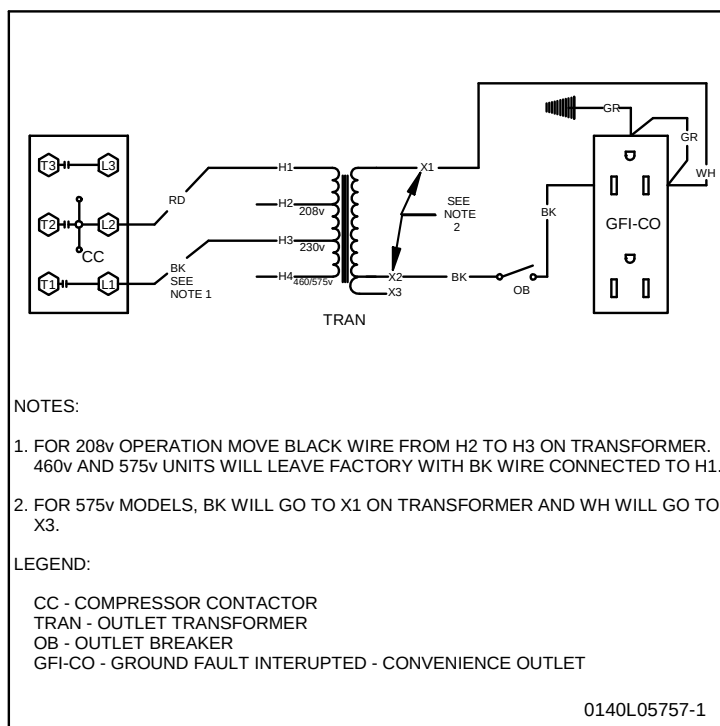

NOTE: There is a 15A breaker mounted to the indoor section of the unit. If outlet is not powered, check the breaker to make sure it is in the ON position. If the breaker has been tripped, check for shorts in the wiring.

NON-POWERED GFCI OUTLET INSTALLATION INSTRUCTIONS

1. Turn power OFF to unit and power source used to power the outlet.
2. Locate the outlet on your unit. It will be near the control box area.
3. Remove gasket and outlet.
4. Bring power into the outlet box as shown. Ensure the wiring is suitable for outdoor conditions. Connect the white wire to the WHITE terminal (Silver).
5. Connect the black wire to the HOT terminal (Brass).
6. Connect a 6-inch bare copper (or GREEN) 12 or 14 AWG wire to the grounding terminal on the GFCI, and a similar wire to the grounding terminal on the box. Connect the ends of these wires to the LINE cable's bare copper (or GREEN) wire using a wire connector.
7. Fold the wires into the box, keeping the grounding wire away from the WHITE and HOT terminals. Screw the receptacle to the box.
8. Install cover as per instructions.

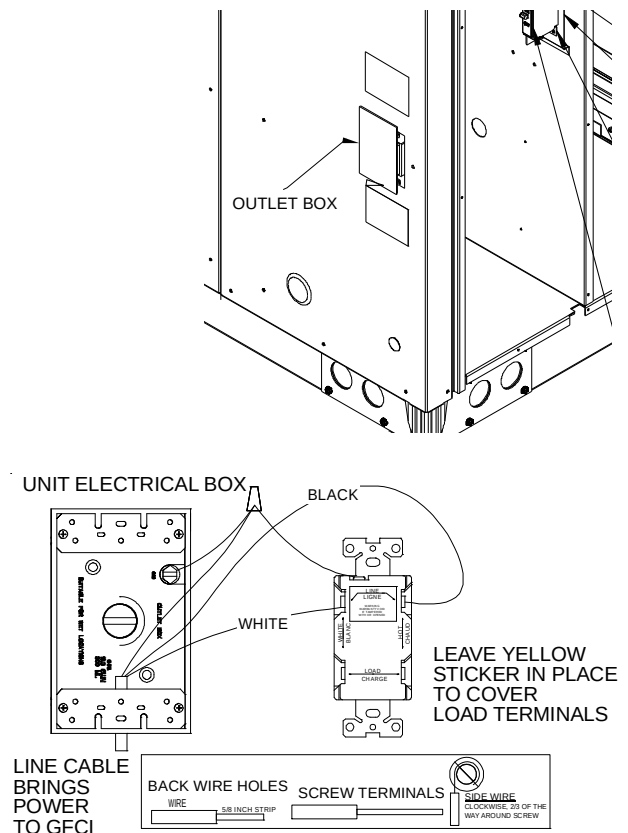

OPERATION CHECK

1. Turn power ON. Press the RESET button fully. Plug a lamp or radio into the GFCI (and leave it plugged-in) to verify that the power is ON.
2. Next, press the TEST button to trip the device. The radio or lamp should shut OFF and the RESET button will pop-out. To restore power, press the RESET button.
3. If the malfunction indicator light (end-of-life indicator LED) (red) lights, the GFCI has stopped functioning and needs to be replaced.

If the outlet does not work as described, turn power OFF and check the wire connections against the diagram shown above. Ensure that there are not loose wires or loose connections.

If the RESET button does not work, check the LINE and LOAD connections. They could be reversed. If there are no wiring mistakes, the receptacle could be damaged and will need to be replaced. If the connections are rewired to the GFCI, please perform the *Operation Check* again.

NOTE: There is a 15A breaker mounted to the indoor section of the unit. If outlet is not powered, check the breaker to make sure it is in the ON position. If the breaker has been tripped, check for shorts in the wiring.

Check the TEST and RESET buttons monthly to assure proper operation.



NON-POWERED AND POWERED GFCI OUTLET COVER INSTALLATION INSTRUCTIONS

1. Locate the outlet on your unit. It will be near the control box area.
2. Remove the gasket.
3. Install the GFCI outlet cover as shown.
4. The outlet cover is shipped with the unit and could be found in control box or blower deck.

ASSEMBLY INSTRUCTIONS: Numbers in parenthesis reflect the balloon numbers on the drawing.

1. Apply gasket (ITEM 6) to base (ITEM 2).
2. Apply adhesive, LOCTITE 4204 or 4205, (ITEM 13) into cord flap gasket slot of cover (ITEM 1) and base (ITEM 2). See gasket slot detail.

3. Insert cord flaps (ITEM 12) into slots of cover and base within 15 seconds of step 2 above. Ensure cord flaps are fully seated and top of flap is flush with the top of cord opening of cover and base. See cord opening detail. Presence of adhesive should not be apparent on any exposed surface of installed cord flap gasket.
4. Snap cover (ITEM 1) to base (ITEM 2).
5. Place wallplates (ITEM 3 & 4) into assembled unit.
6. Place bagged mounting screws (ITEM 5) into assembled unit.
7. Place instruction sheet (ITEM 8) into assembled unit.
8. Close assembled unit.
9. Place assembled unit into packaging bag (ITEM 7).
10. Seal packaging bag (ITEM 7).
11. Place sealed bags into carton (ITEM 10), four rows of three.
12. Place label (ITEM 9) on carton (ITEM 10).
13. Insert quality flyer (ITEM 11).

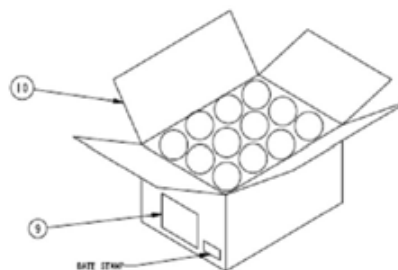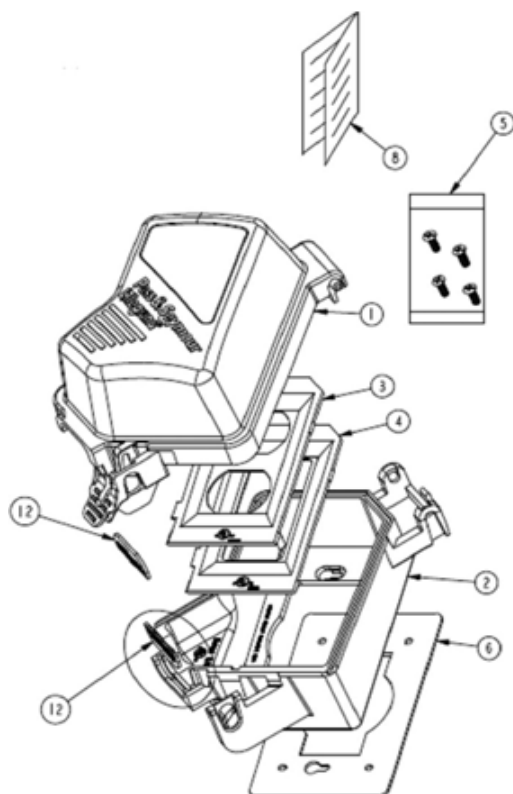

NOTE: SPECIFICATIONS AND PERFORMANCE DATA LISTED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE


Quality Makes the Difference!

All of our systems are designed and manufactured with the same high quality standards regardless of size or efficiency. We have designed these units to significantly reduce the most frequent causes of product failure. They are simple to service and forgiving to operate. We use quality materials and components. Finally, every unit is run tested before it leaves the factory. That's why we know. . . **There's No Better Quality.**

Visit our website at www.daikincomfort.com for information on:

- Products
- Warranties
- Customer Services
- Parts
- Contractor Programs and Training
- Financing Options

© 2013, 2015-2016 **DAIKIN MANUFACTURING COMPANY, L.P**

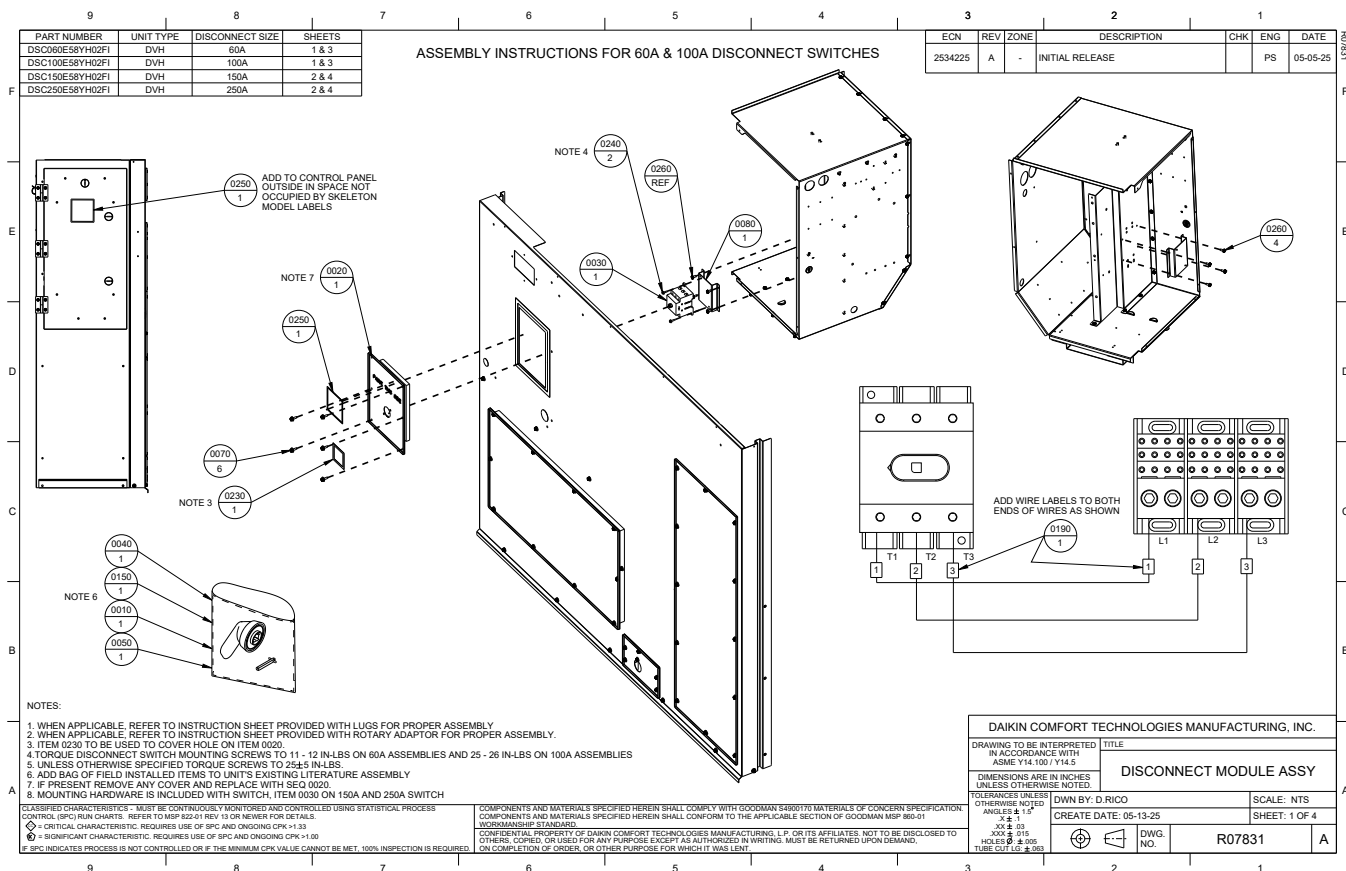

ASSEMBLY INSTRUCTIONS FOR 150A & 250A DISCONNECT SWITCHES

NOTES:

1. WHEN APPLICABLE, REFER TO INSTRUCTION SHEET PROVIDED WITH LUGS FOR PROPER ASSEMBLY
2. WHEN APPLICABLE, REFER TO INSTRUCTION SHEET PROVIDED WITH ROTARY ADAPTOR FOR PROPER ASSEMBLY.
3. ITEM 0230 TO BE USED TO COVER HOLE ON ITEM 0020
4. TORQUE DISCONNECT SWITCH MOUNTING SCREWS TO 11 - 12 IN-LBS ON 60A ASSEMBLIES AND 25 - 26 IN-LBS ON 100A ASSEMBLIES
5. UNLESS OTHERWISE SPECIFIED TORQUE SCREWS TO 25-45 IN-LBS
6. ADD BAG OF FIELD INSTALLED ITEMS TO UNITS EXISTING LITERATURE ASSEMBLY
7. IF PRESENT REMOVE ANY COVER AND REPLACE WITH SEO 0020
8. MOUNTING HARDWARE IS INCLUDED WITH SWITCH. ITEM 0030 ON 150A AND 250A SWITCH

CLASSIFIED CHARACTERISTICS - MUST BE CONTINUOUSLY MONITORED AND CONTROLLED USING STATISTICAL PROCESS CONTROL (SPC) RUN CHARTS. REFER TO MSP 822-01 REV 13 OR NEWER FOR DETAILS.

COMPONENTS AND MATERIALS SPECIFIED HEREIN SHALL COMPLY WITH GOODMAN S4800770 MATERIALS OF CONCERN SPECIFICATION. COMPONENTS AND MATERIALS SPECIFIED HEREIN SHALL CONFORM TO THE APPLICABLE SECTION OF GOODMAN MSP 860-01 WORKMANSHIP STANDARD.

CONFIDENTIAL PROPERTY OF DAKIN COMFORT TECHNOLOGIES MANUFACTURING, L.P. OR ITS AFFILIATES. NOT TO BE DISCLOSED TO OTHERS. COPIED OR USED FOR ANY PURPOSE EXCEPT AS AUTHORIZED IN WRITING. MUST BE RETURNED UPON DEMAND. ON COMPLETION OF ORDER, OR OTHER PURPOSE FOR WHICH IT WAS LENT.

DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, INC.

DISCONNECT MODULE ASSY

DWN BY: D. RICO

CREATE DATE: 05-13-25

SCALE: NTS

SHEET: 2 OF 4

R07831

DWG. NO.

SPC INDICATES PROCESS IS NOT CONTROLLED OR IF THE MINIMUM CPK VALUE CANNOT BE MET, 100% INSPECTION IS REQUIRED.

ITEM 0030 NOTE 8

ITEM 0230 NOTE 3

ITEM 0020 NOTE 7

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1

ITEM 0010 1

ITEM 0050 1

ITEM 0250 1

ITEM 0970 6

ITEM 0100 1

ITEM 0110 1

ITEM 0110 1

ITEM 0190 1

ITEM 0030 1

ITEM 0020 1

ITEM 0250 1

ITEM 0040 1

ITEM 0150 1


ITEM 0010 1


ITEM 0050 1


ITEM 0250 1


ITEM 0970 6

ITEM 0100 1</

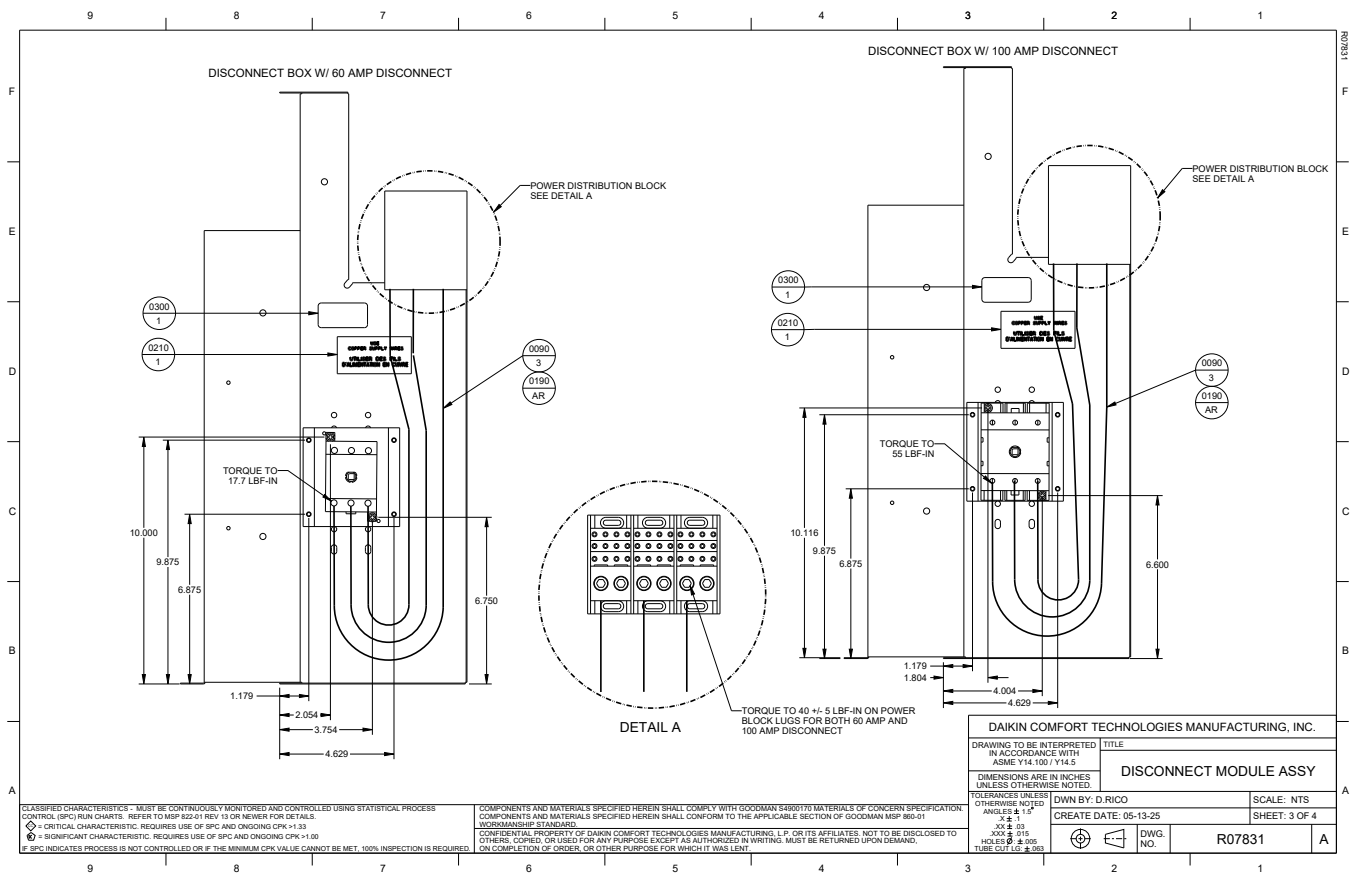

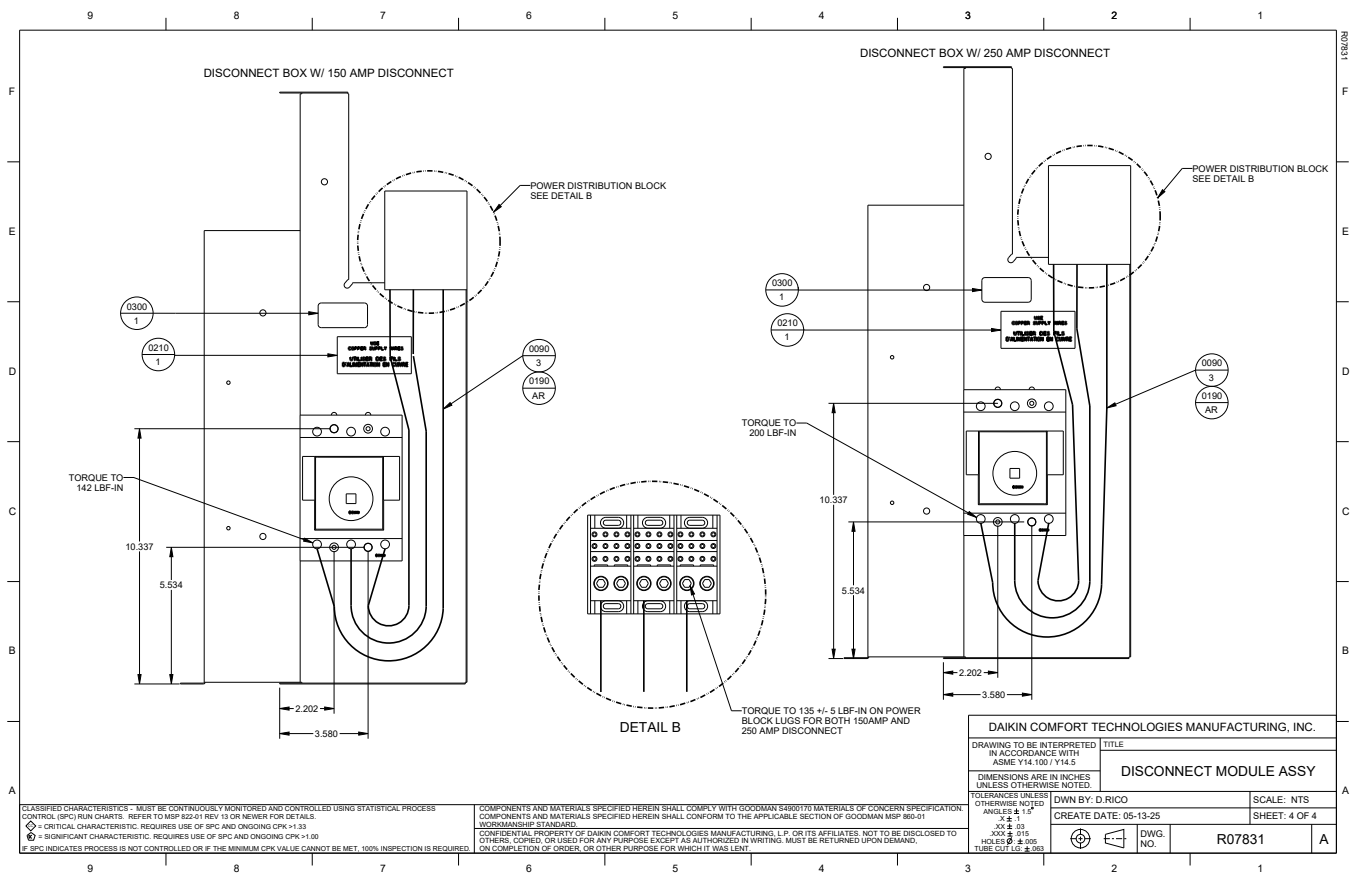

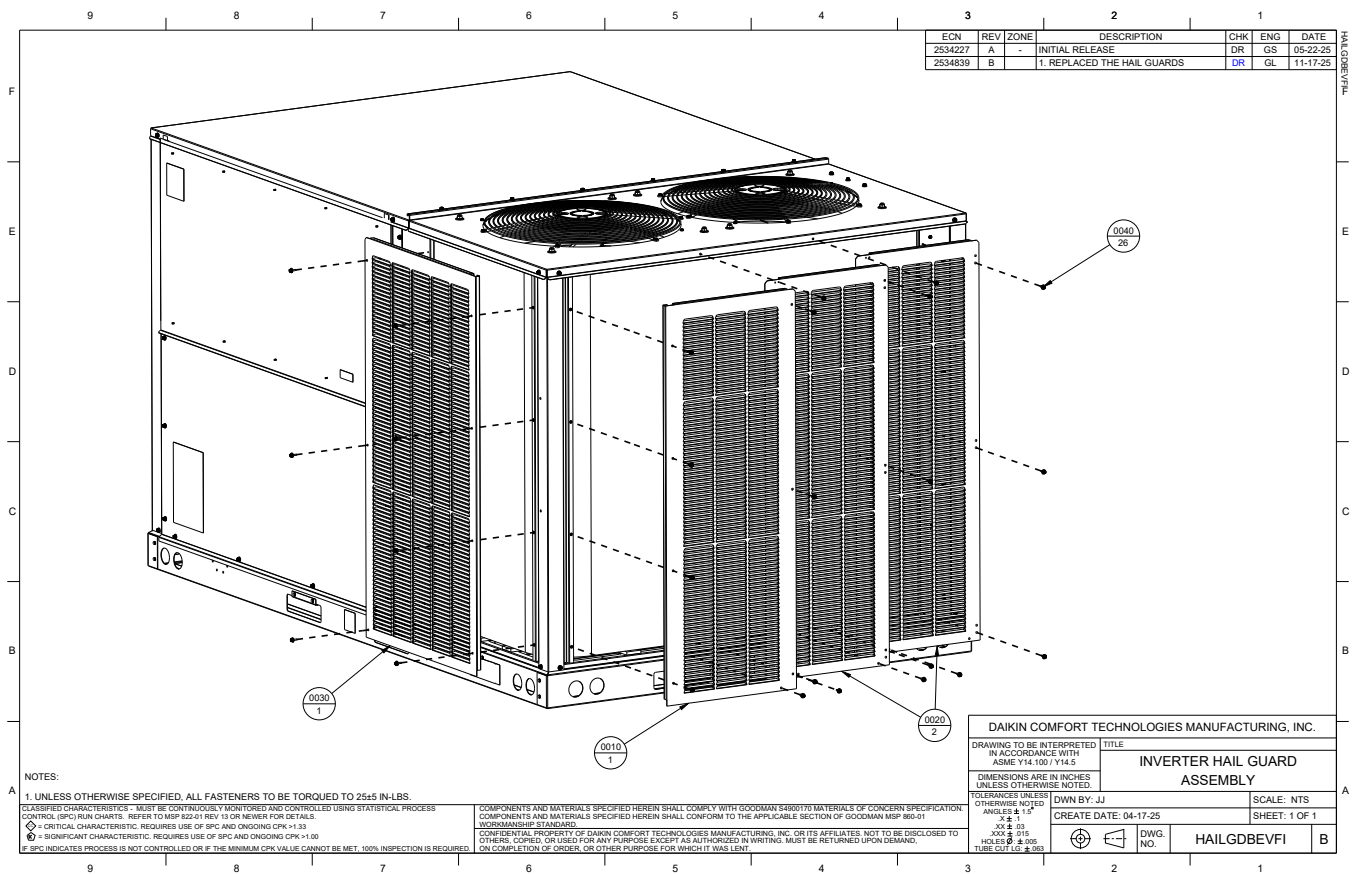

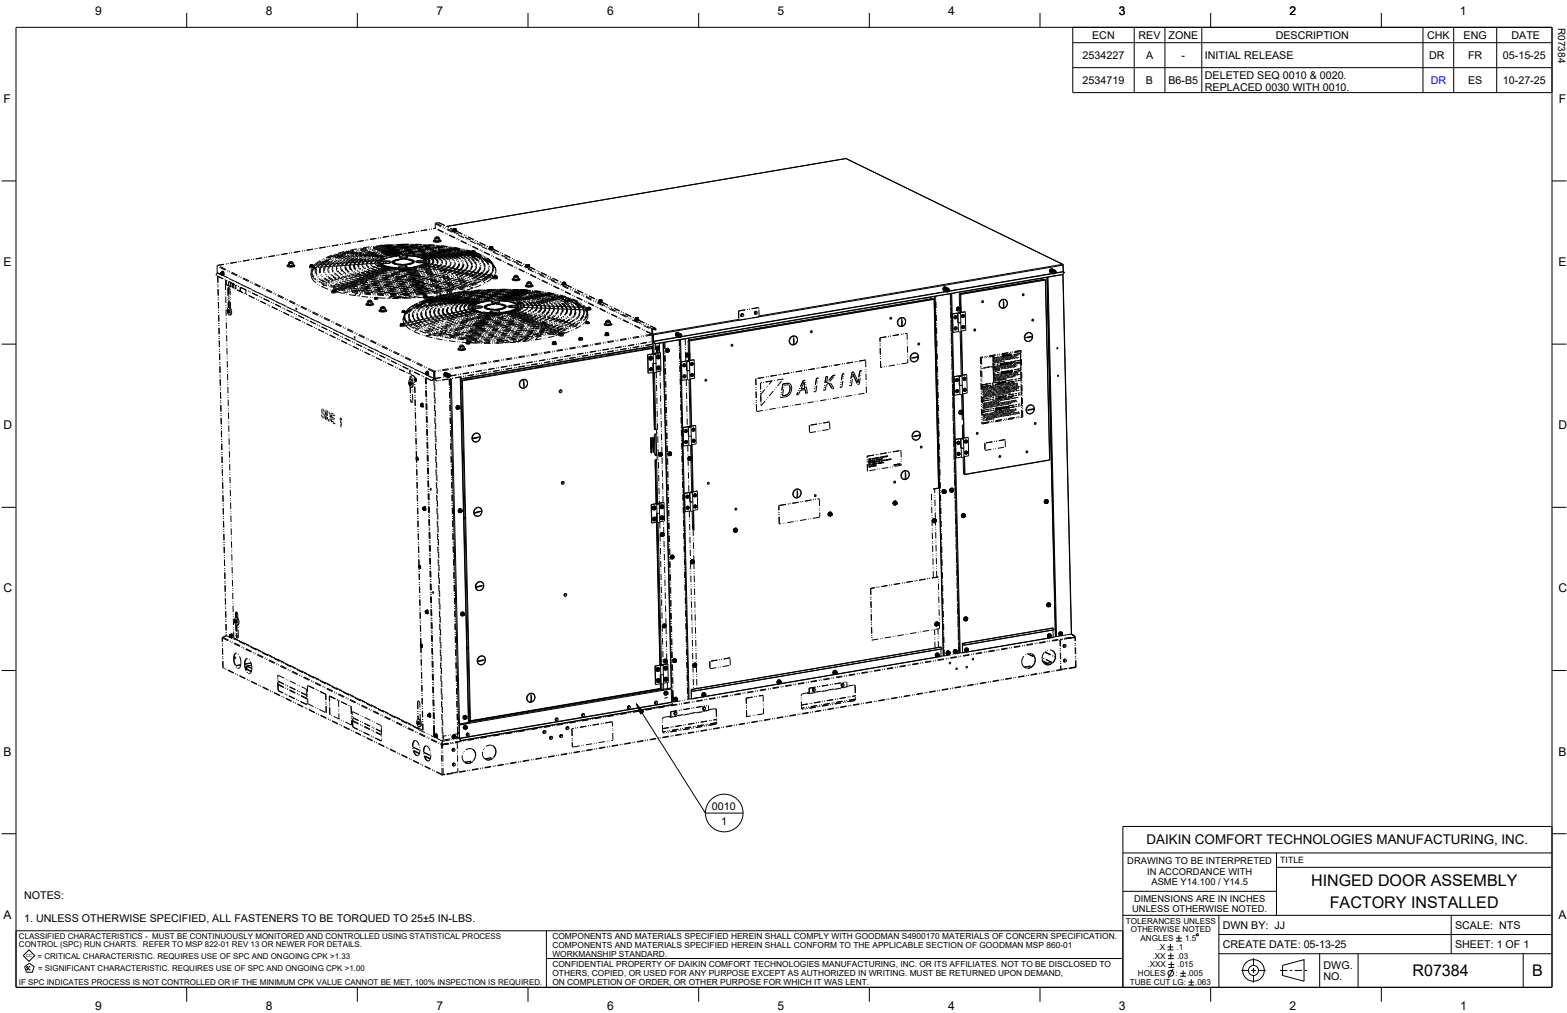



Modulating Hot Gas Reheat Dehumidification Air System

High indoor humidity levels can create uncomfortable experiences for customers, tenants, and occupants. Adding additional dehumidification capability to a standard rooftop can help control humidity levels for high humidity climates. With the Daikin Modulating Hot Gas Reheat Dehumidification Air System, the perfect indoor air is possible!




How it Works:

Using a space temperature and humidity sensor in conjunction with the Daikin *i*LINQ Controller and Reheat Module, the unit can initiate a Dehumidification Mode as the space humidity rises above set-point. In this mode, the modulating valve diverts a percentage of the hot gas to the reheat coil as required to maintain supply air temperature requirements while lowering the space relative humidity. The modulating valve system allows smooth transition into dehumidification and longer run time at a steady supply air temperature. The indoor fan will operate at low speed during dehumidification mode. The 2 modes of operation are:

Normal Cooling

Heat Gas Valve (HGV) closed, Purge Valve open


In cooling mode, the unit can operate with one or two compressor stages. The cooling only system operation is the same as a typical refrigerant cycle.

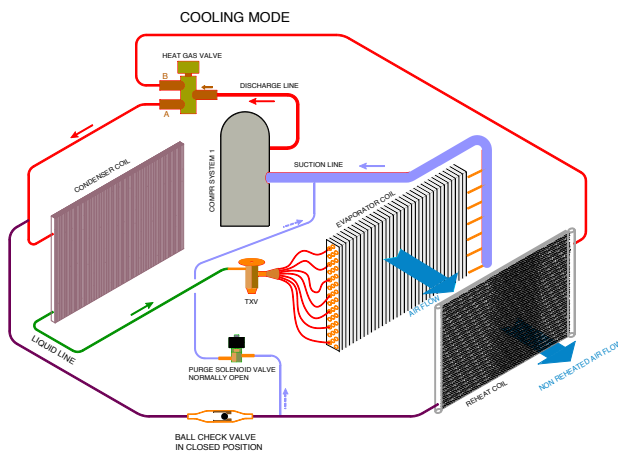

Dehumidification

Heat Gas Valve (HGV) open, Purge Valve closed

If the space temperature is satisfied, but the space humidity is high, the unit will initiate Dehumidification Mode. One or two compressor stages, as allowed by the system, will stage on. The supply air will be regulated at a neutral temperature setting by modulating the HGV to extend operation of the evaporator coils for dehumidification. As space conditions change, the supply air temperature set-point is reset to maintain occupant comfort and optimize compressor operation.

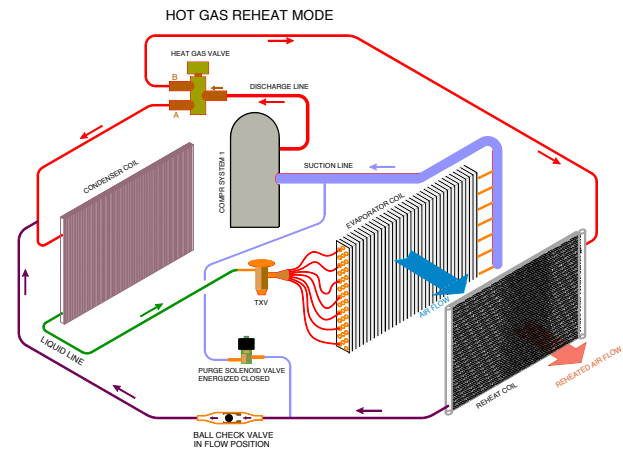

AN IDEAL SOLUTION FOR EVERY APPLICATION:

Schools/Educational Buildings • Restaurant and Shopping Centers • Hospitals and Care Centers
Fitness and Industrial Facilities • Museums, Galleries, and more!

Learn more at www.daikinac.com

DAIKIN

Our continuing commitment to quality products may mean a change in specifications without notice.

© 2021 **DAIKIN NORTH AMERICA LLC** · Houston, Texas · USA · www.daikincomfort.com or www.daikinac.com

PF-MHGAS 04-21

TTBCKHE01 & TTBCKHE02 THRU-THE-BOTTOM SERVICE CONNECTION KIT (FOR 3-12.5 Ton) LIGHT COMMERCIAL GAS UNITS INSTALLATION INSTRUCTIONS

© 2019 **DAIKIN MANUFACTURING COMPANY, L.P.**

19001 Kermier Rd. Waller, TX 77484

www.daikincomfort.com

P/N: IOD-7118 Date: October 2019

Safety Considerations

The following symbols and labels are used throughout this manual to indicate immediate or potential safety hazards. It is the owner's and installer's responsibility to read and comply with all safety information and instructions accompanying these symbols. Failure to heed safety information increases the risk of personal injury, property damage, and/or product damage.

 **WARNING**
ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE OR REPAIR (HEREINAFTER, "SERVICE") THE EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT. THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL, ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT. IMPROPER INSTALLATION, ADJUSTMENT, SERVICING OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

**PROP 65 WARNING
FOR CALIFORNIA CONSUMERS**

 **WARNING**

Cancer and Reproductive Harm -
www.P65Warnings.ca.gov

0140M00517-A

 **WARNING**
HIGH VOLTAGE!
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.


ATTENTION INSTALLING PERSONNEL

As a professional installer, you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair, it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is your responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed here take precedence.

	PART NO.	DESCRIPTION	QTY
TTBCKHE01	0163L00152	½" Gas Adapter Fitting	1
	0163L00154	½" Elec. Bulkhead Connector	2
	0163L00196	1-½" Elec. Bulkhead Connector	1
	0121L02301	Bracket Thru the Base	1
	B1910010	Gas Line Grommet	1
	B1393561	#10 x ½" Self-Drilling Screw	2
TTBCKHE02	0163L00154	½" Elec. Bulkhead Connector	2
	0163L00197	2" Elec. Bulkhead Connector	1
	0121L02876	Bracket Thru the Base	1
	B1393561	#10 x ½" Self-Drilling Screw	2

Table 1 - Thru-the-Bottom Connection Parts

DESCRIPTION

Thru-the-bottom service connection kits reduce the number of penetrations in the roof. They provide a watertight way to connect power wiring, control wiring, and the gas supply line through the base of the unit in the condenser section. External connectors must be weatherproof. All holes in the unit base must be sealed (including those around conduit nuts) to prevent water leakage into the building.

When the thru-the-bottom power accessory package is purchased, one of two bulkhead connector sets may be selected for power connections (depending on unit size). Each set contains 3 to 4 bulkhead connectors, depending on unit tonnage (Table 1). The ½ in. diameter bulkhead connectors enable the low-voltage control, and optional convenience outlet, wires to pass through the basepan. The 1-½ or 2 in. bulkhead connector allows the high voltage power wires to pass through the basepan. The ½ in. gas adapter fitting allows the gas line to come up through the basepan (3 to 6 ton units only).



INSTALLATION

Disconnect all power before installing this kit.

Make sure the roof curb is installed and leveled in accordance with the instructions provided with kit.

The thru-the-bottom service connection accessory package must be used with a light commercial unit that has embossment in the outdoor section of the basepan. This opening allows high-voltage power, control wiring, and gas connections to pass through the roof curb and into the basepan of the rooftop unit.

PREPARING THE UNIT FOR INSTALLATION

The accessory thru-the-bottom power or gas connection package fittings must be installed before the unit is set on the roof curb. Gas and electrical connections to the unit must be field installed after the unit is installed on the roof curb.

INSTALL THE UNIT ON THE ROOF CURB

Follow all appropriate instructions required to install the rooftop unit on the roof curb. See installation instructions provided with the roof curb and unit for more specific information.

CREATING HOLES IN THE RAISED SURFACE OF THE UNIT BASEPAN

Each unit is equipped with a raised (embossed) surface in the basepan. This area is located in the compressor compartment (outdoor section) of the unit (see Figure 1). The embossment of the basepan contains three (3) dimples for locating cutouts. Holes can be field cut in the embossed surface so that high voltage power, control wires, and gas connection can be routed through the roof curb basepan

Drill holes for gas and power at the 3 dimples shown below.

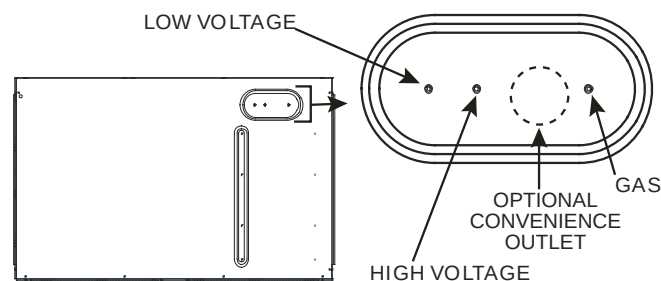


Fig. 1 - 3 - 6 Ton Basepan

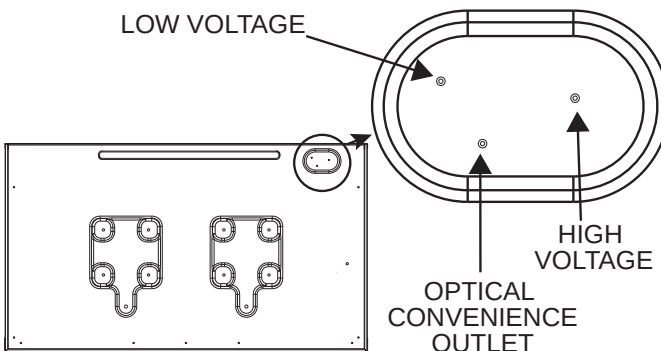


Fig. 2 - 7.5 - 12.5 Ton Basepan

Use a chassis punch or hole saw to create holes in the embossed surface of the basepan per Table 2.

CONNECTION SIZE	USE	REQ. HOLE SIZE
1/2"	Low Voltage	7/8"
1/2"	Gas	1"
3/4"	Gas	1-1/8"
1-1/2"	High Voltage	2"
2"	High Voltage	2-1/2"

Table 2 - Bottom Power Chart

MOUNTING ELECTRIC BULKHEAD CONNECTORS

Once the holes have been cut place electrical bulkhead connectors in basepan. Place gasket and lock ring end of connector beneath the basepan and mount the other end above the basepan.

When the electrical connectors are in place, field supplied and installed liquid tight conduit connectors and conduit may be attached to the connectors. Pull correctly rated high voltage and low voltage wires through appropriate conduits and connect to units per roof top units installation instructions.

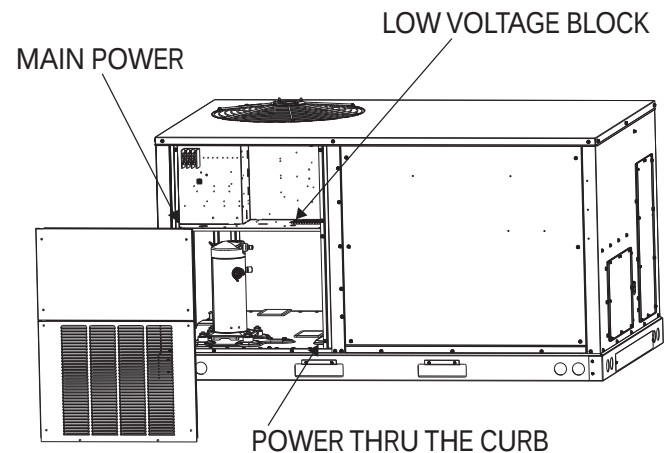


Fig. 3 - 3-6 Ton Power Connections

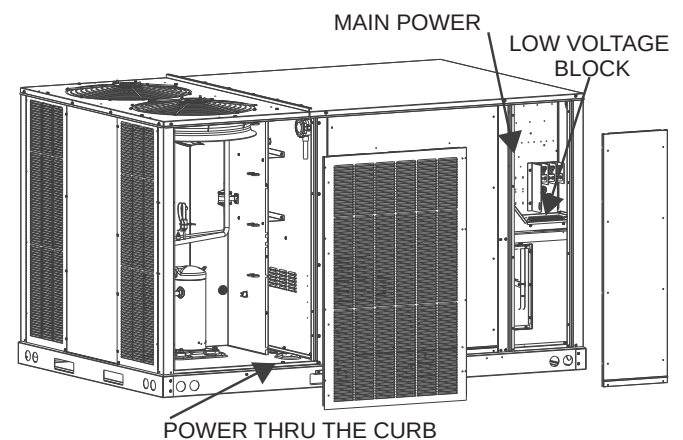


Fig. 4 - 7.5 - 12.5 Ton Power Connections

MAKING GAS CONNECTIONS

(3 TO 6 TON UNITS ONLY)

The thru-the-bottom gas connection fitting has male and female threads. The gas fitting also contains two neoprene washers and two locking washers. One neoprene and one locking washer are installed below the unit basepan with the second set being installed on the top side of the basepan before the fitting is tightened. Tighten all fittings. The male threads protrude above the basepan of the unit, while the female threads protrude below the basepan.

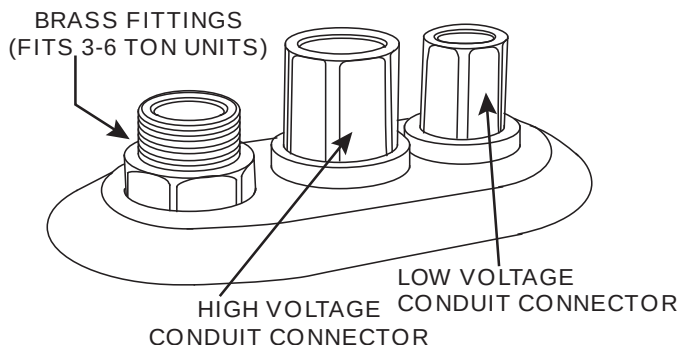


Fig. 5

Install a 5" black pipe nipple and an elbow on the through-the-basepan gas fitting (1/2-in. for 3-6 Ton kit).

If using 1/2-in. pipe, a minimum 12-in. nipple (field-supplied) is required to attach to the elbow and extends the gas piping through compressor access panel (if unit is so equipped). If using 3/4-in. pipe, a minimum 15-in. nipple (field-supplied) is required to extend the gas piping through compressor access panel (if unit is so equipped). Install the gas pipe support bracket to the inside of unit using provided screws. Remove the bottom right ten louvers from the right side of the louvered compressor access panel to allow gas line to exit the unit.



Fig. 6



Fig. 7



Fig. 8

INSTALLING GAS PIPING

(3 TO 6 TON UNITS ONLY)

The rating plate is stamped with the model number, type of gas and gas input rating. Make sure the unit is equipped to operate on the type of gas available. Conversion to propane (LP) gas is permitted with the use of the factory authorized conversion kit (see the unit Technical Manual for the appropriate kit). For High Altitude derates, refer to the latest edition of the National Fuel Gas Code NFPA 54/ANSI Z223.1.

A manual gas shut off valve must be field installed external to the roof top unit. In addition, a drip leg must be installed near the inlet connection. A ground joint union connection is required between the external shut off valve and the unit connection to the gas valve to permit removal of the burner assembly for servicing.

NOTE: Inlet gas pressures must not exceed the maximum value shown in Table 3 below.

INLET GAS PRESSURE	
NATURAL	Min. 5.0" W.C., Max. 10.0" W.C.
PROPANE	Min. 11.0" W.C., Max. 14.0" W.C.

Table 3 - Inlet Gas Pressure

CUSTOMER FEEDBACK

Daikin is very interested in all product comments.

Please fill out the feedback form on the following link:

<https://daikincomfort.com/contact-us>

You can also scan the QR code on the right to be directed to the feedback page.



NOTE: SPECIFICATIONS AND PERFORMANCE DATA LISTED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE

© 2019 **DAIKIN MANUFACTURING COMPANY, L.P.**
www.daikincomfort.com

DAIKIN**COMMERCIAL WARRANTY****Models: DRC, DRG, DRH, DHC, DHG, DHH, DVH**Who Is Providing The Warranty?

This warranty is provided to you by Daikin Comfort Technologies Manufacturing, Inc. ("Daikin"), which warrants all parts of this heating or air conditioning unit, as described below.

To What Type Of Installations Does This Warranty Apply?

This warranty applies to heating and air conditioning units installed in buildings other than residences.

What Units Does This Warranty Not Cover?

This warranty does not apply to:

- Units that are ordered over the Internet, by telephone, or by other electronic means unless the unit is installed by a dealer adhering to all applicable federal, state, and local codes, policies, and licensing requirements.
- Units that are installed outside the United States, its territories, or Canada.
- Units that are operated in incomplete structures.
- Units that are installed in residential buildings.

What Problems Does This Warranty Cover?

This warranty covers parts of this heating or air conditioning unit that fail under normal use and maintenance.

Other Warranties

THIS WARRANTY IS PROVIDED IN LIEU OF ANY OTHER WARRANTIES, WHETHER BY DAIKIN OR ANY OF ITS AFFILIATES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

What Problems Does This Warranty Not Cover?

Daikin is not responsible for:

- Damage or repairs required as a consequence of faulty installation or application.
- Damage as a result of floods, fires, winds, lightning, natural disasters, accidents, corrosive atmosphere, or other conditions beyond Daikin's control.
- Damage or the need for repairs arising from the use of components or accessories not compatible with this unit.
- Normal maintenance as described in the installation and operating manual, such as cleaning of the coils, filter cleaning and/or replacement, and lubrication.
- Parts or accessories not supplied or designated by the manufacturer.

- Damage or the need for repairs resulting from any improper use, maintenance, operation, or servicing.
- Damage or failure of the unit to start due to interruption, surge, or fluctuation in electrical service or inadequate electrical service.
- Any damage, or the need for any repairs, caused by frozen or broken water pipes, water damage, moisture intrusion, mold or other biological growth.
- Changes in the appearance of the unit that do not affect its performance.
- Replacement of fuses and replacement or resetting of circuit breakers.
- Damage or the need for repairs resulting from the use of unapproved refrigerant types or used or recycled refrigerant.

When Does Warranty Coverage Begin?

Warranty coverage begins on the "installation date." The installation date is one of two dates:

- (1) The installation date is the date that the unit is originally installed.
- (2) If the date the unit is originally installed cannot be verified, the installation date is three months after the manufacture date. The first four digits of the serial number (YYMM) on the unit indicate the manufacture date. For example, a serial number beginning with "2602" indicates the unit was manufactured in February 2026.

How Long Does Warranty Coverage Last?

The warranty lasts for a period of up to (1) 20 YEARS after the installation date for the heat exchanger (only applicable to units containing a heat exchanger) and (2) 5 YEARS after the installation date on all other parts.

This warranty period does not continue after the unit is removed from the location where it was originally installed.

The replacement of a part under this warranty does not extend the warranty period. In other words, Daikin warrants a replacement part only for the period remaining under the applicable warranty on the original part.

www.daikincomfort.com

For further information about this warranty,
contact Homeowner Support by mail to
19001 Kermier Road, Waller, Texas 77484

Part No. PWDLCPPHEF
02/2026

DAIKIN**COMMERCIAL WARRANTY****Models: DRC, DRG, DRH, DHC, DHG, DHH, DVH**What Will Daikin Do To Correct Problems?

Daikin will furnish a replacement part, without charge for the part only, to replace any part that fails under normal use and maintenance during the warranty period. Furnishing of the replacement part is Daikin's only responsibility under this warranty.

THE REMEDIES DESCRIBED IN THIS SECTION ARE DAIKIN'S ONLY RESPONSIBILITIES, AND THE OWNER'S ONLY REMEDIES, FOR ANY BREACH OF ANY WARRANTY.

What Won't Daikin Do To Correct Problems?

Daikin will not pay for:

- Labor, freight, or any other cost associated with the service, repair, or operation of the unit, the deinstallation of any part that fails, or the installation of any replacement part.
- Electricity or fuel costs, or increases in electricity or fuel costs, for any reason, including additional or unusual use of supplemental electric heat.
- Lodging or transportation charges.
- Refrigerant.

WHETHER ANY CLAIM IS BASED ON NEGLIGENCE OR OTHER TORT, BREACH OF WARRANTY OR OTHER BREACH OF CONTRACT, OR ANY OTHER THEORY, NEITHER DAIKIN NOR ANY OF ITS AFFILIATES SHALL IN ANY EVENT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, LOSS OF USE OF A UNIT, EXTRA UTILITY EXPENSES, OR DAMAGES TO PROPERTY.

How Can The Owner Receive Warranty Service?

If there is a problem with the unit, contact a licensed contractor.

To receive a replacement part, a licensed contractor must bring the failed part to a Daikin heating and air conditioning products distributor.

For more information about the warranty, write to Homeowner Support, 19001 Kermier Road, Waller, Texas 77484.

Where Can Any Legal Remedies Be Pursued?

ARBITRATION CLAUSE. IMPORTANT. PLEASE REVIEW THIS ARBITRATION CLAUSE. IT AFFECTS YOUR LEGAL RIGHTS.

1. **Parties:** This arbitration clause affects your rights against Daikin Comfort Technologies North America, Inc. and any of its subsidiaries, including but not limited to Daikin Comfort Technologies Manufacturing, Inc., and its or their employees or agents, successors, or assigns, all of whom together are referred to below as "we" or "us" for ease of reference.
2. **ARBITRATION REQUIREMENT: EXCEPT AS STATED BELOW, ANY DISPUTE BETWEEN YOU AND ANY OF US SHALL BE DECIDED BY NEUTRAL, BINDING ARBITRATION RATHER THAN IN COURT OR BY JURY TRIAL.** "Dispute" will be given the broadest possible meaning allowable by law. It includes any dispute, claim, or controversy arising from or relating to your purchase of this heating or air conditioning unit, any warranty upon the unit, or the unit's condition. It also includes determination of the scope or applicability of this Arbitration Clause. The arbitration requirement applies to claims in contract and tort, pursuant to statute, or otherwise.
3. **CLASS-ARBITRATION WAIVER: ARBITRATION IS HANDLED ON AN INDIVIDUAL BASIS. IF A DISPUTE IS ARBITRATED, YOU AND WE EXPRESSLY WAIVE ANY RIGHT TO PARTICIPATE AS A CLASS REPRESENTATIVE OR CLASS MEMBER ON ANY CLASS CLAIM YOU MAY HAVE AGAINST US OR WE AGAINST YOU, OR AS A PRIVATE ATTORNEY GENERAL OR IN ANY OTHER REPRESENTATIVE CAPACITY, TO THE MAXIMUM EXTENT PERMITTED BY LAW. YOU AND WE ALSO WAIVE ANY RIGHT TO PARTICIPATE IN ANY CLASS OR REPRESENTATIVE ACTION IN ANY FORM, INCLUDING ANY CLASS ARBITRATION, OR ANY CONSOLIDATION OF INDIVIDUAL ARBITRATIONS.**
4. **Discovery and Other Rights:** Discovery and rights to appeal in arbitration are generally more limited than in a lawsuit. This applies to both you and us. Other rights that you or we would have in court may not be available in arbitration. Please read this Arbitration Clause and consult the rules of the arbitration organizations listed below for more information.

Part No. PWDLCPPHEF
02/2026

DAIKIN**COMMERCIAL WARRANTY****Models: DRC, DRG, DRH, DHC, DHG, DHH, DVH**

5. **SMALL CLAIMS COURT OPTION: YOU MAY CHOOSE TO LITIGATE ANY DISPUTE BETWEEN YOU AND ANY OF US IN SMALL CLAIMS COURT, RATHER THAN IN ARBITRATION, IF THE DISPUTE MEETS ALL REQUIREMENTS TO BE HEARD IN SMALL CLAIMS COURT.**
6. **Governing Law:** For residents of the United States, the procedures and effect of the arbitration will be governed by the Federal Arbitration Act (9 U.S.C. § 1 et seq.) rather than by state law concerning arbitration. For residents of Canada, the procedures and effect of the arbitration will be governed by the applicable arbitration law of the province in which you purchased your unit. The law governing your substantive warranty rights and other claims will be the law of the state or province in which your unit was installed. Any court having jurisdiction may enter judgment on the arbitration award.
7. **Rules of the Arbitration:** If the amount in controversy is less than \$250,000, the arbitration will be decided by a single arbitrator. If the amount in controversy is greater than or equal to \$250,000, the arbitration will be decided by a panel of three arbitrators. The arbitrator(s) will be chosen pursuant to the rules of the administering arbitration organization. United States residents may choose JAMS (18881 Von Karman Ave., Suite 350, Irvine, CA 92612, www.jamsadr.com) or, subject to our approval, any other arbitration organization. In addition, Canadian residents may choose the ADR Institute of Canada (234 Eglinton Ave. East, Suite 405, Toronto, Ontario, M4P 1K5, www.amic.org). These organizations' rules can be obtained by contacting the organization or visiting its website. If the chosen arbitration organization's rules conflict with this Arbitration Clause, the provisions of this Arbitration Clause control. The award of the arbitrator(s) shall be final and binding on all parties.
8. **Location of the Arbitration Hearing:** Unless applicable law provides otherwise, the arbitration hearing for United States residents will be conducted in the federal judicial district in which you reside (in your hometown area) or, for Canadian residents, in the province in which you reside, and if you choose, will be in person.
9. **Costs of the Arbitration:** Each party is responsible for its own attorney, expert, and other costs and fees unless applicable law requires otherwise. Each party is also responsible for one-half of any cost and fees charged by the arbitration organization and arbitrator(s) to administer the arbitration to the maximum extent permitted by law or rule. Where permissible by law, the prevailing party may be required to reimburse the other party for the costs and fees of the arbitration organization and arbitrator(s) in whole or in part by decision of the arbitrator(s) at the discretion of the arbitrator(s).
10. **Survival and Enforceability of this Arbitration Clause:** This Arbitration Clause shall survive the expiration or termination, or any transfer, of the warranty on your unit. If any part of this Arbitration Clause, except waivers of class-action rights, is found to be unenforceable for any reason, the remainder of this clause and the warranty shall remain enforceable. If, in a case in which class-action allegations have been made, the waiver of class-action rights under this warranty is found to be unenforceable with respect to any part of the dispute, the parts of the dispute as to which the waiver of class-action rights have been found unenforceable will be severed and will proceed in court without reference or application of this Arbitration Clause. Any remaining parts will proceed in arbitration.

Part No. PWDLCPPHEF
02/2026