

**Design Requirements**

Cooling Capacity **240,000 BTU/h**  
 Configuration **Downflow**

**Standard Features: DS Series Packaged Units**

- R-32 chlorine-free refrigerant
- High-efficiency Copeland scroll compressor(s)
- Copper tube / aluminum fin coils
- High-capacity, steel-cased filter dryer
- High- and Low-pressure switches
- Lugged electrical contactor
- Single-point power
- Color Coded Wiring
- Foil Faced Internal Insulation
- Heavy-gauge, galvanized-steel cabinet
- UV-resistant powder-paint finish
- Full perimeter base rail

**Unit Electrical Data**

Power Supply **460/3/60 VOLT/PH**  
 Total Unit MCA **116 A**  
 Total Unit MOP **125.0 A**  
 Indoor Motor HP **3.5 HP**  
 Total Unit FLA **99.40 A**  
 • Compressor RLA **27.4**  
 • Blower FLA **14.4**  
 • Outdoor Fan FLA **5.6**  
 • Heat Kit FLA **52.0**  
 SCCR **5 kA**

**Model Number: DSH2404D000037C**

**Code String: DSH2404DXXXCBDCXCEXXX**

**Tag: 20-Ton - SE - 460/3 - 45kW**

**Cooling Performance \*4**

Total Capacity **230,200 BTU/h**  
 Sensible Capacity **177,254 BTU/h**  
 Cooling Stages **Two**  
 Refrig Type **R-32**  
 Compressor Type **Copeland Scroll**  
 Pressure Switches **High & Low Pressure (std)**  
 Outdoor Design Temp **95.00°F**  
 Entering Air Temp(db) **80.00°F**  
 Entering Air Temp(wb) **67.00°F**  
 Leaving Air Temp(db) **59.90°F**  
 Leaving Air Temp(wb) **57.90°F**  
 Efficiency **14.35 IEER/10.6 EER**

**Heating Performance \*4**

Heat Type **Heat Pump + Electric**  
 Elect Htr KW **45kW Elect Htr**  
 Entering Air Temp **55.00 °F**  
 LAT (47°F) **98.20**  
 COP (47°F) **3.3**  
 BTU/h (47°F) **220000 @ 70°F Indoor DB**  
 LAT (17°F) **86.90**  
 COP (17°F) **2.05**  
 BTU/h (17°F) **122000 @ 70°F Indoor DB**

**Supply Air Blower Performance**

ACFM **8000 cfm**  
 SCFM **8000 cfm**  
 ESP **0.50 IWG**  
 Total ESP **0.50 IWG**  
 Blower Type **Direct Drive - Standard Static**  
 Elevation **0 ft**

**Physical Attributes**

Base Unit Oper. Weight (lbs) **2354**  
 Filter(s) **20"X20"X2" Qty: 8**

**Outdoor sound (db) at 60 Hz**

| Model | A-Weighted | 63   | 125  | 250  | 500  | 1000 | 2000 | 4000 | 8000 |
|-------|------------|------|------|------|------|------|------|------|------|
| 240   | 89.8       | 92.5 | 91.0 | 89.1 | 90.7 | 82.1 | 77.6 | 72.6 | 67.8 |

db - decibel

**Notes:**

1 Outdoor sound data is measured in accordance with AHRI standard 270.

2 Measurements are expressed in terms of sound power. Do not compare these values to sound pressure values because sound pressure depends on specific environment factors which normally do not match individual applications. Sound power values are independent of the environment and therefore more accurate.

3 A-weighted sound ratings filter out high and very low frequencies, to better approximate the response of average human ear. A-weighted measurements for Daikin units are taken in accordance with AHRI standard 270.


4 All air temps are measured at the unit's inlet and outlet. Air temps are not measured at the coil.

LIST OF ACCESSORIES


Model Number: DSH2404D000037C; Code String: DSH2404DXXXCXBDCXCExxx; Tag: 20-Ton - SE - 460/3 - 45kW;


| Accessories |          |                |                                     |            |      |
|-------------|----------|----------------|-------------------------------------|------------|------|
| Fld Inst    | Fct Inst | Item #         | Description                         | Dimensions | Lbs  |
|             | Y        | HGDRSB000300CC | Hinged Panels                       |            | 34   |
|             | Y        | TTBCK03FI      | Thru-The-Base Connections           |            | 1    |
|             | Y        | 0270L01789     | Non Powered GFCI Convenience Outlet | Fact Inst  | 2    |
|             | Y        | HAILGD180300FI | Hail Guard                          |            | N/A  |
| Y           |          | 24CURB180300   | 24" Roof Curb                       |            | N/A  |
|             | Y        |                | DDC Communicating Controller        | 8.5 × 6.05 | 2    |
| Y           |          | EHK-45         | 45kW Elect Htr                      |            |      |
|             |          |                | Base Unit Oper. Weight              |            | 2354 |
|             |          |                | Total Weight                        |            | 2393 |

CORNER WEIGHTS DIMENSIONS

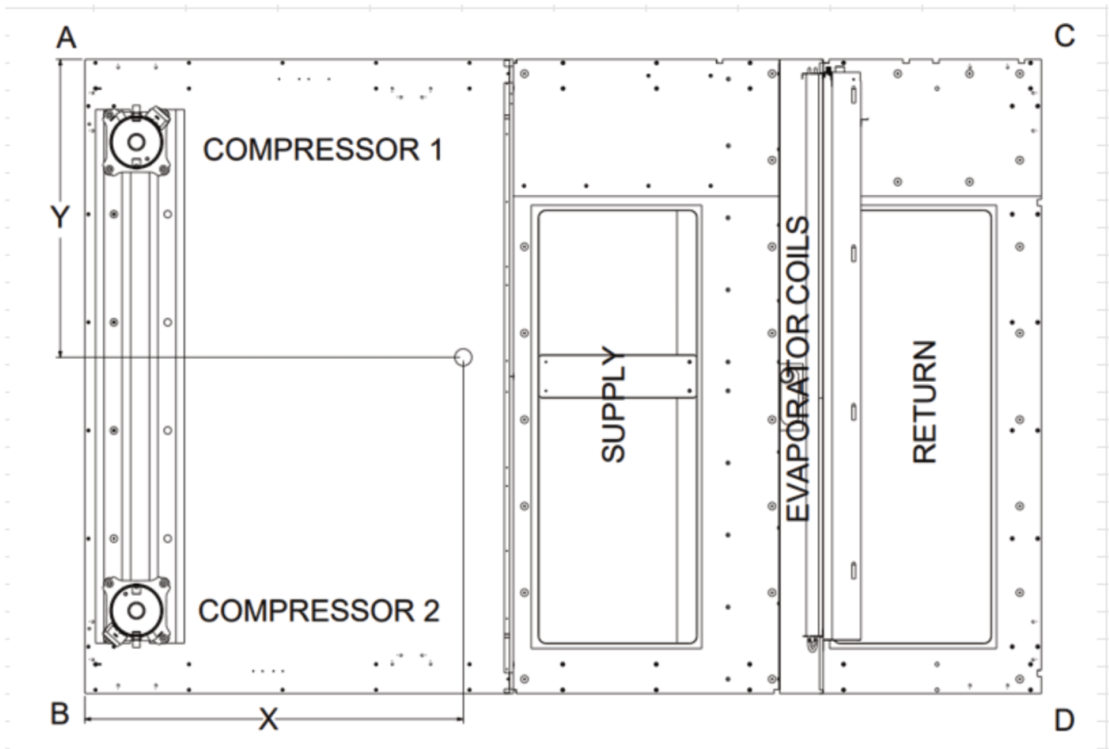

| Model    | Shipping Weight (lbs) | Operating Weight (lbs) | Corner Weights (lbs) |     |     |     | Length | Width  |
|----------|-----------------------|------------------------|----------------------|-----|-----|-----|--------|--------|
|          |                       |                        | A                    | B   | C   | D   | X (in) | Y (in) |
| DSH2404D | 2469                  | 2354                   | 508                  | 839 | 607 | 475 | 59.60  | 40.60  |

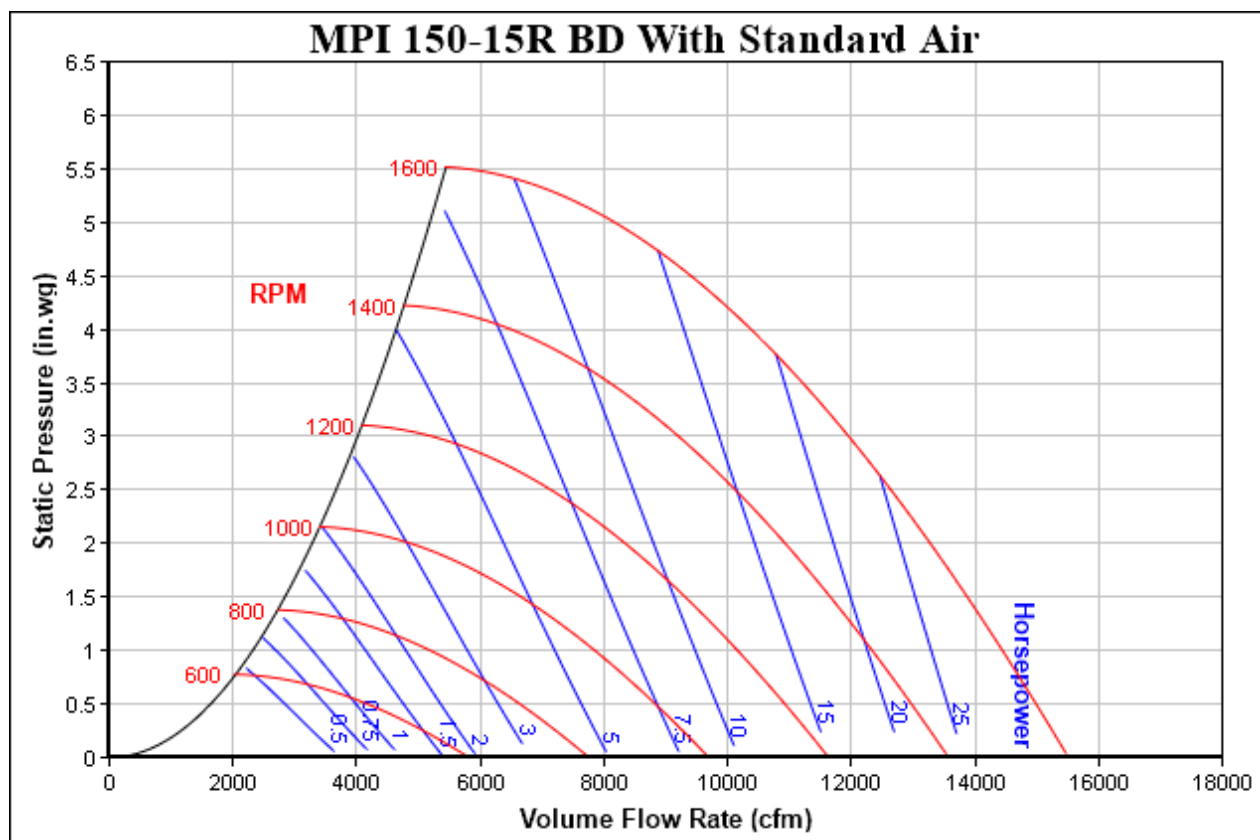


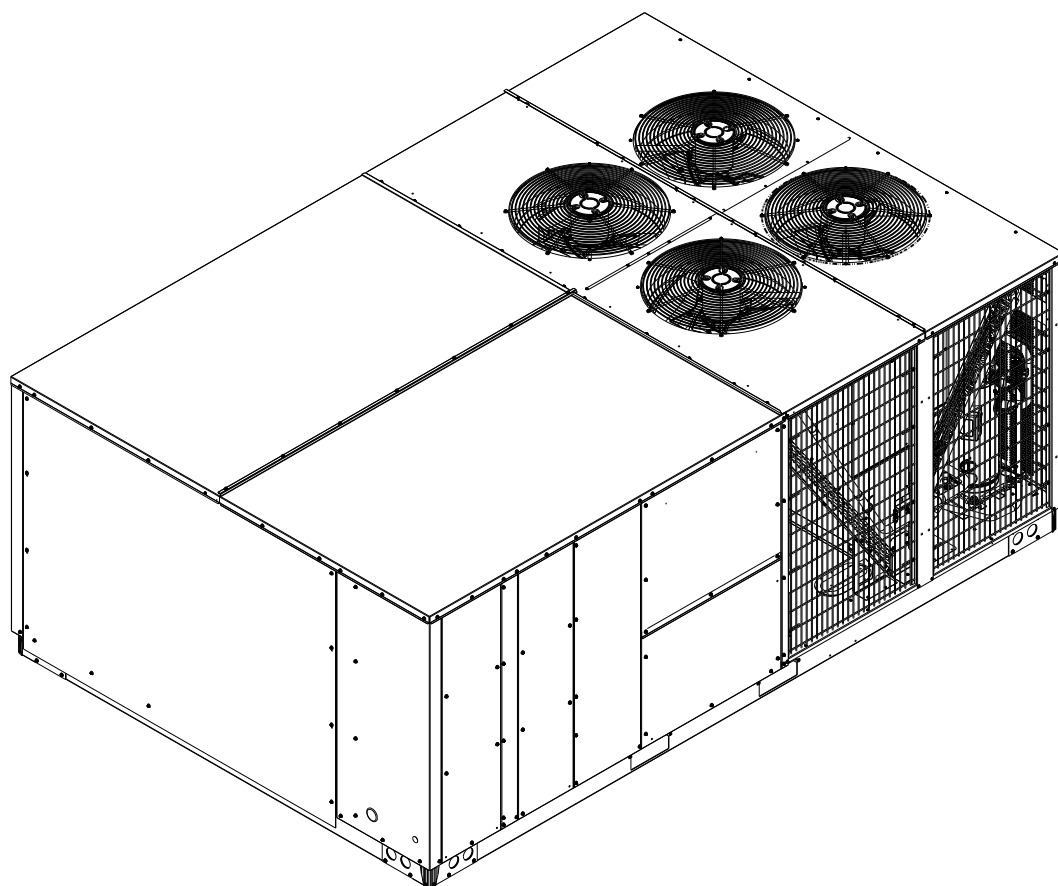



## 24CURB180300

24" KNOCKED DOWN ROOF CURB  
FITS DAIKIN DCG/ DCC/ DBC/  
DBG/ DFC/ DFG/ DFH 180/300

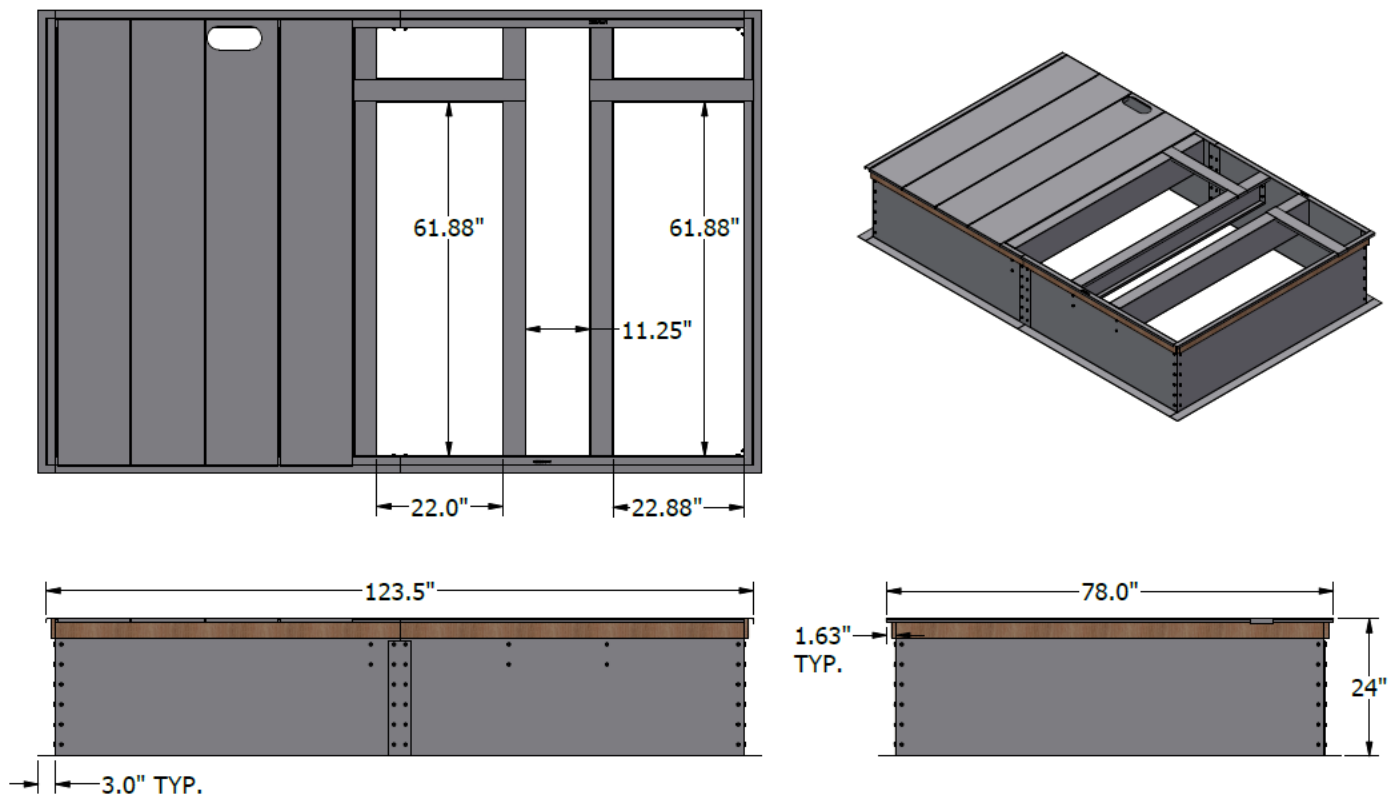

### FEATURES

- 24" Tall
- 16 Gauge Construction
- 1X4 Wood Nailer
- Shipped Knocked Down With All Hardware
- Gasket Included
- Weighs 460 Pounds

**NOTE: OUTSIDE DUCT DIMENSION SHOULD BE 1/2" LESS THAN OPENING DIMENSIONS ABOVE.**

### ATTENTION INSTALLING PERSONNEL

As a professional installer you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is **your** responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed here take precedence.

### WARNING

#### HIGH VOLTAGE!

TO AVOID THE RISK OF ELECTRICAL SHOCK, WIRING TO THE UNIT MUST BE POLARIZED AND GROUNDED.



### WARNING

#### HIGH VOLTAGE!


TO AVOID PERSONAL INJURY OR DEATH DUE TO ELECTRICAL SHOCK, DISCONNECT ELECTRICAL POWER BEFORE SERVICING OR CHANGING ANY ELECTRICAL WIRING.




### IMPORTANT!

- A GFCI receptacle is different from conventional receptacles. In the event of a ground fault, a GFCI will trip and quickly stop the flow of electricity to prevent serious injury.
- A GFCI receptacle does NOT protect against circuit overloads, short circuits, or shocks. For example, you can still be shocked if you touch bare wires while standing on a non-conducting surface such as a wood floor.
- Your unit has been built with either a powered or non-powered 115V / 15A GFCI outlet for your convenience. This is to only be used while servicing the unit.
- Use this GFCI with copper or copper-clad wire. Do not use it with aluminum wire.
- Do not install this GFCI receptacle on a circuit that powers life support equipment because if the GFCI trips it will shut down the equipment.
- The GFCI receptacle must be kept dry by a weather proof cover and box at all times.
- Test the outlet before use to make sure it has not incurred any damage during shipping. Perform the *Operation Check* listed in this manual.

### GFCI Features

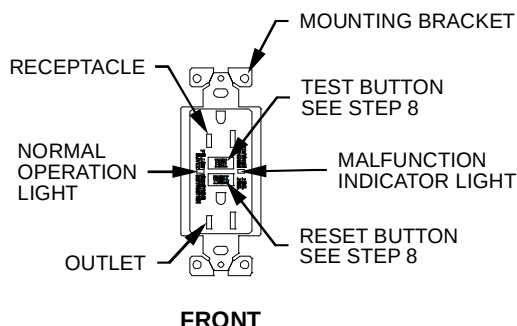

FRONT

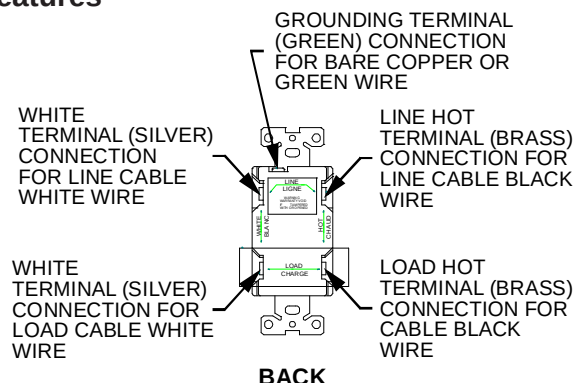


BACK


SCREW (TERMINAL) COLORS:  
GREEN = GROUNDING TERMINAL  
SILVER = WHITE TERMINALS  
BRASS = HOT TERMINALS



Your unit will have either a **powered** or **non-powered** GFCI outlet. If your unit has a factory-installed powered convenience outlet, the outlet is ready for use once the unit is installed and operating. See figure below for component locations of the powered outlet.

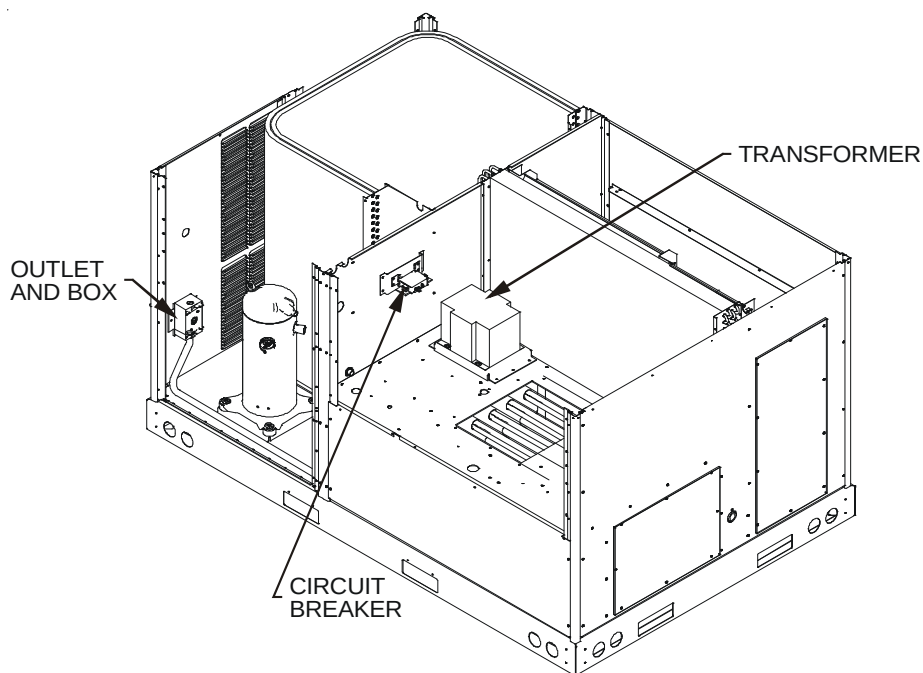


If the power for either needs to be altered from 230V to 208V, please review and follow the instructions listed on the outlet wiring diagram next to the unit diagram. Ensure unit power is OFF before making any wiring changes. See diagram below for your convenience.

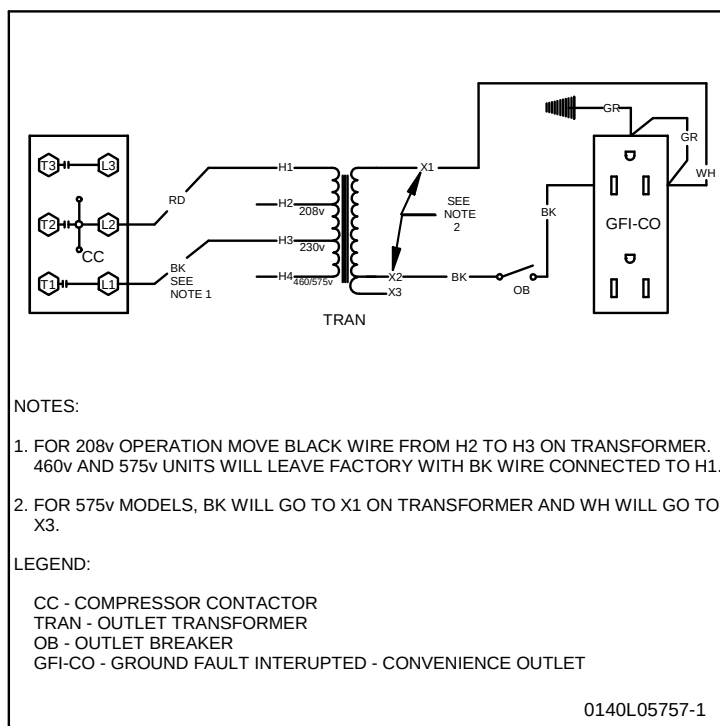

**NOTE:** There is a 15A breaker mounted to the indoor section of the unit. If outlet is not powered, check the breaker to make sure it is in the ON position. If the breaker has been tripped, check for shorts in the wiring.

## NON-POWERED GFCI OUTLET INSTALLATION INSTRUCTIONS

1. Turn power OFF to unit and power source used to power the outlet.
2. Locate the outlet on your unit. It will be near the control box area.
3. Remove gasket and outlet.
4. Bring power into the outlet box as shown. Ensure the wiring is suitable for outdoor conditions. Connect the white wire to the WHITE terminal (Silver).
5. Connect the black wire to the HOT terminal (Brass).
6. Connect a 6-inch bare copper (or GREEN) 12 or 14 AWG wire to the grounding terminal on the GFCI, and a similar wire to the grounding terminal on the box. Connect the ends of these wires to the LINE cable's bare copper (or GREEN) wire using a wire connector.
7. Fold the wires into the box, keeping the grounding wire away from the WHITE and HOT terminals. Screw the receptacle to the box.
8. Install cover as per instructions.

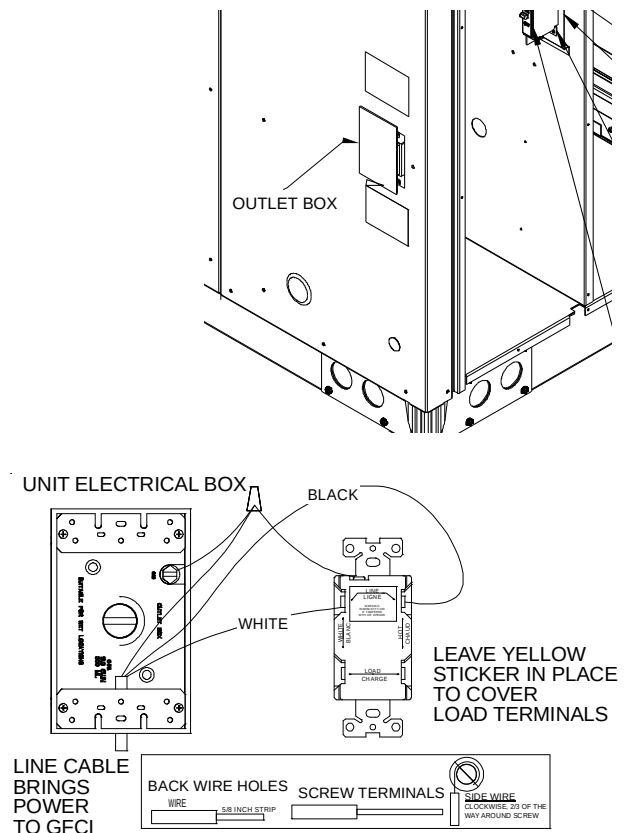

## OPERATION CHECK

1. Turn power ON. Press the RESET button fully. Plug a lamp or radio into the GFCI (and leave it plugged-in) to verify that the power is ON.
2. Next, press the TEST button to trip the device. The radio or lamp should shut OFF and the RESET button will pop-out. To restore power, press the RESET button.
3. If the malfunction indicator light (end-of-life indicator LED) (red) lights, the GFCI has stopped functioning and needs to be replaced.

If the outlet does not work as described, turn power OFF and check the wire connections against the diagram shown above. Ensure that there are not loose wires or loose connections.

If the RESET button does not work, check the LINE and LOAD connections. They could be reversed. If there are no wiring mistakes, the receptacle could be damaged and will need to be replaced. If the connections are rewired to the GFCI, please perform the *Operation Check* again.

**NOTE:** There is a 15A breaker mounted to the indoor section of the unit. If outlet is not powered, check the breaker to make sure it is in the ON position. If the breaker has been tripped, check for shorts in the wiring.

Check the TEST and RESET buttons monthly to assure proper operation.



## NON-POWERED AND POWERED GFCI OUTLET COVER INSTALLATION INSTRUCTIONS

1. Locate the outlet on your unit. It will be near the control box area.
2. Remove the gasket.
3. Install the GFCI outlet cover as shown.
4. The outlet cover is shipped with the unit and could be found in control box or blower deck.

**ASSEMBLY INSTRUCTIONS:** Numbers in parenthesis reflect the balloon numbers on the drawing.

1. Apply gasket (ITEM 6) to base (ITEM 2).
2. Apply adhesive, LOCTITE 4204 or 4205, (ITEM 13) into cord flap gasket slot of cover (ITEM 1) and base (ITEM 2). See gasket slot detail.

3. Insert cord flaps (ITEM 12) into slots of cover and base within 15 seconds of step 2 above. Ensure cord flaps are fully seated and top of flap is flush with the top of cord opening of cover and base. See cord opening detail. Presence of adhesive should not be apparent on any exposed surface of installed cord flap gasket.
4. Snap cover (ITEM 1) to base (ITEM 2).
5. Place wallplates (ITEM 3 & 4) into assembled unit.
6. Place bagged mounting screws (ITEM 5) into assembled unit.
7. Place instruction sheet (ITEM 8) into assembled unit.
8. Close assembled unit.
9. Place assembled unit into packaging bag (ITEM 7).
10. Seal packaging bag (ITEM 7).
11. Place sealed bags into carton (ITEM 10), four rows of three.
12. Place label (ITEM 9) on carton (ITEM 10).
13. Insert quality flyer (ITEM 11).

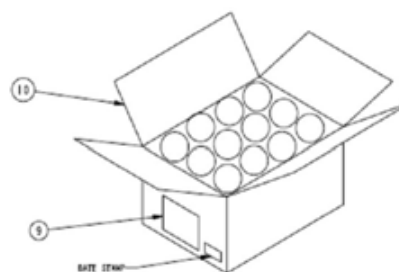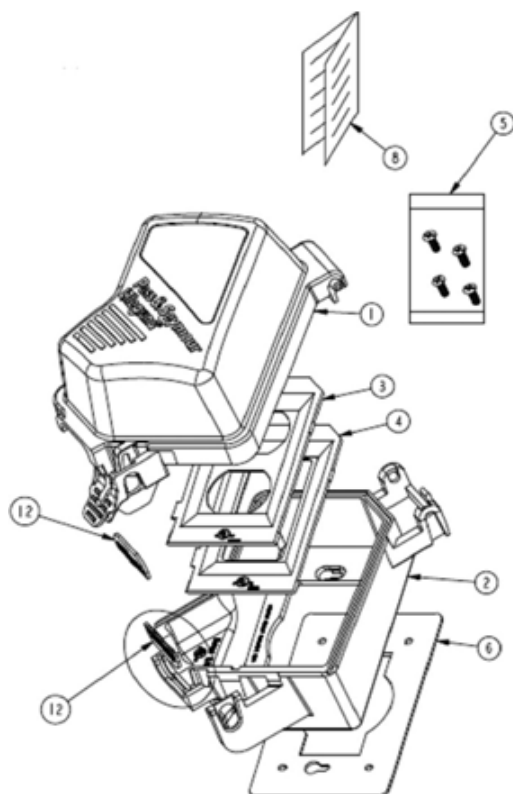

NOTE: SPECIFICATIONS AND PERFORMANCE DATA LISTED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE

### Quality Makes the Difference!

All of our systems are designed and manufactured with the same high quality standards regardless of size or efficiency. We have designed these units to significantly reduce the most frequent causes of product failure. They are simple to service and forgiving to operate. We use quality materials and components. Finally, every unit is run tested before it leaves the factory. That's why we know. . . **There's No Better Quality.**

Visit our website at [www.daikincomfort.com](http://www.daikincomfort.com) for information on:

- Products
- Warranties
- Customer Services
- Parts
- Contractor Programs and Training
- Financing Options

© 2013, 2015-2016 **DAIKIN MANUFACTURING COMPANY, L.P**

|               |  |               |  |
|---------------|--|---------------|--|
| Project Name: |  | Approval:     |  |
| Location:     |  | Date:         |  |
| Engineer:     |  | Construction: |  |
| Submitted to: |  | Unit #:       |  |
| Submitted by: |  | Drawing #:    |  |
| Reference:    |  |               |  |

## MODEL COMPATIBILITY:

Compatible with Light Commercial models: 3 to 12.5 ton High Efficiency (DR\* series), 15 to 25 ton Standard Efficiency (DB\* series)

## SPECIFICATIONS:

|                                   |                                                                                                                            |                                                  |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|
| <b>Model</b>                      | 0130M00579                                                                                                                 | 0130M00580                                       |
| <b>Description</b>                | Daikin iLINQ DDC Controller - Standard                                                                                     | Daikin iLINQ DDC Controller - with MHGRH Control |
| <b>Dimensions</b>                 | 12.4 x 5.2 x 2.8 inches                                                                                                    |                                                  |
| <b>Operating Conditions</b>       | -4°F to 140°F, 90% RH non-condensing                                                                                       |                                                  |
| <b>Storage Conditions</b>         | -22°F to 158°F, 90% RH non-condensing                                                                                      |                                                  |
| <b>Supply Voltage</b>             | Dedicated class 2 transformer<br>24VAC (+10/-15%), 45 VA                                                                   |                                                  |
| <b>Wiring specs</b>               | 18 to 22 AWG twisted pair or shielded cable for all sensor installations                                                   |                                                  |
| <b>Temperature Inputs</b>         | Type III thermistor, 10K $\Omega$ @ 77°F                                                                                   |                                                  |
| <b>Analog Inputs (AI)</b>         | 0 – 10VDC, Input Precision $\pm 0.3\%$ Full Scale                                                                          |                                                  |
| <b>Number of AIs</b>              | 8                                                                                                                          | 10                                               |
| <b>Digital Inputs (DI)</b>        | 24VAC (+10/-15%) 50/60HZ, Absorbed Current: 5mA                                                                            |                                                  |
| <b>Number of DIs</b>              | 14                                                                                                                         | 18                                               |
| <b>Analog Outputs (AO)</b>        | 0 – 10Vdc, External Power Supply: 24VAC (+10/-15%), Precision: $\pm 2\%$ Full Scale, Resolution: 8 Bit, Maximum Load: 10mA |                                                  |
| <b>Number of AOs</b>              | 4                                                                                                                          | 6                                                |
| <b>Digital Outputs (DO)</b>       | 8A/250VAC Resistive Load                                                                                                   |                                                  |
| <b>Number of DOs</b>              | 13                                                                                                                         | 18                                               |
| <b>USB Type “B” Port</b>          | 1 for Programming, Setup, and Advanced Diagnostics                                                                         |                                                  |
| <b>USB Type “A” Port</b>          | 1 for Transferring files                                                                                                   |                                                  |
| <b>Ethernet Ports</b>             | 2 autocross 10/100 MBPS port for BACnet/IP communication and Web Interface                                                 |                                                  |
| <b>BACnet/IP Communication</b>    | Built-in BACnet/IP (Ethernet port)                                                                                         |                                                  |
| <b>BACnet MS/TP Communication</b> | Built-in RS485 port, Baud rate select from 9600, 19200, 38400 (Default), 57600, and 76800                                  |                                                  |
| <b>LonWorks Communication</b>     | Optional communication card (0130M00584) required                                                                          |                                                  |
| <b>Compliance</b>                 | UL Listed / CUL Listed<br>BTL Certified (B-BC)<br>California Title 24 certified economizer control                         |                                                  |

## PRODUCT IMAGE:



Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056

[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)

(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)



# Submittal Data Sheet

0130M00579/0130M00580– Daikin iLINQ DDC  
Controller

|               |  |               |  |
|---------------|--|---------------|--|
| Project Name: |  | Approval:     |  |
| Location:     |  | Date:         |  |
| Engineer:     |  | Construction: |  |
| Submitted to: |  | Unit #:       |  |
| Submitted by: |  | Drawing #:    |  |
| Reference:    |  |               |  |

## OPTIONS:

| Type    | Name                                        | Part Number | Function                                                                                                                                                                                                                                                                                                                                                                          |
|---------|---------------------------------------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Module  | MHGRH Expansion Module                      | 0130M00581  | Used for 0130M00580 only<br>DDC Controller expansion module for control of the Modulating Hot Gas Reheat (MHGRH) valve                                                                                                                                                                                                                                                            |
|         | LonWorks Communication Card                 | 0130M00584  | Communication card allowing connection of the DDC Controller to a LonWorks network                                                                                                                                                                                                                                                                                                |
| Sensors | Space CO <sub>2</sub> Sensor                | 0130L00225  | Sensor installed on wall to monitor space CO <sub>2</sub> level. A CO <sub>2</sub> sensor is required for demand control ventilation. Sensor output range 0-10Vdc, 0-2000ppm                                                                                                                                                                                                      |
|         | Duct CO <sub>2</sub> Sensor                 | 0130L00220  | Sensor installed in return air duct to monitor space CO <sub>2</sub> level. A CO <sub>2</sub> sensor is required for demand control ventilation. Sensor output range 0-10Vdc, 0-2000ppm                                                                                                                                                                                           |
|         | Duct Temperature Sensor 4"                  | 0130L00222  | Sensor installed in return air or supply air duct to monitor temperature. When installed in the return air duct, this sensor can be used in place of the wall mounted temperature sensor. Sensor type is 10KΩ Type III Thermistor                                                                                                                                                 |
|         | Duct Temperature Sensor 8"                  | 0130L00228  |                                                                                                                                                                                                                                                                                                                                                                                   |
|         | Duct Temperature and Humidity Sensor        | 0130L00221  | Sensor installed in return air duct to monitor space temperature and humidity level. This sensor can be used in place of the wall mounted temperature and humidity sensor. Temperature sensor type 10KΩ Type III Thermistor. Humidity sensor range 0-10Vdc, 0-100%RH                                                                                                              |
|         | Outdoor Air Temperature Sensor              | 0130L00227  | Sensor installed to monitor outdoor air temperature. Sensor type 10KΩ Type III Thermistor                                                                                                                                                                                                                                                                                         |
|         | Outdoor Air Temperature and Humidity Sensor | 0130L00223  | Sensor installed to monitor outdoor temperature and humidity levels. This sensor can be used in place of the outdoor temperature sensor when humidity must also be monitored. Temperature sensor type 10KΩ Type III Thermistor. Humidity sensor range 0-10Vdc, 0-100%RH                                                                                                           |
|         | Space Temperature Sensor                    | 0130L00226  | Sensor installed on wall to monitor space temperature. This sensor also provides local setpoint adjustment and a temporary occupancy override button. Sensor type 10KΩ Type III Thermistor                                                                                                                                                                                        |
|         | Space Temperature and Humidity Sensor       | 0130L00224  | Sensor installed on wall to monitor space temperature and humidity levels. This sensor can be used in place of the wall mounted temperature sensor when humidity must also be monitored. This sensor also provides local setpoint adjustment and a temporary occupancy override button. Temperature sensor type 10KΩ Type III Thermistor. Humidity sensor range 0-10Vdc, 0-100%RH |

Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056

[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)

(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)

Page 2 of 9



# Submittal Data Sheet

0130M00579/0130M00580– Daikin iLINQ DDC  
Controller

|               |  |               |  |
|---------------|--|---------------|--|
| Project Name: |  | Approval:     |  |
| Location:     |  | Date:         |  |
| Engineer:     |  | Construction: |  |
| Submitted to: |  | Unit #:       |  |
| Submitted by: |  | Drawing #:    |  |
| Reference:    |  |               |  |

## FEATURES:

- Packaged RTU control:
  - Single speed, two speed, and variable (5) speed blower configurations
  - Blower proving switch software interlock
  - 1 or 2 stages of heating with PID control load calculation
  - Gas, electric stages, electric with SCR control, and heat pump heating configurations
  - 1 or 2 stages of cooling with PID control load calculation
  - 1, 2 or 4 compressors with pressure switch feedback and alarms
  - Lead / lag compressor priority rotation based on runtime
  - Independent defrost of condenser coils
  - Demand defrost interval calculation
- Staged auxiliary electric heat during defrost or when heat pump heating is locked out
- Dehumidification using Modulating Hot Gas Reheat (MHGRH)
- Low suction pressure freeze protection on units with MHGRH dehumidification
- Low ambient condenser fan control on units with MHGRH dehumidification
- Demand control ventilation
- Exhaust fan enable
- Dirty filter alarm
- Emergency shutdown interlock and alarm
- Remote start/stop
- Load shedding
- Local time scheduling, including weekly and holiday events
- Automatic daylight savings time adjustment
- Optimal start / optimal stop
- Onboard trend log storage can be exported to .csv file for analysis
- Live trend logs viewable via web interface
- Selectable TSTAT mode allowing for connection to standard TSTAT, bypassing some of the DDC control logic
- BACnet MS/TP or BACnet IP communication
- LonWorks communication with optional field installed module
- Web interface for commissioning or monitoring through any web browser
- Onboard LCD display for local commissioning or monitoring

Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056

[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)


(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)

Page 3 of 9


|                     |                     |
|---------------------|---------------------|
| Project Name: _____ | Approval: _____     |
| Location: _____     | Date: _____         |
| Engineer: _____     | Construction: _____ |
| Submitted to: _____ | Unit #: _____       |
| Submitted by: _____ | Drawing #: _____    |
| Reference: _____    |                     |

## SYSTEM DIAGRAM:

- Ethernet Network (Web Interface or BACnet/IP Communication):
  - The controller can be connected to a network switch or PC individually

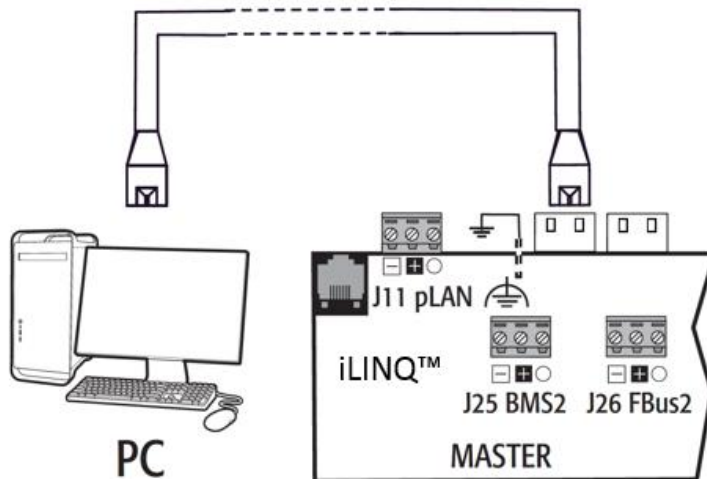

- Multiple controller can be daisy-chained together to a network switch or PC utilizing the second Ethernet port.

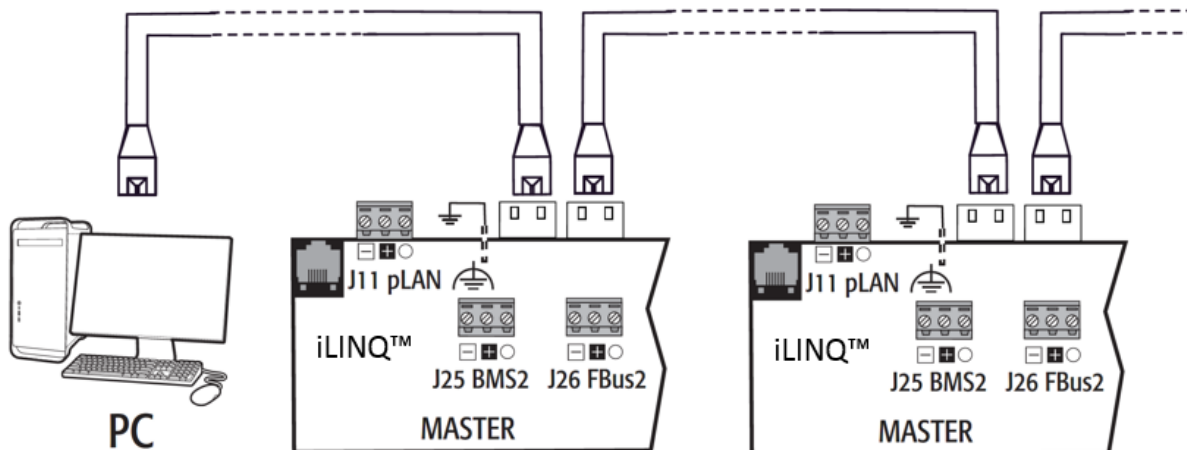


- BACnet MS/TP Network

Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056


[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)

(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)

|                     |                     |
|---------------------|---------------------|
| Project Name: _____ | Approval: _____     |
| Location: _____     | Date: _____         |
| Engineer: _____     | Construction: _____ |
| Submitted to: _____ | Unit #: _____       |
| Submitted by: _____ | Drawing #: _____    |
| Reference: _____    |                     |

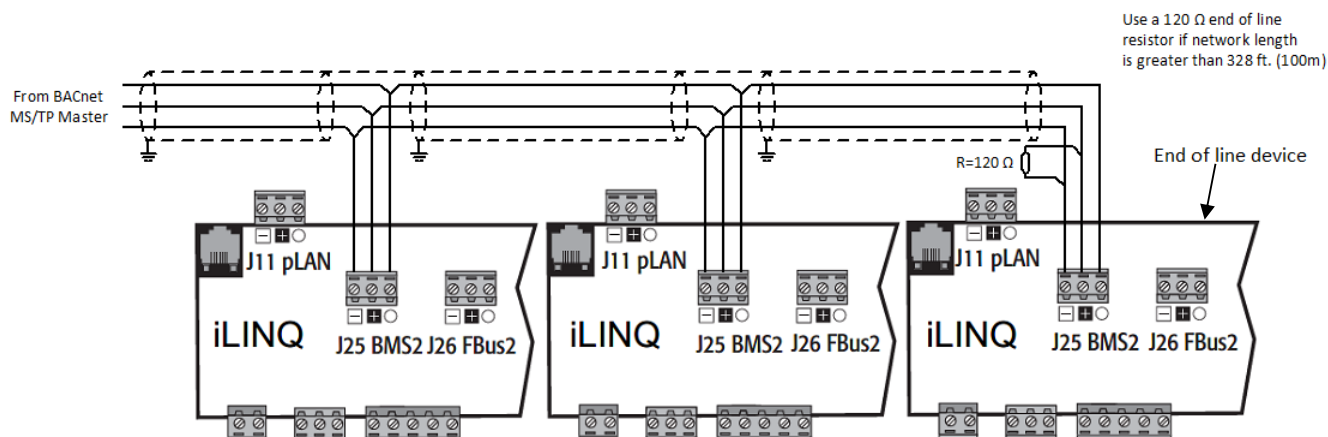

- LonWorks Network

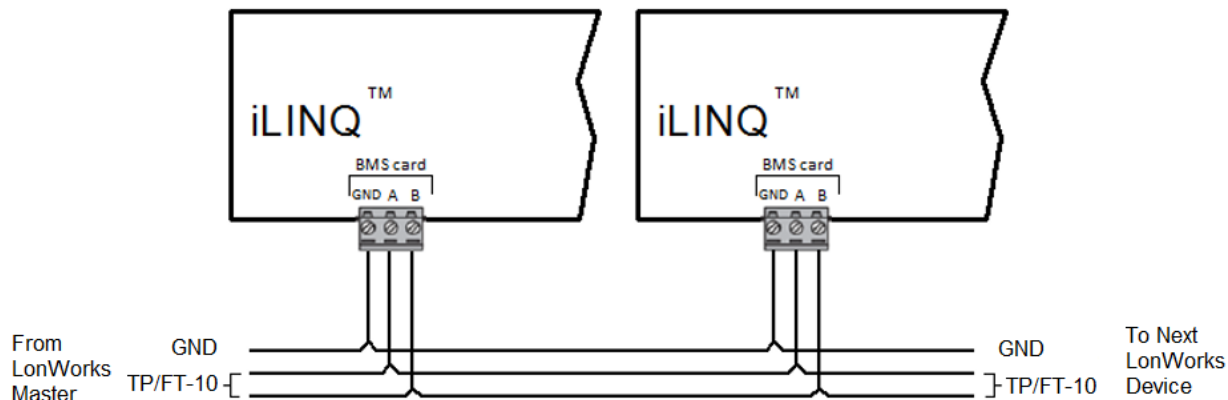

Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056


[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)

(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)

|                     |                     |
|---------------------|---------------------|
| Project Name: _____ | Approval: _____     |
| Location: _____     | Date: _____         |
| Engineer: _____     | Construction: _____ |
| Submitted to: _____ | Unit #: _____       |
| Submitted by: _____ | Drawing #: _____    |
| Reference: _____    |                     |

## I/O LAYOUT:

- IO Layout Medium (0130M00579):

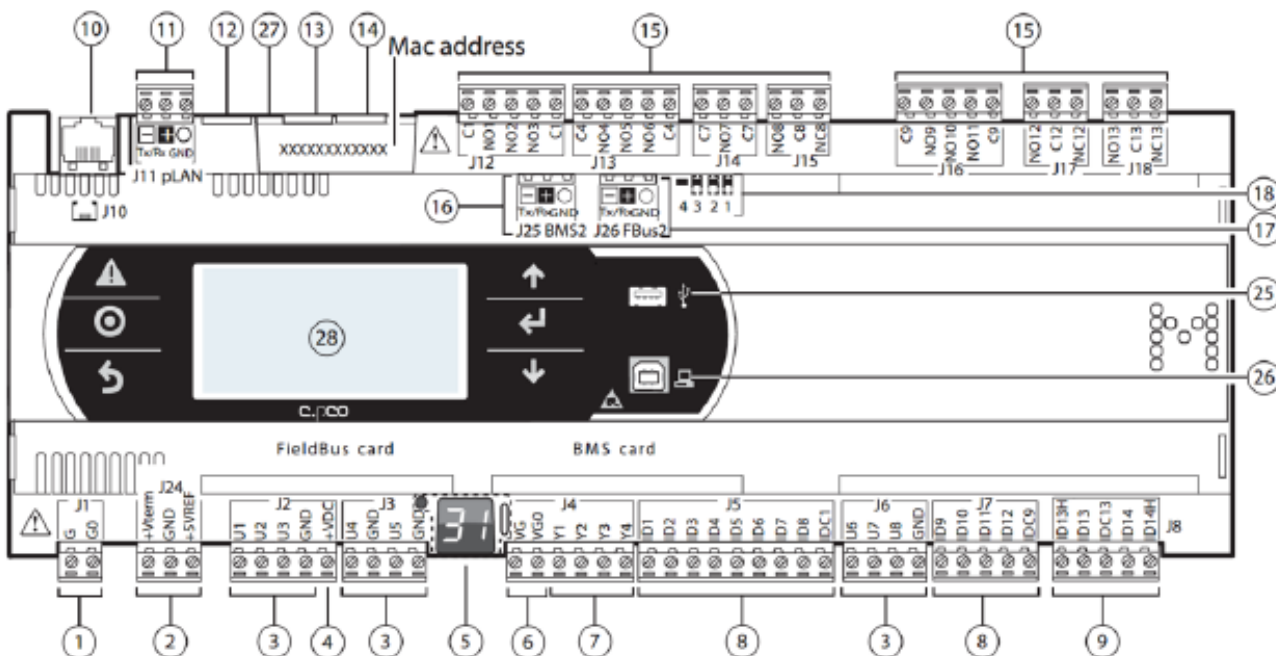

Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056


[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)

(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)

Project Name: \_\_\_\_\_  
Location: \_\_\_\_\_  
Engineer: \_\_\_\_\_  
Submitted to: \_\_\_\_\_  
Submitted by: \_\_\_\_\_  
Reference: \_\_\_\_\_

Approval: \_\_\_\_\_  
Date: \_\_\_\_\_  
Construction: \_\_\_\_\_  
Unit #: \_\_\_\_\_  
Drawing #: \_\_\_\_\_

• IO Layout Large (0130M00580):

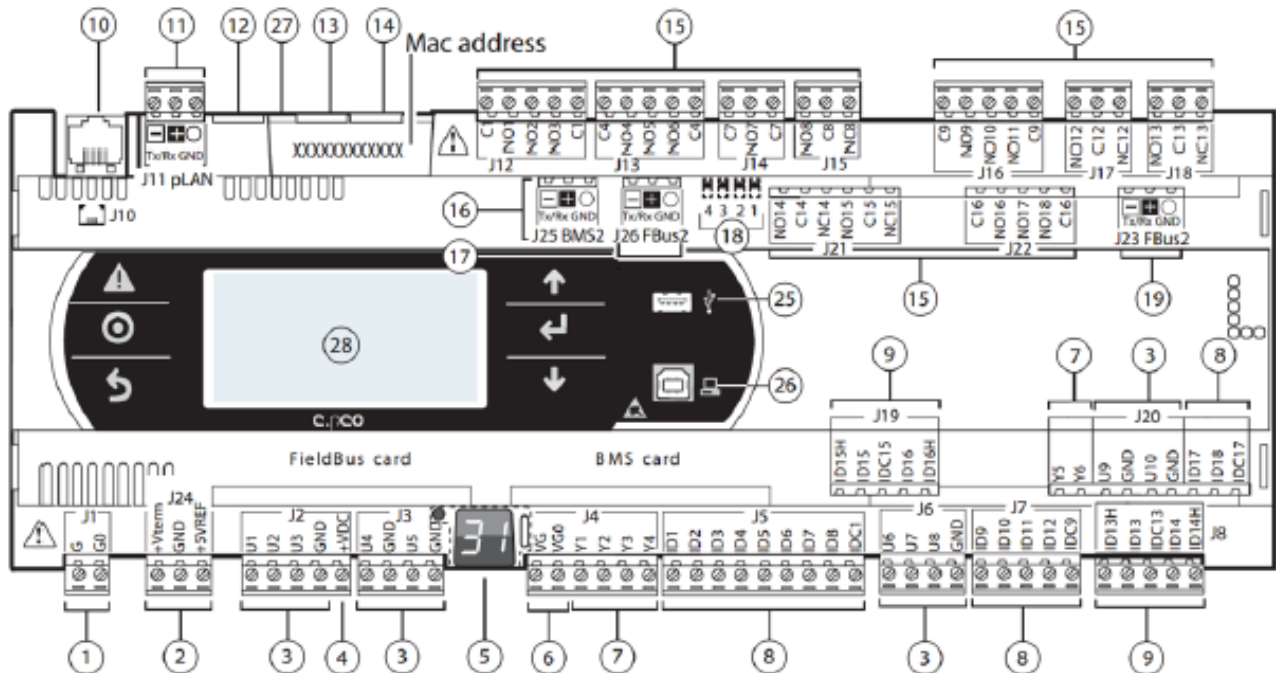

| REF | DESCRIPTION                          | REF | DESCRIPTION             |
|-----|--------------------------------------|-----|-------------------------|
| 1   | Power Connector [G(+), G0(-)]        | 13  | Ethernet Port 1         |
| 2   | +VTERM: Terminal Power Supply        | 14  | Ethernet Port 2         |
|     | +5VREF: 5VDC Probe Power Supply      | 15  | Relay Outputs           |
| 3   | Analog Inputs                        | 16  | BMS Port                |
| 4   | +VDC: 24VDC Power For Active Probes  | 17  | Fieldbus Port           |
| 5   | pLAN Address LED                     | 18  | Fieldbus/BMS Jumpers    |
| 6   | 24VAC Power Input For Analog Outputs | 19  | Fieldbus Port           |
| 7   | Analog Outputs                       | 25  | USB Host Port           |
| 8   | Digital Inputs                       | 26  | USB Device Port         |
| 9   | Digital Inputs                       | 27  | Earth Ground Connection |
| 10  | pLAN Connection For Room Terminal    | 28  | Display and Keypad      |
| 11  | pLAN Connection For Room Terminal    |     |                         |
| 12  | Reserved                             |     |                         |

Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056


[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)

(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)

|                     |                     |
|---------------------|---------------------|
| Project Name: _____ | Approval: _____     |
| Location: _____     | Date: _____         |
| Engineer: _____     | Construction: _____ |
| Submitted to: _____ | Unit #: _____       |
| Submitted by: _____ | Drawing #: _____    |
| Reference: _____    |                     |

## DIMENSIONS:

The physical dimension for the medium and large controllers are the same (inches):

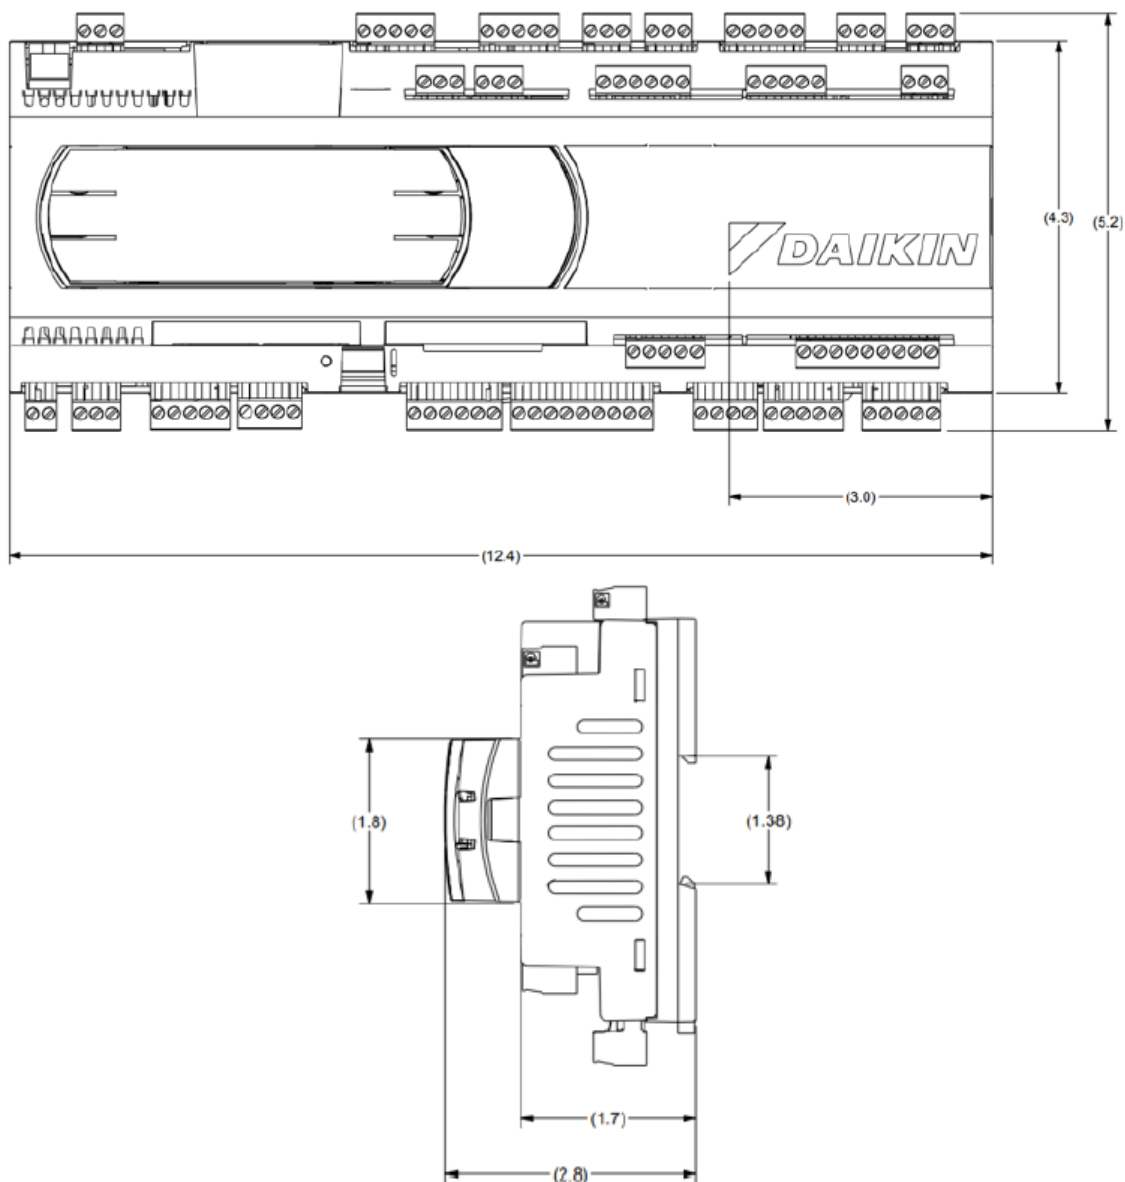

Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056

[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)

(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)



# Submittal Data Sheet

0130M00579/0130M00580– Daikin iLINQ DDC  
Controller

|               |  |               |  |
|---------------|--|---------------|--|
| Project Name: |  | Approval:     |  |
| Location:     |  | Date:         |  |
| Engineer:     |  | Construction: |  |
| Submitted to: |  | Unit #:       |  |
| Submitted by: |  | Drawing #:    |  |
| Reference:    |  |               |  |

## DOCUMENTATION:

Documentation available on [www.daikincity.com](http://www.daikincity.com) and/or [www.daikinac.com](http://www.daikinac.com):

- User Manual
- Quick Start Guide
- BACnet Design Guide
- LonWorks Design Guide
- Submittal
- Product Flyer

Daikin North America LLC, 5151 San Felipe, Suite 500, Houston TX, 77056

[www.daikinac.com](http://www.daikinac.com) [www.daikincity.com](http://www.daikincity.com)

(Daikin's products are subject to continuous improvements. Daikin reserves the right to modify product design, specifications and information in this data sheet without notice and without incurring any obligations)

Page 9 of 9

**HAIL GUARDS**  
**For 15 - 25 Ton Light**  
**COMMERCIAL ROOFTOP UNITS**  
**MODELS: DFG/DFC**  
**INSTALLATION INSTRUCTIONS**

© 2022 **DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, L.P.**  
19001 Kermier Rd., Waller, TX 77484  
[www.daikincomfort.com](http://www.daikincomfort.com)  
P/N: IOD-7147 Date: July 2022



**WARNING**

ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE, MAINTENANCE OR REPAIR (HEREINAFTER, "SERVICE") THE EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT. THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL, ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT. IMPROPER INSTALLATION, ADJUSTMENT, SERVICING, MAINTENANCE OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



**WARNING**


DO NOT BYPASS SAFETY DEVICES

To select proper hail guard please use Hail Guard selection chart.

| MODEL  | Kit Number   |
|--------|--------------|
|        | HAILGD180300 |
| DFC180 | X            |
| DFC240 | X            |
| DFC300 | X            |
| DFG180 | X            |
| DFG240 | X            |
| DFG300 | X            |




**Hail Guards are to be installed on the outside of the condenser coils, see figure 1.**

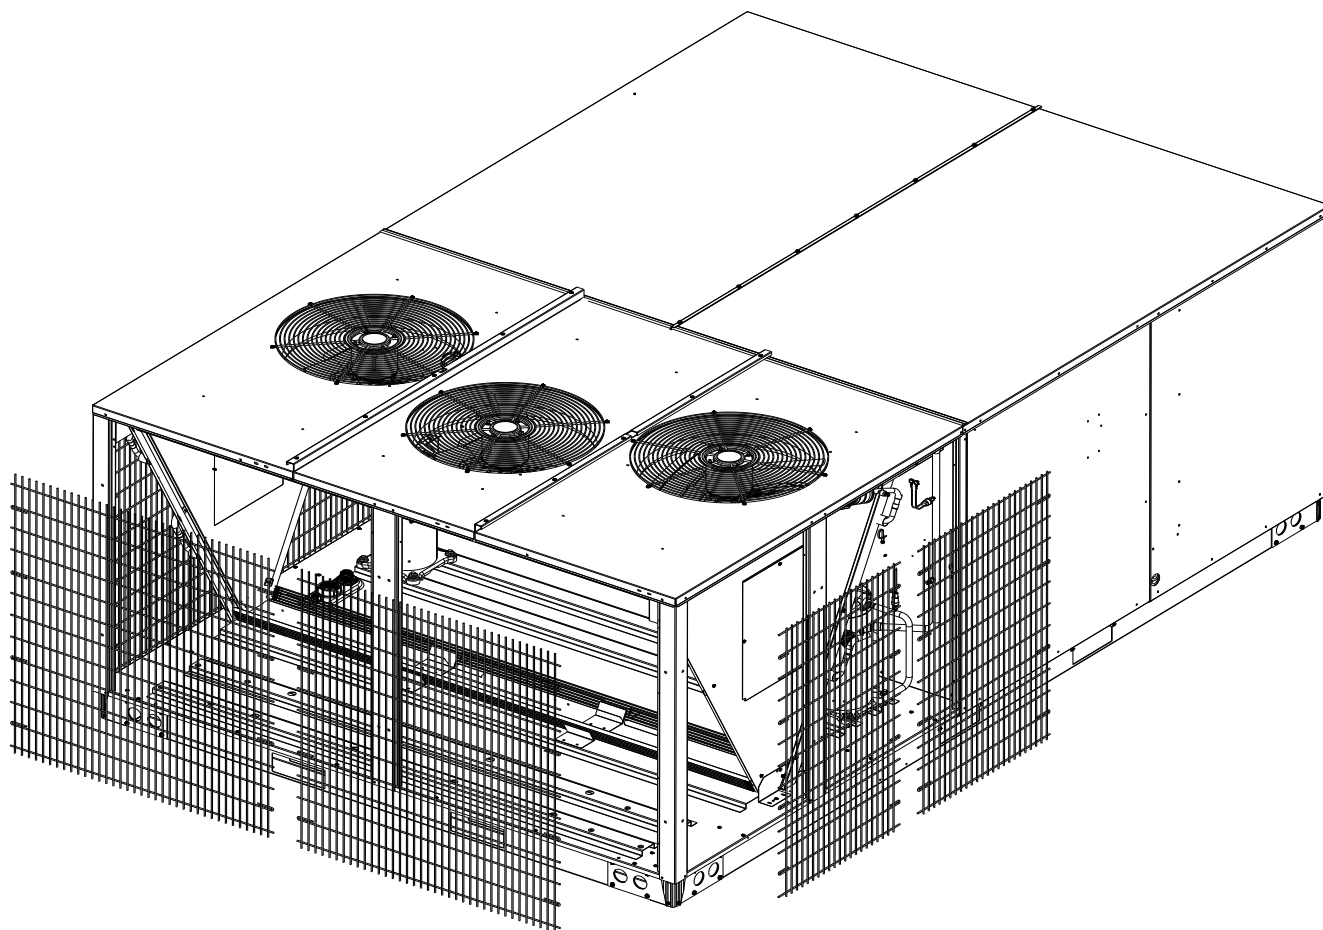


**Figure 1**

1. Remove the existing condenser grilles by removing the screws holding them in place. Be careful as they can fall once all screws are removed. Before removing the last screw on each grille guard, hold the grille in place with your hand or have someone hold it in place. (See Figure 1)
2. Once the existing grilles have been removed, replace the posts, one-by-one, with the new ones provided in the carton. One-by-one meaning, taking the old one off and immediately replacing it with the new one before removing another one. This will keep the weight of the top panel supported. See figure two for correct riv nut orientation when installing the posts. Please reuse the screws that were removed to replace the old posts with the new posts. The bottom of the posts have a notch cut out of them. See Figure 2a for more detail.
3. After replacing all the posts, attach the Turnbuckle bracket with the silver screws provided. Do not fully seat the screw as we need to install the Hail Guards still. Slide the top of the Hail Guard up and under the Top Panel flange and hold it in place while you secure the bottom of the Hail Guard with the black screws provided. For correct panel orientation, the solid panels have a hole at the bottom of the panel. For the louvered panels, the louvers should be facing downwards before installing.
4. Then rotate the turnbuckle brackets so the long end of the bracket is against the Hail Guard. Hold the turnbuckle bracket in place and fully seat the screw or the bracket will rotate around. See Figure 3 for proper bracket orientation. See Figure 4 for completed installation.

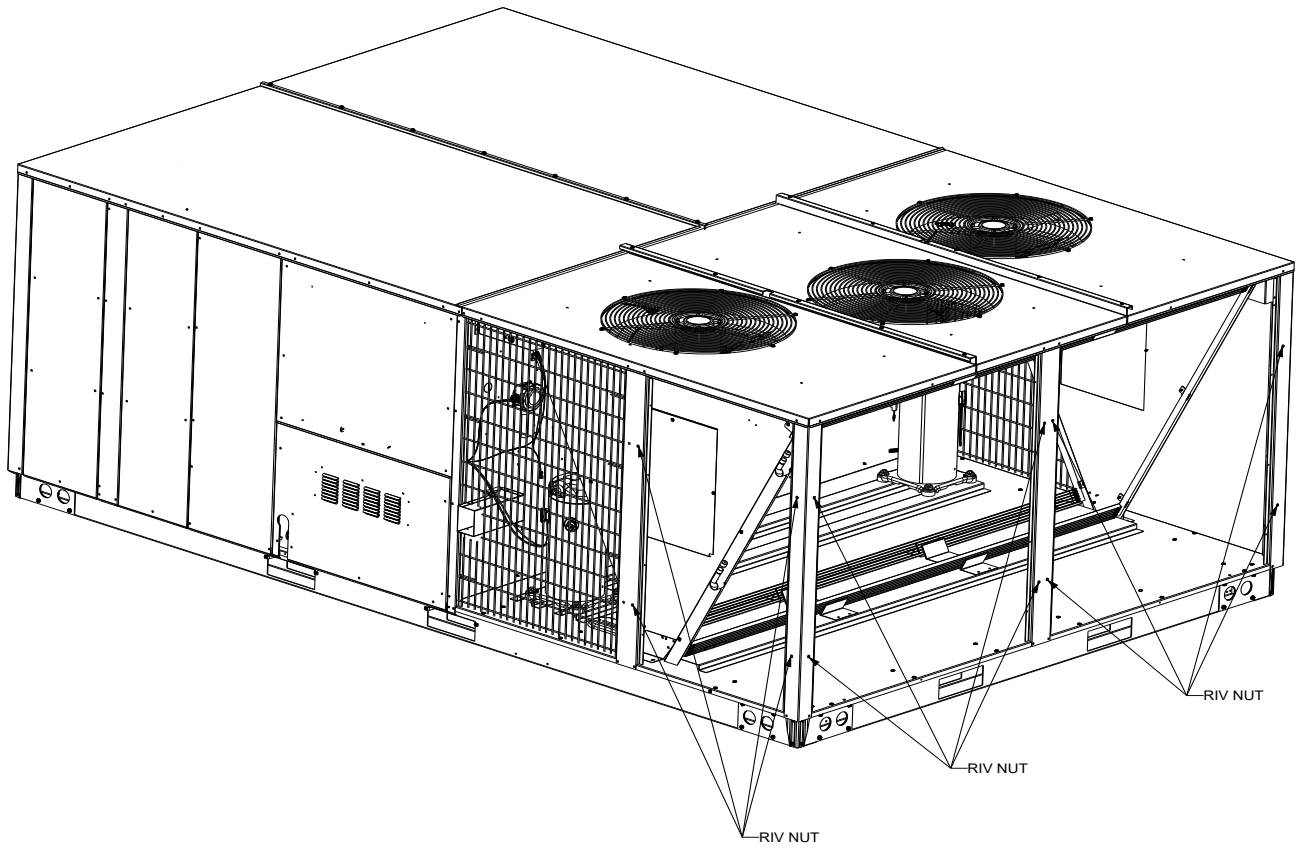

**Figure 2**

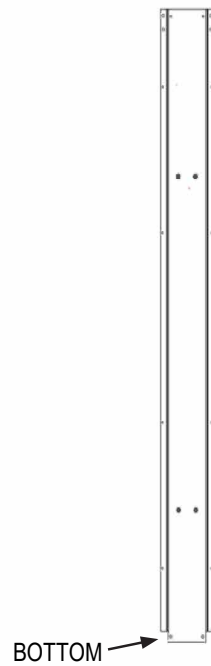

**Figure 2A**

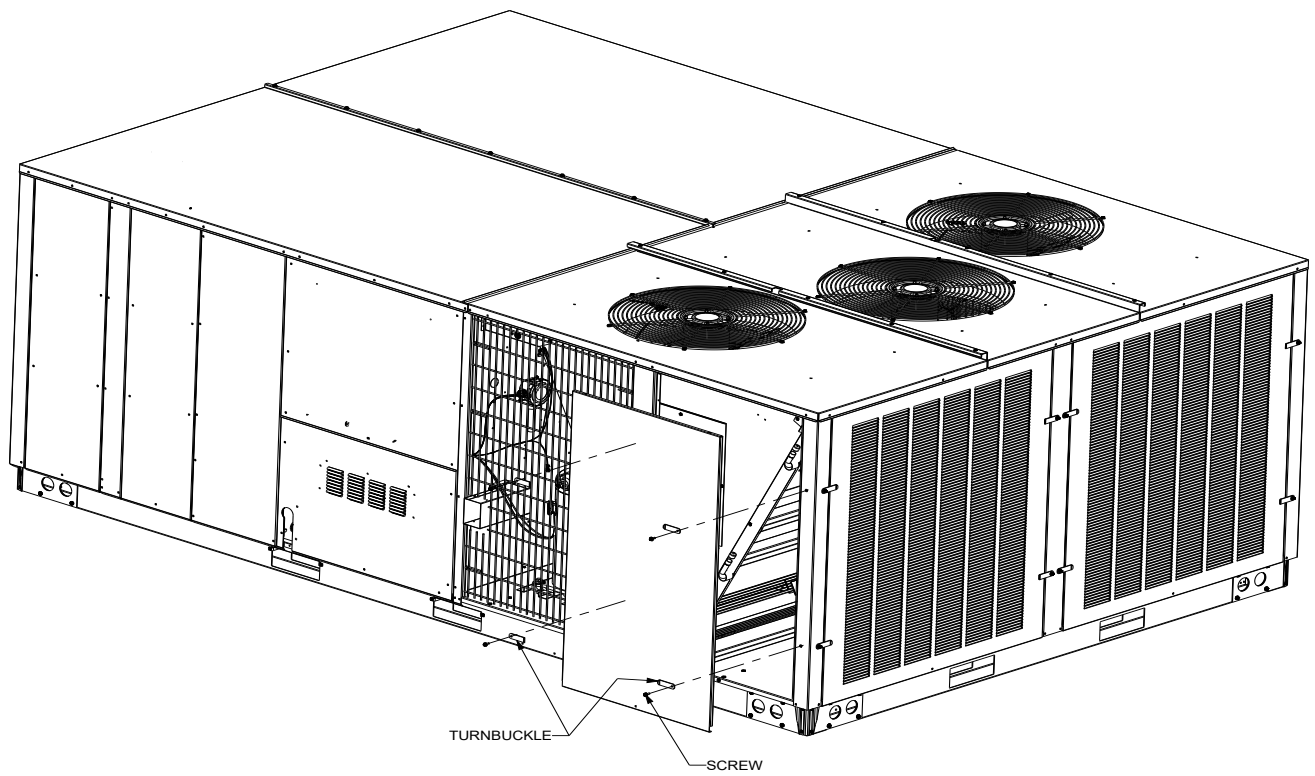


Figure 3

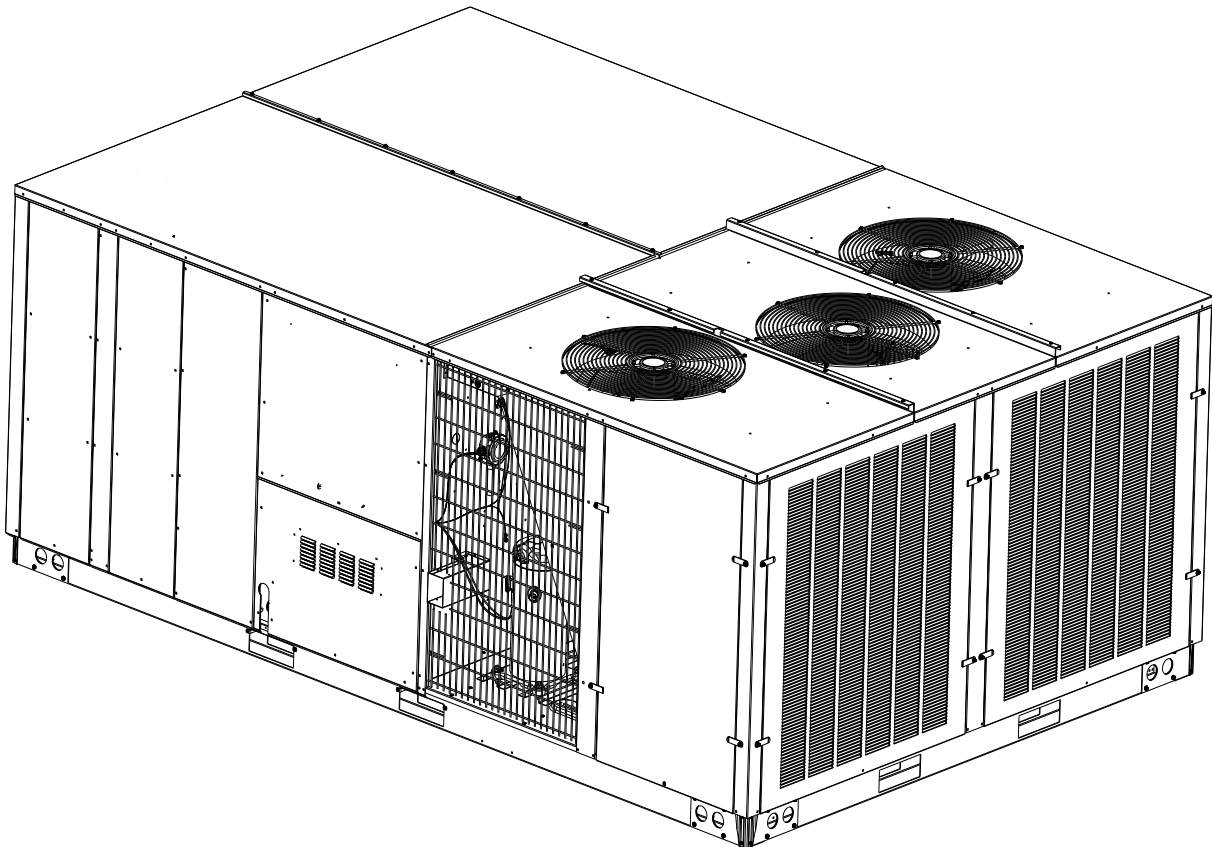


Figure 4

**THIS PAGE INTENTIONALLY LEFT BLANK**

**THIS PAGE INTENTIONALLY LEFT BLANK**

**THIS PAGE INTENTIONALLY LEFT BLANK**

#### **CUSTOMER FEEDBACK**

Daikin is very interested in all product comments.

Please fill out the feedback form on the following link:

<https://daikincomfort.com/contact-us>

You can also scan the QR code on the right for the product brand you purchased to be directed to the feedback page.



---


NOTE: SPECIFICATIONS AND PERFORMANCE DATA LISTED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE

© 2022 **DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, L.P.**

[www.daikincomfort.com](http://www.daikincomfort.com)


## HINGED DOOR, 15-25 TON

Factory installed hinged door option for 15-25 ton Light Commercial models.

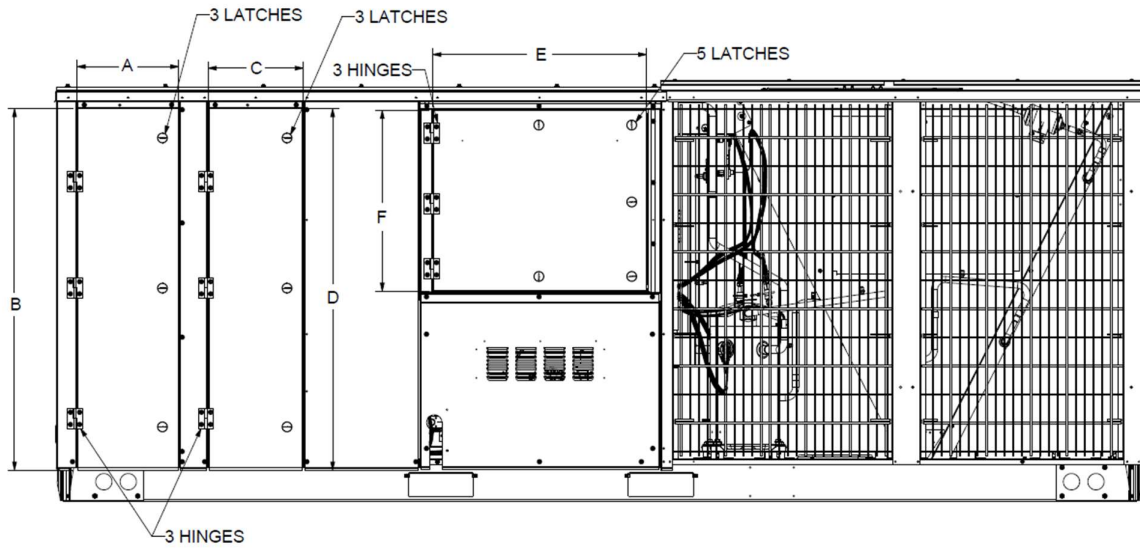

➤ Hinged door size: (All dimensions in inches)

- A=12.47, B=44.31, C=11.68, D=44.31, E=26.23, F=22.15

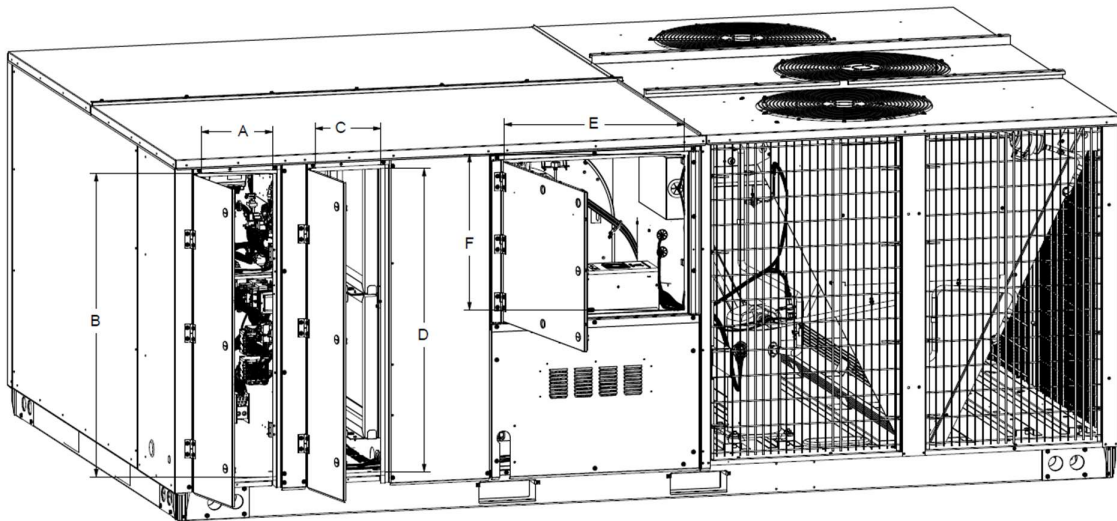

➤ Filter, Blower and control box opening: (All dimensions in inches)

- A=10.07, B=41.95, C=9.28, D=41.95, E=25.44, F=21.46

**TTBCKHE01, TTBCKHE02, & TTBCK03  
THRU-THE-BOTTOM SERVICE CONNECTION  
KIT (FOR 3-12.5 Ton)  
LIGHT COMMERCIAL GAS UNITS  
INSTALLATION INSTRUCTIONS**

© 2019-2020, 2022  
**DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, L.P.**

19001 Kermier Rd., Waller, TX 77484  
[www.daikincomfort.com](http://www.daikincomfort.com)  
P/N: IOD-7118B Date: November 2022

### Safety Considerations

The following symbols and labels are used throughout this manual to indicate immediate or potential safety hazards. It is the owner's and installer's responsibility to read and comply with all safety information and instructions accompanying these symbols. Failure to heed safety information increases the risk of personal injury, property damage, and/or product damage.



#### WARNING

ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE, MAINTENANCE OR REPAIR (HEREINAFTER, "SERVICE") THE EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT. THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL, ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT. IMPROPER INSTALLATION, ADJUSTMENT, SERVICING, MAINTENANCE OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



#### WARNING

**HIGH VOLTAGE**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



#### WARNING

DO NOT BYPASS SAFETY DEVICES

|           | PART NO.   | DESCRIPTION                     | QTY |
|-----------|------------|---------------------------------|-----|
| TTBCKHE01 | 0163L00152 | 1/2" Gas Adapter Fitting        | 1   |
|           | 0163L00154 | 1/2" Elec. Bulkhead Connector   | 2   |
|           | 0163L00196 | 1-1/2" Elec. Bulkhead Connector | 1   |
|           | 0121L02301 | Bracket Thru the Base           | 1   |
|           | B1910010   | Gas Line Grommet                | 1   |
|           | B1393561   | #10 x 1/2" Self Drilling Screw  | 2   |
| TTBCKHE02 | 0163L00154 | 1/2" Elec. Bulkhead Connector   | 2   |
|           | 0163L00197 | 2" Elec. Bulkhead Connector     | 1   |
| TTBCK03   | 0163L00153 | 3/4" Gas Adapter Fitting        | 1   |
|           | 0163L00154 | 1/2" Elec. Bulkhead Connector   | 2   |
|           | 0163L00198 | 2-1/2" Elec. Bulkhead Connector | 1   |

Table 1 - Thru-the-Bottom Connection Parts

### DESCRIPTION

Thru-the-bottom service connection kits reduce the number of penetrations in the roof. They provide a watertight way to connect power wiring, control wiring, and the gas supply line through the base of the unit in the condenser section. External connectors must be weatherproof. All holes in the unit base must be sealed (including those around conduit nuts) to prevent water leakage into the building.

When the thru-the-bottom power accessory package is purchased, one of two bulkhead connector sets may be selected for power connections (depending on unit size). Each set contains 3 to 4 bulkhead connectors, depending on unit tonnage (Table 1). The 1/2" or 3/4" in. diameter bulkhead connectors enable the low-voltage control, and optional convenience outlet, wires to pass through the basepan. The 1-1/2, 2, or 2-1/2 in. bulkhead connector allows the high voltage power wires to pass through the basepan. The 1/2 in. gas adapter fitting allows the gas line to come up through the basepan (3 to 6 ton units only).



## INSTALLATION

Disconnect all power before installing this kit and lockout / tag out. Make sure the roof curb is installed and leveled in accordance with the instructions provided with kit.

The thru-the-bottom service connection accessory kit must be used with a light commercial unit that has embossment in the outdoor section of the basepan. This embossment allows high-voltage power, control wiring, and gas connections to pass through the roof curb and into the basepan of the rooftop unit.

## PREPARING THE UNIT FOR INSTALLATION

The accessory thru-the-bottom power or gas connection kit fittings must be installed before the unit is set on the roof curb. Gas and electrical connections to the unit must be field installed after the unit is installed on the roof curb.


## INSTALL THE UNIT ON THE ROOF CURB

Follow all appropriate instructions required to install the rooftop unit on the roof curb. See installation instructions provided with the roof curb and unit for more specific information.


## CREATING HOLES IN THE RAISED SURFACE OF THE UNIT BASEPAN

Each unit is equipped with a raised (embossed) surface in the basepan. This area is located in the compressor compartment (outdoor section) of the unit (see Figure 1). The embossment of the basepan contains three (3) dimples for locating cutouts. Holes can be field cut in the embossed surface so that high voltage power, control wires, and gas connection can be routed through the roof curb basepan


**Drill holes for gas and power at the 3 dimples shown below.**

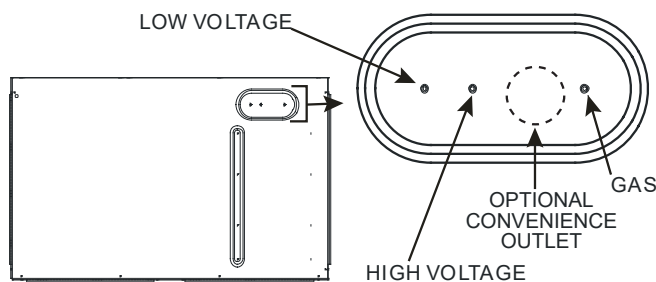

**Fig. 1 - 3 - 6 Ton Basepan**

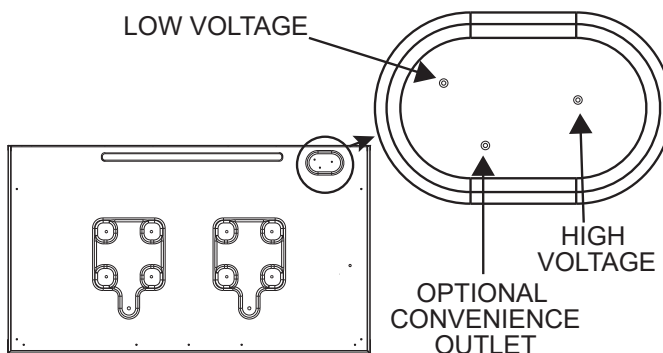


**Fig. 2 - 7.5 - 12.5 Ton Basepan**

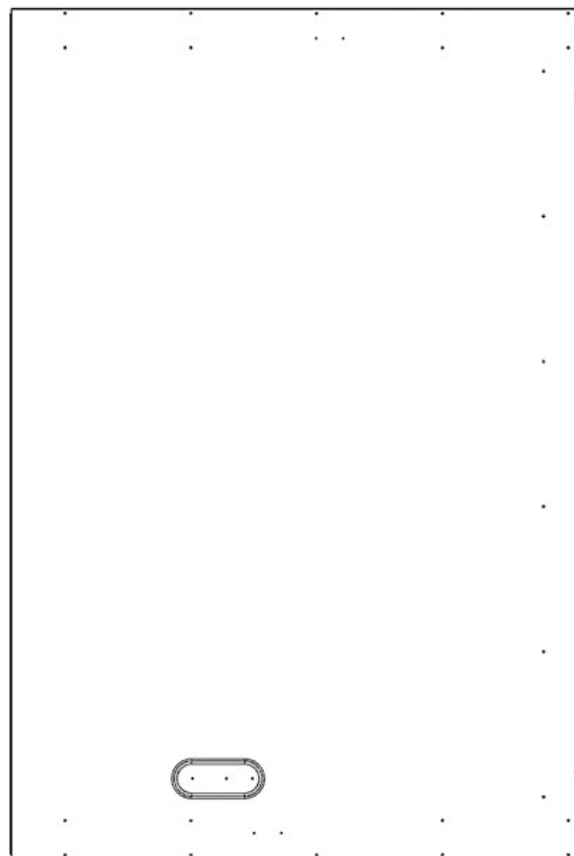

**Fig. 3a - 15 - 25 Ton Basepan**

OPTIONAL CONVENIENCE OUTLET

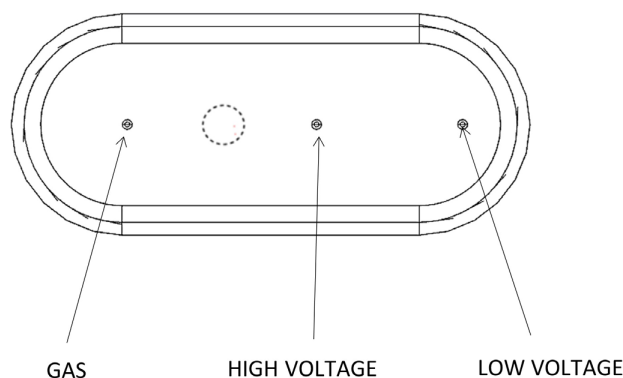

**Fig. 3b - 15 - 25 Ton Basepan**

Use a chassis punch or hole saw to create holes in the embossed surface of the basepan per Table 2.

| CONNECTION SIZE | USE          | REQ. HOLE SIZE |
|-----------------|--------------|----------------|
| 1/2"            | Low Voltage  | 7/8"           |
| 1/2"            | Gas          | 1"             |
| 1-1/2"          | High Voltage | 2"             |
| 2"              | High Voltage | 2-1/2"         |
| 2-1/2"          | High Voltage | 3"             |

Table 2 - Bottom Power Chart

## MOUNTING ELECTRIC BULKHEAD CONNECTORS

Once the holes have been cut place electrical bulkhead connectors in basepan. Place gasket and lock ring end of connector beneath the basepan and mount the other end above the basepan.

When the electrical connectors are in place, field supplied and installed liquid tight conduit connectors and conduit may be attached to the connectors. Pull correctly rated high voltage and low voltage wires through appropriate conduits and connect to units per roof top units installation instructions.

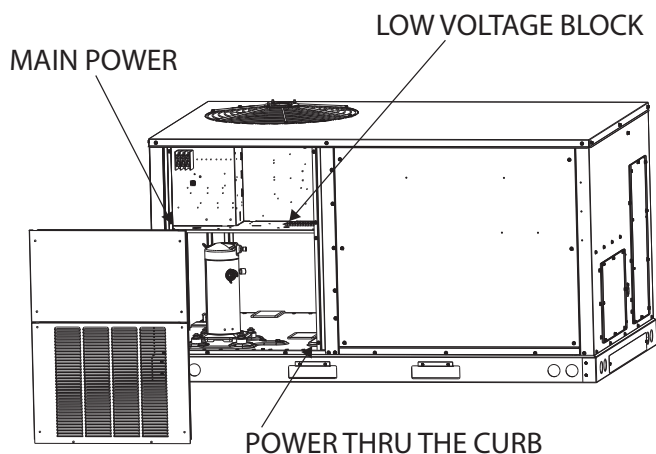


Fig. 4 - 3-6 Ton Power Connections

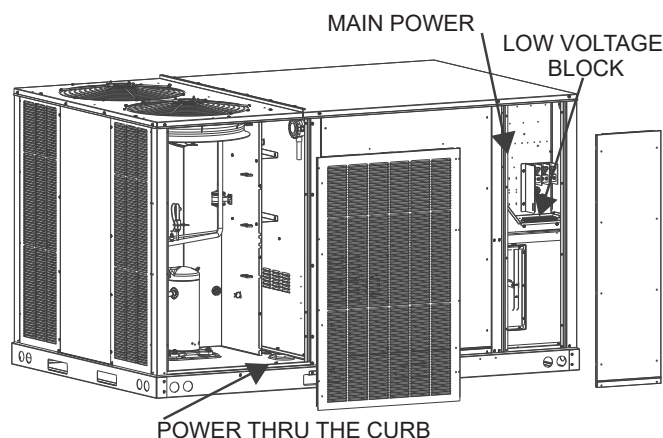


Fig. 5 - 7.5 - 12.5 Ton Power Connections

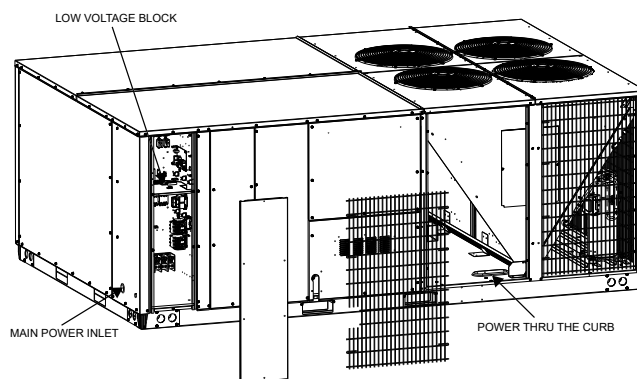


Fig. 6 - 15 - 25 Ton Power Connections

## MAKING GAS CONNECTIONS

The thru-the-bottom gas connection fitting has male and female threads. The gas fitting also contains two neoprene washers and two locking washers. One neoprene and one locking washer are installed below the unit basepan with the second set being installed on the top side of the basepan before the fitting is tightened. Tighten all fittings. The male threads protrude above the basepan of the unit, with the female threads protrude below the basepan.

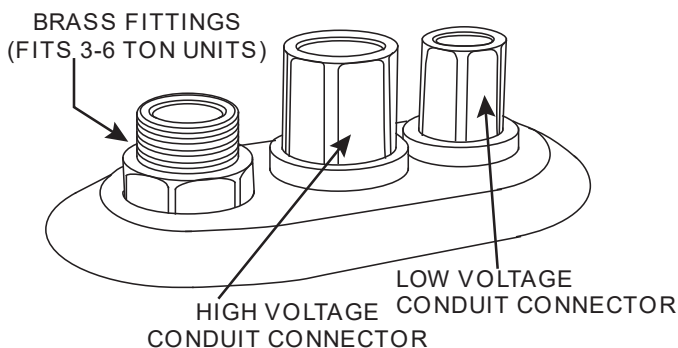


Fig. 7

Install a 5" black pipe nipple and an elbow on the through-the-basepan gas fitting (1/2-in. for 3-6 Ton kit, 3/4-in for 15-25 Ton kit). If using 1/2-in. pipe, a minimum 12-in. nipple (field-supplied) is required to attach to the elbow. It extends the gas piping through compressor access panel (if unit is so equipped). If using 3/4-in. pipe, a minimum 15-in. nipple (field-supplied) is required to extend the gas piping through compressor access panel. Install the gas pipe support bracket to the inside of unit using provided screws. Remove the bottom right ten louvers from the right side of the louvered compressor access panel to allow gas line to exit the unit.



**Fig. 8**



**Fig. 9**



**Fig. 10**

## **INSTALLING GAS PIPING**

The rating plate is stamped with the model number, type of gas and gas input rating. Make sure the unit is equipped to operate on the type of gas available. Conversion to propane (LP) gas is permitted with the use of the factory authorized conversion kit (see the unit Spec Sheets for the appropriate kit). For High Altitude derates, refer to the latest edition of the National Fuel Gas Code NFPA 54/ANSI Z223.1.

A manual gas shut off valve must be field installed external to the roof top unit. In addition, a drip leg must be installed near the inlet connection. A ground joint union connection is required between the external shut off valve and the unit connection to the gas valve to permit removal of the burner assembly for servicing.

**NOTE:** Inlet gas pressures must not exceed the maximum value shown in Table 3 below.

| <b>INLET GAS PRESSURE</b> |                                  |
|---------------------------|----------------------------------|
| NATURAL                   | Min. 5.0" W.C., Max. 10.0" W.C.  |
| PROPANE                   | Min. 11.0" W.C., Max. 14.0" W.C. |

**Table 3 - Inlet Gas Pressure**

PAGE LEFT INTENTIONALLY BLANK

PAGE LEFT INTENTIONALLY BLANK

PAGE LEFT INTENTIONALLY BLANK

#### **CUSTOMER FEEDBACK**

Daikin is very interested in all product comments.

Please fill out the feedback form on the following link:

<https://daikincomfort.com/contact-us>

You can also scan the QR code on the right to be directed to the feedback page.



Our continuing commitment to quality products may mean a change in specifications without notice.

© 2019-2020, 2022 **DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, L.P.**

19001 Kermier Rd., Waller, TX 77484

[www.daikincomfort.com](http://www.daikincomfort.com)

**DAIKIN****COMMERCIAL WARRANTY****Models: DFC, DFG, DFH, DSC, DSG, DSH**Who Is Providing The Warranty?

This warranty is provided to you by Daikin Comfort Technologies Manufacturing, L.P. ("Daikin"), which warrants all parts of this heating or air conditioning unit, as described below.

To What Type Of Installations Does This Warranty Apply?

This warranty applies to heating and air conditioning units installed in buildings other than residences.

What Units Does This Warranty Not Cover?

This warranty does not apply to:

- Units that are ordered over the Internet, by telephone, or by other electronic means unless the unit is installed by a dealer adhering to all applicable federal, state, and local codes, policies, and licensing requirements.
- Units that are installed outside the United States, its territories, or Canada.
- Units that are operated in incomplete structures.
- Units that are installed in residential buildings.

What Problems Does This Warranty Cover?

This warranty covers defects in materials and workmanship that appear under normal use and maintenance.

Other Warranties

**THIS WARRANTY IS PROVIDED IN LIEU OF ANY OTHER WARRANTIES, WHETHER BY DAIKIN OR ANY OF ITS AFFILIATES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

What Problems Does This Warranty Not Cover?

Daikin is not responsible for:

- Damage or repairs required as a consequence of faulty installation or application.
- Damage as a result of floods, fires, winds, lightning, natural disasters, accidents, corrosive atmosphere, or other conditions beyond Daikin's control.
- Damage or the need for repairs arising from the use of components or accessories not compatible with this unit.
- Normal maintenance as described in the installation and operating manual, such as cleaning of the coils, filter cleaning and/or replacement, and lubrication.
- Parts or accessories not supplied or designated by the manufacturer.

- Damage or the need for repairs resulting from any improper use, maintenance, operation, or servicing.
- Damage or failure of the unit to start due to interruption, surge, or fluctuation in electrical service or inadequate electrical service.
- Any damage, or the need for any repairs, caused by frozen or broken water pipes, water damage, moisture intrusion, mold or other biological growth.
- Changes in the appearance of the unit that do not affect its performance.
- Replacement of fuses and replacement or resetting of circuit breakers.
- Damage or the need for repairs resulting from the use of unapproved refrigerant types or used or recycled refrigerant.

When Does Warranty Coverage Begin?

Warranty coverage begins on the "installation date." The installation date is one of two dates:

- (1) The installation date is the date that the unit is originally installed.
- (2) If the date the unit is originally installed cannot be verified, the installation date is three months after the manufacture date. The first four digits of the serial number (YMMM) on the unit indicate the manufacture date. For example, a serial number beginning with "2407" indicates the unit was manufactured in July 2024.

How Long Does Warranty Coverage Last?

The warranty lasts for a period of up to (1) 20 YEARS after the installation date for the heat exchanger (only applicable to units containing a heat exchanger) and (2) 5 YEARS after the installation date on all other parts.

This warranty period does not continue after the unit is removed from the location where it was originally installed.

The replacement of a part under this warranty does not extend the warranty period. In other words, Daikin warrants a replacement part only for the period remaining under the applicable warranty on the original part.

**www.daikincomfort.com**

For further information about this warranty,  
contact Homeowner Support by mail to  
19001 Kermier Road, Waller, Texas 77484

Part No. PWDLCMED  
07/2024

**DAIKIN****COMMERCIAL WARRANTY****Models: DFC, DFG, DFH, DSC, DSG, DSH**What Will Daikin Do To Correct Problems?

Daikin will furnish a replacement part, without charge for the part only, to replace any part that is found to be defective due to workmanship or materials under normal use and maintenance during the warranty period. Furnishing of the replacement part is Daikin's only responsibility under this warranty.

**THE REMEDIES DESCRIBED IN THIS SECTION ARE DAIKIN'S ONLY RESPONSIBILITIES, AND THE OWNER'S ONLY REMEDIES, FOR ANY BREACH OF ANY WARRANTY.**

What Won't Daikin Do To Correct Problems?

Daikin will not pay for:

- Labor, freight, or any other cost associated with the service, repair, or operation of the unit, the deinstallation of any defective part, or the installation of any replacement part.
- Electricity or fuel costs, or increases in electricity or fuel costs, for any reason, including additional or unusual use of supplemental electric heat.
- Lodging or transportation charges.
- Refrigerant.

**WHETHER ANY CLAIM IS BASED ON NEGLIGENCE OR OTHER TORT, BREACH OF WARRANTY OR OTHER BREACH OF CONTRACT, OR ANY OTHER THEORY, NEITHER DAIKIN NOR ANY OF ITS AFFILIATES SHALL IN ANY EVENT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, LOSS OF USE OF A UNIT, EXTRA UTILITY EXPENSES, OR DAMAGES TO PROPERTY.**

How Can The Owner Receive Warranty Service?

If there is a problem with the unit, contact a licensed contractor.

To receive a replacement part, a licensed contractor must bring the defective part to a Daikin heating and air conditioning products distributor.

For more information about the warranty, write to Homeowner Support, 19001 Kermier Road, Waller, Texas 77484.

Where Can Any Legal Remedies Be Pursued?

ARBITRATION CLAUSE. IMPORTANT. PLEASE REVIEW THIS ARBITRATION CLAUSE. IT AFFECTS YOUR LEGAL RIGHTS.

1. **Parties:** This arbitration clause affects your rights against Daikin Comfort Technologies North America, Inc. and any of its subsidiaries, including but not limited to Daikin Comfort Technologies Manufacturing, L.P., and its or their employees or agents, successors, or assigns, all of whom together are referred to below as "we" or "us" for ease of reference.

2. **ARBITRATION REQUIREMENT: EXCEPT AS STATED BELOW, ANY DISPUTE BETWEEN YOU AND ANY OF US SHALL BE DECIDED BY NEUTRAL, BINDING ARBITRATION RATHER THAN IN COURT OR BY JURY TRIAL.** "Dispute" will be given the broadest possible meaning allowable by law. It includes any dispute, claim, or controversy arising from or relating to your purchase of this heating or air conditioning unit, any warranty upon the unit, or the unit's condition. It also includes determination of the scope or applicability of this Arbitration Clause. The arbitration requirement applies to claims in contract and tort, pursuant to statute, or otherwise.
3. **CLASS-ARBITRATION WAIVER: ARBITRATION IS HANDLED ON AN INDIVIDUAL BASIS. IF A DISPUTE IS ARBITRATED, YOU AND WE EXPRESSLY WAIVE ANY RIGHT TO PARTICIPATE AS A CLASS REPRESENTATIVE OR CLASS MEMBER ON ANY CLASS CLAIM YOU MAY HAVE AGAINST US OR WE AGAINST YOU, OR AS A PRIVATE ATTORNEY GENERAL OR IN ANY OTHER REPRESENTATIVE CAPACITY, TO THE MAXIMUM EXTENT PERMITTED BY LAW. YOU AND WE ALSO WAIVE ANY RIGHT TO PARTICIPATE IN ANY CLASS OR REPRESENTATIVE ACTION IN ANY FORM, INCLUDING ANY CLASS ARBITRATION, OR ANY CONSOLIDATION OF INDIVIDUAL ARBITRATIONS.**
4. **Discovery and Other Rights:** Discovery and rights to appeal in arbitration are generally more limited than in a lawsuit. This applies to both you and us. Other rights that you or we would have in court may not be available in arbitration. Please read this Arbitration Clause and consult the rules of the arbitration organizations listed below for more information.
5. **SMALL CLAIMS COURT OPTION: YOU MAY CHOOSE TO LITIGATE ANY DISPUTE BETWEEN YOU AND ANY OF US IN SMALL CLAIMS COURT, RATHER THAN IN ARBITRATION, IF THE DISPUTE MEETS ALL REQUIREMENTS TO BE HEARD IN SMALL CLAIMS COURT.**
6. **Governing Law:** For residents of the United States, the procedures and effect of the arbitration will be governed by the Federal Arbitration Act (9 U.S.C. § 1 et seq.) rather than by state law concerning arbitration. For residents of Canada, the procedures and effect of the arbitration will be governed by the applicable arbitration law of the province in which you purchased your unit. The law governing your substantive warranty rights and other claims will be the law of the state or province in which your unit was installed. Any court having jurisdiction may enter judgment on the arbitration award.

Part No. PWDLCMED  
07/2024

**DAIKIN****COMMERCIAL WARRANTY****Models: DFC, DFG, DFH, DSC, DSG, DSH**

7. *Rules of the Arbitration:* If the amount in controversy is less than \$250,000, the arbitration will be decided by a single arbitrator. If the amount in controversy is greater than or equal to \$250,000, the arbitration will be decided by a panel of three arbitrators. The arbitrator(s) will be chosen pursuant to the rules of the administering arbitration organization. United States residents may choose JAMS (1920 Main Street, Ste. 300, Irvine, CA 92614, [www.jamsadr.com](http://www.jamsadr.com)) or, subject to our approval, any other arbitration organization. In addition, Canadian residents may choose the ADR Institute of Canada (234 Eglinton Ave. East, Suite 405, Toronto, Ontario, M4P 1K5, [www.amic.org](http://www.amic.org)). These organizations' rules can be obtained by contacting the organization or visiting its website. If the chosen arbitration organization's rules conflict with this Arbitration Clause, the provisions of this Arbitration Clause control. The award of the arbitrator(s) shall be final and binding on all parties.
8. *Location of the Arbitration Hearing:* Unless applicable law provides otherwise, the arbitration hearing for United States residents will be conducted in the federal judicial district in which you reside (in your hometown area) or, for Canadian residents, in the province in which you reside, and if you choose, will be in person.
9. *Costs of the Arbitration:* Each party is responsible for its own attorney, expert, and other costs and fees unless applicable law requires otherwise. Each party is also responsible for one-half of any costs and fees charged by the arbitration organization and arbitrator(s) to administer the arbitration to the maximum extent permitted by law or rule. Where permissible by law, the prevailing party may be required to reimburse the other party for the costs and fees of the arbitration organization and arbitrator(s) in whole or in part by decision of the arbitrator(s) at the discretion of the arbitrator(s).
10. *Survival and Enforceability of this Arbitration Clause:* This Arbitration Clause shall survive the expiration or termination, or any transfer, of the warranty on your unit. If any part of this Arbitration Clause, except waivers of class-action rights, is found to be unenforceable for any reason, the remainder of this clause and the warranty shall remain enforceable. If, in a case in which class-action allegations have been made, the waiver of class-action rights under this warranty is found to be unenforceable with respect to any part of the dispute, the parts of the dispute as to which the waiver of class-action rights have been found unenforceable will be severed and will proceed in court without reference or application of this Arbitration Clause. Any remaining parts will proceed in arbitration.

Part No. PWDLCMED  
07/2024