

HHpro

User Guide

Mechanical schedules, submittals, documentation and HVAC calculators

<https://hhpro-hvac.com>

Revised October 2026

Contents

1. Getting Started.....	4
1.1 What HHpro is.....	4
1.2 Getting to the site	4
1.3 Your account	4
1.4 Signing in	5
1.5 Forgot password	5
1.6 The header	6
1.7 The overview page	6
2. Product Pages	8
2.1 The picture picker	8
2.2 Filtering	9
2.3 Reading the schedule.....	10
2.4 Dropdowns inside the schedule.....	10
2.5 Select, Submittal, Docs and Configure	12
2.6 Notes on individual products	13
2.7 GPS Bipolar Ionization.....	17
3. Projects and the Cart	19
3.1 Your first Select	19
3.2 The cart panel	21
3.3 The Projects page.....	21
3.4 Where your projects live.....	22
4. The Project View	23
4.1 Tabs	23
4.2 The toolbar	24
4.3 Schedule layout.....	24
4.4 Auto Tag	24
4.5 Arranging the rows.....	25
4.6 Add / Remove Columns	26
4.7 Edit Schedule.....	27
4.8 Schedule notes.....	27
4.9 Undo, Redo and leaving	28
4.10 Exporting the schedule	28

5. The Refrigerant Tab	29
6. The Calculations Tab	30
7. The Files Tab.....	31
7.1 Choosing what to download	31
7.2 Project Schedules	31
7.3 Downloading	32
8. Design Search.....	33
8.1 Running a search.....	33
8.2 Performance at design conditions	34
8.3 Daikin Light Commercial RTUs	35
9. Calculators.....	39
9.1 Common controls.....	39
9.2 Psychrometrics.....	39
9.3 Supply Air Dew Point.....	40
9.4 Ductulator	41
9.5 Saving calculations to a project	41
10. Finding a Model Number	42
11. Appendix	43
11.1 Privacy and your data	43
11.2 Quick reference.....	43
11.3 Things to watch for	44
11.4 Getting help	44

1. Getting Started

1.1 What HHpro is

HHpro is Hoffman & Hoffman's equipment site for mechanical engineers. It holds pre-engineered mechanical schedules for the HVAC equipment we sell, the documentation that goes with them, and a set of HVAC calculators. From one browser tab you can:

- Filter a product line down to the units that fit your application.
- Search by design load instead of by model number.
- Collect complete systems into a named project, saved to your HHpro account.
- Tag the units, choose which columns appear, edit any value, and add schedule notes.
- Export the finished schedule as Excel, CAD (DXF) or PDF, ready to drop into a drawing set.
- Download submittals, engineering, installation and operation manuals, Revit families and CAD files as a single ZIP.
- Work out refrigerant line-set lengths and charge for split systems.
- Run psychrometric, supply air dew point and duct sizing calculations, and keep them with the project.

1.2 Getting to the site

- **Address:** <https://hhpro-hvac.com>
- Nothing to install and no VPN; any network with internet access will do. Your projects are saved to the Hoffman & Hoffman server as you work, so you need to be online to use the site.

Browser: Use a current version of Chrome or Edge on a desktop-sized window. The schedules are wide. They scroll sideways on a small screen and are not practical on a phone.

1.3 Your account


Everyone has their own HHpro account, set up by an administrator. What you see follows your account: the product lines shown depend on your office location(s), and the schedule layouts you can choose depend on your company (section 4.3).

Setting your password. When your account is created you receive an invitation email with a registration link.

1. Open the link. The page shows your name and email address.
2. Choose a password of at least 10 characters (a short phrase works well) and type it twice.
3. Click **Set password and sign in**. You land on the overview page, already signed in.

A registration link works once and expires after 72 hours. If it has expired or "can't be used", ask your administrator to send a new one.

1.4 Signing in

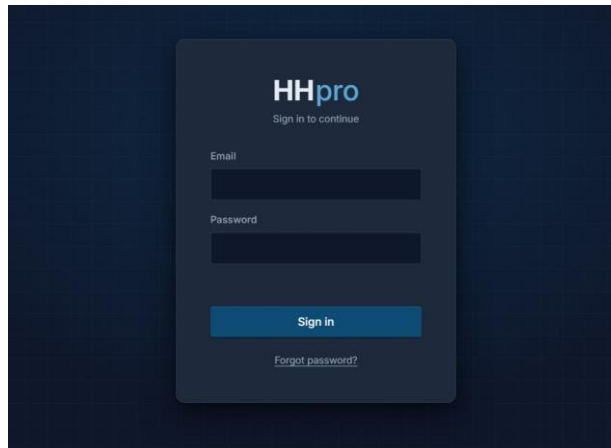


The sign-in page.

Enter your **Email** and **Password** and click **Sign in**.

- You stay signed in on that browser until you click **Log out**. Closing the browser does not sign you out. A different computer or browser asks you to sign in once.
- After 10 wrong passwords, sign-in is paused for 15 minutes.
- "Your account is waiting for you to set a password" means the registration link has not been used yet. Check your email, or ask your administrator to resend it.
- The **Privacy & Data** link in the bottom corner can be read before you sign in.

1.5 Forgot password

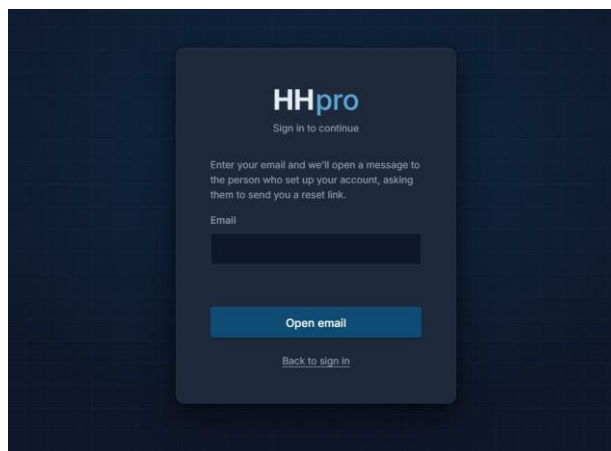

Forgot password opens a message in your own mail program.

HHpro never sends email itself. Click **Forgot password?**, enter your email address and click **Open email**. HHpro opens a pre-written message in your own mail program, addressed to the person who set up your account, asking for a reset link. Send it; they reply with a link to choose a new password, which works just like the registration link. **Back to sign in** returns to the sign-in form.

If there is no account for the address you entered, the page tells you who to email to get set up.

1.6 The header



The header: logo and breadcrumb, the model search box, User Guide and Log out.


The blue bar at the top of every page holds the controls that are always available.

- **HHpro logo** (left): click it to return to the overview. Inside a product, project or calculator, the page name appears beside it as a breadcrumb.
- **Find a model number** (center): searches the products your account can see and jumps straight to a model. See section 10.
- **User Guide**: opens this guide in a new tab.
- **Users**: shown to administrators only, and covered in its own guide.
- **Log out**: signs you out on this browser. Hover over it to see whose account is signed in. Your projects stay in your account.

The browser's Back and Forward buttons move between HHpro's own pages.

1.7 The overview page

After signing in you land on the overview. Everything in the site starts from one of these tiles.

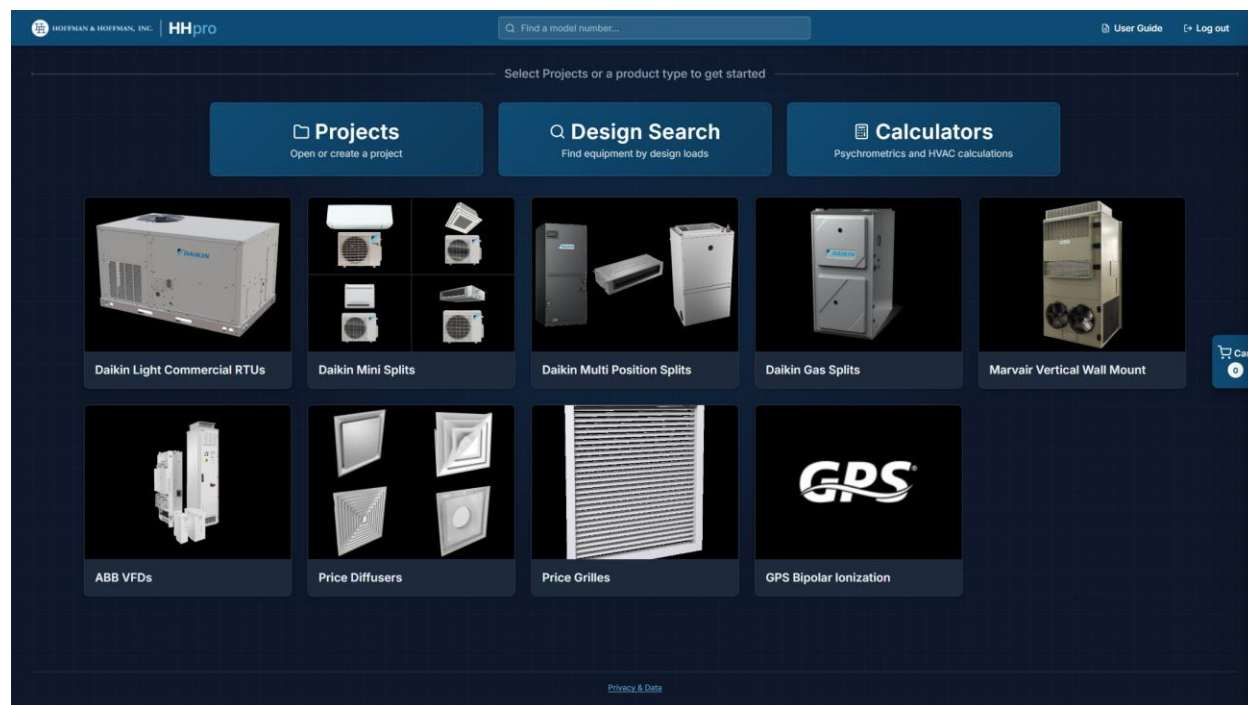

The overview: Projects, Design Search and Calculators on top, one tile per product line below.

- **Projects**: open a saved project or start a new one (section 3.3).
- **Design Search**: find equipment by entering design loads rather than by browsing (section 8).
- **Calculators**: psychrometrics, supply air dew point and duct sizing (section 9).
- **Product tiles**: open a product's schedule to browse and select equipment (section 2). The nine product lines are Daikin Light Commercial RTUs, Daikin Mini Splits, Daikin Multi Position Splits,

Daikin Gas Splits, Marvair Vertical Wall Mount, ABB VFDs, Price Diffusers, Price Grilles and GPS Bipolar Ionization. Product lines that are not offered at your office location(s) are not shown.

The **Cart** tab on the right edge is always visible. It shows what you have collected so far and gets you into the project view in one click (section 3.2).

Calculators-only accounts: Some accounts, such as a manufacturer reviewing the tools, see only the Calculators tile. Products, Projects, Design Search, the model search box and the cart are not available to them, and calculations can be exported to PDF but not saved to a project.

2. Product Pages

Every product tile opens the same kind of page: an optional picture picker at the top, a row of filter dropdowns, and the schedule itself. (GPS Bipolar Ionization works a little differently; see section 2.7.) Each row of the schedule is a complete, pre-engineered selection with capacities, airflow, electrical data and weights already filled in. **Back to Products** (top right) returns to the overview.

A product page: picture picker, filter bar, and the schedule below.

2.1 The picture picker

Daikin Mini Splits, Price Diffusers and Price Grilles open with a strip of pictures above the filters. Clicking a picture filters the schedule to that style, which is usually the quickest way to cut a long list down. Click the same picture again to release it.

- **Mini Splits:** indoor unit style (Wall Mounted, Cassette, Ducted Concealed, Floor Mounted (Black) and Floor Mounted (White)). The picture filters on the first indoor unit of the system.
- **Diffusers:** model family (SPD, SCD, SPD (Return), SCDA, SMD/AMD, SMD w/ SR and PDDR).
- **Grilles:** family (150, 20/30, 300, 500/600/700, 900 GYM, 540/640, LINEAR BAR, LINEAR BAR HD, 500/600/700 RTN, 60/70, EGG CRATE, PERFORATED, 90 GYM RTN, LATTICE and TRANSFER).

When an SMD-family diffuser is picked, a **Core style** row of icons appears. Each icon is a filter button for that core style; dimmed icons are shown for reference but are not in the data.

HOFFMAN & HOFFMAN, INC. | HHpro > Price Diffusers

Find a model number...

User Guide Log out

Price Diffusers

PRICE DIFFUSER SCHEDULE

Back to Products

SPD SCD SPD (Return) SCDA SMD/AMD SMD w/ SR PDDR

CORE STYLE

DESCRIPTION: MODULAR LOUVERED FACE DIFFUSER CFM: All CORE STYLE: All DUCT SIZE: All Clear all filters

Showing 1029 of 1953 items

Actions	MANUFACTURER	MODEL	DESCRIPTION	DUCT SIZE (IN)	DUCT AREA (SQ FT)	CORE STYLE	NECK VELOCITY (FPM)	VELOCITY PRESSURE (IN WG)	TOTAL PRESSURE (IN WG)	TOTAL FLOW RATE (CFM)	CFM/SIDE - A	CFM/SIDE - B	SOUND (NC)	THROW A (150-100-50 FT)	THROW B (150-100-50 FT)
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	4A	300	0.006	0.036	75	19		<15	4-6-12	
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	4A	400	0.01	0.065	100	25		<15	5-8-15	
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	4A	500	0.016	0.099	125	31		17	7-10-16	
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	4A	600	0.022	0.144	150	38		23	8-12-18	
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	4A	700	0.031	0.196	175	44		27	9-14-19	
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	4A	800	0.04	0.256	200	50		31	11-15-21	
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	4A	900	0.05	0.324	225	56		36	12-16-22	
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	3A	300	0.006	0.036	75	19	28	<15	4-6-12	5-7-14
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	3A	400	0.01	0.065	100	25	38	<15	5-8-15	6-10-16
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	3A	500	0.016	0.099	125	31	47	17	7-10-16	8-12-18
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	3A	600	0.022	0.144	150	38	56	23	8-12-18	10-14-20
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	3A	700	0.031	0.196	175	44	66	27	9-14-19	11-15-22
Select Submittal Docs	PRICE	SMD/AMD	MODULAR LOUVERED FACE DIFFUSER	6 x 6	0.25	3A	800	0.04	0.256	200	50	75	31	11-15-21	13-16-23

Price Diffusers with SMD/AMD picked: the family pictures, the core style icons, then the filters.

2.2 Filtering

The filter bar sits above the schedule. Set the dropdowns left to right and the list narrows as you go; the dropdowns are linked, so each one only offers values that are still achievable given the others.

SIZE (OUTDOOR UNIT): 1.5 COOLING ONLY OR HEAT PUMP: HEAT PUMP ELECTRICAL: All NUMBER OF INDOOR UNITS: 1 SIZE (INDOOR UNIT #1): 1.5 TYPE (INDOOR UNIT #1): Wall Mounted Clear all filters

The filter bar. A dropdown that is doing work is highlighted; Clear all filters resets them.

- If a filter is left with only one possible value, the site picks it for you. Change any dropdown yourself and the automatic picks re-evaluate.
- Some filters only appear once they are relevant. On Mini Splits, for example, the indoor unit size and type filters appear after you set the number of indoor units.
- **Clear all filters** puts the page back to the full list.

The status line under the filters always tells you where you stand, for example "Showing 2 of 394 items". On Light Commercial RTUs, Multi Position Splits and Marvair the count includes every heat size or electric heat option, so it can be larger than the number of rows drawn.

HOFFMAN & HOFFMAN, INC. | HHpro > Daikin Mini Splits

Find a model number...

User Guide | Log out

Daikin Mini Splits

SPLIT SYSTEM SCHEDULE

Back to Products







SIZE (OUTDOOR UNIT): 1.5
 COOLING ONLY OR HEAT PUMP: HEAT PUMP
 ELECTRICAL: All
 NUMBER OF INDOOR UNITS: 1
 SIZE (INDOOR UNIT #1): 1.5
 TYPE (INDOOR UNIT #1): Wall Mounted
 Clear all filters

Showing 2 of 394 Items

Actions	INDOOR UNIT										OUTDOOR UNIT										
	CFM	COOLING CAPACITY					HEAT PUMP HEATING CAPACITY		OPERATING WEIGHT	INDOOR UNIT TYPE	ELECTRICAL			MAKE & MODEL		OA AMBIENT (COOLING)	OA AMBIENT (HEATING)	OPERATING WEIGHT	SEER2/EER2/HSPF2	ELECTRIC	
		EDB	EWB	LD	LWB	TOTAL CAPACITY	SENSIBLE CAPACITY	EDB			TOTAL CAPACITY	Voltage	MCA	MOP	MAKE						MODEL
Select	565	80	67	56.1	54.4	22000	14586	70	28000	37	Wall Mounted	Indoor Powered From Outdoor Unit			DAIKIN	FTXF18BVJU9	95	47	121	21.0 / 12.0 / 9.6	208/6
Select	512	80	67	55.2	55.2	18000	13698	70	20000	35.3	Wall Mounted	208/1	0.5	15	DAIKIN	FAA18AAVJU	95	47	234	17.8 / 12.8 / 7.6	208/6

Daikin Mini Splits filtered to 1.5-ton, single-zone, wall-mounted heat pumps.

Grilles: The grille schedule holds over 32,000 selections, so the page only draws the first 500 that match. A notice tells you when that cap is in effect. Narrow the filters (or pick a family from the pictures) and it goes away.

2.3 Reading the schedule

Columns vary by product, but the layout is consistent. Grouped headers (INDOOR UNIT, OUTDOOR UNIT, COOLING CAPACITY, ELECTRICAL and so on) sit above the individual data columns, and the Actions column is pinned to the left.

One selection, several rows: A Mini Split selection covers the outdoor unit and every indoor unit on it, so one selection can occupy up to five rows. The Actions buttons appear once, on the first row of the group; clicking Select takes the whole system, not just the row you clicked.

Schedules are wider than most screens. Scroll the table sideways to reach the columns on the right; the header rows stay put as you scroll down.

2.4 Dropdowns inside the schedule

Some cells are dropdowns rather than fixed numbers. Changing one re-reads the manufacturer's published tables and updates every value that depends on it, so the row always shows performance at the condition you actually selected.

- Daikin Light Commercial RTUs:** gas units show one row per cabinet, with the gas heat size in the **Input (MBH)** dropdown (for example "70 (Low)", "115 (Medium)", "140 (High)"). Changing it swaps in that unit's model number, airflow, cooling values, heating output and LAT. Heat pumps carry an **Aux. Electric Heat kW** dropdown that updates Unit MCA and MOCP.

- **Daikin Mini Splits:** single-zone and Sky Air systems with published tables offer the entering wet bulb (EWB), outdoor ambient for cooling and for heating, and the heating entering dry bulb. Leaving-air temperatures and total, sensible and heating capacity follow.
- **Daikin Multi Position Splits:** airflow (CFM), entering air dry bulb and wet bulb, outdoor ambient for cooling and for heat pump heating, and auxiliary electric heat kW. Total, sensible and leaving-air temperatures follow the cooling dropdowns; temperature rise, MCA and MOP follow the kW.
- **Marvair:** electric heat kW, which swaps MCA and MOCF to the values for that kW.

Rows without a published table show fixed values. The dropdowns only offer combinations that exist in the tables, so you cannot build an invalid selection. Whatever is showing when you click Select is what gets carried into your project and out to the exports, and the dropdowns stay live in the project view.

HOFFMAN & HOFFMAN, INC.

HHpro

Daikin Multi Position Splits

Find a model number...

User Guide

Log Out

Daikin Multi Position Splits

SPLIT SYSTEM SCHEDULE

Back to Products

SIZE

COOLING ONLY OR HEAT PUMP

NOMINAL EFFICIENCY

ELECTRICAL

STAGES

FAN TYPE

Clear all filters

4

HEAT PUMP

All

All

All

All

Showing 62 of 580 items

Actions	MAKE	MODEL	INDOOR AIR HANDLING UNIT														HEAT PUMP HEATING DATA							
			SUPPLY FAN			COOLING					HEAT PUMP TOTAL CAPACITY	AUX. ELECTRIC HEAT		ELECTRICAL DATA		WEIGHT		MAKE	MODEL	HEAT PUMP HEATING DATA				
			AIRFLOW (CFM)	MOTOR (HP)	MOTOR TYPE	EAT (DB)	EAT (WB)	LAT (DB)	LAT (WB)	TOTAL CAPACITY		SENSIBLE CAPACITY	KW	TEMPERATURE RISE (DB)	VOLTAGE / PHASE						MCA	MOP	OUTDOOR AMBIENT (DB)	EFFICIENCY
Select	Submittal	Docs	DAIKIN	FTA48AAVJUD	1520	0.75	Variable Speed ECM	80	67	60.5	57.3	47000	32007	55000	-	-	208/1	6.5	15	143	DAIKIN	RZA48AAVJU	47	9.0 HSP
Select	Submittal	Docs	DAIKIN	AMST48CU1300	1600	0.75	ECM	80	67	59	58	46100	36419	46000	-	-	208/1	7.1	15	153	DAIKIN	DH4SEA4810	47	7.8 HSP
Select	Submittal	Docs	DAIKIN	AMST48CU1300	1600	0.75	ECM	80	67	59	57.4	48600	38394	47100	-	-	208/1	7.1	15	153	DAIKIN	DH5SEA4810	47	8.4 HSP
Select	Submittal	Docs	DAIKIN	DFVE48DP1300	1380	0.75	Variable Speed ECM	80	67	57	56.5	45500	33215	45500	-	-	208/1	6.5	15	150	DAIKIN	DH6VSA4810	47	8.2 HSP
Select	Submittal	Docs	DAIKIN	DMVT60DP1300	1530	1	Variable Speed ECM	80	67	58	57.4	46500	35340	48800	-	-	208/1	8.6	15	167	DAIKIN	DH7TCA4810	47	8.4 HSP
Select	Submittal	Docs	DAIKIN	DFVE60DP1300	1640	1	Variable Speed ECM	80	67	58	58.1	46500	33480	54000	-	-	208/1	8.6	15	167	DAIKIN	DH7VSA4810	47	8.8 HSP
Select	Submittal	Docs	DAIKIN	AMST48CU1300	1600	0.75	ECM	80	67	59	58	46100	36419	46000	-	-	208/1	7.1	15	153	DAIKIN	DH4SEA4830	47	7.8 HSP
Select	Submittal	Docs	DAIKIN	AMST48CU1300	1600	0.75	ECM	80	67	59	58	46100	36419	46000	-	-	208/1	7.1	15	153	DAIKIN	DH4SEA4840	47	7.8 HSP

Daikin Multi Position Splits: airflow, entering air and kW dropdowns feed the capacity columns.

HOFFMAN & HOFFMAN, INC.

HHpro > Marvair Vertical Wall Mount

Find a model number...

User Guide

Log out

Marvair Vertical Wall Mount

VERTICAL WALL MOUNTED PACKAGED AIR HANDLING UNIT SCHEDULE

Back to Products

TONS

ELECTRICAL

STAGES

HEAT PUMP OR AC

Clear all filters

Showing 70 of 490 items


Actions	MAKE	MODEL	NOMINAL SIZE (TONS)	CFM	TOTAL CAPACITY	SENSIBLE CAPACITY	COOLING STAGES	OUTSIDE AIR (°F)	ENTERING AIR DRY-BULB (°F)	HEAT PUMP CAPACITY (BTU/H AMBIENT)	AUX. ELECTRIC HEAT (KW)	VOLTS - HZ - PH	MCA	MOCP	REFRIGERANT	EER	IEER
Select Submittal Docs	MARVAIR	MAH1036A	3	1200	35000	24980	1	95	80/67	-	0	208/60/1	24.7	35	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH1036A	3	1200	35000	24980	1	95	80/67	-	0	208/60/3	21.6	30	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH1036A	3	1200	35000	24980	1	95	80/67	-	0	460/60/3	11.2	15	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH2036A	3	1180	33000	23100	2	95	80/67	-	0	208/60/1	24.3	35	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH2036A	3	1180	33000	23100	2	95	80/67	-	0	208/60/3	18.7	25	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH2036A	3	1180	33000	23100	2	95	80/67	-	0	460/60/3	9.9	15	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH1036H	3	1200	35000	24500	1	95	80/67	30000	0	208/60/1	26	40	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH2036H	3	1180	33000	23100	2	95	80/67	30000	0	208/60/1	25.9	40	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH1036H	3	1200	35000	24500	1	95	80/67	30000	0	208/60/3	22.9	35	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH1036H	3	1200	35000	24500	1	95	80/67	30000	0	460/60/3	11.1	15	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH2036H	3	1180	33000	23100	2	95	80/67	30000	0	208/60/3	20	25	R-454B	11	-
Select Submittal Docs	MARVAIR	MAH2036H	3	1180	33000	23100	2	95	80/67	30000	0	460/60/3	9.8	20	R-454B	11	-

The Marvair schedule, with the electric heat kW dropdown in each row.

2.5 Select, Submittal, Docs and Configure

Every row carries three buttons in the Actions column; Daikin Light Commercial RTU rows have a fourth, Configure.

- **Select:** adds that unit (or complete system) to your project or cart. The first Select asks where it should go; see section 3.1.
- **Submittal:** opens the submittal PDF for that selection in a new tab. A split system opens the outdoor unit sheet plus one sheet per distinct indoor unit. When no submittal is published for a row, the button is struck through. A Light Commercial RTU row showing Design values (section 8.3) also opens its performance sheet.
- **Docs:** opens **Available documents**, every document published for that selection. PDFs have a **View** button; Revit and CAD files, which are ZIPs, have a **Download** button.
- **Configure** (Daikin Light Commercial RTUs only): opens that unit in Design Search, ready to change its motor, power exhaust, entering air and other options. See section 8.3. Rows on a project schedule have a Configure button too, which replaces the unit in place (section 4.5).

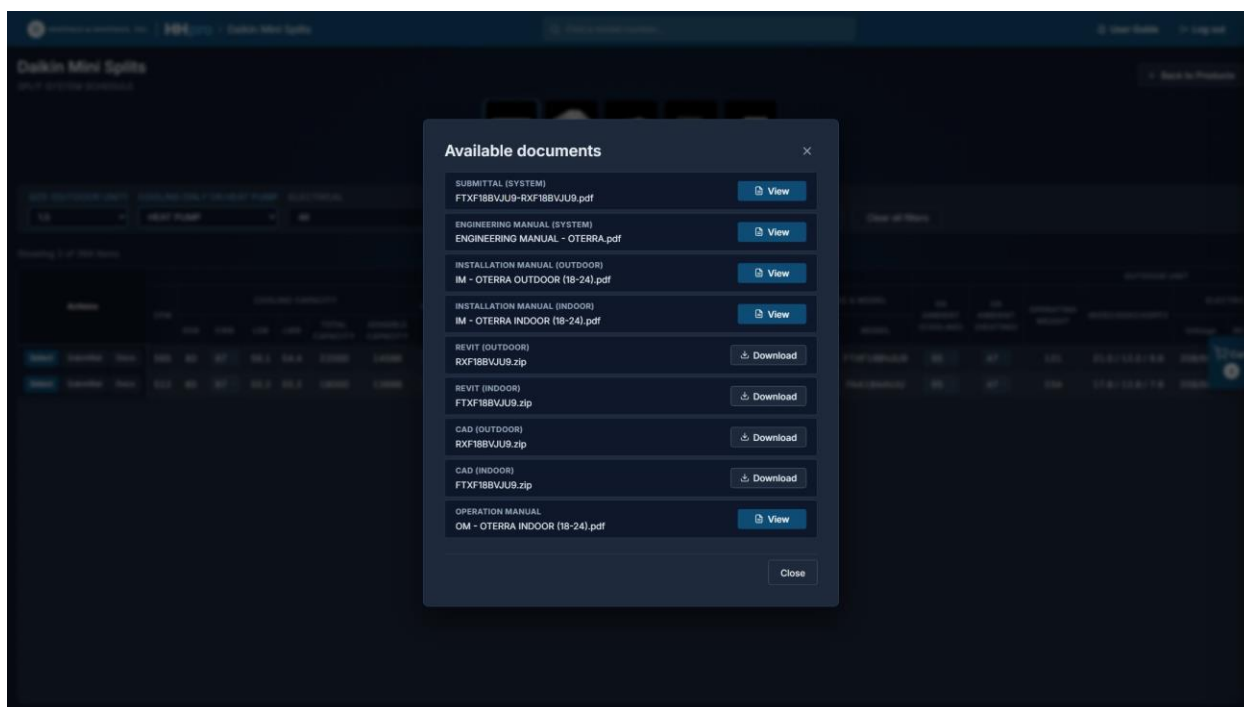

The Available documents popup lists everything published for the selection.

Pop-ups: Submittal and View open PDFs in new browser tabs. If nothing happens, allow pop-ups for hhpro-hvac.com.

2.6 Notes on individual products

Daikin Light Commercial RTUs

Packaged rooftop units, gas/electric units and heat pumps on one schedule. The filters are SIZE, ELECTRICAL, TYPE (GAS or HEAT PUMP), EFFICIENCY, COOLING STAGES, HIGH/MEDIUM/LOW GAS HEAT and HGRH (hot gas reheat). Heat pumps carry a Heat Pump Heating Performance column group (capacity at 47 °F and 17 °F, with COP); when only one type is in view, the other type's heating columns are hidden.

The schedule values come from selections run at one set of conditions (80/67 °F entering air, 95 °F ambient). If your conditions differ, use Design Search (section 8.3), which reads Daikin's published capacity tables instead. To start from a unit on this schedule, click its **Configure** button.

HOFFMAN & HOFFMAN, INC.

HHpro

> Daikin Light Commercial RTUs

Find a model number...

User Guide

> Log out

Daikin Light Commercial RTUs

PACKAGED ROOFTOP UNITS

Back to Products

SIZE

5

ELECTRICAL

All

TYPE

All

EFFICIENCY

All

COOLING STAGES

All

HIGH/MEDIUM/LOW GAS HEAT

All

HGRH

All

Clear all filters

Q Design Search

Showing 36 of 304 items

Actions	Make	Model Number	Nominal Tons	Fan Data		Cooling Performance				Gas Heating Performance				Heat Pump Heating Performance								
				CFM	ESP (IWG)	Total Capacity (BTU/h)	Sensible Capacity (BTU/h)	Efficiency (AI AHRI)	EDB (°F)	EWB (°F)	LDB (°F)	LWB (°F)	Input (MBH)	Output (MBH)	Stages	EAT (°F)	LAT (°F)	BTU/h (47°F, 70°F Indoor DB)	BTU/h (17°F, 70°F Indoor DB)	BTU/h (70°F Indoor DB)	Temperature Rise (°F)	COP (47°F)
Select Submittal Docs Configure	DAIKIN	DSG0603DL	5	2090	0.5	58474	45127	13.7 SEER2/11.8 EER2	80	67	60.4	58.2	90 (Low)	72	2	55	86.9	-	-	-	-	-
Select Submittal Docs Configure	DAIKIN	DSG0604DL	5	2115	0.5	58580	45470	13.7 SEER2/11.8 EER2	80	67	60.5	58.3	90 (Low)	72	2	55	86.5	-	-	-	-	-
Select Submittal Docs Configure	DAIKIN	DHG0603DL	5	2022	0.5	59669	44976	16.2 SEER2/12.2 EER2	80	67	59.8	57.7	70 (Low)	56.7	2	55	80.6	-	-	-	-	-
Select Submittal Docs Configure	DAIKIN	DHG0604DL	5	2045	0.5	59777	45285	16.2 SEER2/12.2 EER2	80	67	59.9	57.8	70 (Low)	56.7	2	55	80.4	-	-	-	-	-
Select Submittal Docs Configure	DAIKIN	DHG0603DL	5	2100	0.5	60037	46024	16.2 SEER2/12.2 EER2	80	67	60.1	58	70 (Low)	56.7	2	55	79.7	-	-	-	-	-
Select Submittal Docs Configure	DAIKIN	DHG0604DL	5	2100	0.5	60037	46024	16.2 SEER2/12.2 EER2	80	67	60.1	58	70 (Low)	56.7	2	55	79.7	-	-	-	-	-
Select Submittal Docs Configure	DAIKIN	DHH0604	5	2100	0.5	60668	48247	16.4 SEER2/12.20 EER2	80	67	59.1	57.9	-	-	-	-	-	59000	-	-	26.0°F (47°F Ambient)	-
Select Submittal Docs Configure	DAIKIN	DHH0603	5	2100	0.5	60668	48247	16.4 SEER2/12.20 EER2	80	67	59.1	57.9	-	-	-	-	-	59000	-	-	26.0°F (47°F Ambient)	-
Select Submittal Docs Configure	DAIKIN	DSH0604	5	2071	0.5	58342	47695	13.70 SEER2/11.80 EER2	80	67	59.1	58.1	-	-	-	-	-	55000	-	-	24.6°F (47°F Ambient)	-
Select Submittal Docs Configure	DAIKIN	DSH0603	5	2060	0.5	58296	47539	13.70 SEER2/11.80 EER2	80	67	59	58.1	-	-	-	-	-	55000	-	-	24.7°F (47°F Ambient)	-

Cart

0

The Light Commercial RTU schedule filtered to 5 tons: gas units and heat pumps together, each with a Configure button.

Daikin Mini Splits and Multi Position Splits

Both are split systems, so both feed the Refrigerant tab (section 5) once they are in a project. Mini Split selections cover the outdoor unit and up to five indoor units; the number of indoor units is a filter of its own.

Daikin Gas Splits

Condensing unit, gas furnace and coil. The filter row carries the furnace side as well (GAS STAGES, GAS INPUT, GAS OUTPUT and AFUE (%)) alongside SIZE, NOMINAL EFFICIENCY, COMPRESSOR STAGES and COIL ORIENTATION. Gas Splits also appear on the Refrigerant tab.

HOFFMAN & HOFFMAN, INC.

HHpro

Daikin Gas Splits

Find a model number...

User Guide

Log out

Daikin Gas Splits

SPLIT SYSTEM SCHEDULE

Back to Products

SIZE

3

NOMINAL EFFICIENCY

All

COMPRESSOR STAGES

All

COIL ORIENTATION

All

GAS STAGES

All

GAS INPUT

All

GAS OUTPUT

All

AFUE (%)

All

Clear all filters

Showing 156 of 737 Items

Actions	INDOOR AIR HANDLING UNIT																OUTDOOR CONDENSER							
	MAKE	MODEL (COIL / FURNACE)	SUPPLY FAN			COOLING			GAS HEATING			ELECTRICAL DATA			WEIGHT (COIL & FURNACE)	MAKE	MODEL	ELECTRICAL DATA			OUTDOOR AMBIENT (COOLING)			
			AIRFLOW (CFM)	MOTOR (HP)	MOTOR TYPE	EAT (DB)	EAT (WB)	TOTAL CAPACITY	GAS INPUT	GAS OUTPUT	STAGES	AFUE (%)	VOLTAGE / PHASE	MCA				MOP	VOLTAGE / PHASE	MCA		MOP		
Select	Submittal	Docs	DAIKIN	CAPEA3626B3 / DR80TC0603BN	1260	0.5	ECM	80	67	33600	60000	48000	2	80	115/60/1	7.75	15	168	DAIKIN	DC6VSS3610	208/60/1	22.4	25	95
Select	Submittal	Docs	DAIKIN	CAPTA3626B3 / DR80TC0603BN	1120	0.5	ECM	80	67	35000	60000	48000	2	80	115/60/1	7.75	15	165	DAIKIN	DC7TCA3610	208/60/1	20.8	35	95
Select	Submittal	Docs	DAIKIN	CHPEA3626B3 / DR80TC0603BN	1260	0.5	ECM	80	67	33600	60000	48000	2	80	115/60/1	7.75	15	178	DAIKIN	DC6VSS3610	208/60/1	22.4	25	95
Select	Submittal	Docs	DAIKIN	CHPTA3630B3 / DR80TC0603BN	1120	0.5	ECM	80	67	34600	60000	48000	2	80	115/60/1	7.75	15	180	DAIKIN	DC7TCA3610	208/60/1	20.8	35	
Select	Submittal	Docs	DAIKIN	CAPEA3626B3 / DR80TC0604BN	1260	0.75	ECM	80	67	33600	60000	48000	2	80	115/60/1	12.1	15	169	DAIKIN	DC6VSS3610	208/60/1	22.4	25	
Select	Submittal	Docs	DAIKIN	CAPTA3626B3 / DR80TC0604BN	1120	0.75	ECM	80	67	35000	60000	48000	2	80	115/60/1	12.1	15	166	DAIKIN	DC7TCA3610	208/60/1	20.8	35	95
Select	Submittal	Docs	DAIKIN	CHPEA3626B3 / DR80TC0604BN	1260	0.75	ECM	80	67	33600	60000	48000	2	80	115/60/1	12.1	15	179	DAIKIN	DC6VSS3610	208/60/1	22.4	25	95
Select	Submittal	Docs	DAIKIN	CHPTA3630B3 / DR80TC0604BN	1120	0.75	ECM	80	67	35000	60000	48000	2	80	115/60/1	12.1	15	181	DAIKIN	DC7TCA3610	208/60/1	20.8	35	95
Select	Submittal	Docs	DAIKIN	CAPEA3626B3 / DR80TC0803BN	1260	0.5	ECM	80	67	33600	80000	64000	2	80	115/60/1	7.75	15	170	DAIKIN	DC6VSS3610	208/60/1	22.4	25	95
Select	Submittal	Docs	DAIKIN	CAPTA3626B3 / DR80TC0803BN	1120	0.5	ECM	80	67	35000	80000	64000	2	80	115/60/1	7.75	15	167	DAIKIN	DC7TCA3610	208/60/1	20.8	35	95
Select	Submittal	Docs	DAIKIN	CHPEA3626B3 / DR80TC0803BN	1260	0.5	ECM	80	67	33600	80000	64000	2	80	115/60/1	7.75	15	180	DAIKIN	DC6VSS3610	208/60/1	22.4	25	95
Select	Submittal	Docs	DAIKIN	CHPTA3630B3 / DR80TC0803BN	1120	0.5	ECM	80	67	35000	80000	64000	2	80	115/60/1	7.75	15	182	DAIKIN	DC7TCA3610	208/60/1	20.8	35	95
Select	Submittal	Docs	DAIKIN	CAPEA3626C3 / DR80TC0804CN	1260	0.5	ECM	80	67	33600	80000	64000	2	80	115/60/1	7.75	15	185	DAIKIN	DC6VSS3610	208/60/1	22.4	25	95
Select	Submittal	Docs	DAIKIN	CAPTA3626C3 / DR80TC0804CN	1150	0.5	ECM	80	67	35400	80000	64000	2	80	115/60/1	7.75	15	186	DAIKIN	DC7TCA3610	208/60/1	20.8	35	95
Select	Submittal	Docs	DAIKIN	CHPEA3626C3 / DR80TC0804CN	1260	0.5	ECM	80	67	33600	80000	64000	2	80	115/60/1	7.75	15	197	DAIKIN	DC6VSS3610	208/60/1	22.4	25	95
Select	Submittal	Docs	DAIKIN	CHPTA3630C3 / DR80TC0804CN	1150	0.5	ECM	80	67	35000	80000	64000	2	80	115/60/1	7.75	15	198	DAIKIN	DC7TCA3610	208/60/1	20.8	35	95
Select	Submittal	Docs	DAIKIN	CAPEA3626C3 / DR80TC0805CN	1260	0.75	ECM	80	67	33600	80000	64000	2	80	115/60/1	12.1	15	185	DAIKIN	DC6VSS3610	208/60/1	22.4	25	95
Select	Submittal	Docs	DAIKIN	CAPTA3626C3 / DR80TC0805CN	1150	0.75	ECM	80	67	35400	80000	64000	2	80	115/60/1	12.1	15	186	DAIKIN	DC7TCA3610	208/60/1	20.8	35	95

Cart 0

The Gas Split schedule. Furnace filters sit alongside the outdoor unit filters.

Marvair Vertical Wall Mount

Filtered by TONS, ELECTRICAL, STAGES and HEAT PUMP OR AC, with the electric heat kW dropdown described in section 2.4.

ABB VFDs

Filtered by HP, ELECTRICAL, ENCLOSURE, BYPASS and HARMONIC MITIGATION. VFD schedules work slightly differently from the equipment schedules: the notes are a fixed list you cannot edit, the schedule carries a per-item Notes column instead of an Accessories column, and the project schedule adds a Serves column you fill in yourself. Auto Tag defaults to the VFD- prefix.

HOFFMAN & HOFFMAN, INC.

HHpro > ABB VFDs

Find a model number...

User Guide

Log out

ABB VFDs

VFD SCHEDULE

Back to Products

HP

ELECTRICAL

ENCLOSURE

BYPASS

HARMONIC MITIGATION

All

460V

All

All

All

Clear all filters

Showing all 176 items

Actions	Motor Data		Enclosure Rating	Harmonic Mitigation	Disconnect	Bypass	Communications	VFD Min. SCCR	Manufacturer	Model	Notes	
	Qty	Voltage										
Select Submit Docs	1	460V	1	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-02A1-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	1.5	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-03A0-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	2	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-03A5-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	3	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-04A8-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	5	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-07A6-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	7.5	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-012A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	10	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-014A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	15	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-023A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	20	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-027A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	25	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-034A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	30	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-044A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	40	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-052A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	50	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-065A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	60	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-077A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	75	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-096A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	100	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-124A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	125	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-156A-4	1, 2, 3, 4, 5, 6, 10
Select Submit Docs	1	460V	150	UL Type 1	5% Impedance	Circuit Breaker	None	BACnet MS/TP	100 KA	ABB	ABB ACH580-PCR-180A-4	1, 2, 3, 4, 5, 6, 10

Cart

0

The ABB VFD schedule.

Price Diffusers and Price Grilles

These sheets hold many model families at once, so columns that do not apply to anything currently in view are hidden automatically. The schedule you see (and the one you export) only carries columns that have data. Auto Tag defaults to D- for diffusers and G- for grilles.

HOFFMAN & HOFFMAN, INC.

HHpro > Price Grilles

Find a model number...

User Guide

Log out

Price Grilles

PRICE GRILLE SCHEDULE

Back to Products

150

20/30

300

500/600/700

900 GYM

540/640

LINEAR BAR

LINEAR BAR HD

500/600/700 RTN

60/70

EGG CRATE

PERFORATED

90 GYM RTN

LATTICE

TRANSFER

DESCRIPTION

APPLICATION

CFM

SIZE

CORE STYLE

DUCT SIZE

Clear all filters

Showing all 32200 Items


Showing the first 500 of 32,200 matching selections - use the filters or the model cards above to narrow the list.

Actions	MANUFACTURER	MODEL	DESCRIPTION	APPLICATION	MATERIAL	SIZE (H)	CORE AREA (SQ FT)	CORE VELOCITY (FPM)	FLOW RATE (CFM)	VELOCITY PRESSURE (IN WG)	TOTAL PRESSURE - 0' (IN WG)	TOTAL PRESSURE - 15' (IN WG)	TOTAL PRESSURE - 45' (IN WG)	SOUND (NC)	THROW - 0' (150-100-50 FT)	THROW - 15' (150-100-50 FT)	THROW - 45' (150-100-50 FT)	BLADE SP
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	300	45	0.006	0.011	0.014	0.031	<15	4-6-11	3-5-9	2-3-6	
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	400	60	0.01	0.02	0.025	0.055	<15	5-8-14	4-6-11	3-4-7	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	500	75	0.016	0.031	0.039	0.085	16	6-9-15	5-8-12	3-5-8	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	600	90	0.022	0.045	0.056	0.123	21	8-11-17	6-9-13	4-6-8	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	700	105	0.031	0.061	0.077	0.167	26	9-13-18	7-10-14	4-6-9	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	800	120	0.04	0.08	0.1	0.219	30	10-14-19	8-11-15	5-7-10	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	1000	150	0.062	0.125	0.156	0.341	36	12-15-21	10-12-17	6-8-11	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	1200	180	0.09	0.18	0.225	0.492	41	14-17-23	11-13-19	7-8-12	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	1400	210	0.122	0.246	0.307	0.669	46	15-18-25	12-14-20	7-9-13	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	1600	240	0.16	0.321	0.401	0.874	50	16-19-27	12-15-22	8-10-14	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	7 x 4	0.15	1800	270	0.202	0.408	0.507	1.106	53	17-20-29	13-16-23	8-10-14	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	6 x 5	0.15	300	45	0.006	0.011	0.014	0.031	<15	4-6-11	3-5-9	2-3-6	1.5
Select Submit Docs	PRICE	150	HEAVY DUTY LOUVERED SUPPLY GRILLE	SUPPLY	ALUMINUM	6 x 5	0.15	400	60	0.01	0.02	0.025	0.055	<15	5-8-14	4-6-11	3-4-7	1.5

The Price Grilles schedule with the family pictures above it and the 500-row notice.

2.7 GPS Bipolar Ionization

The GPS tile opens on a gallery of seven product types: Ceiling Mounted Fan, Duct Mounted, Fan Coil Mounted, Fan Coil Mounted (BAS Compatible), Coil Mounted, Coil Mounted (Ductless or PTAC) and Pre-Filter. Click one to open its schedule; **All Product Types** goes back to the gallery.

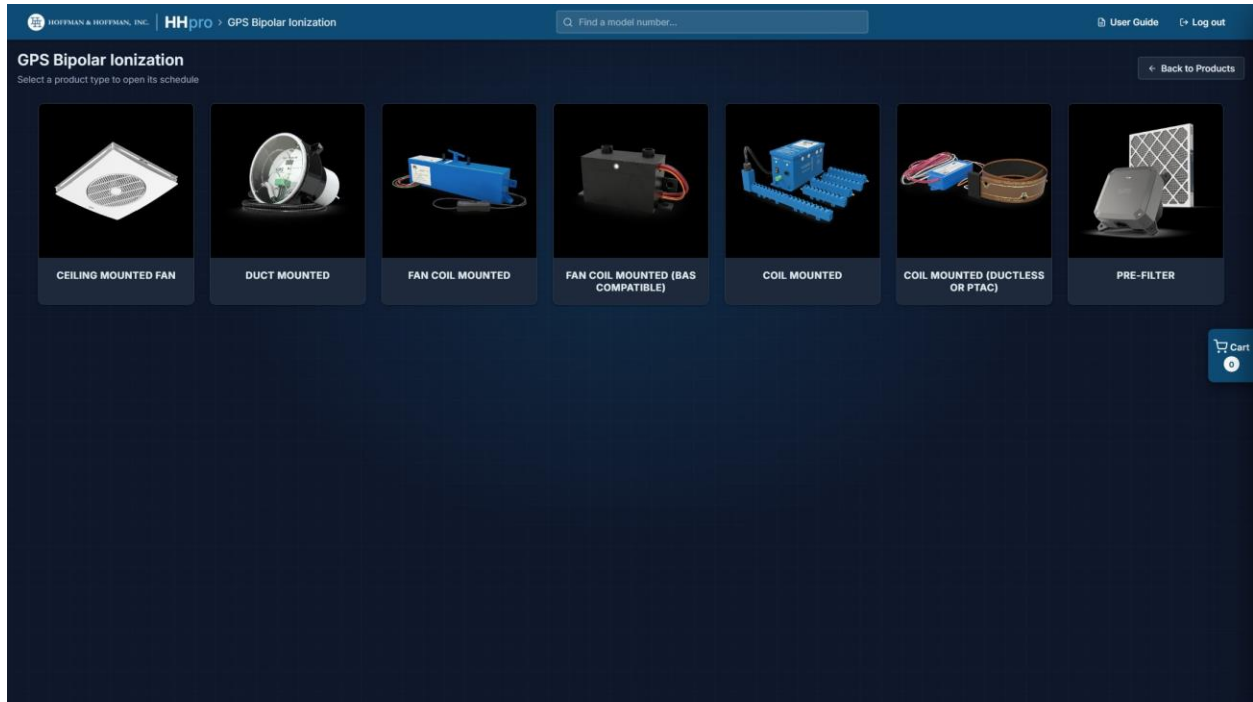

The GPS Bipolar Ionization gallery.

Each GPS schedule is short, so there is no filter bar. Select, Submittal and Docs work as they do elsewhere. The numbered notes that go with the schedule are shown under it on the page, and the NOTES column on each row lists which of them apply.

HHpro > GPS Bipolar Ionization

[User Guide](#)
[Log out](#)

GPS Bipolar Ionization

AIR IONIZATION DEVICE SCHEDULE - SELF-CLEANING - DUCT MOUNTED

All Product Types

Showing all 4 items

Actions			FLOW	MAX FLOW (CFM)	DIA FLOW (CFM)	GPS MODEL	GPS QUANTITY	PRESSURE DROP	VOLTAGE (AC)	CLEAN/OP WATTS	MOUNTING LOCATION	MIN ION DENSITY (IONS/CC)	NOTES
Select	Submittal	Docs	VAV	4800	150	GPS-DM48-AC	1	0.05" W.C.	24-240	12	Duct	400 Million	1 to 10, 12
Select	Submittal	Docs	VAV	2400	150	DM-2	1	0.05" W.C.	24-240	14 / 11	Duct	200 Million	1 to 10, 11, 13
Select	Submittal	Docs	CV	4800	150	GPS-DM48-AC	1	0.05" W.C.	24-240	12	Duct	400 Million	1 to 10, 12
Select	Submittal	Docs	CV	2400	150	DM-2	1	0.05" W.C.	24-240	14 / 11	Duct	200 Million	1 to 10, 11, 13

NOTES:

1. Install Ionizations device(s) where indicated on drawings.
2. Basis of Design: GPS Air. Substitutions must be approved by engineer, any mechanical or electrical modifications are the responsibility of the contractor.
3. Ionizer has a self-cleaning feature to maintain ion output over 10 years, substitute products must document ionization output over time.
4. Electronic air cleaners shall not have service parts, products that require replacement parts like glass tubes, UV lamps, catalysts, etc. are not acceptable.
5. Must be listed to UL-2998 by either UL or ETL. Listing on UL and ETL website must include specific product family.
6. Safety Tested by 3rd party laboratory to UL2998 Zero Ozone (ASHRAE Standard 241 Appendix A).
7. Formaldehyde generation validated by 3rd party to ASTM D8407 emission rate less than 5µg/h (micro grams per hour) (ASHRAE Standard 241 Appendix A).
8. Particle Generation validated by ISO14644 - results shall not exceed one cleanliness class greater than the empty chamber (ASHRAE Standard 241 Appendix A).
9. Ion output is measured in ions per cubic centimeter (ions/cc) are verifiable with field instruments. Devices with ratings of ions/second are not acceptable.
10. Provide integral BAS alarm contacts within the air cleaner.
11. Powered by 277V, single phase, 60Hz via remote power supply (DM-2 only.)
12. Must be NEMA-3R rated for outdoor application or provide suitable enclosure (GPS-DM48-AC only)
13. For round duct mounting: use duct mounting saddle accessory without hardware fasteners into ductwork. (DM-2 only.)

Cart


A GPS schedule (Duct Mounted) with its notes underneath.

In a project, GPS items are tagged AI- by default, the Accessories column starts as "All", and the notes are a fixed list. GPS is not part of Design Search.

3. Projects and the Cart


3.1 Your first Select

The first time you click Select, the site asks **Where should this item go?**

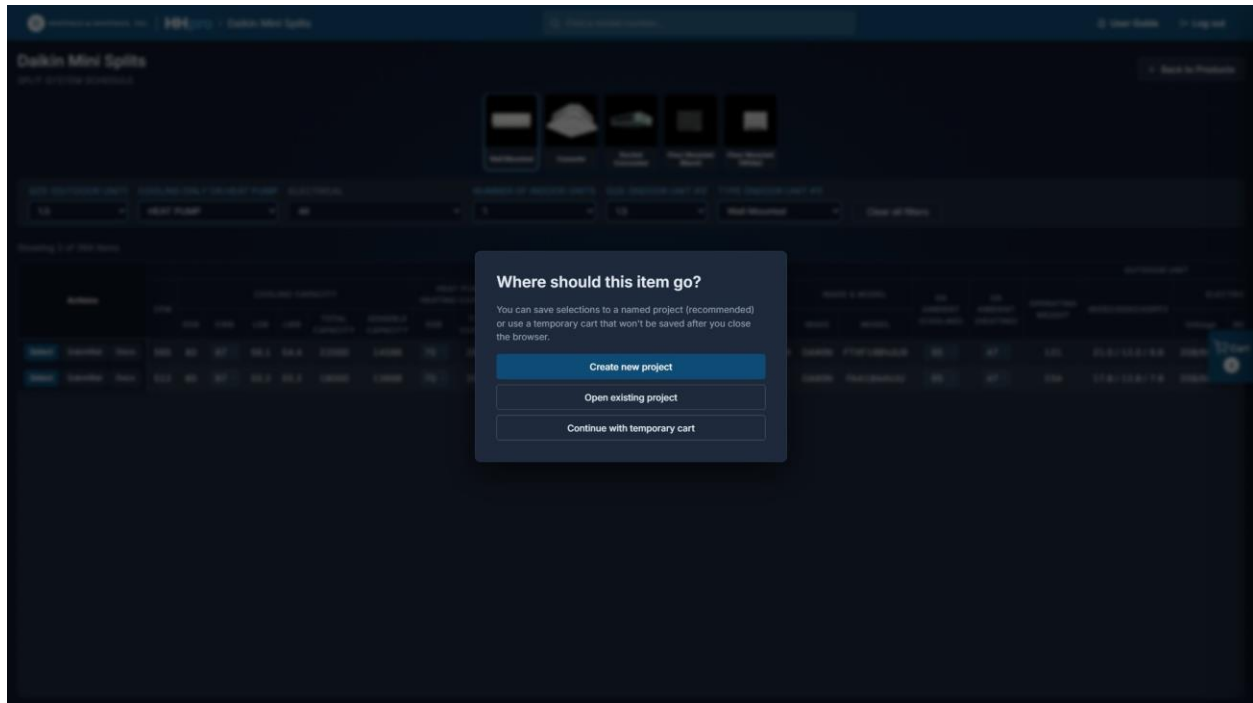

The first Select asks whether this is a project or a temporary cart.

- **Create new project:** recommended. Name it and it is saved to your account from then on; every later Select goes straight into it.
- **Open existing project:** add to a project you already started.
- **Continue with temporary cart:** a scratch list. It works like a project, but it is never saved. It is gone when you refresh the page, close the browser, sign out, or open a project.

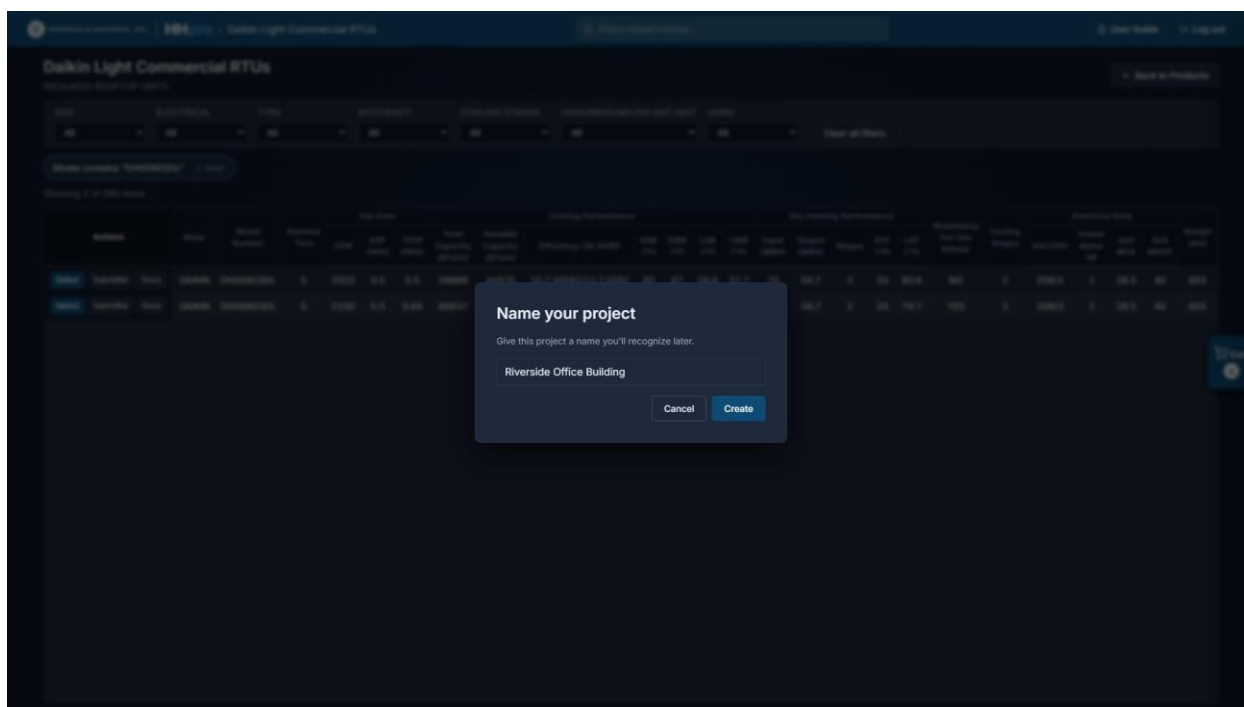

Naming a new project.

After that the prompt does not come back: Select simply adds to whatever is active, and the active project's name shows on the cart tab at the right edge of the screen. Refreshing the page closes the active project (nothing is lost), so the next Select asks again. Choose **Open existing project**, or use **Continue** on the Projects page.

Saving a calculation to a project (section 9.5) uses the same prompt.

3.2 The cart panel

Click the cart tab on the right edge to slide the panel open. It lists what you have collected, grouped by product type, with the size and model of each item.

The screenshot shows the 'Daikin Multi Position Splits' section of the HHpro interface. The main table lists 62 items with columns for Actions, Make, Model, Supply Fan, Cooling, Heat Pump, Aux. Electric Heat, and Electrical Data. The right sidebar shows a summary of items grouped by product type, including DAIKIN LIGHT COMMERCIAL RTUS, DAIKIN MINI SPLITS, DAIKIN MULTI POSITION SPLITS, DAIKIN GAS SPLITS, PRICE DIFFUSERS, and ABB VFDS.

The cart panel, holding nine selections across six product types.

- **Duplicate:** adds a second copy of that item, for when the same unit appears several times on the job.
- **Delete:** removes it from the project.
- **View Project:** opens the full project view, where the schedule is built (section 4).

3.3 The Projects page

The Projects tile lists every project in your account with its item count and when it was last updated. The active project is badged **ACTIVE**.

The screenshot shows the 'Projects' page in HHpro. It displays three project tiles: 'Riverside Office Building' (ACTIVE), 'Northside Elementary School', and 'Main Street Medical Office'. Each tile shows the number of items and the last update time, along with buttons for 'Continue', 'Export CSV', and 'Delete'.

The Projects page.

- **New Project:** creates an empty project and makes it active.

- **Open / Continue:** makes that project active and opens its project view.
- Drag a project card to change the order. The order is saved to your account.
- **Export CSV:** saves that one project to a file.
- **Export All to CSV:** saves every project to a single file.
- **Import from CSV:** adds projects from a file to your account, whether it is your own copy or one a colleague sent you. If an imported project has the same name as one you already have, you can **Replace existing** or **Rename imports**.
- **Delete:** removes a project. You cannot undo this from the site.

Projects from before accounts: If you used HHpro before accounts existed, projects still saved in that browser are offered in a banner at the top of the Projects page. **Move to my account** copies them into your account; **Leave them** keeps them where they are.

3.4 Where your projects live

Projects are saved to your HHpro account on the Hoffman & Hoffman server as you work; there is no Save button. They follow you to any computer you sign in on, and only you can see them. The server also backs them up every night.

- If the server cannot be reached, HHpro keeps your changes on the page and keeps retrying, with the message "Can't reach the HHpro server to save. Keeping your changes here and retrying." When it reconnects you see "Back in touch with the server. Your projects are saved." Keep the tab open until then.
- Projects are not shared between accounts. To hand a project to a colleague, use **Export CSV** and have them **Import from CSV**.

Keep a copy: **Export All to CSV** makes a file you can keep outside HHpro. It is worth doing at project milestones, and before handing a project on.

4. The Project View

View Project is where a pile of selections becomes a mechanical schedule. Open it from the cart panel, or from **Open / Continue** on the Projects page.

Riverside Office Building
Project: 9 Items
Schedule layout: Hoffman & Hoffman

Daikin Light Commercial RTUs (1) Daikin Mini Splits (2) **Daikin Multi Position Splits (2)** Daikin Gas Splits (1) Price Diffusers (2) ABB VFDs (1) REFRIGERANT (5) CALCULATIONS (3) FILES

Auto Tag Add / Remove Columns Excel CAD PDF Edit Schedule

	Outdoor Tag	Indoor Tag	MAKE	MODEL	SUPPLY FAN		COOLING						HEAT PUMP TOTAL CAPACITY	AUX. ELECTRIC HEAT		ELECTRICAL DATA			WEIGHT	MAKE	MODEL	HEAT PUMP HEATING DATA		
					AIRFLOW (CFM)	MOTOR (HP)	MOTOR TYPE	EAT (DB)	EAT (WB)	LAT (DB)	LAT (WB)	TOTAL CAPACITY		SENSIBLE CAPACITY	kW	TEMPERATURE RISE (DB)	VOLTAGE / PHASE	MCA				MOP	OUTDOOR AMBIENT (DB)	EFFICIENCY
Docs	CU-1	AHU-1	DAIKIN	AMST48CU1300	1600	0.75	ECM	80	67	59	58	46100	36419	46000	-	-	208/1	7.1	15	153	DAIKIN	DH4SEA4810	47	7.8 HSPF
Docs	CU-2	AHU-2	DAIKIN	AMST48CU1300	1600	0.75	ECM	80	67	59	58	46100	36419	46000	-	-	208/1	7.1	15	153	DAIKIN	DH4SEA4810	47	

SCHEDULE NOTES:

- Provide with 7-day programmable thermostat
- Provide with field installed disconnect. Disconnect shall be provided and installed by electrical contractor
- Electric heat, if scheduled, shall be single point power. kW listed is at 240V
- Heat pump heating capacity based on 70 F entering air temperature
- Coordinate condensing unit locations with the architectural roof plan

REMOVED NOTES — CLICK TO ADD BACK

+ Provide with 7-day programmable BACnet thermostat

CUSTOM PROJECT NOTES

Type a note, then click the + button to add it to the schedule notes above. Up to 10 text rows.

1. Custom note 1 2. Custom note 2

The project view: layout choice, tabs, toolbar, the schedule and the notes below it.

4.1 Tabs

Riverside Office Building
Project: 9 Items
Schedule layout: Hoffman & Hoffman

Daikin Light Commercial RTUs (1) Daikin Mini Splits (2) **Daikin Multi Position Splits (2)** Daikin Gas Splits (1) Price Diffusers (2) ABB VFDs (1) REFRIGERANT (5) CALCULATIONS (3) FILES

Auto Tag Add / Remove Columns Excel CAD PDF Edit Schedule

Schedule layout and Undo / Redo above the tabs; the toolbar below them.

The project gets one tab per product type you have selected from, each showing how many items it holds, plus these extra tabs:

- **REFRIGERANT:** appears when the project holds Mini Splits, Multi Position Splits or Gas Splits (section 5).
- **CALCULATIONS:** appears once calculations have been saved to the project (section 6).
- **FILES:** every document for everything in the project (section 7).

Product tabs are independent: tags, columns, notes and exports are all per tab. The Schedule layout is the one setting that applies to the whole project.

4.2 The toolbar

Auto Tag and **Add / Remove Columns** set the schedule up; **Excel**, **CAD** and **PDF** take it out of the site; **Edit Schedule** lets you change anything by hand.


4.3 Schedule layout

The **Schedule layout** dropdown above the tabs chooses whose schedule format the project uses. **Hoffman & Hoffman** is the standard layout and is always available. Some engineering firms have their own layout, with their columns, headings and notes. Which ones you can pick depends on your account: an engineer at one of those firms sees the standard layout plus their firm's, and new projects start on their firm's layout.

- A firm layout only changes the product tabs it covers. Other tabs stay on the standard layout.
- Under a firm layout the columns and notes follow that firm's format, so Add / Remove Columns and note editing are not available on those tabs.
- Firm layouts for Light Commercial RTUs cover gas units only. A single heat pump on the tab puts that tab back on the standard layout.
- Some firm layouts combine every split system into one read-only **SPLIT SYSTEMS** tab with continuous CU- / AHU- numbering.
- Hand edits (section 4.7) are kept separately for each layout.

4.4 Auto Tag

Auto Tag fills in equipment tags for every item on the tab, in the order they appear.

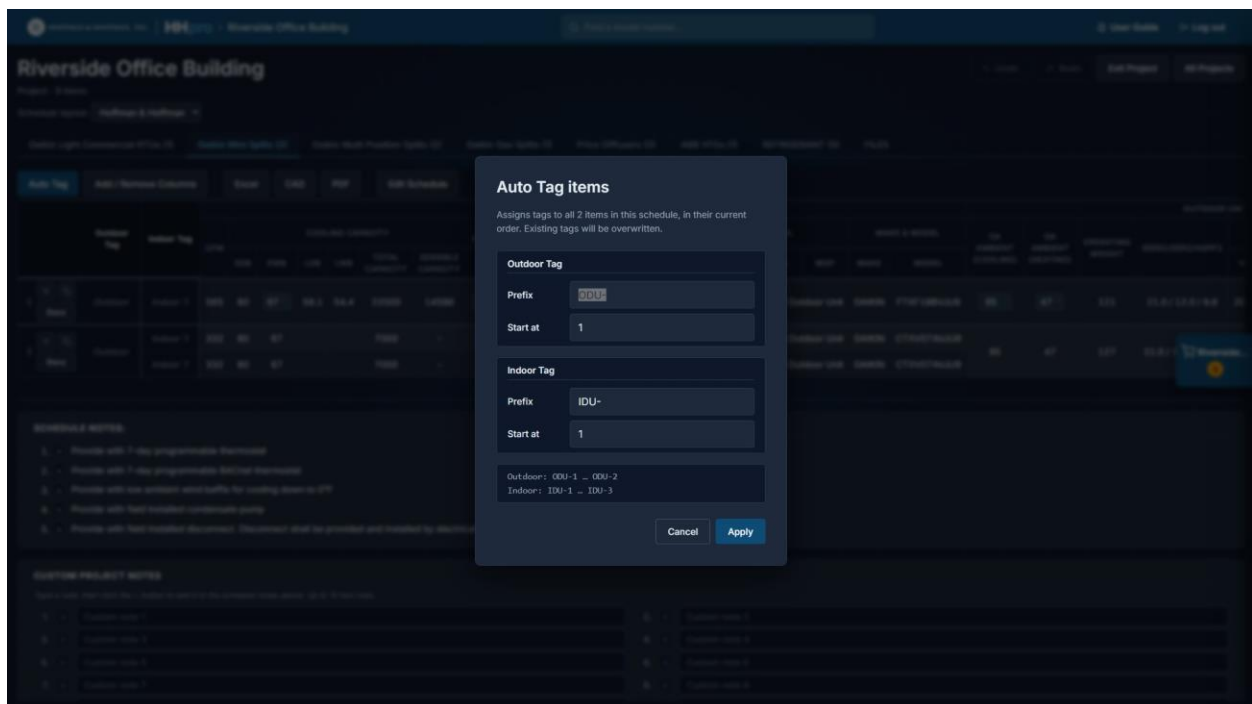

Auto Tag on a Mini Split tab: outdoor and indoor prefixes, start numbers and a preview.

- Set the prefix and the number to start at. The preview under the boxes shows the first and last tag.

- Split systems tag the outdoor and indoor units separately. Mini Splits default to ODU- and IDU-; Multi Position Splits and Gas Splits default to CU- and AHU-. The other defaults are RTU- (Light Commercial RTUs), AC- (Marvair), VFD-, D- (diffusers), G- (grilles) and AI- (GPS).
- Each tab is numbered on its own. If two tabs share a prefix (CU- on both Multi Position Splits and Gas Splits, say), start the second tab where the first leaves off so the tags don't repeat.
- Applying Auto Tag overwrites the tags already on the tab. Tags, and the Accessories column, can also be typed straight into their cells.

The prefix and start you used are remembered with the project, so the next run picks up where you left off.

4.5 Arranging the rows

	Outdoor Tag	Indoor Tag	MAKE	MODEL	AIRFLOW (CFM)
⋮ × Docs	CU-1	AHU-1	DAIKIN	AMST48CU1300	1600
⋮ × Docs	CU-2	AHU-2	DAIKIN	AMST48CU1300	1600

The row controls: drag handle, Remove, Duplicate and Docs.

Each row of a product schedule has its own controls on the left:

- **Drag handle** (the dotted grip): drag the row up or down to reorder the schedule.
- **×** (Remove from project): takes the item off the schedule and out of the project.
- **Duplicate item**: adds another copy of the item, with its tag left blank.
- **Docs**: the documents for that item.
- **Configure** (Daikin Light Commercial RTUs): opens the unit in Design Search, to change it and replace it on this row (below).

Replacing a Light Commercial RTU

Configure on a Light Commercial RTU row opens Design Search on that unit (section 8.3), with a banner naming it, and the Select button on every result reads **Replace**. Change the motor, power exhaust, heat kit, conditions or even the size, then click **Replace** on the result you want: the unit on this row is swapped for it and you come back to the project. The row keeps its tag, its place in the schedule and its accessories, and shows the new unit's design values. **Don't replace** in the banner turns Replace back into Select.


	Tag	Make	Model Number	Nominal Tons	Fan Data		Total Capacity (BTU/h)	Sens Cap (BTU/h)
					CFM	ESP (IWG)		
✕ 📄 Docs Configure	RTU-1	DAIKIN	DSG0603DL	5	2090	0.5	58474	45
✕ 📄 Docs Configure	RTU-2	DAIKIN	DHH0603	5	2100	0.5	60668	48

Light Commercial RTU rows add *Configure* under *Docs*.

Hand edits (section 4.7) on cells the new unit changes are cleared, because they were typed for the old unit, and a message says how many. Edits on other cells and other rows stay. **Undo** brings back the old unit and its edits in one step. The row controls, *Configure* included, are not shown under a firm layout (section 4.3).

4.6 Add / Remove Columns

Not every column belongs on every set of drawings. **Add / Remove Columns** opens **Show / Hide columns**, which lists every data column on the tab with a checkbox. Uncheck what you do not want and click **Apply**. **Show all** and **Hide all** are there for the extremes.

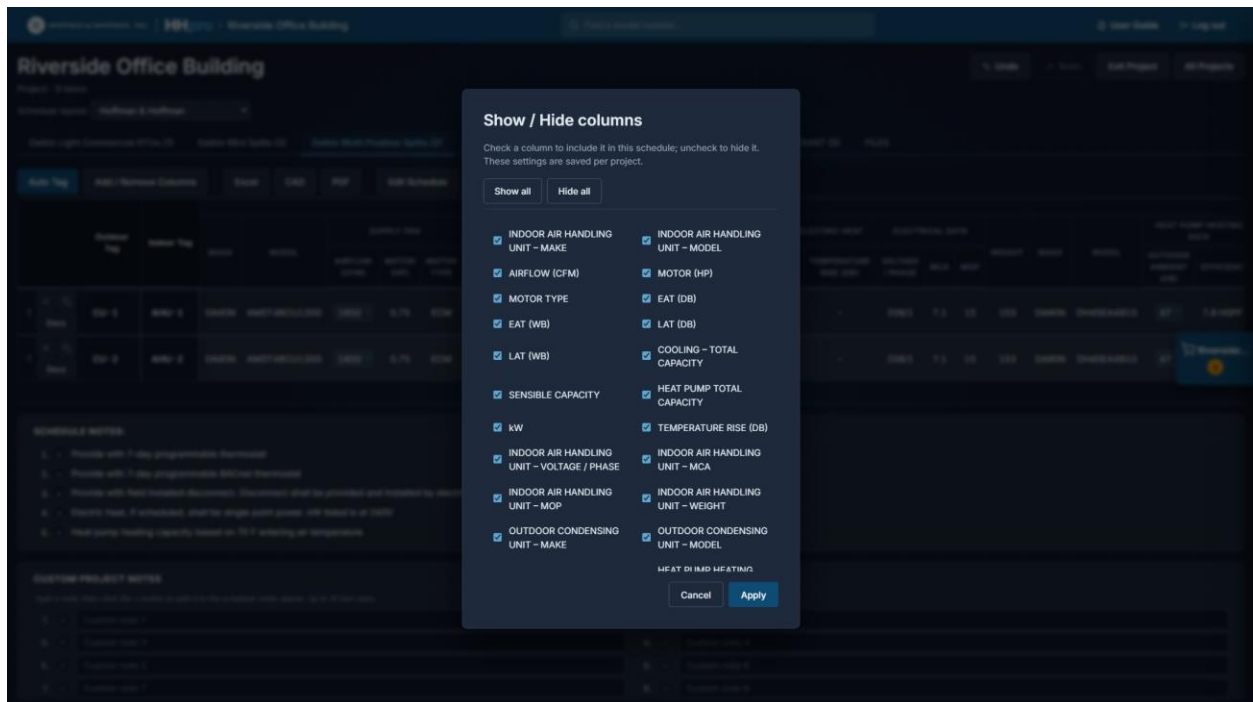


Choosing which columns appear on the finished schedule.

The choice is saved per project and per product tab, and it carries through to the Excel, CAD and PDF exports: what you see is what you get. **Add / Remove Columns** is available on the standard layout; it is not offered under a firm layout or on the GPS tab.

4.7 Edit Schedule

Edit Schedule turns every cell on the tab into a text box, so any value can be corrected or overwritten: tags, capacities, electrical data, accessories, anything. A change is saved when you leave the cell or press Enter, and it appears in the exports. Click **Done Editing** to leave the mode.

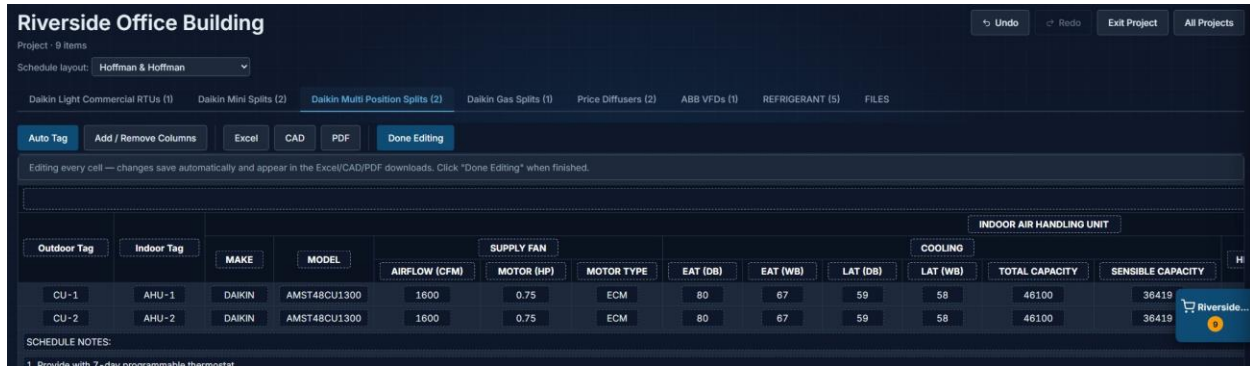


Edit mode: every cell becomes editable.

Edits stick: A value you type by hand stays as you typed it. If you later change a capacity dropdown, the hand-edited cell is not recalculated, so check it before exporting.

Edit last: Hand edits are tied to their position in the schedule. Finish adding, removing, reordering and duplicating units, and choosing columns, before you make hand edits. If you change the schedule afterwards, check the edited cells again. Replacing a Light Commercial RTU (section 4.5) clears the hand edits on cells the new unit changes.

4.8 Schedule notes

Below the schedule is the notes block that prints with it. Each product comes with a standard set of notes already filled in.

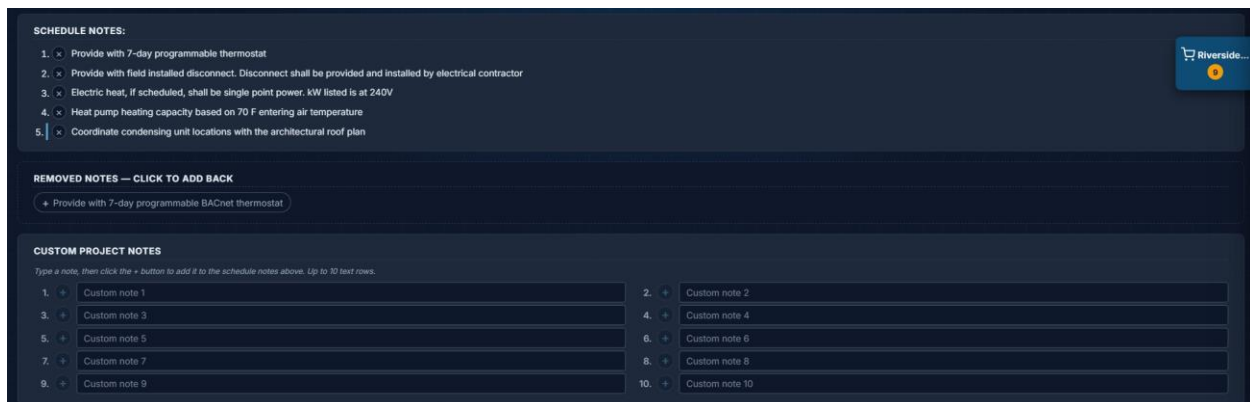

Schedule notes with one note removed and one custom note added.

- Remove a note that does not apply with the **x** beside it. Removed notes collect under **Removed notes — click to add back**. Click one to put it back.
- Add your own under **Custom project notes**: type the text in any box and click its **+**. The note joins the numbered list above and the box clears so it can be used again.

- Diffuser notes are matched to the models actually in the project, and an SMD/AMD core style legend is placed beside the notes when one of those models is present.
- VFD and GPS notes are a fixed list and cannot be edited. Under a firm layout the notes are that firm's.

4.9 Undo, Redo and leaving

- **Undo / Redo** (top right): step back through changes you have made in the project view, up to 50 steps. Ctrl+Z undoes; Ctrl+Shift+Z or Ctrl+Y redoes. The history starts fresh each time you open a project, and it does not cover the Schedule layout choice.
- **Exit Project**: closes the project without deleting it and returns to the overview. Reopen it any time from Projects.
- **All Projects**: back to the Projects page with the project still open. (With a temporary cart this button reads **Back**.)

4.10 Exporting the schedule

The three export buttons act on the tab you are looking at, using the layout, columns and edits you chose.

- **Excel**: downloads a formatted .xlsx workbook named after the project and the tab, with the merged headers, borders and schedule notes intact.
- **CAD**: downloads a .dxf. Under the schedule it adds an EQUIPMENT DRAWINGS block with front, right and top views of every unit on the tab, drawn at true size (1 drawing unit = 1 inch), with the overall width, height and depth called out and a scale bar for reference. A unit with no CAD geometry is left out of the drawings. The file opens in AutoCAD and in LibreCAD; column widths can be adjusted with Stretch.
- **PDF**: opens a clean print-ready window laid out for landscape letter and starts the print dialog. Choose Save as PDF (or send it straight to a printer).

To export everything at once instead of tab by tab, use the Project Schedules entries on the Files tab (section 7). Full Schedule.dxf draws every unit in the project.

5. The Refrigerant Tab

Any project holding Mini Splits, Multi Position Splits or Gas Splits gets a REFRIGERANT tab. It carries the factory data for each system and works out the charge from the line-set lengths you measured.

HOFFMAN & HOFFMAN, INC. | HHpro | Riverside Office Building

Find a model number...

User Guide | Log out

Riverside Office Building

Project: 9 Items

Undo | Redo | Exit Project | All Projects

Daikin Light Commercial RTUs (1) | Daikin Mini Splits (2) | Daikin Multi Position Splits (2) | Daikin Gas Splits (1) | Price Diffusers (2) | ABB VFDs (1) | **REFRIGERANT (5)** | FILES

Enter the actual line-set distances for each split system in the "Field Measurements" columns. The site validates against each system's allowable maximums and computes the refrigerant charge to add (line-set length minus the factory pre-charge length, multiplied by the manufacturer's oz/ft) plus the total system charge.

PDF Report

SYSTEM		FACTORY VALUES							FIELD MEASUREMENTS			CALCULATED CHARGE		REFERENCE
OUTDOOR	INDOOR(S)	REFRIGERANT	LINE SIZES	MAX VERT ODU-IDU	MAX VERT IDU-IDU	MAX TOTAL	FACTORY CHARGE	ADDITIONAL	ACTUAL VERT ODU-IDU	ACTUAL TOTAL	ACTUAL VERT IDU-IDU	TO ADD	TOTAL CHARGE	APPLICATION GUIDE
ODU-1 RFX18BVJ9	IDU-1 FTXF18BVJ9	R-32	Liquid: 0.25" Suction: 0.5"	66 ft	N/A	99 ft	39.2 oz 2.45 lbs 49 ft	0.22 oz/ft	15	60	N/A	2.42 oz 0.151 lbs	41.62 oz 2.601 lbs	Outdoor Unit IOM
ODU-2 2MXM18AVJ9	IDU-2 CTXV07AKJ9 IDU-3 CTXV07AKJ9	R-32	Liquid: 0.25" Suction: 0.375"	49.25 ft	82 ft	164 ft	52.8 oz 3.3 lbs 98.4 ft	0.22 oz/ft	20	90	10	0.00 oz 0.000 lbs	52.80 oz 3.300 lbs	Outdoor Unit IOM
CU-1 DH45EA4810	AHU-1 AMST48CU1300	R-32	Liquid: 0.375" Suction: 0.875"	79 ft	N/A	200 ft	174 oz 10.875 lbs 15 ft	0.64 oz/ft	25	75	N/A	38.40 oz 2.400 lbs	212.40 oz 13.275 lbs	Long Line Set Guide
CU-2 DH45EA4810	AHU-2 AMST48CU1300	R-32	Liquid: 0.375" Suction: 0.875"	79 ft	N/A	200 ft	174 oz 10.875 lbs 15 ft	0.64 oz/ft	30	110	N/A	60.80 oz 3.800 lbs	234.80 oz 14.675 lbs	Long Line Set Guide
CU-3 DCV3S3610	AHU-3 CAPSA3628B3 / DR80TC0803BN	Refer to outdoor unit installation manual for refrigerant calculations.												Outdoor Unit IOM

PROJECT TOTAL REFRIGERANT

541.62 oz
33.851 lbs

The Refrigerant tab with field measurements entered.

Reading across a row:

- **System:** the outdoor unit and the indoor unit(s) on it, with the tags you assigned.
- **Factory values:** refrigerant type, line sizes, the maximum vertical and total lengths the system allows, the factory charge and the length it covers, and the additional charge per foot.
- **Field measurements:** the boxes you fill in. Enter the actual vertical rise between outdoor and indoor unit and the actual total line length; multi-zone systems also take the vertical separation between indoor units.
- **Calculated charge:** refrigerant to add (line length beyond the factory pre-charge, times the per-foot figure) and the total system charge.
- **Reference:** a link to the Outdoor Unit IOM or the Long Line Set Guide for that system.


Anything you enter that exceeds the system's allowable maximum is flagged in the cell as you type. The project total for all systems is shown under the table.

PDF Report produces a print-ready refrigerant report for the whole project, with the same figures laid out for the drawing set. It is also available from the Files tab.

Not every system: Some systems (Gas Splits, for example) publish their charge calculation only in the installation manual. Those rows say so and link to the manual instead of showing boxes.

6. The Calculations Tab

Calculations saved from the calculators (section 9) appear on the project's CALCULATIONS tab, each with its name, when it was saved and a one-line summary.

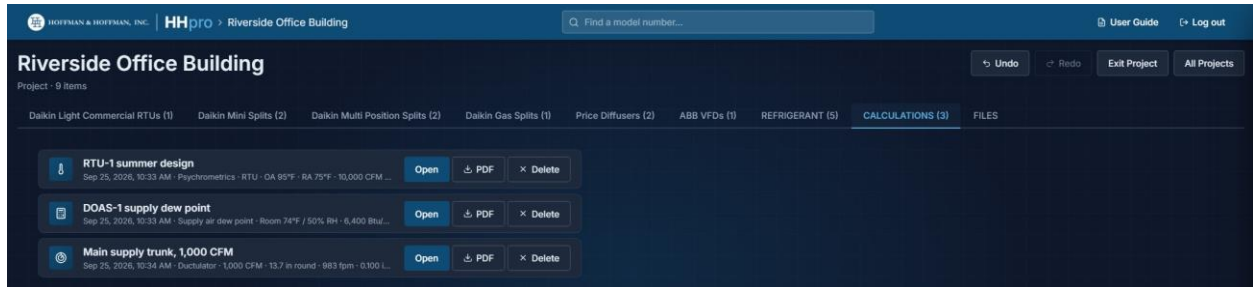


Three saved calculations on the Calculations tab.

- **Open:** reopens the calculation in its calculator.
- **PDF:** downloads the calculation's PDF report.
- **Delete:** removes it from the project.

Saved calculations are also listed under Project Schedules on the Files tab, and go into the ZIP in a CALCULATIONS folder.

7. The Files Tab

The Files tab gathers every document published for everything in the project and packages the ones you want into a single ZIP.

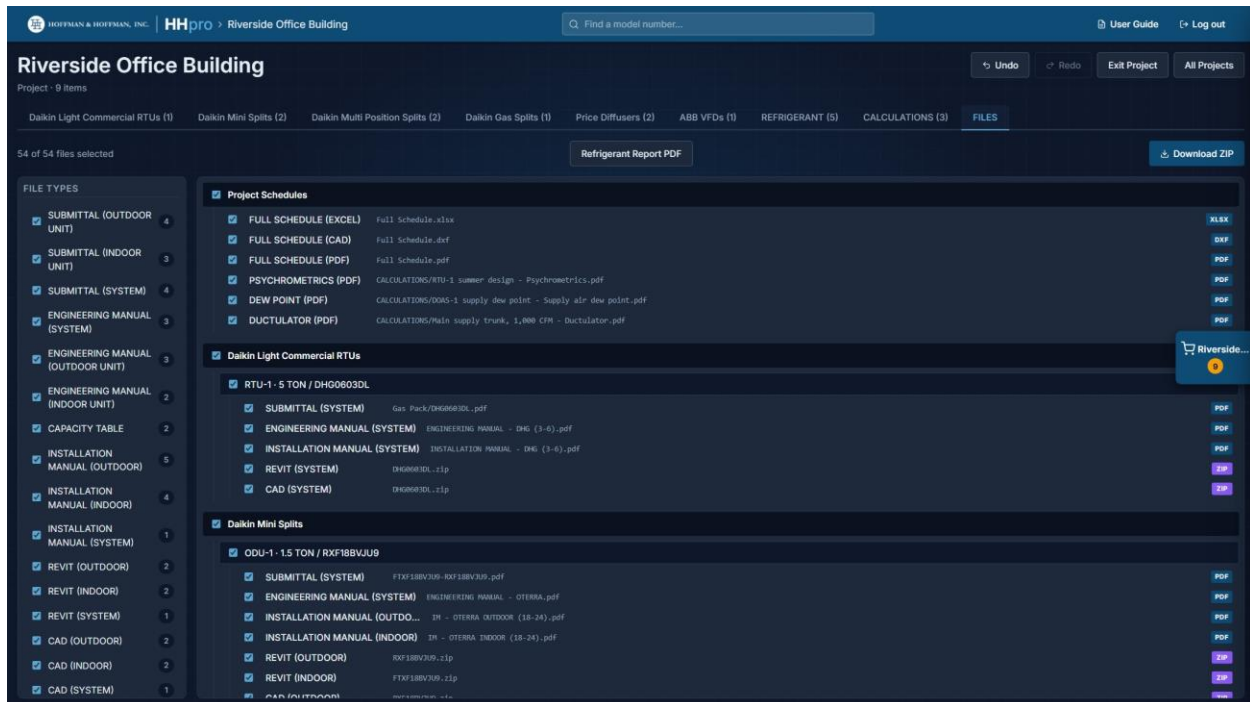

The Files tab: file types on the left, the full tree on the right.

7.1 Choosing what to download

- **File types** (left panel): every kind of document in the project, with a count (submittals, engineering, installation and operation manuals, capacity tables, Revit families, CAD files and so on). Unchecking a type drops it everywhere at once, which is the quickest way to say "submittals only". Light Commercial RTUs showing Design values add a PERFORMANCE SHEET, the one-page sheet described in section 8.3.
- **The tree** (right): product, then item, then file. Every level has a checkbox, so you can take everything for one unit, or one document for one unit.
- Everything starts checked. The counter at the top left tracks what you have selected.

7.2 Project Schedules

The first group in the tree is generated rather than downloaded: Full Schedule.xlsx, Full Schedule.dxf and Full Schedule.pdf, each holding every product tab in the project in one file, plus a PDF for each saved calculation. That is the fastest way to get the whole job out at once; the DXF also carries the unit drawings described in section 4.10.

7.3 Downloading

Download ZIP builds the archive and saves it as "<Project Name> - HHpro - <date>.zip", keeping the file names as published. While it works the button shows its progress ("Preparing 12 / 54...", then "Building archive..."); large projects with Revit and CAD content take a moment.

Refrigerant Report PDF, beside the download button, produces the report described in section 5 without leaving the tab.

Missing files: If a document listed in the data has not been published yet, it is skipped and reported in a summary at the end rather than failing the whole download.

8. Design Search

Design Search works the opposite way round from browsing: enter the loads you need to hit and the site returns the equipment that meets them, ranked by how close it comes.

8.1 Running a search

1. Choose a **Product category**. Every product line except GPS is offered (those your account can see). The form rebuilds itself around that product.
2. Enter your design targets: cooling total and sensible capacity, heating capacity, airflow, and whatever else that product carries. Beside each target is the tolerance you can live with, as a $\pm$ percentage (10% to start). Leave a row blank to ignore it.
3. Set any hard constraints under **Constraints**: size, electrical, efficiency, stages. A result has to match these exactly.
4. Click **Find matches**. **Reset** clears the form.

What you can target depends on the product: VFDs are searched on constraints alone, and diffusers and grilles on airflow.

The Multi Position Split form: design conditions on top, then targets and constraints.

Results are sorted by closeness to your targets, with the conditions and targets you searched on shown as chips above the table. Each result carries the same Select, Submittal and Docs buttons as a product page, so a match can go straight into your project.

8.2 Performance at design conditions

For Mini Splits and Multi Position Splits the form opens with a **Performance at design conditions** block: **Cooling conditions** (OA Ambient, Coil EAT (DB) and Coil EAT (WB)) and **Heat pump heating conditions** (OA Ambient, with the coil entering air fixed at 70 °F). The capacity targets sit in this block; the other targets are under **Other design targets**. Fill in the conditions and the search is answered at your condition rather than at the rating point stored in the schedule.

Results then come back in two groups:

- **Verified at design conditions:** systems whose capacity tables cover your condition. The capacity columns show performance at that condition, and the condition dropdowns stay live on each row so you can compare neighbouring rated points.
- **Possible solutions, compared by nominal ratings:** systems with no table covering your condition. They were matched against the nominal schedule values, so treat them as candidates to check rather than as verified selections.

HOFFMAN & HOFFMAN, INC. | HHpro

Design Search

Find a model number...

User Guide

Log out

Design Search

Pick a product category, enter your design targets with the tolerance you can accept, then find matching equipment.

Product category

Daikin Multi Position Splits

Conventional split systems with a multi-position air handler + outdoor condensing unit. Enter design loads and the page returns models that meet the targets within your tolerance.

PERFORMANCE AT DESIGN CONDITIONS

Systems with capacity tables are verified at these conditions. A condition between rated points is evaluated at the bracketing rated points with the worst case shown. Leave the conditions blank to compare nominal ratings instead.

COOLING CONDITIONS

OA Ambient: 95 °F

Coil EAT (DB): 80 °F

Coil EAT (WB): 67 °F

HEAT PUMP HEATING CONDITIONS

OA Ambient: 17 °F

Coil EAT (DB): 70 °F

Cooling Total Capacity: 46000 BTUH ± 10 %

Cooling Sensible Capacity: 34000 BTUH ± 10 %

Heat Pump Heating Capacity: — BTUH ± 10 %

OTHER DESIGN TARGETS

Leave a row blank to skip it. Tolerance is the +/- percent the result can differ from your target.

Aux. Electric Heat: — kW ± 10 %

Indoor Airflow: — CFM ± 10 %

CONSTRAINTS

Select

Submittal

Docs

DAIKIN

DFVE60DP1300

1640

1

Variable Speed ECM

80

67

58

58.1

46500

33480

55300

-

-

208/1

Select

Submittal

Docs

DAIKIN

AMST48CU1300

1450

0.75

ECM

80

67

59

57.1

45500

34580

27800

-

-

208/1

Select

Submittal

Docs

DAIKIN

AMST48CU1300

1450

0.75

ECM

80

67

59

57.1

45500

34580

27800

-

-

208/1

Select

Submittal

Docs

DAIKIN

AMST48CU1300

1450

0.75

ECM

80

67

59

57.1

45500

34580

27800

-

-

208/1

Select

Submittal

Docs

DAIKIN

DFVE48DP1300

1380

0.75

Variable Speed ECM

80

67

57

56.5

45500

33215

34800

-

-

208/1

Select

Submittal

Docs

DAIKIN

AMST42CU1300

1575

0.75

ECM

80

67

60

58.5

42900

34320

25600

-

-

208/1

Select

Submittal

Docs

DAIKIN

FTA48AAVJJD

1520

0.75

Variable Speed ECM

80

67

60.5

57.3

47000

32007

47600

-

-

208/1

Select

Submittal

Docs

DAIKIN

AMST48CU1300

1450

0.75

ECM

80

67

58

56.5

48000

36480

29600

-

-

208/1

Select

Submittal

Docs

DAIKIN

DFVE48DP1300

1520

0.75

Variable Speed ECM

80

67

59

58.5

41600

32032

34500

-

-

208/1

Select

Submittal

Docs

DAIKIN

DFVE48DP1300

1520

1

Variable Speed ECM

80

67

60

58.5

41600

31540

34000

-

-

208/1

Possible solutions -- compared by nominal ratings (8)

These systems have no capacity table covering the entered conditions, so they were matched on nominal schedule values. Actual performance at your design conditions may differ.

INDOOR AIR HANDLING UNIT

Actions	MAKE	MODEL	SUPPLY FAN			COOLING				HEAT PUMP TOTAL CAPACITY	AUX. ELECTRIC HEAT		ELECTRICAL DATA	
			AIRFLOW (CFM)	MOTOR (HP)	MOTOR TYPE	EAT (DB)	EAT (WB)	LAT (DB)	LAT (WB)	TOTAL CAPACITY	SENSIBLE CAPACITY	kW	TEMPERATURE RISE (DB)	VOLTAGE / PHASE
Select	DAIKIN	DMVT60DP1300	1530	1	Variable Speed ECM	80	67	58	57.4	46500	35340	48800	-	208/1

Verified results on top, nominal-only candidates below.

Between rated points: Nothing is interpolated. When a condition falls between two rated points, each result is read at a neighbouring rated point: the next one up for entering air and cooling ambient, and the next one down for heat pump heating ambient. A notice above the results names the points on either side of your condition; use the condition dropdowns on any row to compare the other one. A condition outside a system's table moves that system to Possible solutions. Leave the condition boxes blank to compare nominal ratings instead.

8.3 Daikin Light Commercial RTUs

Light Commercial RTUs get a form of their own, because every number on their schedule came from a selection run at one condition. Here the whole answer is read from Daikin's published capacity tables instead, never from the selections on the schedule, so every number shown is a rated point.

Design Search
Pick a product category, enter your design targets with the tolerance you can accept, then find matching equipment.

Product category: **Daikin Light Commercial RTUs**

Packaged rooftop units. Enter design loads and the page returns models that meet the targets within your tolerance.

PERFORMANCE AT DESIGN CONDITIONS
Results come from Daikin's published capacity tables, not from the schedule's stored selection. Conditions are picked from the values those tables publish, so every number shown is a rated point; a unit with no rating at the chosen condition is left out.

Type: **All**

Nominal Tons: **5**

Efficiency: **All**

Electrical: **All**

Motor: **All**

Hot Gas Reheat: **All**

Electric Heat (Heat Pump): **All**

COOLING
Outdoor Ambient DB (°F): **95**

Results 10 matches

Evaluated at: **80/67 °F EAT DB/WB** **95 °F ambient** **heat pump heating at 17 °F** **Supply CFM 2,000 CFM ±10%** **Cooling Total Capacity 58,000 BTU/h ±10%** **Cooling Sensible Capacity 45,000 BTU/h ±10%**

	Model	vs Target	Type	Nom Tons	Efficiency	Volt/PH	Motor	HGRH	CFM	OA DB (°F)	EDB (°F)	EWB (°F)	LDB (°F)	LWB (°F)	Total (BTU/h)	Sensible (BTU/h)
Select → DSH0603D - no electric heat	DSH0603D	CFM -6% Total -1% Sens ±0%	Heat Pump	5	Standard	208/3	Standard Static	NO	1870	95	80	67	58.3	57.3	57,500	44,850
Select → DSH0604D - no electric heat	DSH0604D	CFM -6% Total -1% Sens ±0%	Heat Pump	5	Standard	460/3	Standard Static	NO	1870	95	80	67	58.3	57.3	57,500	44,850
Select → DHH0603D - no electric heat	DHH0603D	CFM -2% Total +3% Sens ±3%	Heat Pump	5	High	208/3	Standard Static	NO	1950	95	80	67	58.6	57.3	60,000	46,200
Select → DHH0604D - no electric heat	DHH0604D	CFM -2% Total +3% Sens ±3%	Heat Pump	5	High	460/3	Standard Static	NO	1950	95	80	67	58.6	57.3	60,000	46,200
Select → DHG0603DL	DHG0603DL	CFM -6% Total -2% Sens -4%	Gas	5	High	208/3	Standard Static	NO	1880	95	80	67	59.1	57.1	59,000	43,070
Select → DHG0603DL	DHG0603DL	CFM -6% Total -2% Sens -4%	Gas	5	High	208/3	Standard Static	YES	1880	95	80	67	59.1	57.1	59,000	43,070
Select → DHG0604DL	DHG0604DL	CFM -6% Total -2% Sens -4%	Gas	5	High	460/3	Standard Static	NO	1880	95	80	67	59.1	57.1	59,000	43,070
Select → DHG0604DL	DHG0604DL	CFM -6% Total -2% Sens -4%	Gas	5	High	460/3	Standard Static	YES	1880	95	80	67	59.1	57.1	59,000	43,070
Select → DSG0603DL	DSG0603DL	CFM -7% Total -1% Sens -7%	Gas	5	Standard	208/3	Standard Static	NO	1860	95	80	67	59.4	57.2	57,500	41,975
Select → DSG0604DL	DSG0604DL	CFM -7% Total -1% Sens -7%	Gas	5	Standard	460/3	Standard Static	NO	1860	95	80	67	59.4	57.2	57,500	41,975

The Light Commercial RTU form on the left; results from the capacity tables, each row with its own Motor, CFM and heat dropdowns and a vs Target column.

- Constrain the cabinet first if you need to: **Type** (All, Gas or Heat Pump), **Nominal Tons**, **Efficiency** (Standard, High or Variable Speed), **Electrical**, **Motor** (the motor each result row starts on; every row can switch it), **Hot Gas Reheat** (shown when a unit that offers it is in scope) and **Electric Heat (Heat Pump)**.
- Choose the conditions: **Outdoor Ambient DB**, **Cooling EAT DB** and **Cooling EAT WB**, and **Heating Outdoor Ambient DB** for heat pumps. These are dropdowns of the values Daikin publishes for the units in scope; values that only some models publish are marked, for example "(DVH only)". The defaults are 95 °F ambient, 80/67 °F entering air and 17 °F for heating.
- Enter targets for **Supply CFM**, **Cooling Total Capacity**, **Cooling Sensible Capacity**, **Gas Heating High Stage Temp Rise** (gas units) and **Heat Pump Heating Capacity** (heat pumps). Above them, choose how they are judged: **Within ± tolerance**, where each is met inside its own ± percentage, or **Meet or exceed (smallest first)**, where each capacity is a minimum, the closest fit is listed first, and the box beside it becomes a **cap** on how far above the target a unit may be (blank = no limit). Supply CFM is always ± tolerance.
- Heat pumps also take a **Heating Load (heat pump + electric heat)**: the heat pump's capacity at the heating outdoor temperature plus its electric heat kit (kW × 3,412 BTU/h) has to cover it. It is always a minimum, so it has no tolerance.

- Tick **Power Exhaust** under Electrical options if the units need it. It applies to every result and changes MCA and MOP. Convenience outlets are not offered: they are specified non unit powered, so they never change the electrical.

Results show one row per unit with the full cooling, gas heating and heat pump heating picture at your condition. On the row you pick the gas heat size or electric heat kit and the **Motor** (Standard Static or High Static); the model number, MCA, MOP and motor HP follow at once, without a new search. When you entered targets, a **vs Target** column shows how far the unit is over or under each one, for example "Total +2%, Sens +5%"; a figure outside its target is highlighted. Units that could not be evaluated at your condition are named under the table with the reason, so you know nothing was silently dropped.

Each unit is read at every airflow Daikin publishes for it, and the **CFM** column is a dropdown of those airflows. It opens on the nominal airflow, or on the one nearest the **Supply CFM** you entered; pick another and cooling, leaving air, gas heat leaving temperature and DVH heating are read again. Airflows the unit is not rated at, and gas heat sizes whose temperature rise would fall outside Daikin's range, are greyed out. An airflow that misses one of your targets is marked "(off target)" but can still be picked.

Heat pump heating shows the airflow it is published at. DSH and DHH units publish heating at their nominal airflow only, so it stays at that CFM whichever cooling airflow you pick; DVH heating follows the dropdown.

Heat kits: with a Heating Load, each heat pump opens on the smallest kit that covers it, and the **HP + Kit** column shows the heat pump and kit together. Kits too small for the load are listed but greyed out "(short)". A kit outside Daikin's electric heat airflow limits at the row's CFM is marked "(airflow)" and its cell is outlined; pick a higher CFM or another kit. The sizing uses each kit's rated kW with no voltage correction, so check a 208 V unit's kit output against Daikin's electric heat data.

Select on a result opens the Light Commercial RTU schedule at that unit, showing its design-condition values. The row is marked with a **Design values** button (click it to switch to **Standard values** and back), and a banner explains where the numbers came from. **Reset all to standard** puts every row back. A heat pump's heating cell reads, for example, "51000 (17°F OA, 3000 CFM, COP 2.25)", and its 47 °F and 17 °F rating columns show "-" (those are AHRI ratings, not catalog values). ESP and the gas heating entering air stay as scheduled.

Select the row there to add it to your project. A unit added while showing Design values keeps them on the project schedule and in the Excel, CAD and PDF exports, and they are saved with the project; one added showing Standard values keeps the selection run in Daikin's software. When every heat pump on a schedule came from Design Search, the 47 °F and 17 °F rating columns are left off. On the project schedule a Design Search unit's heat kit or gas heat size is fixed; use **Configure** on its row to change it (section 4.5).

HHpro > Daikin Light Commercial RTUs

[User Guide](#)
[Log out](#)

Daikin Light Commercial RTUs
[Back to Products](#)

SIZE

ELECTRICAL

TYPE

EFFICIENCY

COOLING STAGES

HIGH/MEDIUM/LOW GAS HEAT

HGRH

7.5
All
HEAT PUMP
All
All
-
NO
Clear all filters
Design Search

Showing 10 of 304 items

Showing design-condition values. These values come from Daikin's published capacity tables at your design condition, not from the selection run in Daikin's software. The Submittal PDF on this site still shows the STANDARD unit selection — it will not reflect these numbers.
Reset all to standard

Actions	Make	Model Number	Nominal Tons	Fan Data			Cooling Performance										Heat Pump Heating Performance			COP (47°F)
				CFM	ESP (IWG)	Total Capacity (BTU/h)	Sensible Capacity (BTU/h)	Efficiency (At AHR)	EDB (°F)	EWB (°F)	LDB (°F)	LWB (°F)	BTU/h (47°F, 70°F Indoor DB)	BTU/h (17°F, 70°F Indoor DB)	BTU/h (70°F Indoor DB)	Temperature Rise (°F)				
Select Submittal Docs Configure	DAIKIN	DVH0904	7.5	3600	1	102928	79341	20.0 IEER/12.4 EER	80	67	60	58	90000	63000	-	23.1°F (47°F Ambient), 16.2°F (17°F Ambient)	3.85			
Select Submittal Docs Configure	DAIKIN	DVH0903	7.5	3600	1	102928	79341	20.0 IEER/12.4 EER	80	67	60	58	90000	63000	-	23.1°F (47°F Ambient), 16.2°F (17°F Ambient)				
Select Submittal Docs Configure	DAIKIN	DSH0904	7.5	3133	0.5	86489	69011	16 IEER/11.4 EER	80	67	60	58.3	86000	50000	-	25.4°F (47°F Ambient), 14.8°F (17°F Ambient)				
Select Submittal Docs Configure	DAIKIN	DSH0903D	7.5	3000	0.5	86000	67060	16 IEER/11.4 EER	80	67	59.6	58	-	-	51000 (17°F OA, 3000 CFM, COP 2.25)	15.7°F (17°F Ambient)	-			

A heat pump selected from Design Search: catalog values, with its 47/17 °F rating columns blank.

Design values: The submittal PDF still documents the standard unit selection. A one-page "Performance at design conditions" sheet with the design values opens beside it from Submittal, is listed first under Docs (on the product page and the project schedule) and goes in the Files tab ZIP. The fan is not checked, so confirm with Daikin's fan data that the motor delivers the airflow at your static pressure. The project CSV export does not carry design values.

HOFFMAN & HOFFMAN, INC.

Performance at design conditions - DSG0603WM

Riverside Office Building - RTU-1 - Daikin Light Commercial RTU - 10/2/2026

UNIT		DESIGN CONDITIONS	
Model	DSG0603WM	Outdoor ambient (cooling)	95 °F DB
Type	Gas / electric	Entering air (cooling)	80 °F DB / 67 °F WB
Nominal tons	5	Supply airflow	1,860 CFM
Efficiency	Standard		
Indoor fan motor	High Static		
Gas heat	Medium		
Hot gas reheat	No		
Schedule row	DSG0603DM		
		COOLING	
		Total capacity	57,500 BTU/h
		Sensible capacity	41,975 BTU/h
		Latent capacity	15,525 BTU/h
		Sensible heat ratio	0.73
		Leaving air	59.4 °F DB / 57.2 °F WB
GAS HEATING (HIGH FIRE)			
Input	115 MBH		
Output	92 MBH		
Temperature rise	45.8 °F at 1,860 CFM		
Thermal efficiency	80 %		
		ELECTRICAL	
		Voltage	208/3
		MCA	31.1 A
		MOP	45 A
		Indoor motor	-
		Power exhaust	Yes

NOTES

Values are read from Daikin's published capacity tables at the design conditions shown; they are not a selection run in Daikin's software, and the unit submittal documents the standard selection. The indoor fan is not checked: confirm with Daikin's fan data that the motor delivers this airflow at the design external static pressure.

The performance sheet for a gas unit on design values: conditions, capacities, motor, power exhaust and MCA / MOP.

Configuring a unit from the schedule

The **Configure** button on a Light Commercial RTU row (section 2.5) opens this form already narrowed to that unit: Type, Nominal Tons, Efficiency, Electrical and Hot Gas Reheat are filled in to match it, and the search runs straight away. A banner names the unit. The result opens on the row's gas heat size or electric heat kit and its motor, at the published airflow nearest the row's CFM that the unit can run at.

Change the motor on the result row, or power exhaust, hot gas reheat or the design conditions in the form and click **Find matches** again; the unit stays in view, with what you picked on its row. **Select** puts it back on its schedule row showing Design values, as above. Clicking Configure on a row that is already showing Design values reopens that configuration. Change Type, Nominal Tons or Efficiency, or click **Reset**, to search every unit again.

From a project schedule, Configure works the same way, but every result's button reads **Replace**: it swaps the unit on the project schedule and keeps its tag and place (section 4.5).

The screenshot shows the 'Design Search' interface for Hoffman & Hoffman, Inc. The product category is 'Daikin Light Commercial RTUs'. The search is narrowed to the unit 'DSG0603DL'. The design conditions are 'Gas', '80/67 °F EAT DB/WB', and '95 °F ambient'. The results table shows one match for 'DSG0603DL' with a motor of 'High Static'. The configuration panel on the left shows the following settings: Type: Gas, Nominal Tons: 5, Efficiency: Standard, Electrical: 208/3, Motor: All, Hot Gas Reheat: No.

Design Search

Pick a product category, enter your design targets with the tolerance you can accept, then find matching equipment.

Product category: **Daikin Light Commercial RTUs**

Packaged rooftop units. Enter design loads and the page returns models that meet the targets within your tolerance.

PERFORMANCE AT DESIGN CONDITIONS

Configuring DSG0603DL. The search is narrowed to this unit. Change the motor on the result row, change power exhaust, hot gas reheat or the design conditions here and click Find matches. Select puts the result on its schedule row. Reset searches every unit again.

Results: 1 match

Evaluated at: **Gas** **80/67 °F EAT DB/WB** **95 °F ambient**

	Model	Nom Tons	Efficiency	Volt/PH	Motor	HGBH	CFM	Cooling				Total (BTU/h)	Sensible (BTU/h)	Gas Heat	High In (MBH)	
								OA DB (°F)	EDB (°F)	LWB (°F)	LWB (°F)					
Select	DSG0603DL	5	Standard	208/3	High Static	NO	1860	95	80	67	59.4	57.2	57,500	41,975	Low	90

Results come from Daikin's published capacity tables, not from the schedule's stored selection. Conditions are picked from the values those tables publish, so every number shown is a rated point; a unit with no rating at the chosen condition is left out.

Type: **Gas**

Nominal Tons: **5**

Efficiency: **Standard**

Electrical: **208/3**

Motor: **All**

Hot Gas Reheat: **No**

Configure on DSG0603DL, with the result row's Motor switched to High Static.


9. Calculators

The **Calculators** tile opens a page with three calculators: Psychrometrics, Supply air dew point and Ductulator. The breadcrumb (Calculators > name) takes you back to the list.

9.1 Common controls

- **Altitude:** site elevation in feet. The barometric pressure beside it follows.
- **IP / SI:** switch units.
- **Save to project:** saves the calculation, under a name you choose, to the active project (section 9.5).
- **Export PDF:** downloads a PDF report of the calculation.
- The ? icons explain each input.

9.2 Psychrometrics

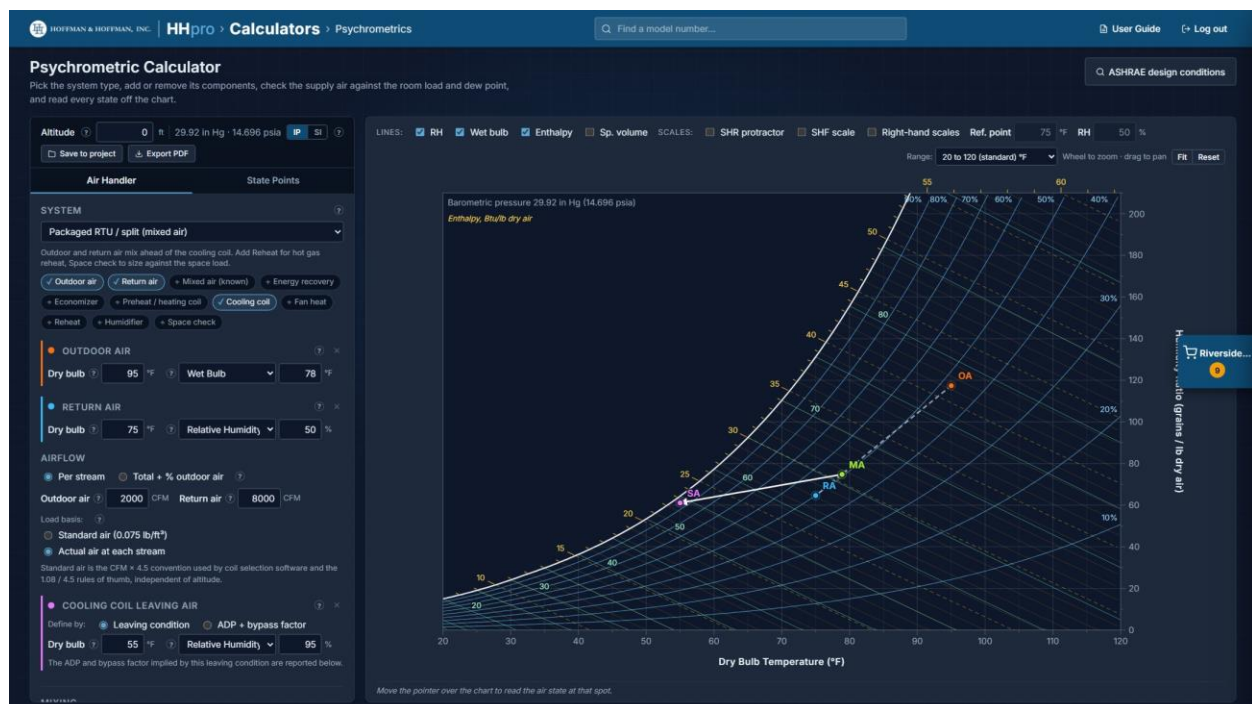

The Psychrometric Calculator with a packaged RTU (mixed air) system.

The Psychrometric Calculator builds an air-handling process on a live psychrometric chart.

- **Air Handler** tab: pick a **System** type (Packaged RTU / split (mixed air), Packaged RTU / split (mixed air known), 100% outdoor air / DOAS, Makeup air / heating, Winter humidification, or Custom), then add or remove components with the chips: Outdoor air, Return air, Mixed air (known), Energy recovery, Economizer, Preheat / heating coil, Cooling coil, Fan heat, Reheat, Humidifier and Space check.
- **State Points** tab: plot independent air states.
- The results list every state point and the load of each stage, with condensate and drain size; the chart shows every state and process line. Chart options above it turn on the RH, wet bulb, enthalpy

and specific volume lines and the optional SHR protractor, SHF scale and right-hand scales. Scroll to zoom, drag to pan, and use **Fit** or **Reset** to get back.

- **ASHRAE design conditions** opens the ASHRAE climatic design conditions site in a new tab, for looking up design weather data.
- The PDF carries the chart, the results, and an appendix of definitions and worked formulas.

The [HHpro Psychrometrics Guide](#) covers the chart and every component in detail.

9.3 Supply Air Dew Point

Supply Air Dew Point

Law #1 for dedicated outdoor air: the ventilation air alone must carry the space latent load, so its dew point is set by the latent load and the airflow.

Altitude: 0 ft | 29.92 in Hg | 14.696 psia

Save to project | Export PDF | Show on chart

SOLVE FOR

- ☒ Supply dew point
- ☐ Ventilation airflow
- ☐ Latent load

Supply dew point from the latent load and ventilation airflow.

SPACE CONDITION

Dry bulb: 74 °F | Relative Humidity: 50 %

Design space condition. Its humidity ratio is the starting point; the supply must be drier by the moisture the load adds.

INPUTS

Latent load: 6400 Btu/h | Ventilation airflow: 700 CFM

Latent load from the space (people, infiltration, process). Ventilation airflow is the outdoor air delivered to the space (ASHRAE 62.1 Vol). Enter the dew point the unit can deliver to check it against the requirement.

Air basis: ☒ Actual air at the room state | ☐ Standard air (0.075 lb/ft³, the 0.69 rule)

UNIT SUPPLY AIR (OPTIONAL CHECK)

Dry bulb: if need °F | Dew Point: 46 °F

Enter the supply air as its dew point, or as dry bulb with wet bulb, RH or humidity ratio (e.g. a coil leaving condition of 55 °F DB / 64 °F WB). Dew point and humidity ratio stand on their own; wet bulb and RH need the dry bulb too.

SPACE

Room condition	74.0 °F DB / 50% RH
Room dew point	54.2 °F
Room humidity ratio	62.5 gr/lb
Barometric pressure	29.92 in Hg (0 ft)

SUPPLY DEW POINT

Latent load	6,400 Btu/h (0.53 tons)
Ventilation airflow	700 CFM

47.7 °F

maximum supply dew point (49.0 gr/lb) to carry 6,400 Btu/h (0.53 tons) on 700 CFM

Unit delivers 46.0 °F: dry enough

WHY THE DEW POINT COMES FIRST

In a dedicated outdoor air system the ventilation air is the only thing removing moisture from the space. The zone equipment (VRF, chilled beams, fan coils, sensible-only rooftops) runs with a dry coil.

So the ventilation air has to leave the unit dry enough that, at the ventilation airflow, it soaks up the whole space latent load before it climbs back to the room humidity. That target is the required supply dew point.

The rule of thumb is $Q_{\text{latent}} = 0.69 \times \text{CFM} \times \Delta \text{gr/lb}$. 4.5 lb/h of standard air per CFM, 1076 Btu to condense each pound of moisture, 7000 grains per pound. Older texts use 0.68; the actual-air basis uses the real mass flow at the room state instead of 4.5.

If the unit cannot reach the required dew point, the fixes are more ventilation air, a lower coil temperature or a wheel that dries the air further, or a lower space humidity target. Reheat after the coil does not change the dew point.

Supply Air Dew Point with a supply condition checked against the requirement.

For dedicated outdoor air systems the ventilation air alone must carry the space latent load, so its dew point is set by the latent load and the airflow.

- **Solve for:** Supply dew point, Ventilation airflow or Latent load.
- Enter the **Space condition** and the **Inputs** (latent load and ventilation airflow), and choose the air basis: actual air at the room state, or standard air (the 0.69 rule).
- **Unit supply air (optional check):** enter the dew point the unit delivers (or its dry bulb with wet bulb, RH or humidity ratio) and the result says whether it meets the requirement.
- **Show on chart** opens Psychrometrics with a DOAS system and a Space check already filled in.

9.4 Ductulator



The Ductulator sizing a round duct on the duct friction chart.

Duct sizing by the equal-friction method, using Darcy-Weisbach with Colebrook friction and ASHRAE roughness.


- **Duct shape:** Round or Rectangular.
- **Known values:** airflow plus friction rate, velocity or size. The optional **Straight run** adds the total loss for that length (fittings are extra).
- **Duct material:** nine ASHRAE roughness categories, from galvanized steel to flexible duct.
- **Results:** size, velocity, friction rate and velocity pressure, with the nearest stock size and a table of rectangular sizes with the same friction. The duct is plotted on the duct friction chart and drawn to scale beside it.

9.5 Saving calculations to a project

Click **Save to project**, type a name (the box suggests one) and click **Save**. The calculation is saved to the active project; if no project is active, HHpro asks where it should go, just like the first Select (section 3.1). Saved calculations appear on the project's CALCULATIONS tab (section 6) and in the Files tab ZIP.


10. Finding a Model Number

The search box in the header searches every product your account can see. Type all or part of a model number; the dropdown shows up to ten matches with the product each belongs to, and highlights the part you typed. Use the arrow keys and Enter, or click a result.

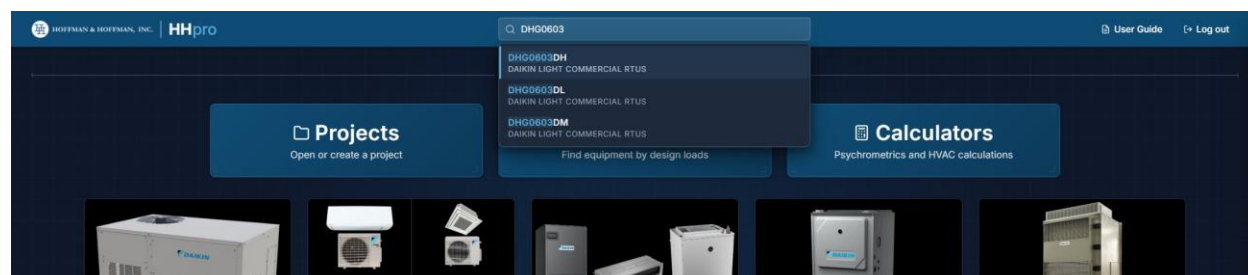

Searching for a model number from the header.

The site opens that product's page with the schedule already narrowed to the model, shown as a chip (Model contains "...") under the filters. **Clear** on the chip drops back to the full list; the normal filters work alongside it.

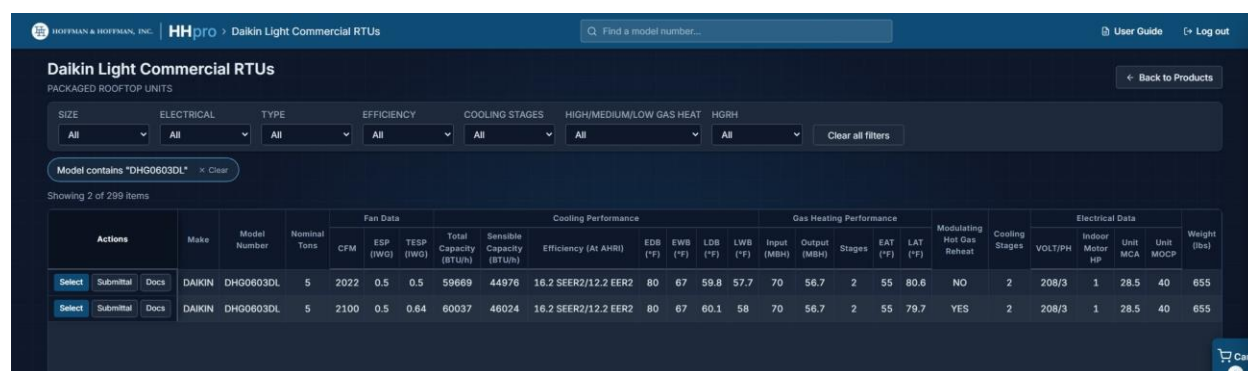

The product page opens filtered to the model you picked.

The first search after the page loads takes a few seconds while the index is built across every product; after that it is instant.


11. Appendix

11.1 Privacy and your data

HHpro accounts and saved projects are held on a server run by Hoffman & Hoffman. The site has no advertising, no analytics and no third-party scripts, and it sends no email itself.

- **What is stored:** your name, company, office location(s), user level and email address (entered by the administrator who set up your account), a scrambled form of your password, and the projects you save.
- **Cookies:** one cookie keeps you signed in. There are no advertising, analytics or third-party cookies.
- **Sharing:** your information is not sold or shared with anyone outside Hoffman & Hoffman. The site is delivered through Cloudflare, which handles the network connection under its own privacy policy.
- **How long:** for as long as your account is active. Deleted accounts and deleted projects are removed within 30 days.
- **Your choices:** to see, correct or delete the information held about you, email eric.creel@hoffman-hoffman.com.

The **Privacy & Data** link at the bottom of the overview and the sign-in page has the full notice.

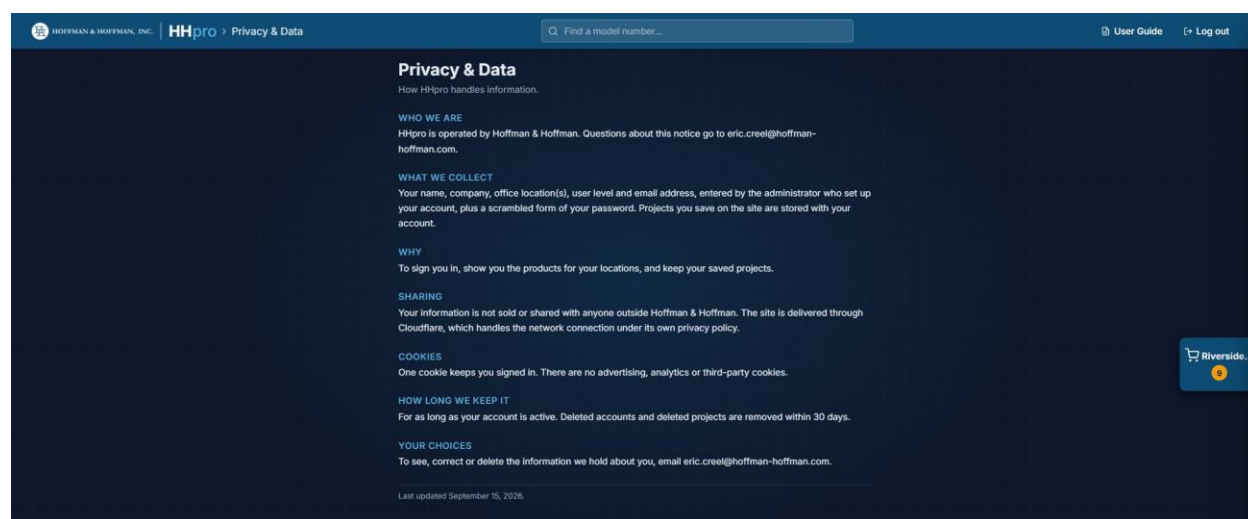

The Privacy & Data page.

11.2 Quick reference

- **Build a schedule:** product tile → filter → Select the systems you need → cart → View Project → Auto Tag → Add / Remove Columns → Excel / CAD / PDF.
- **Find a unit by load:** Design Search → category → conditions and targets → Find matches → Select.
- **Find the smallest unit that covers a load:** Design Search → Light Commercial RTUs → Meet or exceed → targets → Find matches.
- **Size a heat pump's electric heat:** Design Search → Light Commercial RTUs → Heat Pump → Heating Load → Find matches; each unit opens on the smallest kit that covers it.
- **Change a rooftop unit's options:** Light Commercial RTU schedule → Configure → motor, power exhaust or conditions → Select. On a project schedule: Configure → Replace.

- **Find a unit by model:** type it in the header search box and click the result.
- **Run a calculation:** Calculators → pick one → Save to project or Export PDF.
- **Get the paperwork:** project view → FILES → untick what you do not need → Download ZIP.
- **Size the refrigerant charge:** project view → REFRIGERANT → enter line-set lengths → PDF Report.
- **Keep a copy outside HHpro:** Projects → Export All to CSV.
- **Reset your password:** sign-in page → Forgot password? → Open email → send it.

11.3 Things to watch for

- Projects save to your account automatically. If you see "Can't reach the HHpro server to save", keep the tab open until "Back in touch with the server" appears.
- A temporary cart is never saved. Create a project for anything you want to keep.
- The Grille schedule only draws the first 500 matching rows; narrow the filters to see the rest.
- Cells you edit by hand stay as you typed them, are not recalculated afterwards, and are tied to their place in the schedule. Make hand edits last.
- In Design Search, "Possible solutions" were matched on nominal ratings, not verified against a capacity table at your condition.
- Light Commercial RTUs selected from Design Search show Daikin's catalog values, not the selection run in Daikin's software. The submittal PDF still shows the standard selection (their performance sheet shows the design values), the fan is not checked at the airflow picked, and the project CSV export does not keep the design values.
- Heating Load sizing uses each electric heat kit's rated kW. Check the kit's output on a 208 V unit against Daikin's electric heat data.
- For split systems, one selection covers the outdoor unit and its indoor units; you do not select them separately.
- Submittals, documents, PDF exports and the refrigerant report open in new tabs or windows; allow pop-ups for hhpro-hvac.com.

11.4 Getting help

If something looks wrong (a capacity, a document that will not open, a model that should be there and is not), contact Eric Creel at eric.creel@hoffman-hoffman.com. For account questions such as access, office locations or a new password link, contact the person who set up your account.