
Power options--ezLCD-5035 can be powered from:
* +5V pin on the User connectors
* +5V Pin on the Pwr connector (bottom of this page)
* +5V pin on the RS232 connector at the upper right of the board
* USB

DO NOT power the ezLCD using the 3.3V pins. These are outputs only. Max 3.3V output current: TBD

NOTE: The USB port is protected with Schottky diodes to prevent problems if more than one power source is accidentally applied simultaneously.

All I/O Pins are 5V-Tolerant except where noted


Ethernet Pins: Connect to Ethernet Magnetics only. Contact EarthLCD for Details

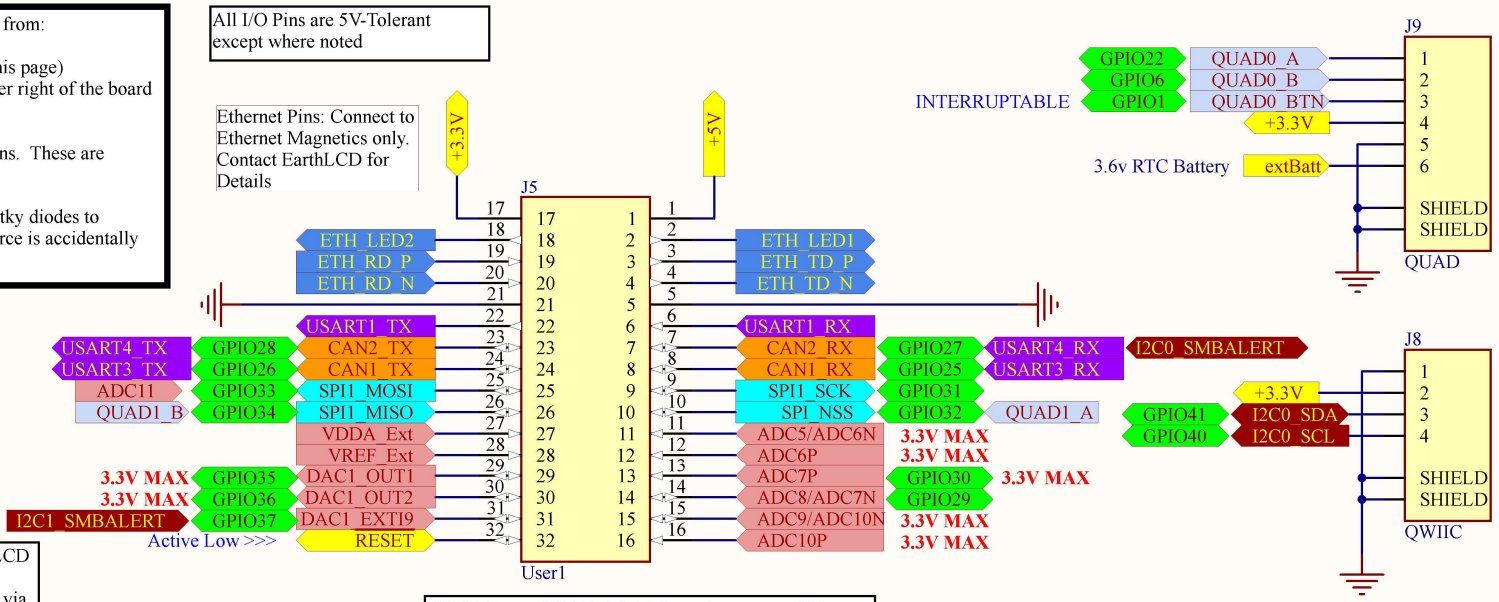

Default is internal 3.3V ADC reference. To use external analog reference, SOM modifications reqired. Contact EarthLCD for assistance

Default Command Port UART will accept ezLCD API Commands. It is also connected to the RS232 connector at the top right of the board, via a level shifter. It is NOT recommended that both RS232 and TTL Serial be used simultaneously.


NOTE: To use USART0 in TTL mode, remove R24 from ezLCD5035 (RS232 on J3 will be disabled)

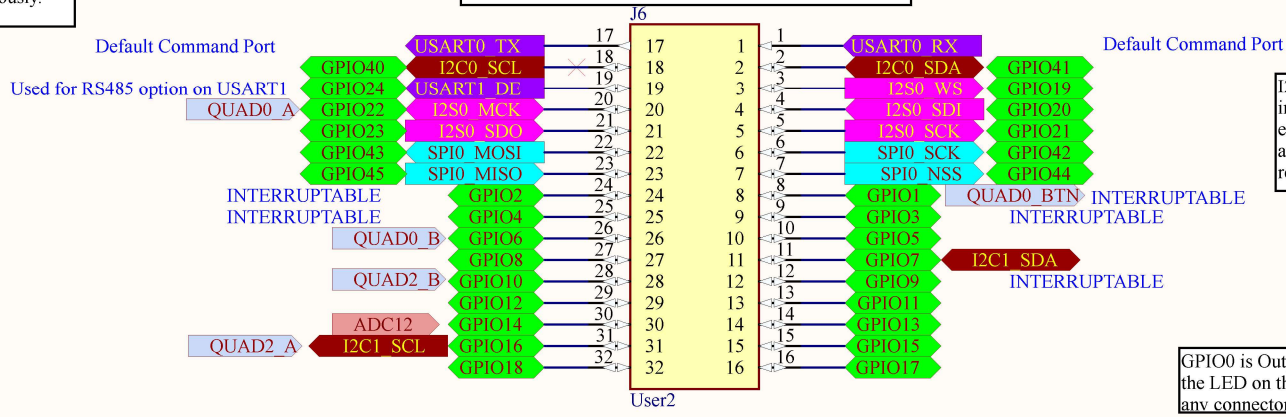

I2C: Onboard 4.7k pullups installed on back of ezLCD-5035 board. Resistors are labeled if customer needs to remove them.


Pins marked INTERRUPTABLE can be used with the Lua SetPinIntr command to trigger an interrupt

GPIO0 is Output-only and is hardwired to the LED on the SOM. It is not available on any connector.

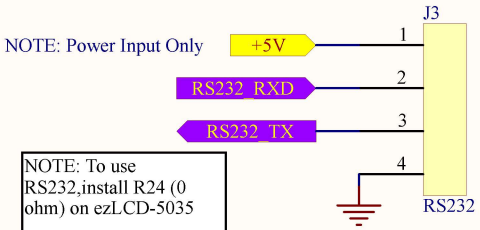

NOTE: To use RS232,install R24 (0 ohm) on ezLCD-5035

RS232 uses USART0

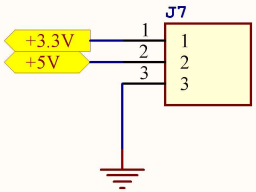

Located to the lower-left of User2 connector (right side of board) next to Pins 30/31/32

Title *ezLCD-5035 User Connector Pinouts*		
PCB No: PCB2201-01	By: Robert Garito	Revision: B
Date: 5/28/2024	Time: 5:00:53 PM	Sheet 1 of 1
File: C:\EarthLCD\Earth-EZLCD-Git\ezLCD-5035\Deliverables\UserConnectorPinouts.SchDoc		

EARTHLCD.com
We Make LCDs Work™