
Flash ESP32, wait, then flash TI


Real app screenshot; markers identify the controls

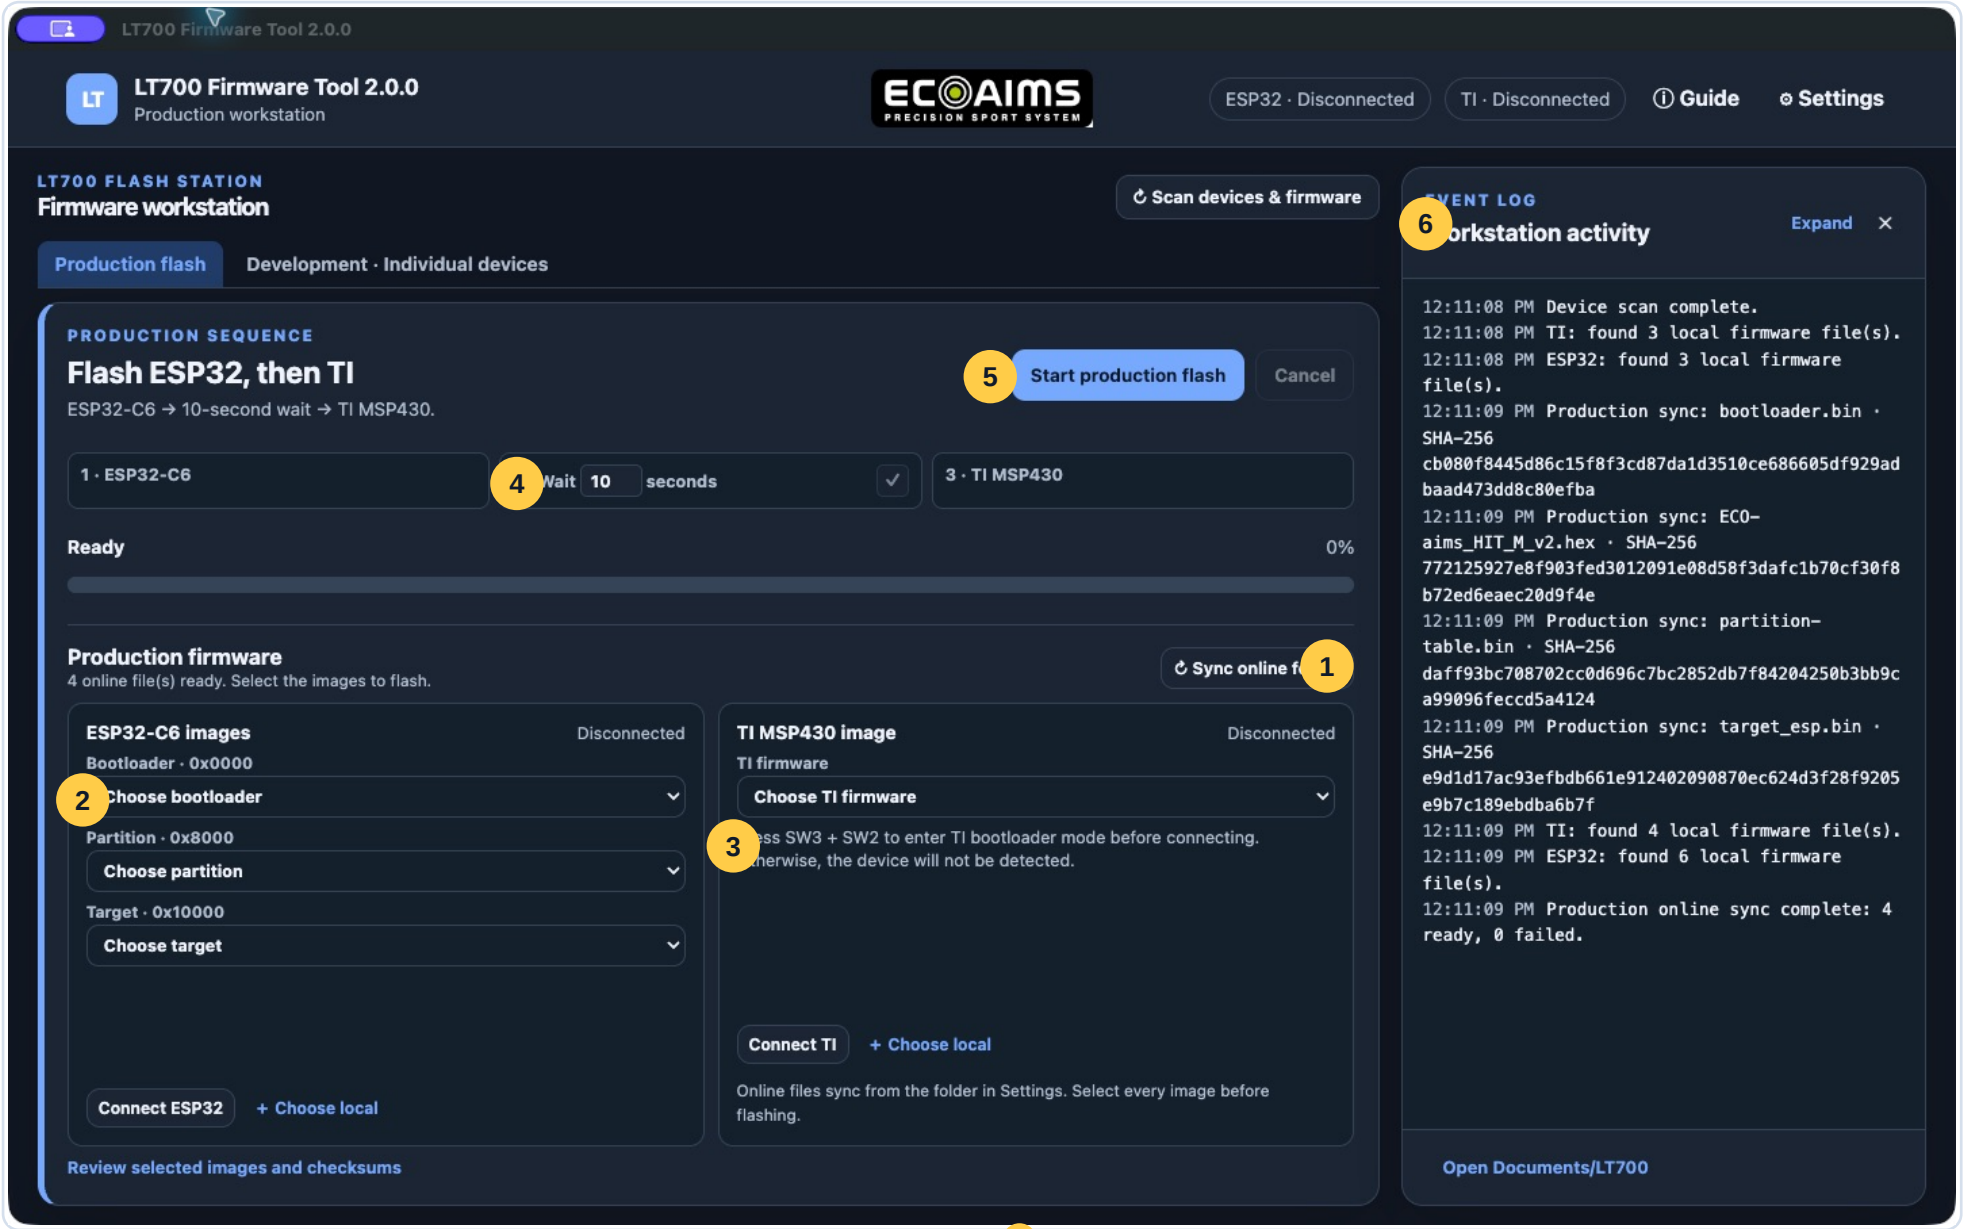

1. Sync the SeaDrive folder; wait for the ready count.
2. Choose ESP bootloader, partition, and target images.
3. Before Connect TI, press SW3 + SW2 for bootloader mode; then choose TI firmware.
4. Enter 10-60 seconds and click the tick to save.
5. Connect both devices, review hashes, then start and confirm.
6. Watch progress and event log; use Cancel if necessary.

The individual-device Online folder dialog

Production uses Sync online folder on page 1 and downloads all supported images into its selectors. The Development Online folder dialog shown below lets you download a single image.

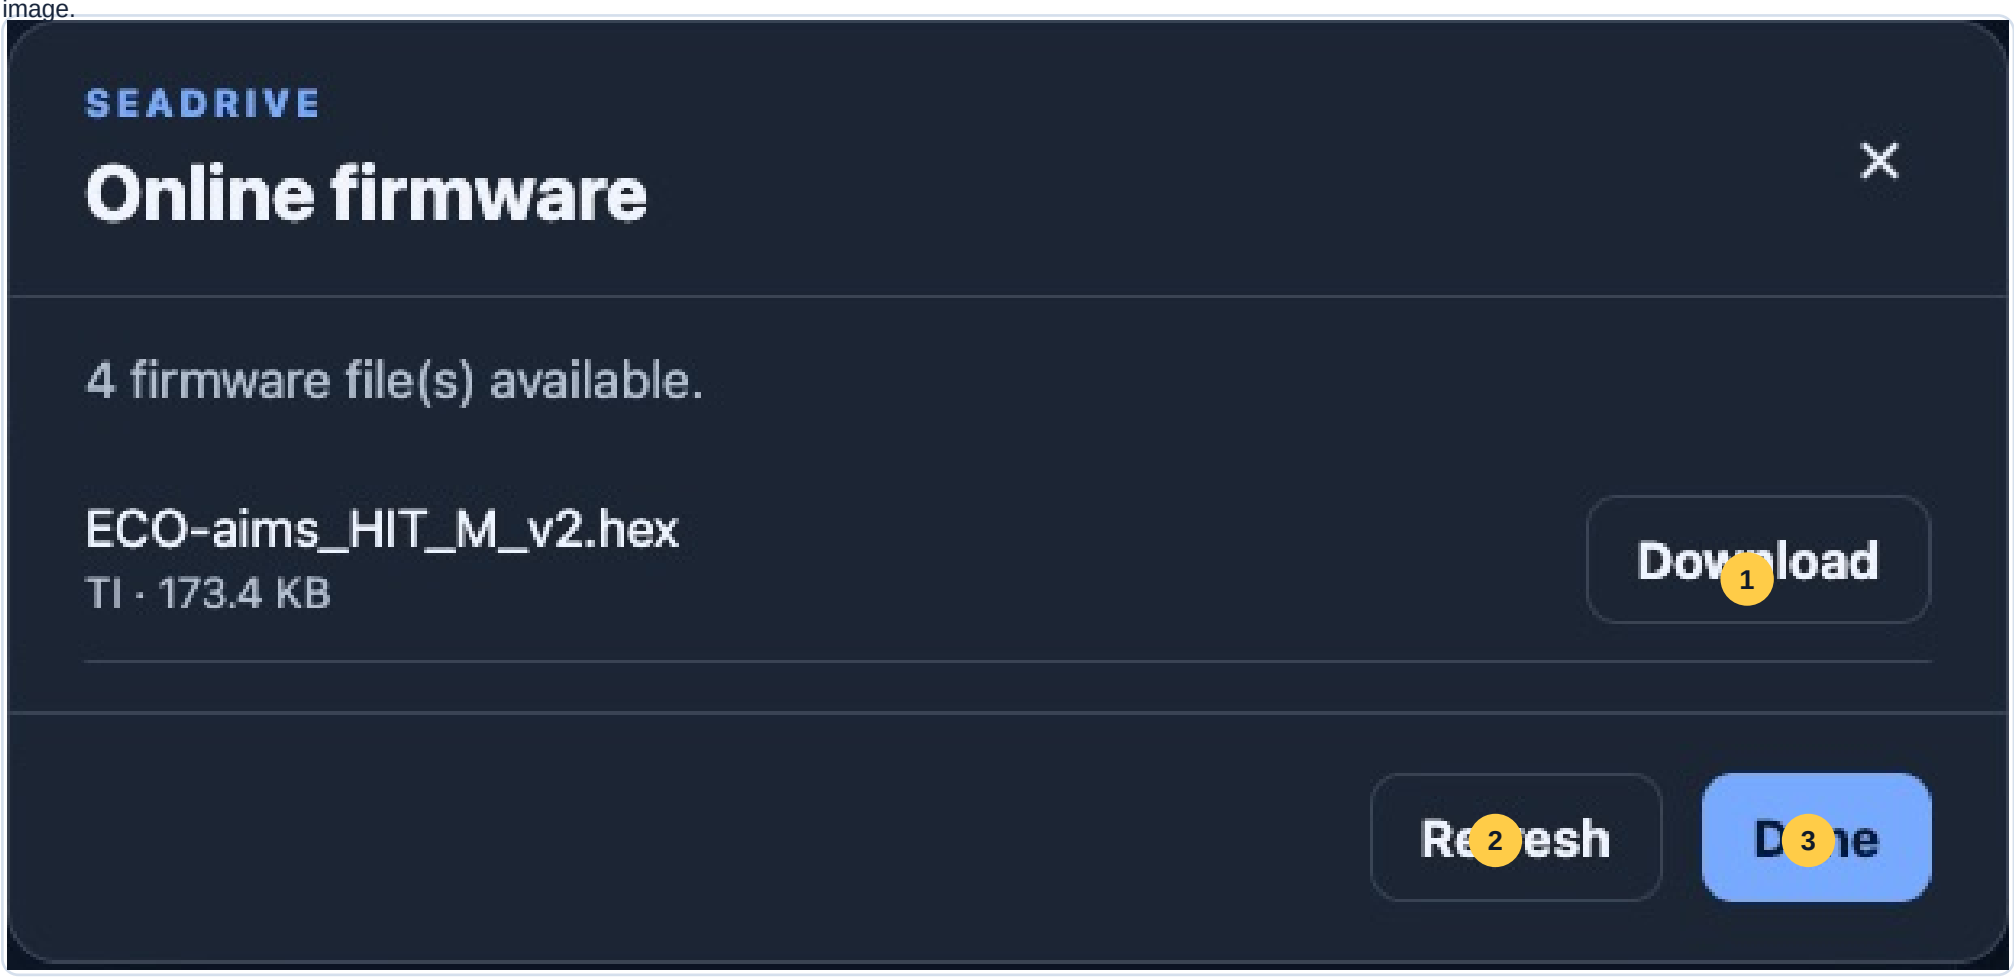


1. Download the selected firmware file for Development.
2. Refresh the listing from the configured SeaDrive share.
3. Done closes this dialog; choose the downloaded file.
4. For Production, use Choose local beside each device to attach files.

Supported types: ESP32 .bin; TI Intel HEX .hex or TI-Text .txt/.titxt/.titext. Check image names and SHA-256 before flashing.

Individual ESP32-C6 controls


Use this tab for check, erase, or ESP-only flash

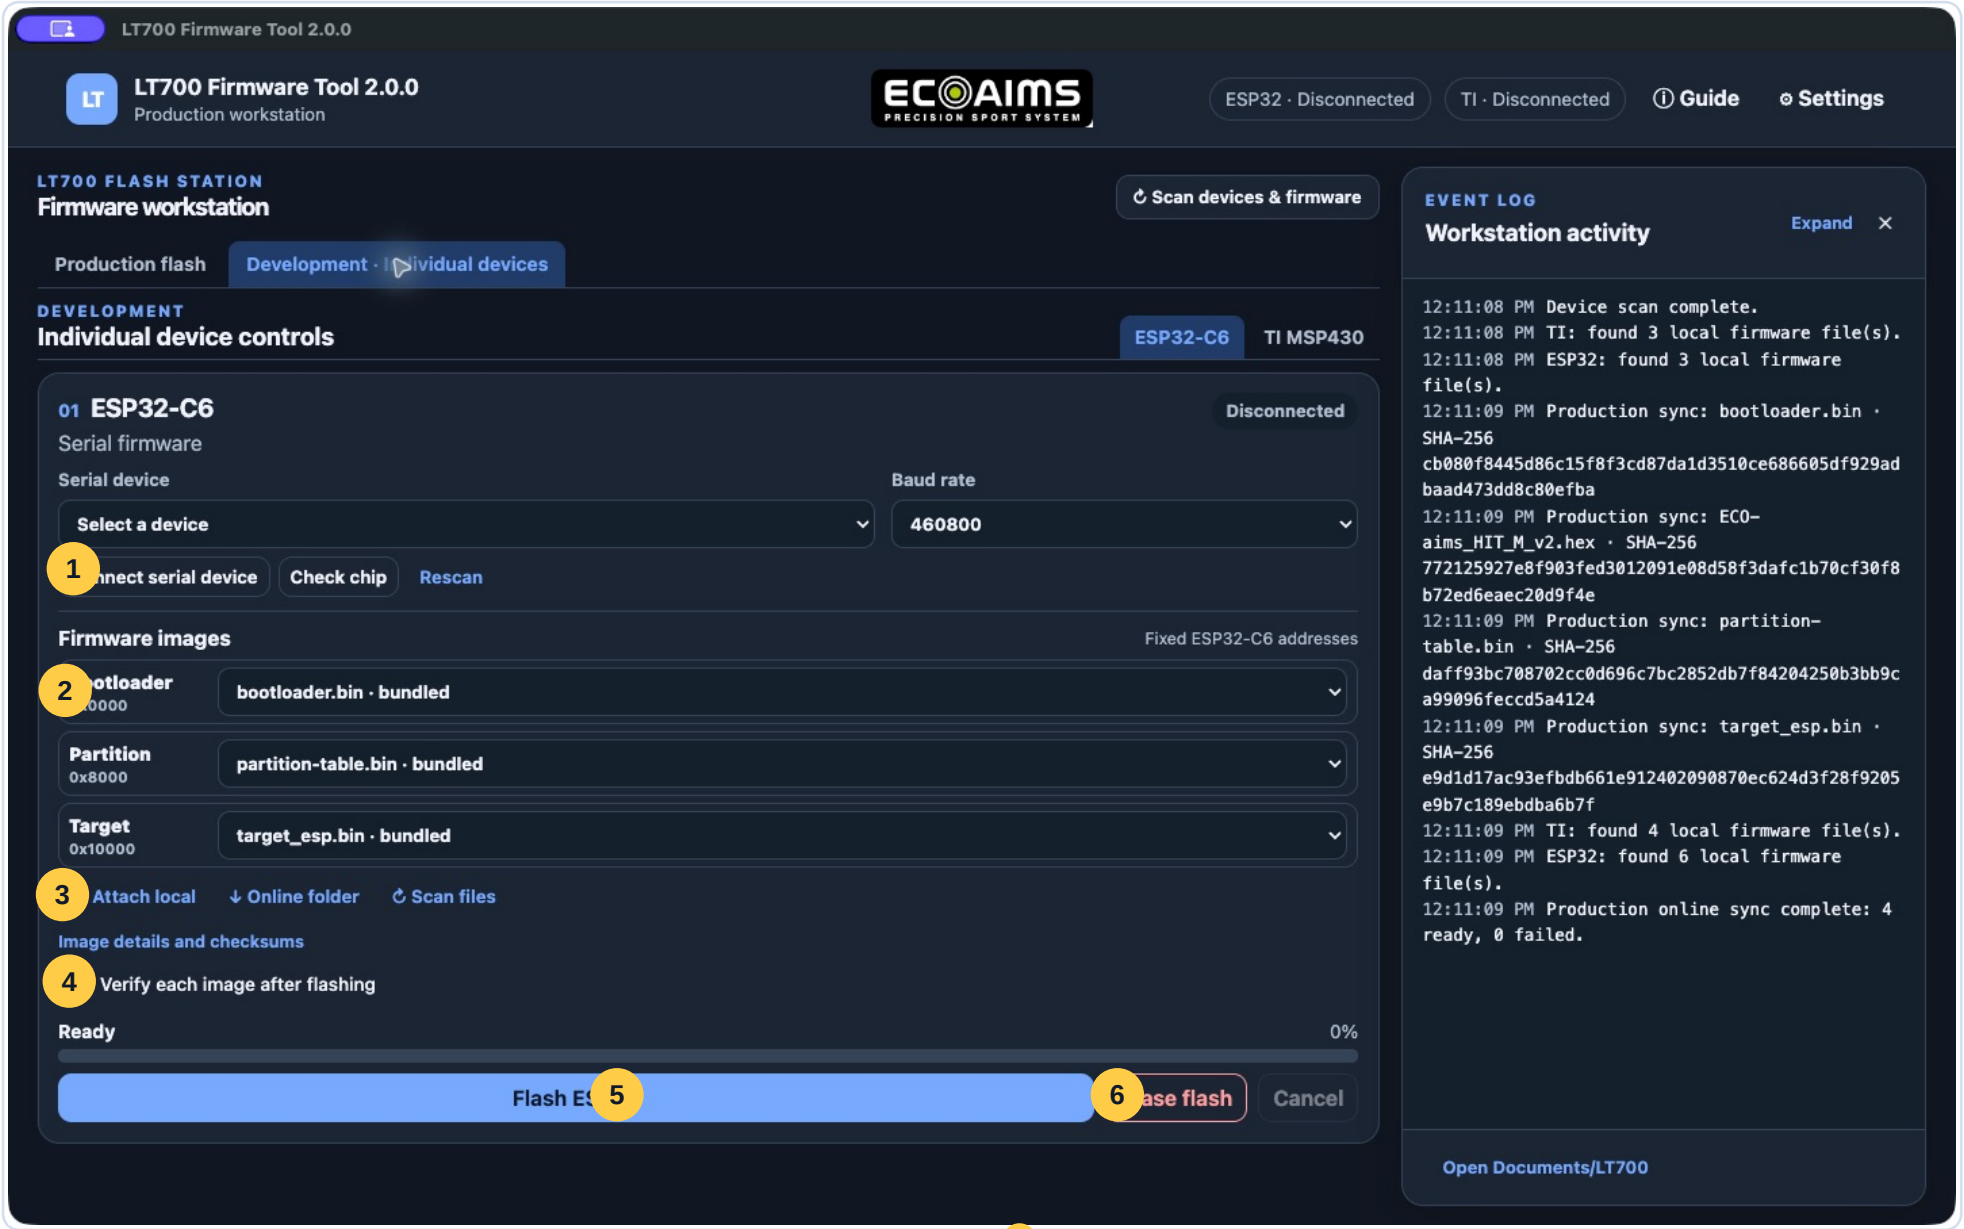

1. Connect serial device; choose port and baud rate.
2. Review bootloader, partition, and target at fixed addresses.
3. Attach local or download online; rescan files as needed.
4. Keep Verify enabled when image verification is required.
5. Check chip or Flash ESP32; confirm before programming.
6. Erase flash clears all ESP contents; confirm carefully.

Individual TI MSP430 controls


Press SW3 + SW2 before connecting TI

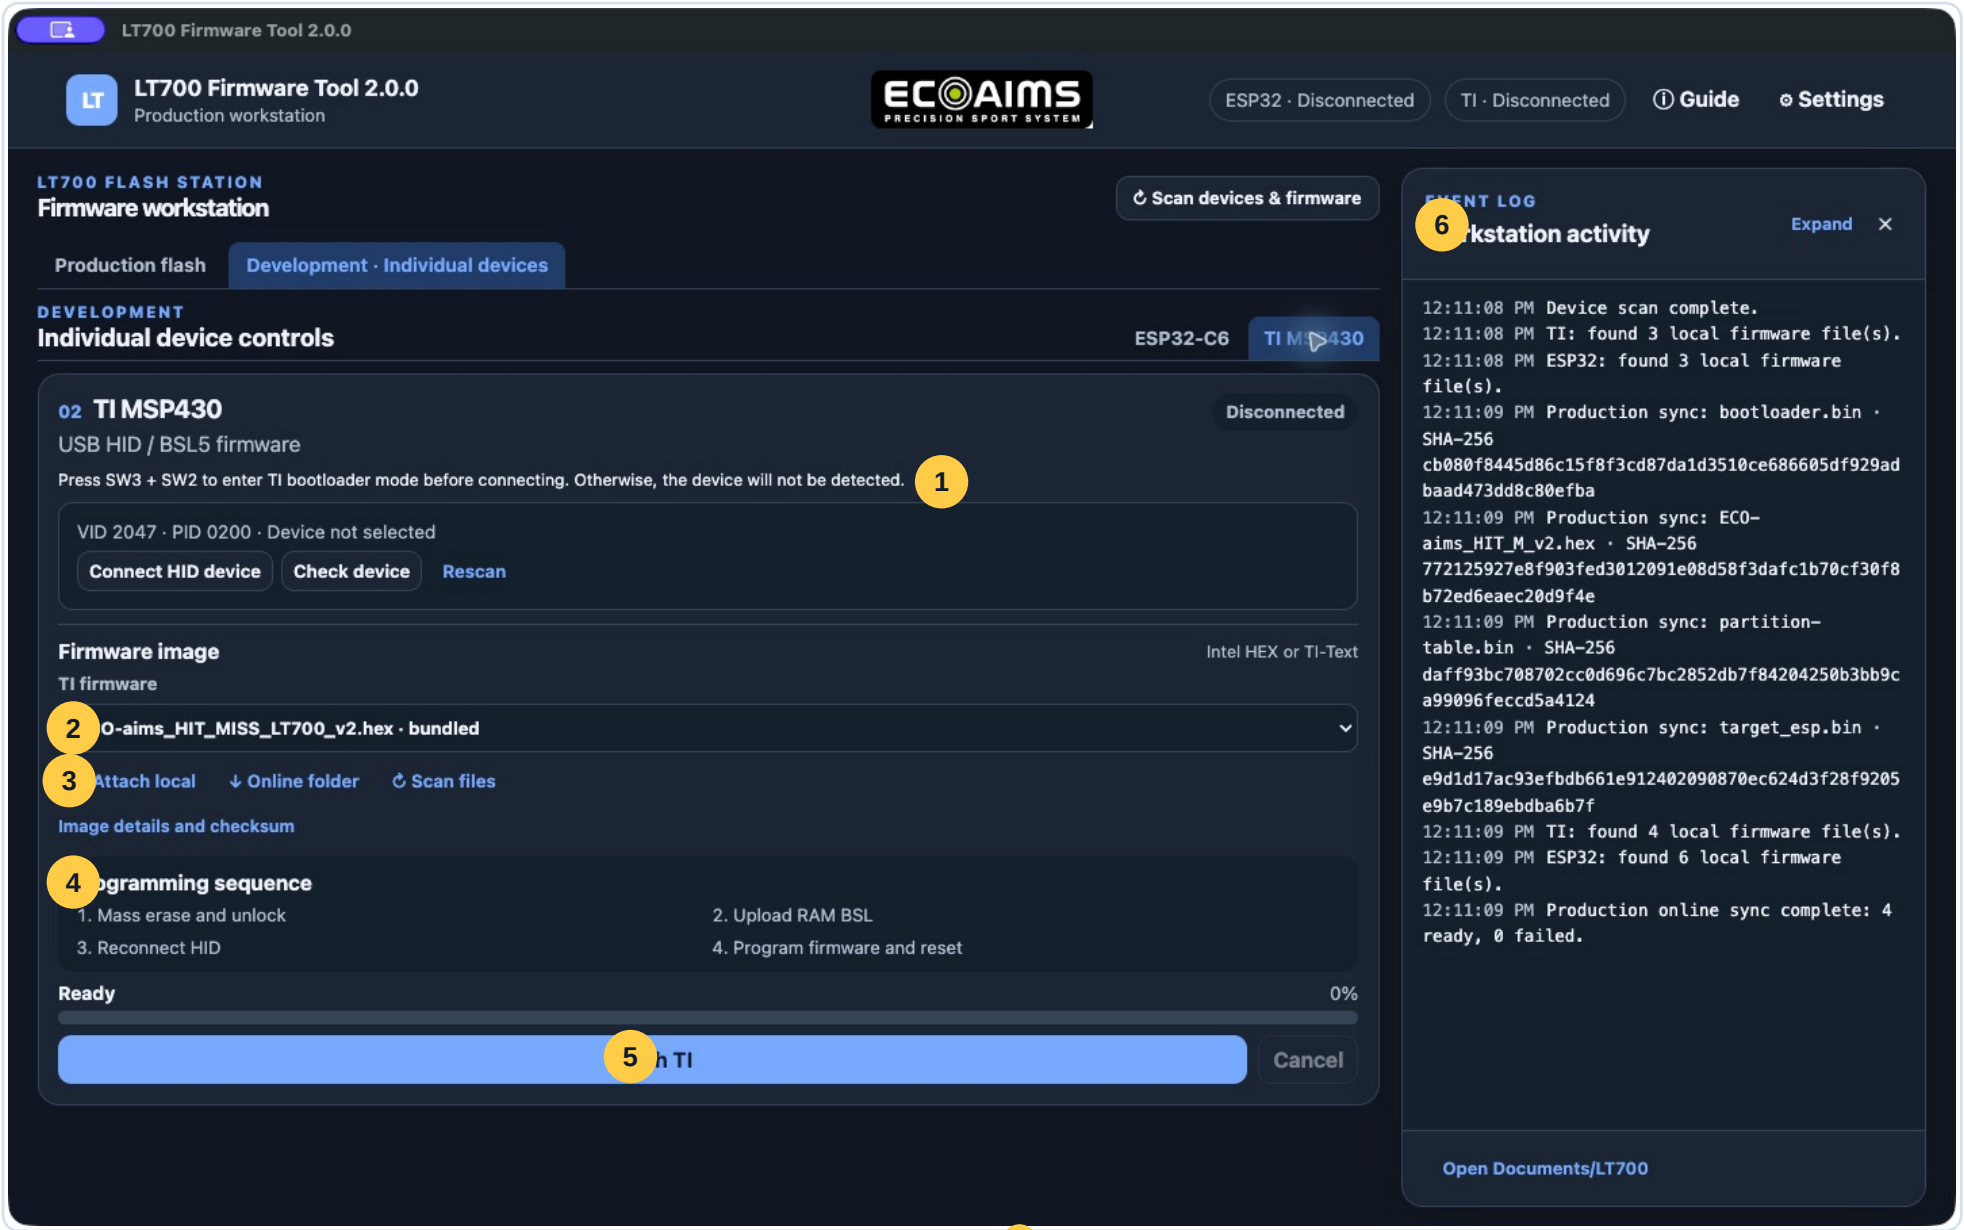

1. Press SW3 + SW2 for TI bootloader mode, then connect HID.
2. Select the intended TI HEX or TI-Text image.
3. Attach local, download online, or rescan firmware.
4. The sequence mass-erases, uploads RAM BSL, and reconnects.
5. Click Flash TI and confirm the destructive operation.
6. Monitor progress and the right-hand event log.

Theme, SeaDrive link, and hotkeys

Settings screenshot from current app build

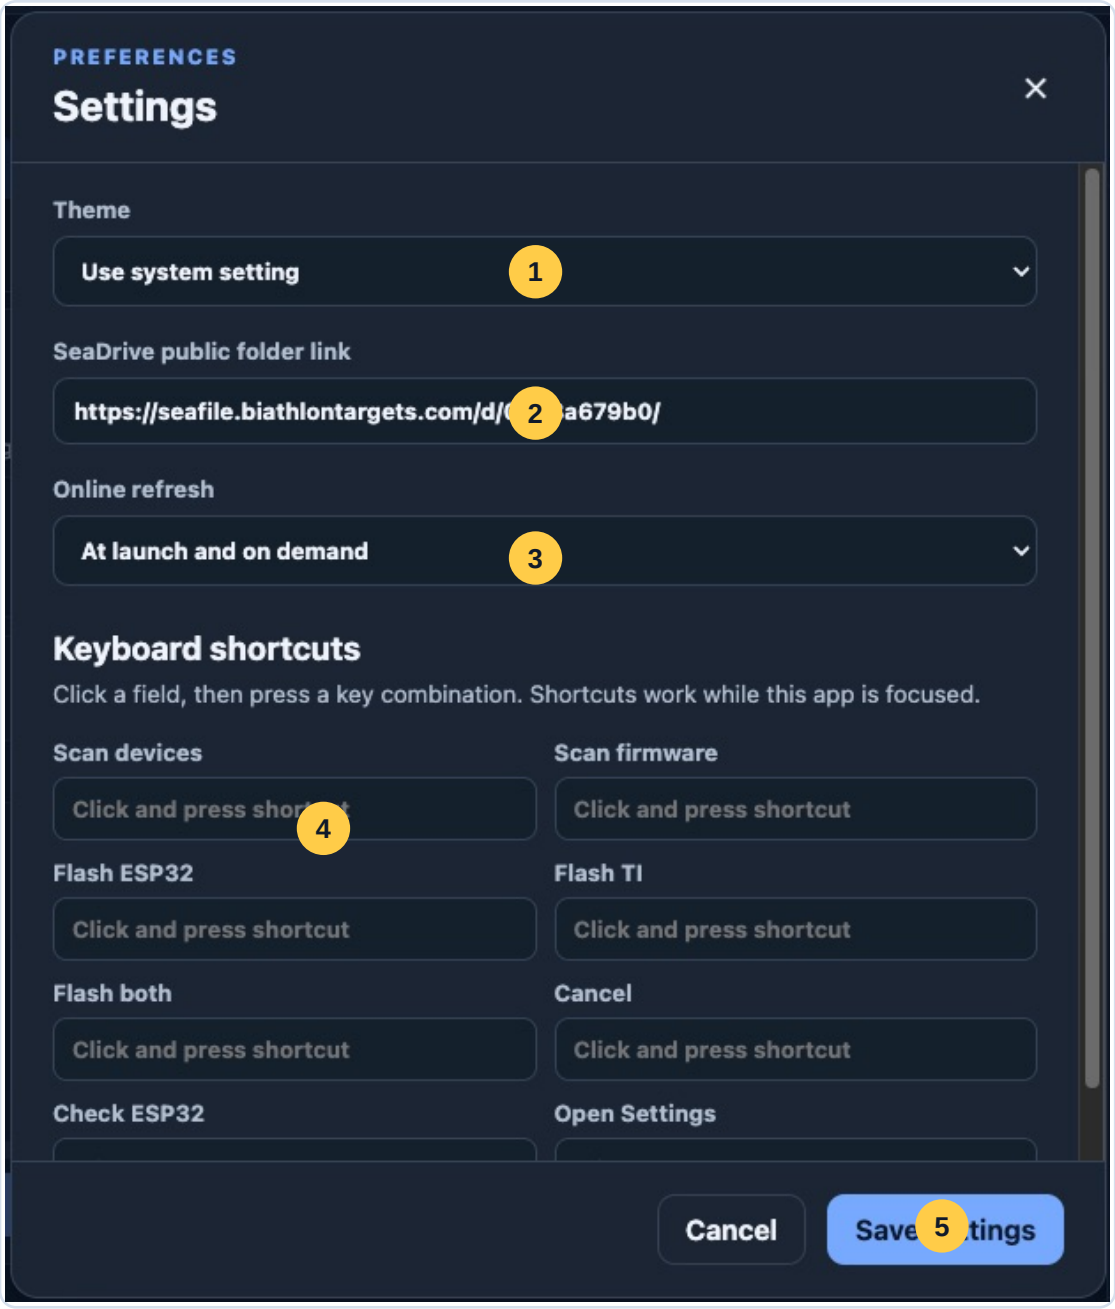

SETTINGS STEPS


1. Choose System, Light, or Dark theme.
2. Edit the public HTTPS SeaDrive folder link. A changed link needs a fresh sync.
3. Choose launch and on-demand refresh, or on-demand only.
4. Click a shortcut field, then press a key combination. Shortcuts work only while this app is focused.
5. Scroll within Settings for remaining actions; Save settings applies changes.

Shortcut actions

Scan devices, scan firmware, flash ESP32, flash TI, flash both, cancel, check ESP32, and open Settings.

Backspace or Delete clears a shortcut. The app rejects duplicate combinations.

Logs, results, and recovery

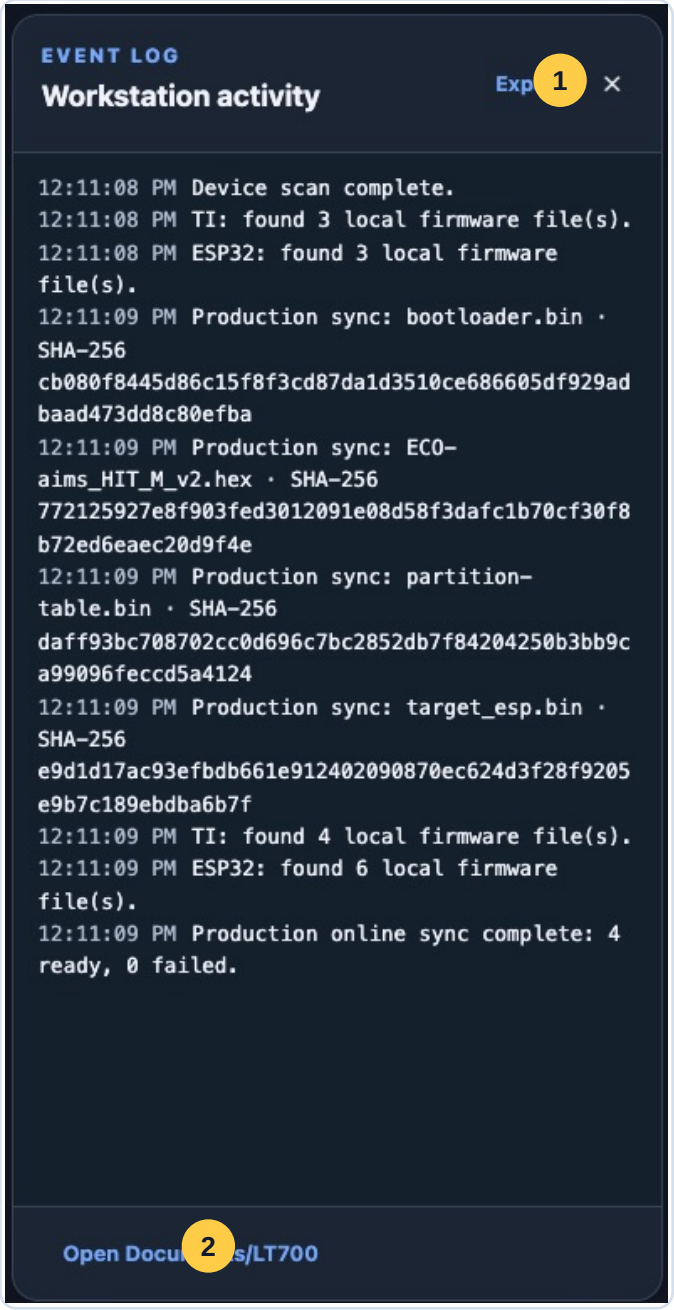

READ THE RESULT BEFORE DISCONNECTING

1. Expand or close the event log. The final line reports success, failure, or cancellation.

2. Open Documents/LT700 to locate the automatically saved, timestamped operation log.

IF SOMETHING STOPS

- No ESP serial port: check USB cable, power, CP210x driver, and reconnect; then Rescan.
- No TI HID device: press SW3 + SW2 to enter bootloader mode, reconnect, then Check device.
- SeaDrive unavailable: check the share link and network, retry Sync, or Choose local files.
- Image or checksum mismatch: stop and select the intended firmware before retrying.
- Cancelled or failed flash: treat the unit as incomplete. Review the saved log, restore the connection, and repeat the full intended sequence.

Operator acceptance: verify device discovery, flashing, sync, and logs on real LT700 hardware.