Hot tub user manual

Forest King Tub website · Last updated: 10 November 2026

If the requirements set out in this manual are not followed, warranty service will not apply. This manual is an integral part of the warranty card.

1. Preparation, placement and storage

The hot tub must be placed on a level, horizontal and firm base. A hot tub with an acrylic liner must be installed under a roof (terrace with a roof, shelter or gazebo), protected from direct sunlight, rain and snow. A hot tub with a gelcoat liner may also be installed outdoors. If the product is placed incorrectly or on an uneven surface, the hot tub may lose its strength, stability or even its appearance.

The cladding and base of the hot tub are made of wood. With changing outdoor temperatures and weather conditions that are beyond our control (sun, rain, snow, etc.), changes in appearance may occur. In moisture wood expands, when drying it shrinks, and rot may begin. It is therefore very important to keep the hot tub in a dry, well-ventilated place; a roof or shelter is always recommended.

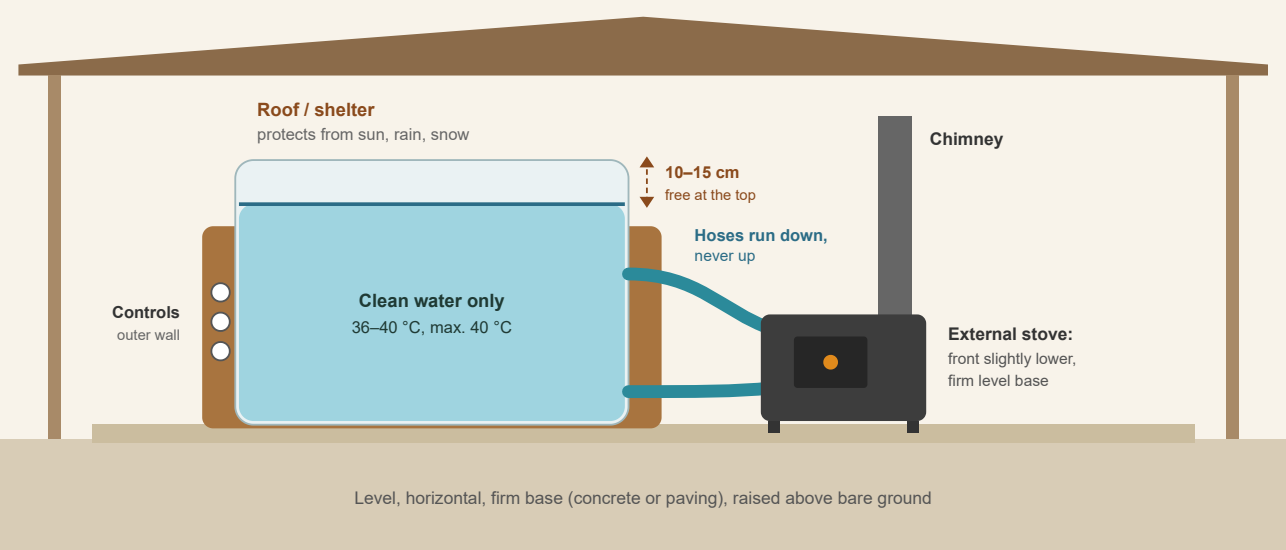


Figure 1. Recommended installation of a hot tub with an external stove.

2. Electrical connection

IMPORTANT: If your hot tub has electrical components (hydromassage system, LED lighting), we recommend connecting it directly to an automatic circuit breaker and using a residual-current device (RCD) for additional protection.

IMPORTANT: To avoid failures of the electrical equipment and to ensure safety, make sure that the installation is earthed (grounded).

3. Hot tub with external stove

The external stove, like the hot tub, must be placed on a level, firm base. It is important that the front of the stove sits slightly lower. The connection hoses between the hot tub and the stove must not run upwards; they must be lowered and run downwards.

Use only clean water without chemicals or salts. If the iron content of the water exceeds the norm (200 µg/l), an iron-removal filter must be installed; if the water is hard, a water softening / descaling filter is required. Iron and limescale deposits prevent gates and valves from closing tightly and clog the equipment.

Only after the hot tub has been filled with water, leaving 10–15 cm unfilled at the top, may you start to light the stove. We recommend using dry firewood. The recommended water temperature is 36–40 °C; do not exceed 40 °C. The draught can be adjusted with the vent on the stove door or with the ash drawer.

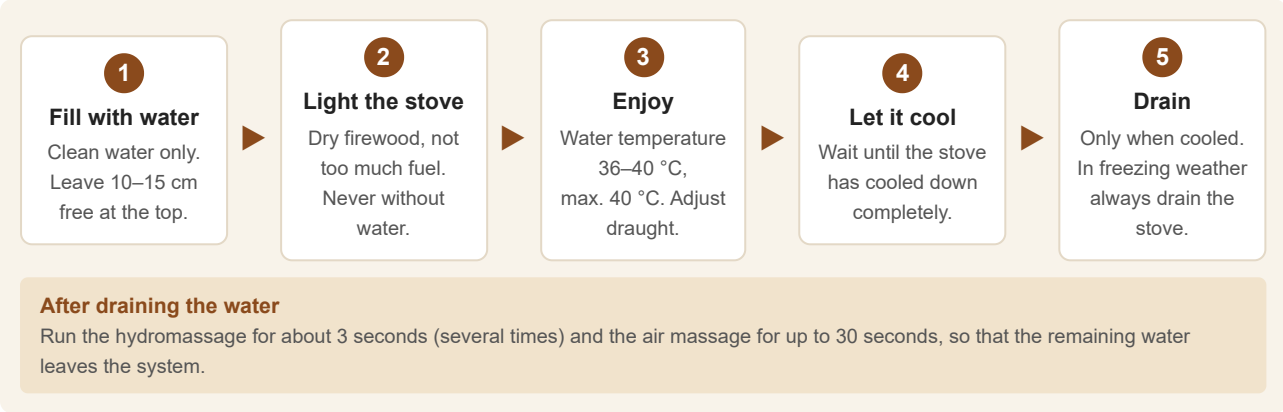


Figure 2. Using the stove: from filling to draining.

IMPORTANT: Do not put too much fuel into the external stove, so that the fire does not come out through the door and the draught goes up the chimney.

IMPORTANT: Remember that the stove must not be lit until the hot tub contains the required amount of water, because the heat it produces will damage the hot tub.

IMPORTANT: The water may only be drained when the stove has cooled down completely. Otherwise the heat of the stove will damage the hot tub and ruin the stove.

IMPORTANT: At sub-zero air temperatures, after you finish using the hot tub, the water must be drained from the stove. Otherwise the stove will crack.

IMPORTANT: We do not recommend using chlorine and other chemicals (bath foam, etc.), as they affect the durability of the stove and all the equipment.

PROHIBITED: Using any chemicals (detergents, chlorine, solvents, abrasive products) to clean the hot tub after use. Rinse it with clean water and wipe it with a soft, damp cloth.

PROHIBITED: Using glass containers, hard and sharp foreign objects, climbing into the hot tub with footwear, or sitting on the edge of the hot tub.

IMPORTANT: During the first and second heating of the hot tub water, condensation may appear from the stove's firebox. After the third firing the condensation no longer appears. This can happen in the stoves of hot tubs of any manufacturer: very cold water that starts to be heated causes atmospheric moisture to condense, and once the inner walls of the stove have burned in, the condensate no longer forms. The condensation also disappears when the temperature of the heated water reaches the air temperature.

4. Hydromassage, air massage and LED lighting

The hydromassage and air massage systems and the LED lighting are switched on and off with buttons, and the strength of the flow is controlled with a regulator. The control buttons are installed on the outer wall of the hot tub.

IMPORTANT: After draining the water, switch on the massage system for about 3 seconds (several times), and the air massage system for up to 30 seconds, so that the water leaves the system.

IMPORTANT: In cold weather, after filling the hot tub with water, the hydro and air massage systems may only be switched on once the water has warmed up to +30 °C.

IMPORTANT: When the massage system is not in use, keep the flow regulator at the “MIN” position. In any other position the switch will not be closed and will let water through.

PROHIBITED: Keeping water in the hot tub if the outdoor temperature is below zero and a positive water temperature is not maintained in the hot tub.

PROHIBITED: Running the water massage system without water for longer than 3 seconds. The pump is designed to operate with water in it.