

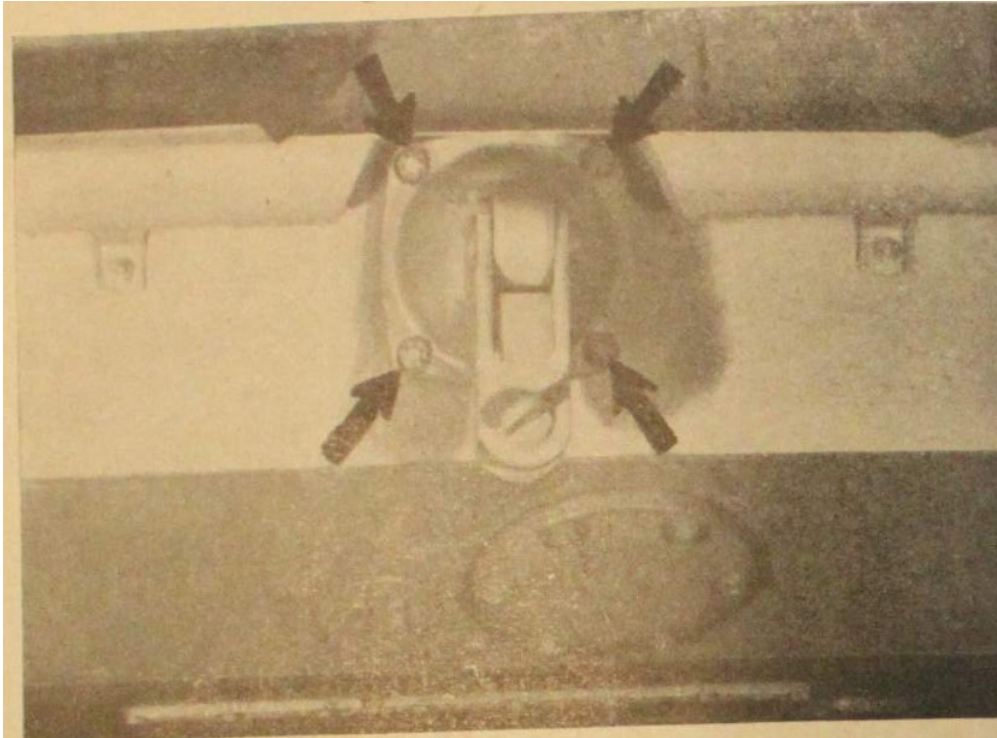


Fig. 5 (Bild 5)

Remove the split pins (Splinte), then use a 22 mm socket spanner (Steckschlüssel) to remove the four nuts from the end cover (Abschlußkappe).

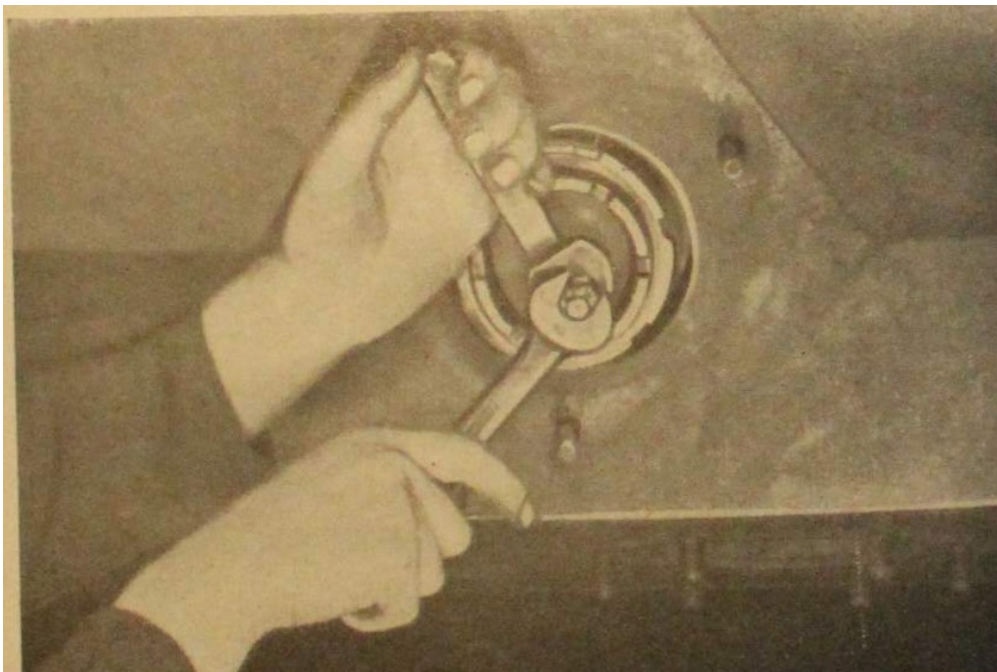


Fig. 6 (Bild 6)

Remove the split pins (Splinte), then use 19 mm and 22 mm open-ended spanners (Maulschlüssel) to loosen the castle nut (Kronenmutter) on the crank spindle (Kurbelachse).



Fig. 7 (Bild 7)

Use a screwdriver to remove the hook-type circlip (Hakensprengring) from the ring nut (Ringmutter), then loosen the ring nut with hook spanner III DB 124 (Hakenschlüssel).

HAKENS PRENGRING = hook-type circlip.

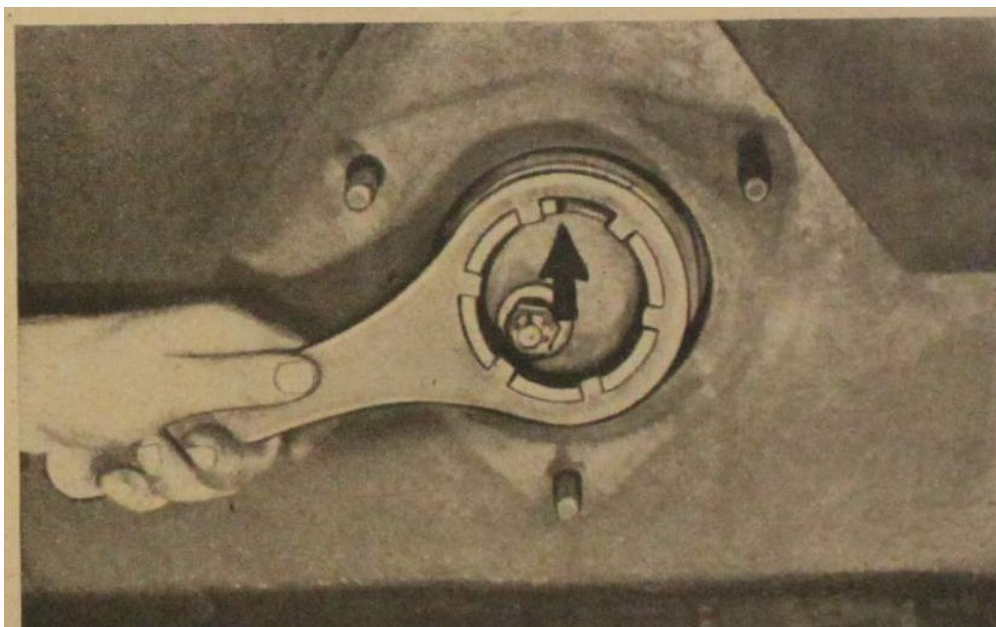


Fig. 8 (Bild 8)

Using pin spanner III DB 105 (Ringzapfenschlüssel), turn the eccentric bush (Exzenterbuchse) until the castle nut (Kronenmutter) on the crank spindle is at the top. Lightly retighten the ring nut (Ringmutter). (The fan belts are tensioned in the same way, except that the eccentric bush is turned in the opposite direction so that the castle nut on the crank spindle points as far downwards as possible.) Check the fan belts for correct tension, Figs. 19 and 20. Tighten the ring nut fully and secure it with the hook-type circlip (Hakensprengring). Tighten the castle nut fully and secure it with a split pin.

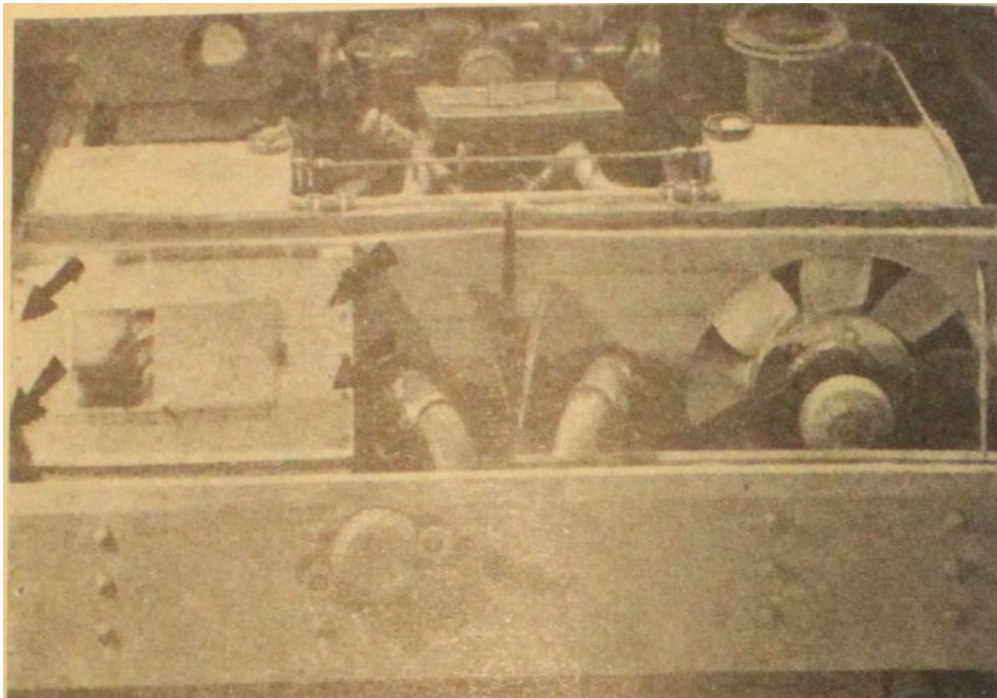


Fig. 9 (Bild 9)

Remove the warm-air heating attachment for the fighting compartment (Kampfraum) from the rear air baffle (Luftleitblech) on later versions of the Panzer III and Sturmgeschütz.

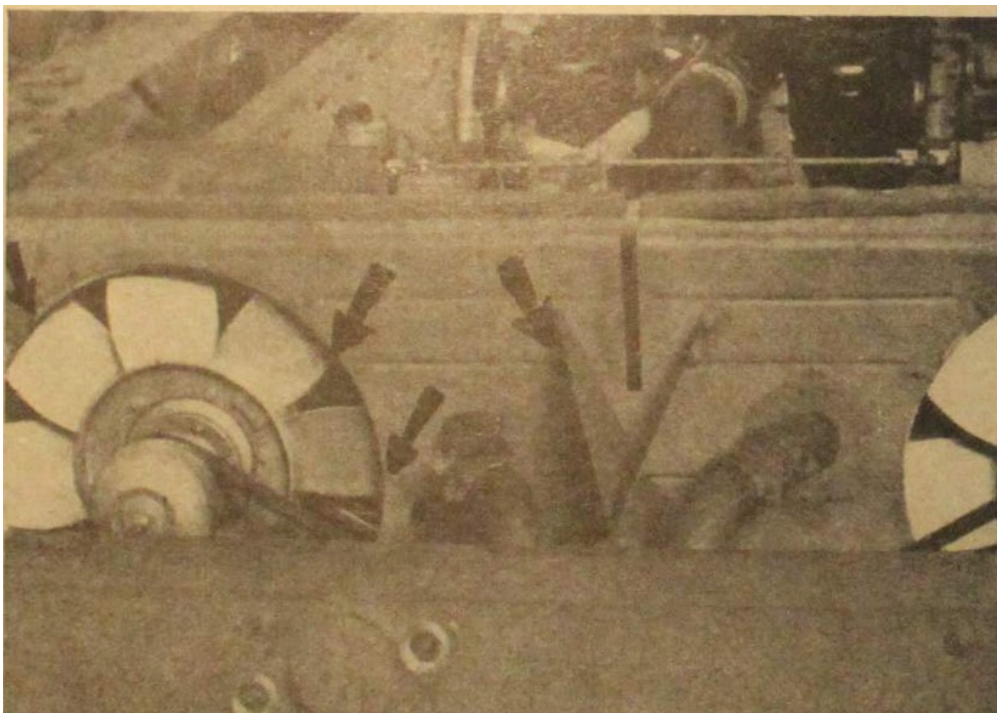


Fig. 10 (Bild 10)

Using 10 mm and 14 mm open-ended spanners (Maulschlüssel), remove the bolts from the air baffle (Luftleitblech) and the struts on the left-hand fan.

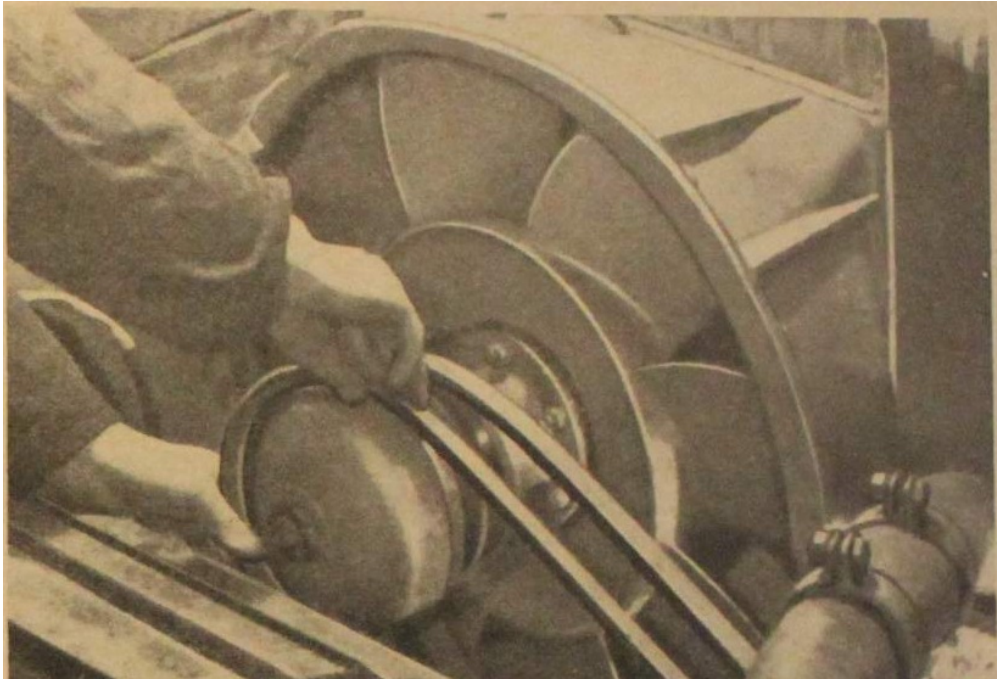


Fig. 11 (Bild 11)

Remove both fan belts (Lüfterriemen) from the left-hand fan by hand. Do not remove the fan belts with sharp objects.

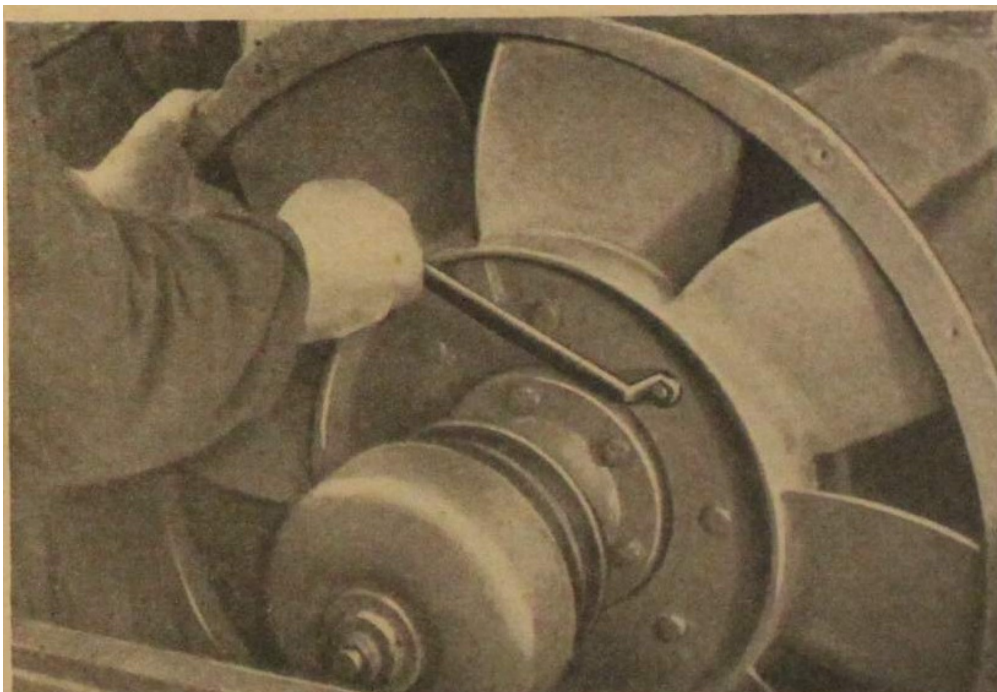


Fig. 12 (Bild 12)

Release the locking devices on the fan impeller retaining bolts and remove the bolts with a 14 mm ring spanner (Ringschlüssel). Lift the fan impeller (Lüfterflügel) off the hub.

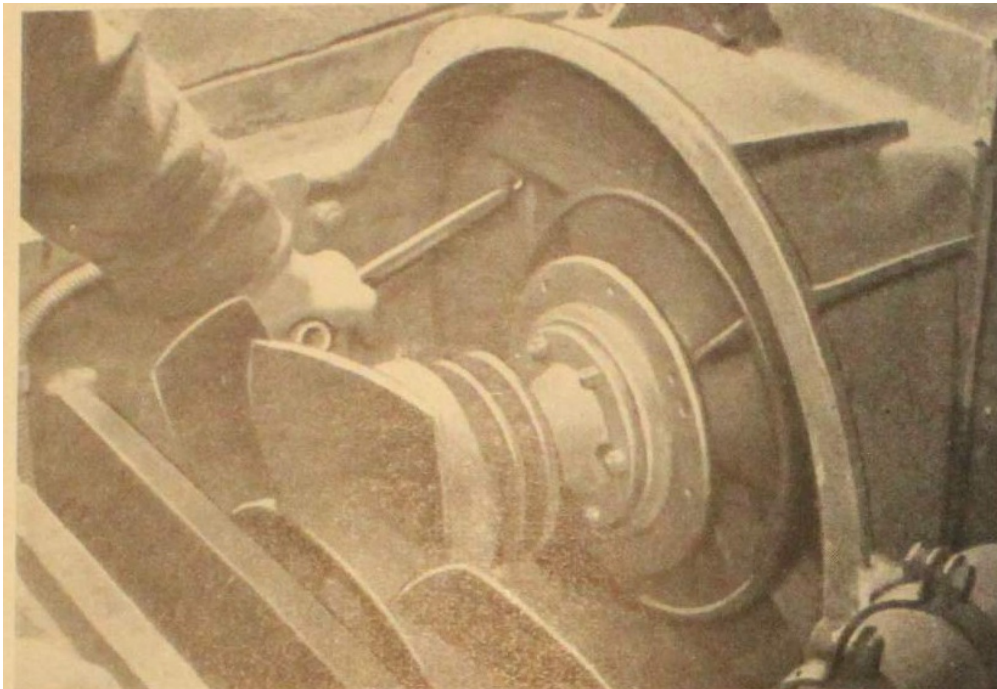


Fig. 13 (Bild 13)

Withdraw the split pins (Splinte) from the fan-housing retaining bolts and remove the castle nuts (Kronenmuttern) with a 22 mm ring spanner or socket spanner (Ring- oder Steckschlüssel).

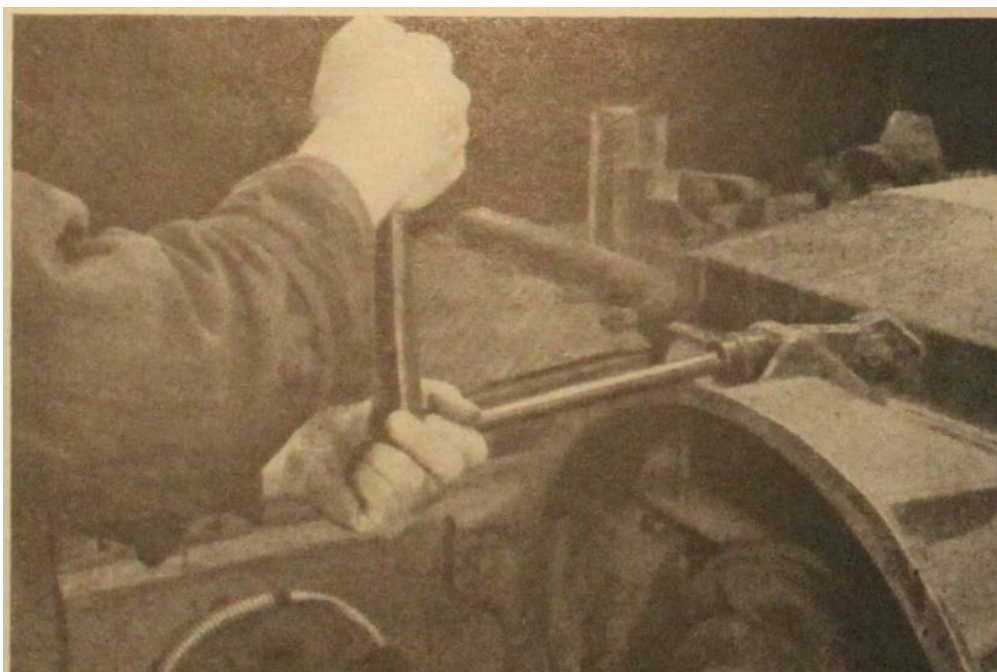


Fig. 14 (Bild 14)

Using a 22 mm ring spanner or socket spanner (Ring- oder Steckschlüssel), remove the nut from the coupling joint (Gelenkverschraubung) between the fan and radiator, then lift out the fan. Take care of the felt gasket (Filzdichtung) between the fan and radiator.

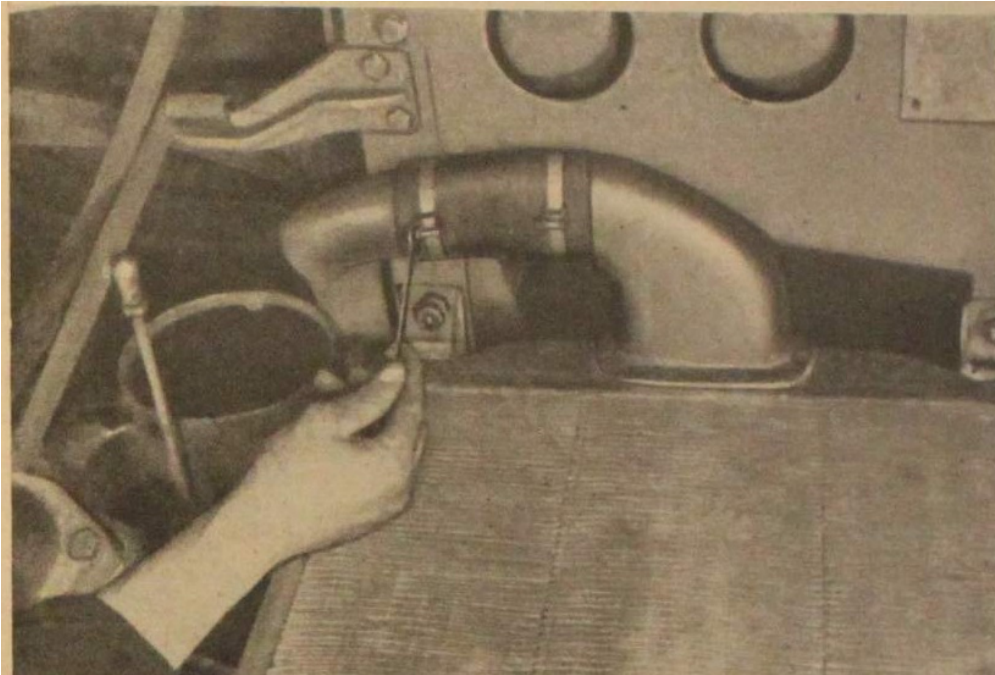


Fig. 15 (Bild 15)

Using an 8 mm open-ended spanner (Maulschlüssel) and a screwdriver, loosen the hose clips (Schlauchbinder) on the left-hand radiator and the pipework.



Fig. 16 (Bild 16)

Carefully free the coolant hoses (Kühlwasserschläuche) with a screwdriver, then push them off the radiator stubs (Kühlerstutzen) and onto the water pipes.

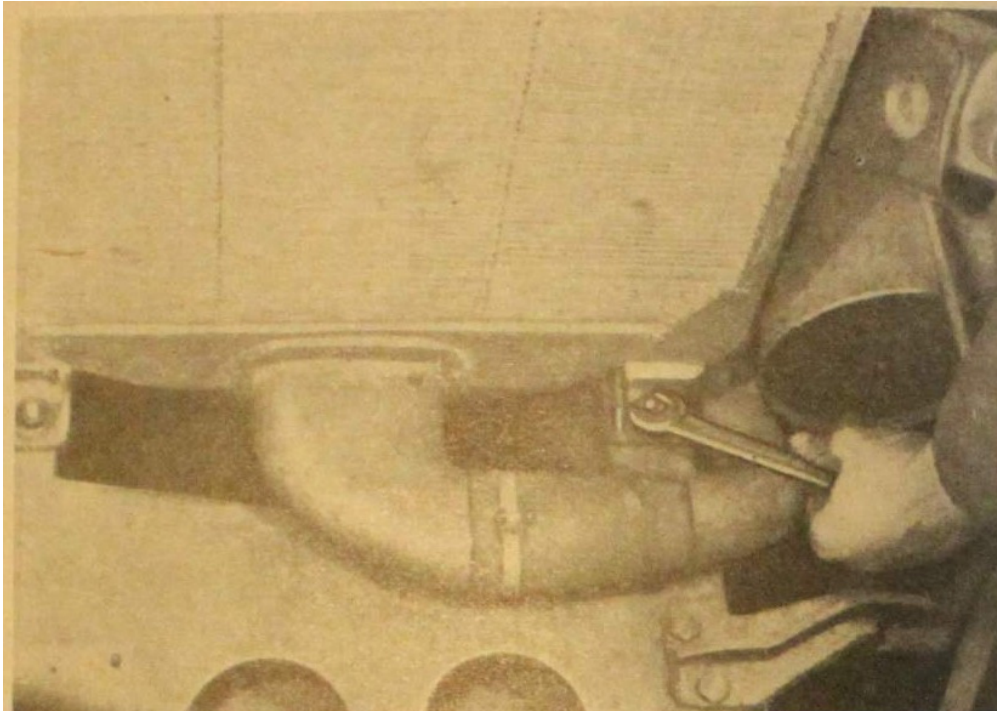


Fig. 17 (Bild 17)

Remove the split pins (Splinte) from the castle nuts (Kronenmuttern) of the radiator mountings, then unscrew the nuts with a 17 mm open-ended spanner (Maulschlüssel).

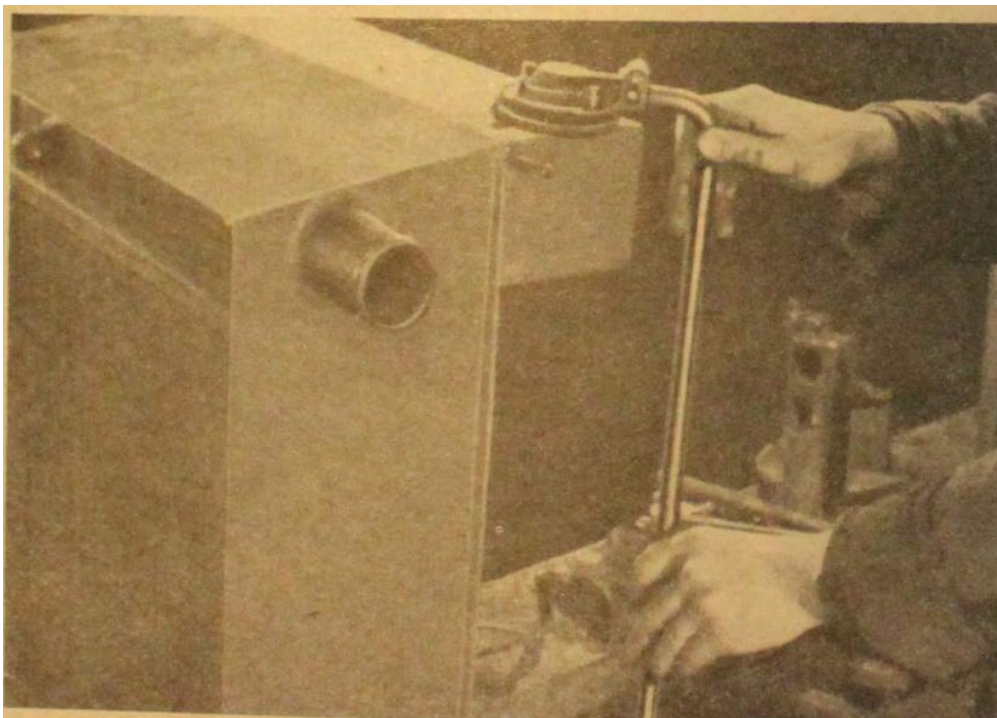


Fig. 18 (Bild 18)

Loosen the clamping screws on the pressure-relief valve (Überdruckventil) with an 11 mm open-ended spanner (Maulschlüssel) and withdraw the overflow pipe (Überlaufrohr). Lift the radiator upwards and out.

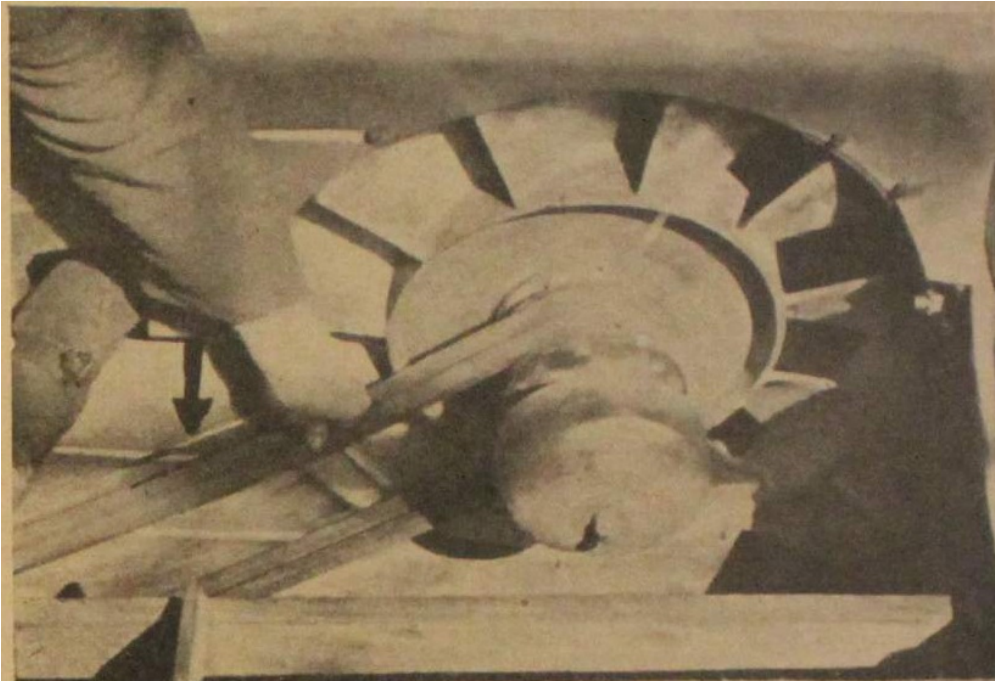


Fig. 19 (Bild 19)

Using the fan-belt tensioning device (Lüfterriemen-Nachstellvorrichtung), tension the belts so that they can be depressed by 2 cm at the midpoint.

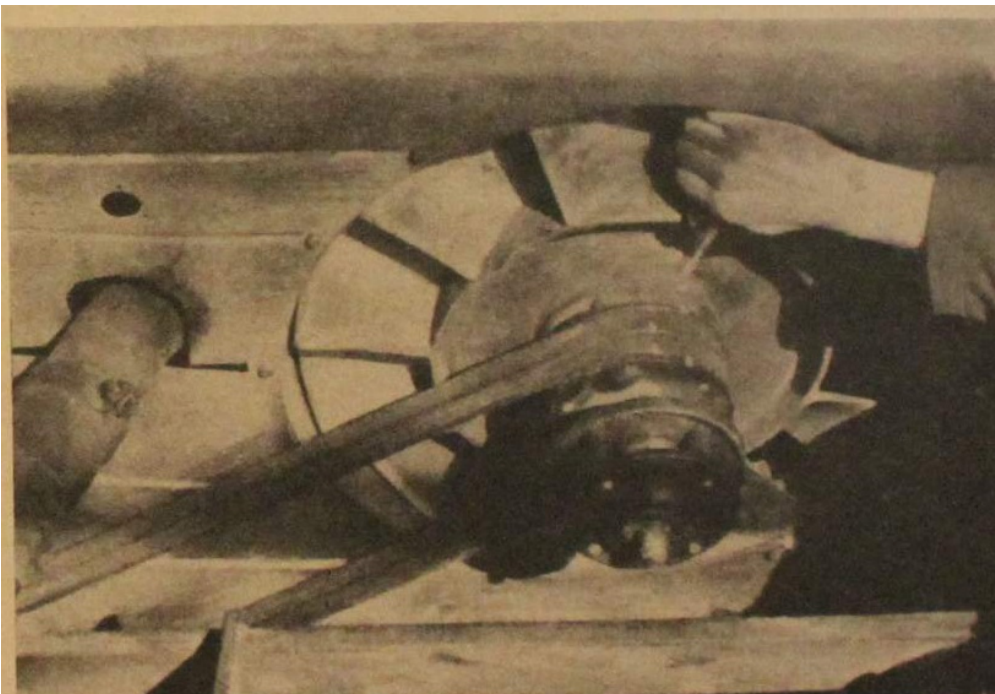


Fig. 20 (Bild 20)

Adjust the slip clutch (Rutschkupplung) with the hook spanner (Hakenschlüssel) so that, with the belts tensioned, the fan is difficult to turn by pulling at its circumference. Use the applied chalk marks to check the slip-clutch setting by rapidly accelerating the engine. (The belt pulley (Riemenscheibe) must slip when the throttle is opened.)