

7. SYSTEM DESCRIPTION

The 250-Watt, retractable landing lights listed in this supplement are similar, however, vary in their installation position and switching. Lights 105-86561 and D132-478 are installed on the landing gear LH forward cross tube. The remaining listed lights are installed along the aircraft longitudinal centerline in a fairing at the fuselage lower nose area.

NOTE Use of centerline-mounted landing lights is restricted when Searchlight (FMS 10-35 or FMS 10-38) is installed.

The landing light is powered via a circuit breaker located on the center console switch panel. Operation is controlled from the switch box located on the end of the collective lever.

Lights listed as being automatically switched are controlled by the single EXT-RETR switch, i.e. the lamp is automatically switched on and off as the light extends from and respectively retracts into its housing.

Lights listed as being manually switched have two separate switches; one for extending/retracting (EXT-RETR) the light and one for lamp operation (ON-OFF).

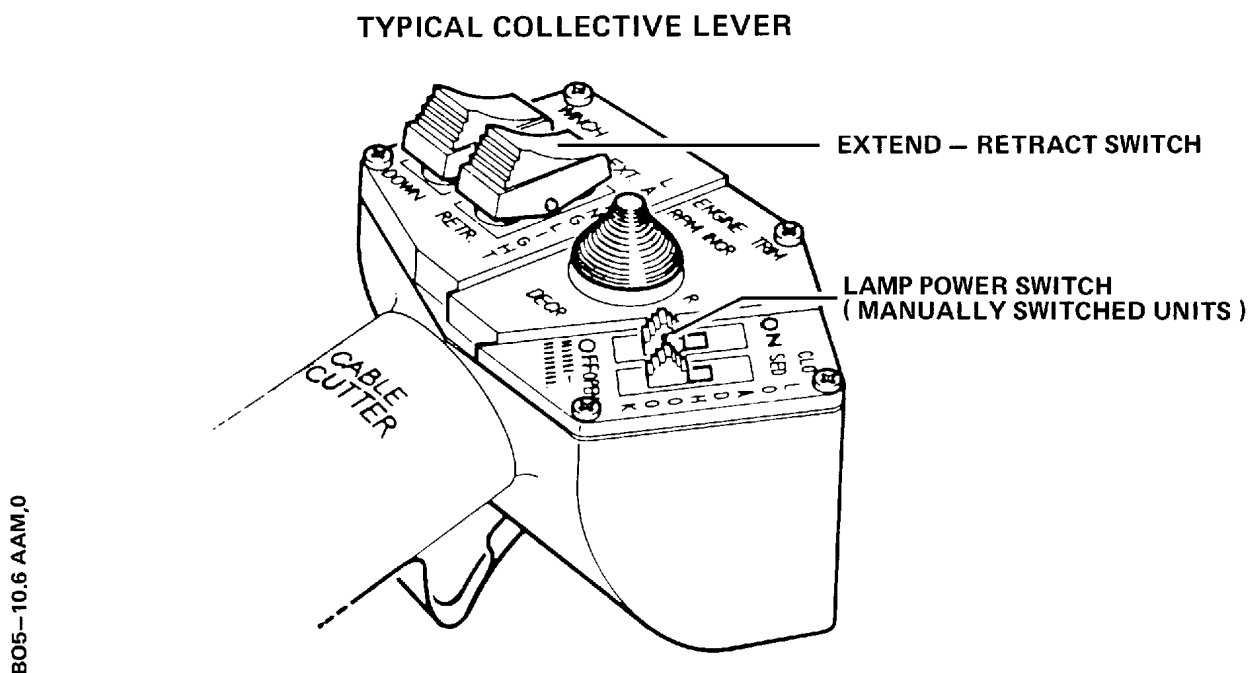


Fig. 1 Landing Light Controls

