

6. MASS AND BALANCE

6.1 EQUIPMENT LIST ENTRIES

System/Equipment Designation	Part No.	Mass (kg)	Arm (mm)	Massmoment (kgmm)
Main Rotor Folding System	105-80901	0.5	3200	1600
Main Rotor Folding System, Marine Version	105-80902	1.2	3700	4440
NOTE Blade folding accessories are not included in above values.				

7. SYSTEM DESCRIPTION

Installation of the main rotor folding system provides for two of the blades to be pivoted around their primary retention bolt axes allowing for a narrower overall width to ease ground handling and parking of the helicopter. The marine (shipboard) version differs in the number of attachments for the blade cradle assemblies.

Two opposite blades may be folded by removing the appropriate blade attachment pin (one for each foldable blade) and pivoting one blade forward, the other aft using a hand-held blade support bar. Blade cradle assemblies secure the folded rotor blades parallel with the fuselage longitudinal axis.

NOTE The blade folding accessories (support bar and cradle assemblies) are ground support equipment (not part of the flyaway gear).

8. HANDLING, SERVICING, AND MAINTENANCE

8.1 ROTOR BLADE FOLDING/UNFOLDING

CAUTION WHEN ROTOR BLADES ARE FOLDED, OBSERVE THE FOLLOWING PRECAUTIONS:

- DO NOT ROTATE OR APPLY CONTROL INPUTS TO ROTOR SYSTEM.
- DO NOT PRESSURIZE HYDRAULIC SYSTEM.

8.1.1 Folding (see Fig. 1)

1. Rotate main rotor system so that blades having folding device are perpendicular (90°) to fuselage longitudinal centerline.

CAUTION DO NOT APPLY ROTOR BRAKE WHEN AMBIENT TEMP IS BELOW -30 °C.

2. Apply rotor brake when possible.

3. Install forward and aft cradle assemblies so that the non-folding blades are positioned in the lower cradles.

NOTE Collective lever must be full down, cyclic stick must be in neutral position and both controls unlocked.

4. Slide support pole bow over end of blade to be folded. Raise support pole enough so that the blade tip is level with the blade root.
5. Remove quick-release pin and raise attach pin locking lever on blade to be folded.
6. Remove attach pin from blade mounting fork and install in arresting bore provided in the pitch horn lever. Secure attach pin using quick-release pin.

NOTE Slight up/down blade-end movement and rotation of attach pin back and forth will ease its removal.

CAUTION DO NOT FOLD BLADE UNTIL AFTER PITCH HORN LEVER IS LOCKED IN POSITION.

7. Using the support pole, swing blade in direction of rotation and insert in its respective cradle.
8. Install U-shaped retaining bar to lock blades in their cradle.
9. Repeat above steps 4. thru 8. for remaining blade.
10. Remove support pole.

8.1.2 **Unfolding** (see Fig. 1)

1. Slide support pole bow over end of blade to be folded. Raise support pole enough so that the blade tip is level with the blade root.
2. Remove U-shaped retaining bar on blade to be folded.
3. Using the support pole, swing blade into position.
4. Remove quick-release pin and attach pin from pitch horn lever.
5. Install attach pin, close locking lever and install quick-release pin.

NOTE Take up slack of quick-release pin retaining cord by wrapping it several times around locking lever before installing quick-release pin.

6. Repeat above steps 1. thru 5. for remaining blade.
7. Remove support pole and cradle assemblies.

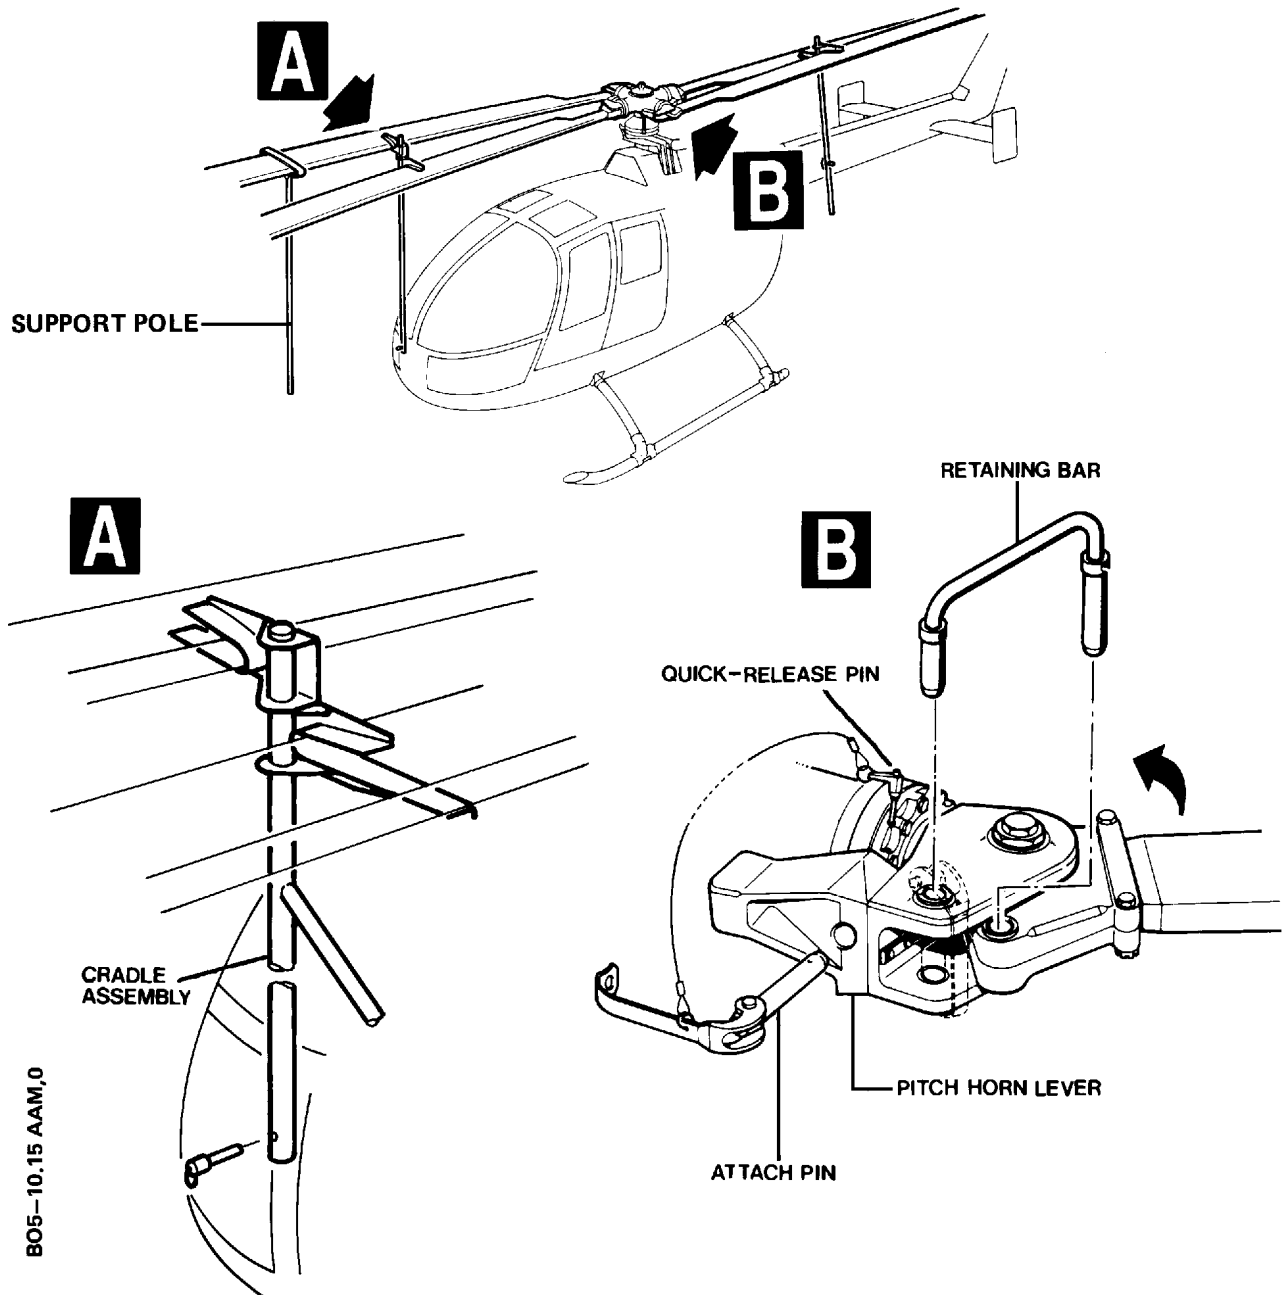


Fig. 1 Main Rotor Folding System

