

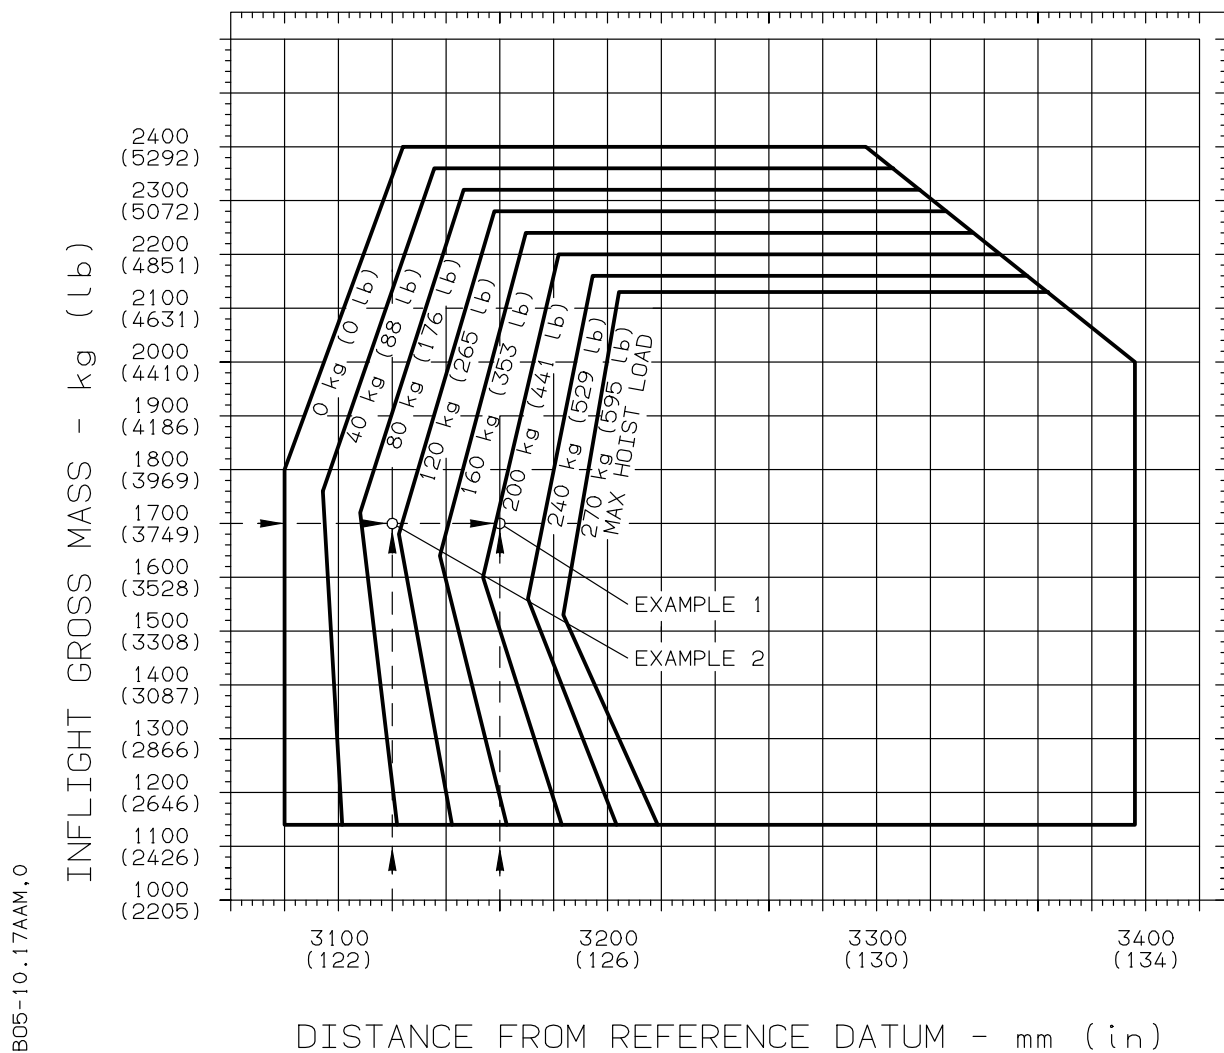


Fig. 1 Rescue Hoist Loading Chart

6.2 EQUIPMENT LIST ENTRIES

System/Equipment Designation	Part No.	Mass (kg)	Arm (mm)	Massmoment (kgmm)
Rescue Hoist System	105-81100	73.2	3300	241560
– Installation Provisions	D134-358	9.4	3800	35720
– Detachable Items	105-81109	60.5	3300	199650
Boom, complete (retracted)	105-81169	60.3	3100	186930
– Retaining belts	117-80417	3.4	2700	9180
Rescue Hoist System	105-81103	70.9	3300	233970
– Installation Provisions	105-81106	9.4	3800	35720
– Detachable Items	105-81110	58.2	3300	192060
Boom, complete (retracted)	105-81171	58.0	3100	179800
– Retaining belts	117-80417	3.4	2700	9180

7. SYSTEM DESCRIPTION

The rescue hoist allows for persons and cargo to be lifted from and lowered into areas where a landing is not possible. The hoist has a maximum lifting capacity of 270 kg (600 lb), however, it may be necessary to reduce the actual load mass due to helicopter mass and balance limitations.

The rescue hoist system comprises an electrically operated winch/boom assembly, external mounts, controls and a hoist operator retaining harness. The winch/boom assembly is externally mounted to the fuselage LH side and can be rotated (extended) outboard up to a 65° angle.

An electrically-activated explosive cartridge is installed in the winch unit for emergency use to sever the extended portion of the cable. A CABLE CUTTER TEST switch and indicator light are provided to check the cartridge and circuit operational status.

Controls are provided for both the pilot and a hoist operator to allow for extension/retraction of the boom, raising/lowering of the hook and emergency cutting of the cable (pilot only). The operator must use the cable cutting shears (refer to the NOTE below).

The hoist is normally controlled by the hoist operator positioned in the cabin. As an exception under certain operational requirements, the rescue hoist may be controlled by the pilot provided that voice contact is maintained between pilot and hoist operator.

The pilot's controls override those of the hoist operator.

NOTE The CABLE CUTTER pb of the winch control grip (if installed) is deactivated. On helicopters equipped with electrical heating (FMS 10-11), the heaters are automatically shutoff when the WINCH main switch is placed to ON to conserve electrical power and prevent overloading of the generators.

The diagram illustrates the front panel of the T-28C-1 aircraft, featuring a variety of instruments and controls. The panel is organized into several rows and columns. At the top, there are two gauges: a DC VOLTS gauge and a DC AMPS gauge. Below these, the controls are arranged in a grid-like fashion. The first row includes a RADIO COM, HYDRAULIC SYSTEM, TRIM ACTUATOR, FUEL PUMPS MAIN TANK, FUEL PUMPS SUPPLY TANK, and two EMERG. FUEL VALVE controls. The second row contains a SHAFT MOMENTUM, STARTERS, N2 CONTROL, ENGINE FIRE WARNING, OIL TEMP. PRESS., PITOT HEATING, BLOWER, and FUEL JET VALVE. The third row features INSTR. LIGHT, INTERNAL LIGHT, POSITION LIGHT, ANTICOLL. LIGHT, LANDING LIGHT, EMERG. FLOATS, ENGINE ANTI-ICING, and CABLE CUTTER. The fourth row includes a LOAD-HOOK, WIPER, DC SOCKET, WINCH, HEATING, ENGINE ANTI-ICING, and a TEST button. The fifth row shows a WIPER, FLOATS, MAIN FUEL VALVE, and another EMERG. FUEL VALVE. The diagram also includes a small inset showing a close-up of a control knob.


The control panel is organized into several functional sections:

- Top Section:** Features a large "OFF" button, a "WINCH" button, and an "ON" button.
- Second Row:** Includes a vertical indicator light, a "FIRE TEST" button, a "CABLE CUTTER TEST" button, and an "EMERG. FLOATS TEST" button.
- Third Row:** Contains four "FUEL" buttons labeled "MAIN", "PUMPS TANK", "ENGL. FUEL SUPPLY", and "ENGL. PUMPS TANK".
- Fourth Row:** Features five "LIGHT" buttons: "INTERNAL LIGHT", "POSITION LIGHT", "ANTICOLL. LIGHT", "LANDING LIGHT", and "STORM LIGHT".
- Bottom Section:** Includes a "HEATING" control with "L R" (Left/Right) and "BLOWER OFF HEATING" buttons, a "TEMP. CONT." (Temperature Control) knob, and a "TEMP. INDICATOR" light.


Fig. 2 Rescue Hoist Controls and Indicators (Sheet 1 of 2)

NOTE: The CABLE CUTTER pb of the winch control grip (if installed) is deactivated.


WINCH CONTROL GRIP

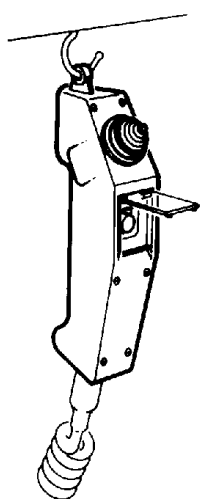

COLLECTIVE LEVER
with rocker-type button „ WINCH ”

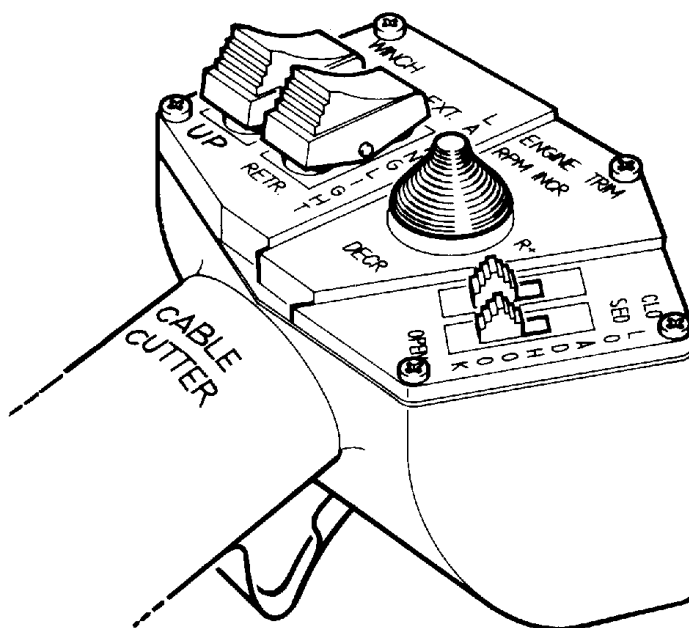

COLLECTIVE LEVER
with four-way button „ WINCH ”

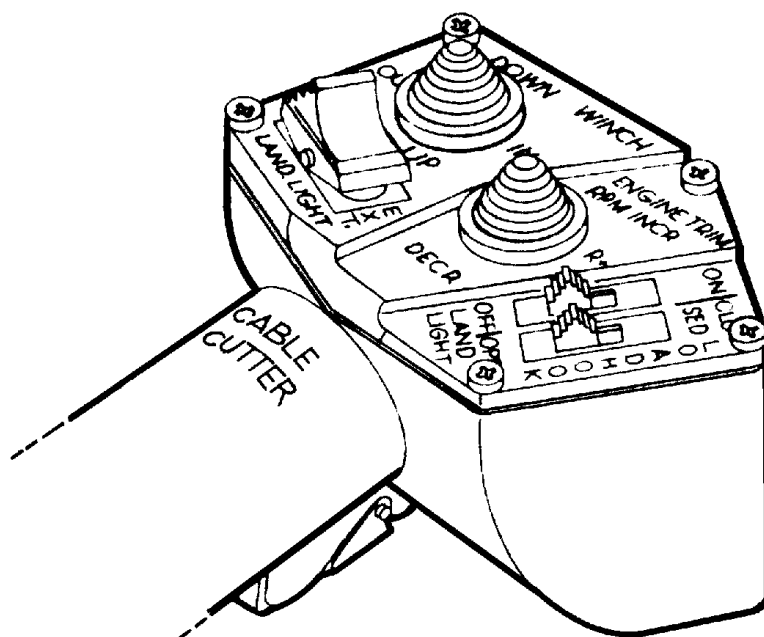

BO5-10.17 AEM,0

Fig. 2 Rescue Hoist Controls and Indicators (Sheet 2 of 2)