

4. NORMAL PROCEDURES

4.1 SYSTEM CHECKS

4.1.1 Electrical and Avionic Checks

Electrical system

Both generator field switches

Gen 1 generator field switch

Gen 2 generator field switch

CURRENT IND switch

★ COMM/NAV equipment

★ All other instruments and equipment

– Functional check

– GEN TRIP; both **GEN** warning lights come on

– Hold in GEN RES for approx 2 sec; **GEN 1** warning light goes off

– Hold in GEN RES for approx 2 sec; **GEN 2** warning light goes off

– Select each GEN position and check that the loads are approx equal, leave switch in BUS BAR (BAT) position

– On and check

– Check and set

5. PERFORMANCE DATA

No change in the basic Flight Manual data.

6. MASS AND BALANCE

6.1 EQUIPMENT LIST ENTRIES

System/Equipment Designation	Part No.	Mass (kg)	Arm (mm)	Massmoment (kgmm)
Retrofit Voltage Regulator	105-90039	1.1	2945	3240

7. SYSTEM DESCRIPTION

7.1 ELECTRICAL SYSTEM

Retrofit of the voltage regulator with overvoltage protection includes installation of two generator trip/reset switches (see Fig. 1).

Generator (1, 2) field switches, located on the overhead panel, energize (GEN RES position) or de-energize (GEN TRIP position) the generator field via the respective voltage regulator (see Fig. 2).

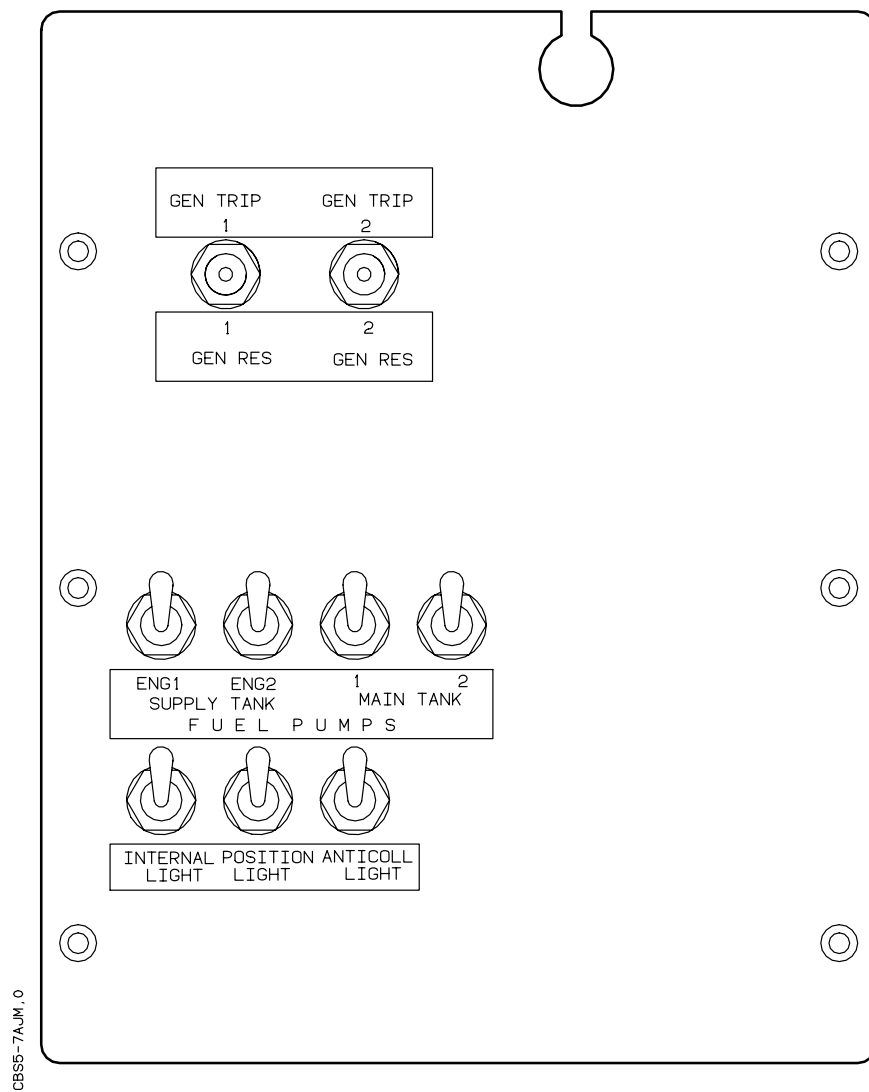


Fig. 1 Typical Overhead Console

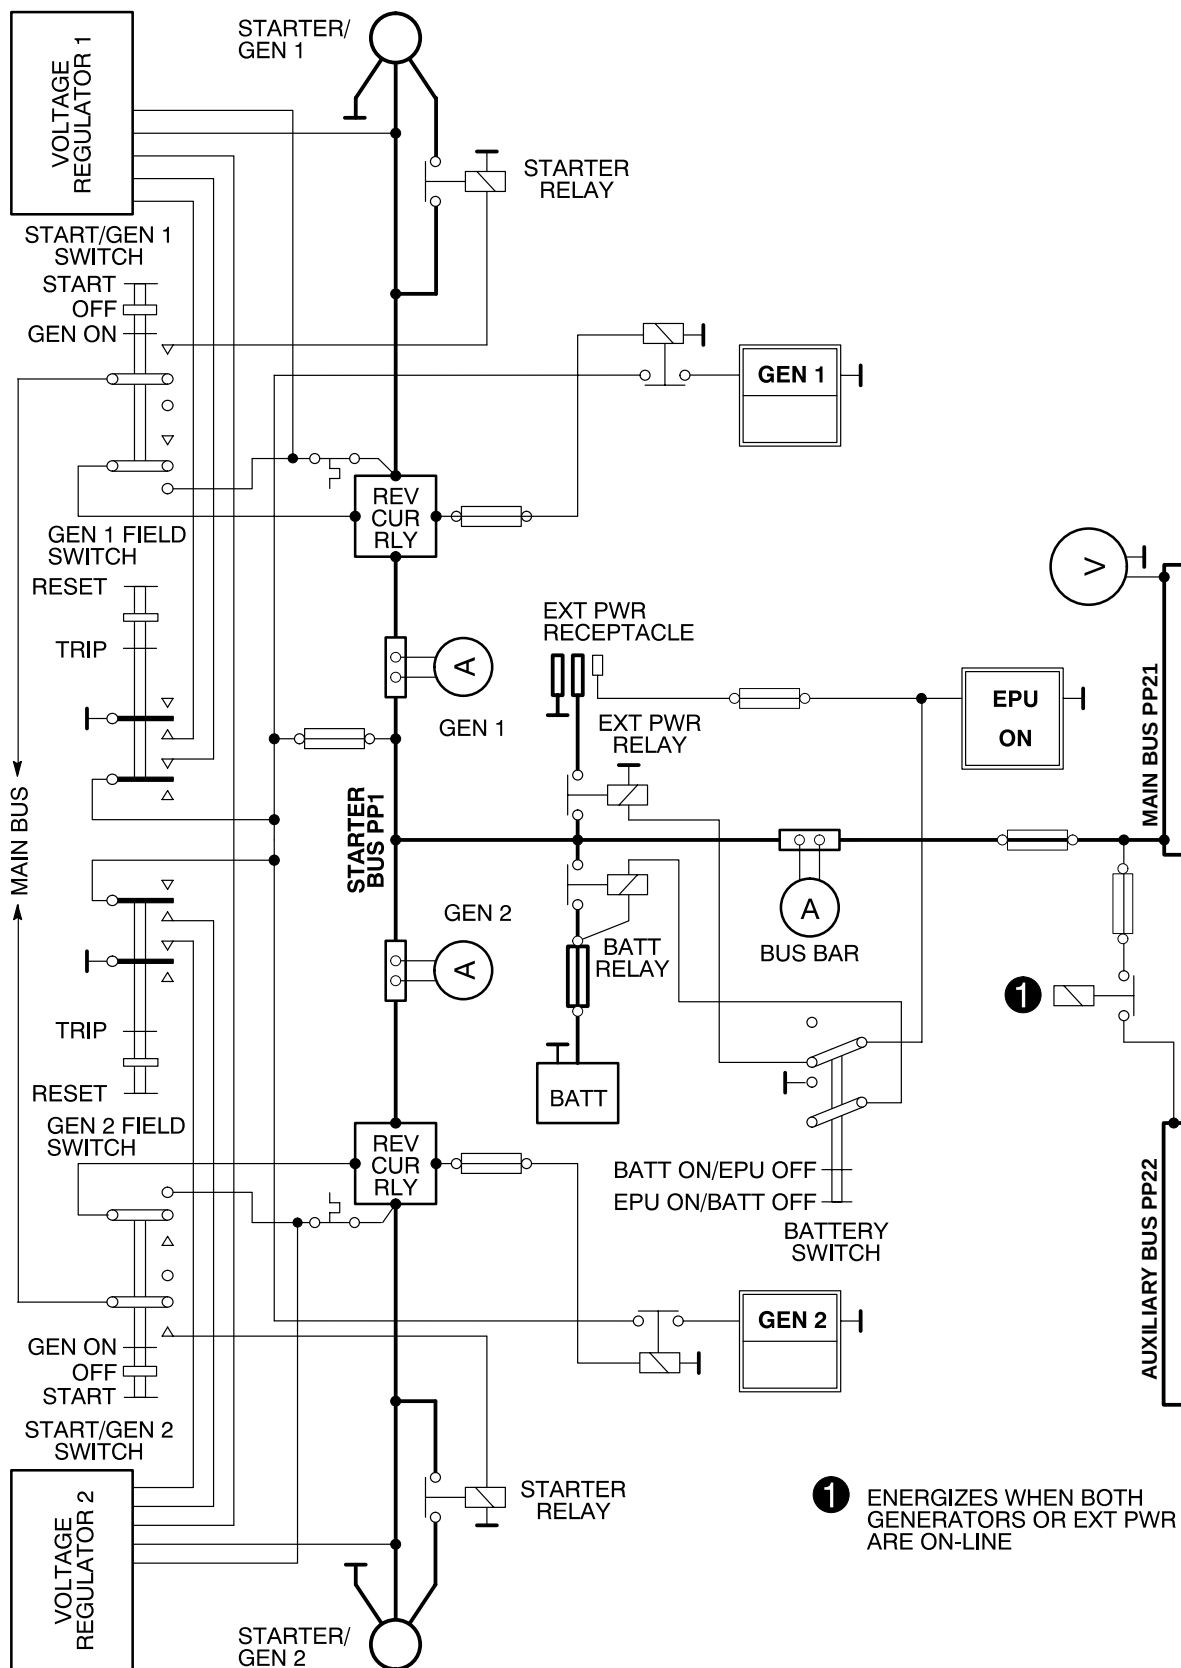


Fig. 2 Electrical Power Supply Schematic