

8. HANDLING, SERVICING, AND MAINTENANCE

8.1 SEAT REMOVAL

1. Release fasteners and remove padding (1).
2. Release fasteners and remove backrests (2).
3. Loosen and disconnect strap (3).
4. Disconnect outer seat belt halves (5).
5. Remove locking pins (8) at LH/RH bulkhead flanges (4)
6. Release quick-locks (7) and remove entire seat assembly.

NOTE To remove only the LH seat section (6) follow above steps removing locking pins (8) at the LH bulkhead flange (4) and at the seat section flanges (9). Release the two quick-locks (7) securing the LH section.

8.2 SEAT INSTALLATION

1. Position entire seat assembly placing quick-locks (7) over their respective fittings (four on cabin floor, one on cargo compartment ceiling).
2. Secure quick-locks (7) and install locking pins (8).
3. Fasten and tighten strap (3).

NOTE Strap (3) is fastened to a tie-down ring located approx 40 cm (16 in.) aft of the seat and along the longitudinal centerline.

4. Position backrests (2) and secure fasteners.
5. Position padding (1), secure fasteners and press lower edge of padding to join fastener strips.
6. Secure outer seat belt halves (5).

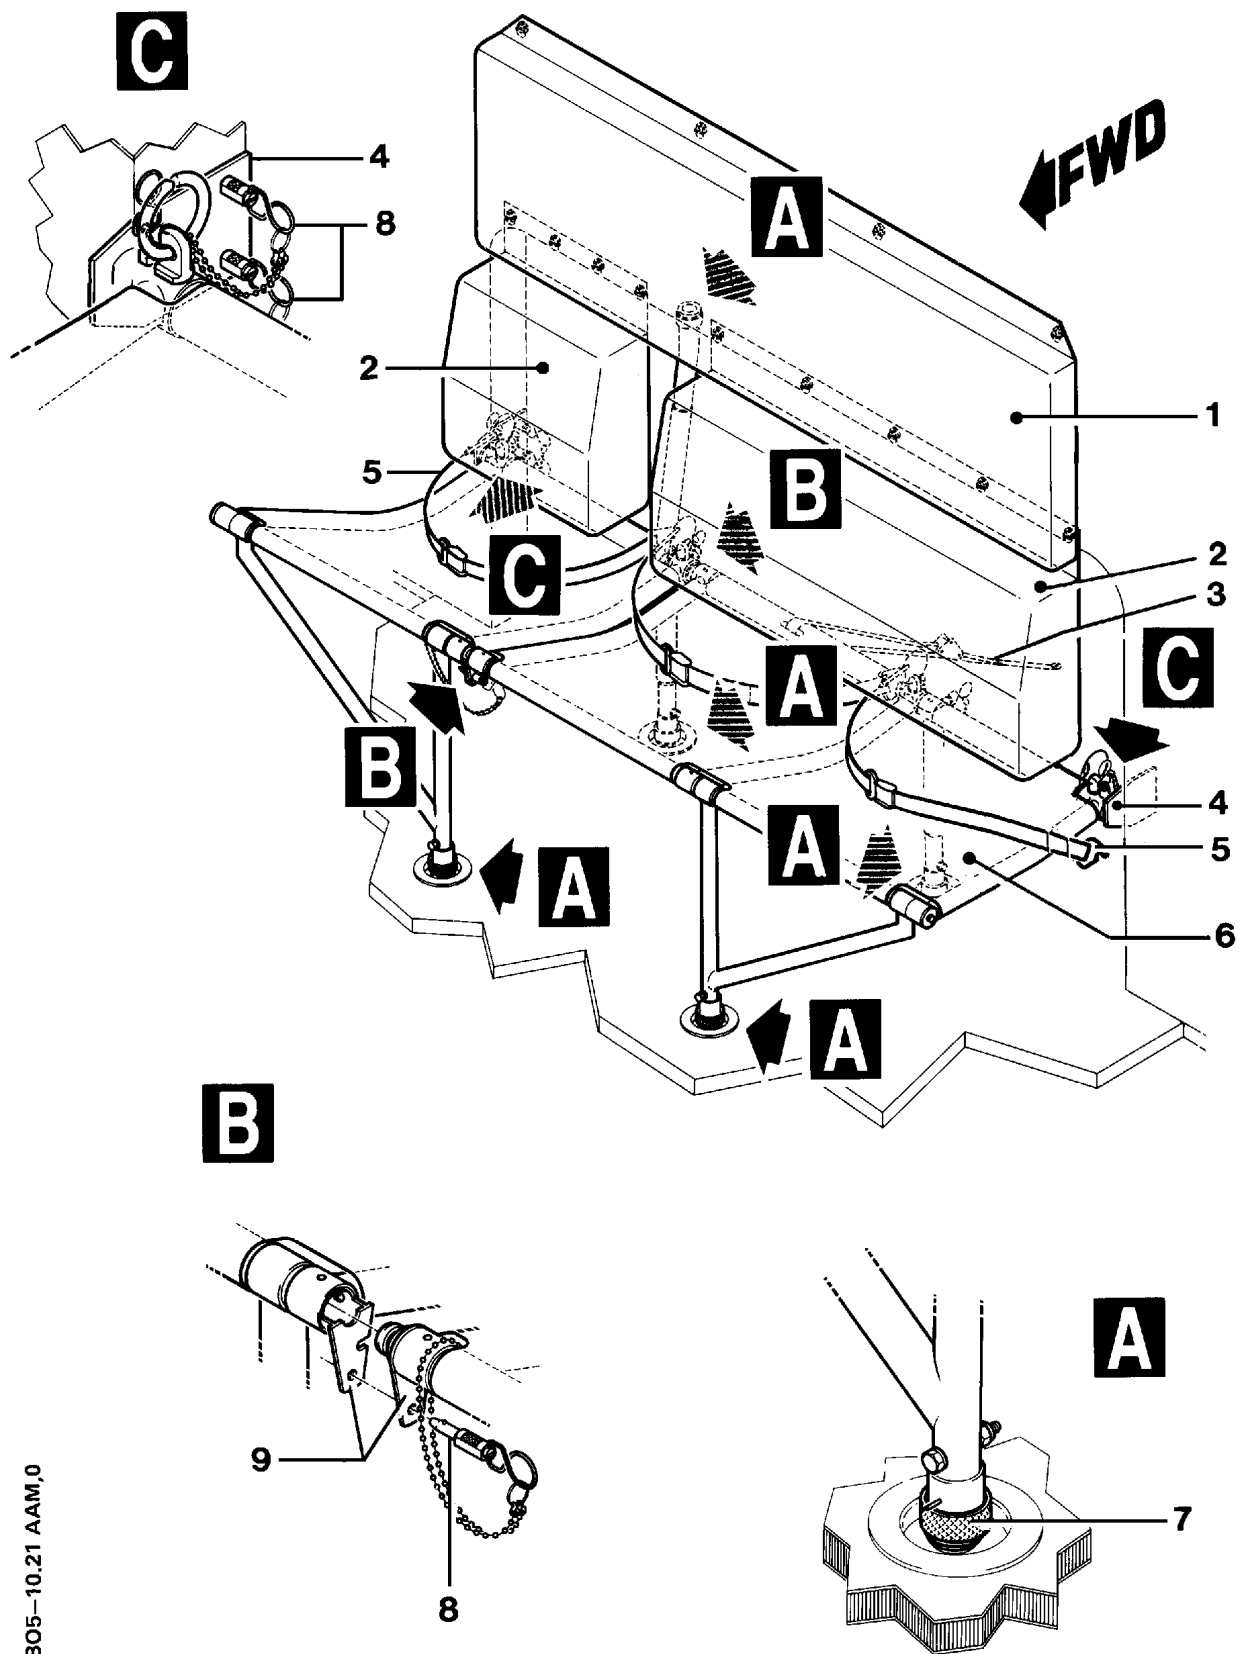


Fig. 1 Seat - Removal/Installation