


3. EMERGENCY AND MALFUNCTION PROCEDURES

3.1 WARNING LIGHT INDICATIONS

WARNING LIGHT INDICATIONS

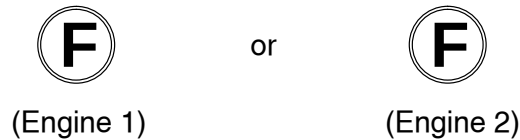

Conditions/Indications

Overtemperature in engine compartment

Procedure

• ON GROUND

- | | |
|---|--|
| 1. Both EMERG FUEL VALVE switches | – CLOSE |
| 2. Both FUEL PUMPS/SUPPLY TANK switches | – Off |
| 3. FIRE-EXT. I switch | – Activate, TEST caution light LH segment comes on |

If necessary:

- | | |
|------------------------|--|
| 4. FIRE-EXT. II switch | – Activate, TEST caution light RH segment comes on |
| 5. Both power levers | – OFF |
| 6. Battery switch | – Off |
| 7. Passengers | – Alert/Evacuate |

• IN FLIGHT

- | | |
|--|--|
| 1. EMERG FUEL VALVE switch (affected engine) | – CLOSE |
| 2. FUEL PUMPS/SUPPLY TANK switch (affected engine) | – Off |
| 3. FIRE-EXT. I switch | – Activate, TEST caution light LH segment comes on |
| 4. Power lever (affected engine) | – IDLE, then OFF |
| 5. Passengers | – Alert |

(Continued)