


If **F** warning light remains on after 1 minute:

- 6. FIRE-EXT. II switch – Activate, **TEST** caution light RH segment comes on

7. LAND AS SOON AS POSSIBLE

3.2 CAUTION LIGHT INDICATIONS

CAUTION LIGHT INDICATIONS

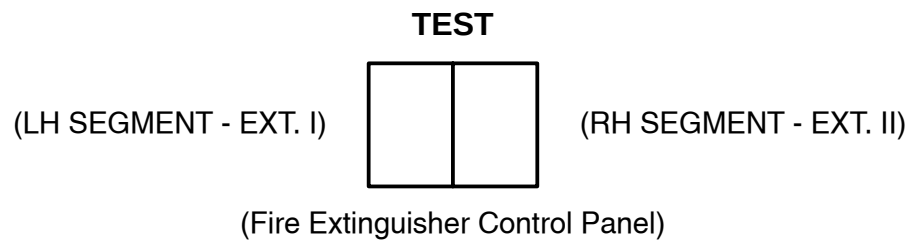

Conditions/Indications

Engine fire extinguisher bottle has been discharged

- Respective **TEST** caution light segment comes on

NOTE Additional indications are the discharge indicator (red) disc (if fitted) missing and the pressure gauge indicates zero.

Procedure

Have respective fire extinguisher bottle charged.

4. NORMAL PROCEDURES

4.1 PREFLIGHT CHECK

Each bottle pressure – Check according to placard

NOTE Engines must be cold for pressure-temperature correction table values to be valid.

- ★ Discharge indicator (red disc), if installed – Check for presence

4.2 SYSTEM CHECKS

4.2.1 ★ Engine Fire Extinguishing Checks

- FIRE-EXT. I/II circuit breakers – Check in
- TEST** caution light – Press to test, both segments must come on