

## 6. MASS AND BALANCE

### 6.1 EQUIPMENT LIST ENTRIES

| System/Equipment Designation     | Part No.  | Mass (kg) | Arm (mm) | Massmoment (kgmm) |
|----------------------------------|-----------|-----------|----------|-------------------|
| Engine Fire Extinguishing System | D133-1360 | 6.5       | 4500     | 29250             |
| Engine Fire Extinguishing System | 105-81301 | 6.5       | 4500     | 29250             |
| Engine Fire Extinguishing System | 105-81302 | 7.4       | 4500     | 33300             |
| Engine Fire Extinguishing System | 105-81304 | 7.4       | 4500     | 33300             |
| Engine Fire Extinguishing System | 105-81308 | 6.5       | 4500     | 29250             |

## 7. SYSTEM DESCRIPTION

The Engine Fire Extinguishing System comprises two storage bottles, distribution pipes and a control panel having guarded switches necessary to discharge either bottle into both engine compartments simultaneously. The system may be installed with the bottles located either LH or RH aft of the engine compartment rear firewall.

Each storage bottle is fitted with an electrically-activated discharge cartridge, a pressure gauge, and a pressure relief valve. The two bottles are joined by a double check T-manifold that connects to the distribution pipes leading to LH and RH engine compartment discharge nozzles.

The pressure relief valve operation is monitored either by an electrical thermal discharge sensor on each bottle or a red-colored discharge indicator disc common to both bottles.

The system is supplied 28V DC via the control panel FIRE-EXT. I and FIRE-EXT. II circuit breakers. The FIRE EXT TEST switch and indicator light on the overhead panel are for checking the cartridge firing circuits of each bottle.

The bottles may then be discharged one at a time as necessary with the guarded switches. A **TEST** caution light segment on the control panel will come on whenever a bottle has been discharged.

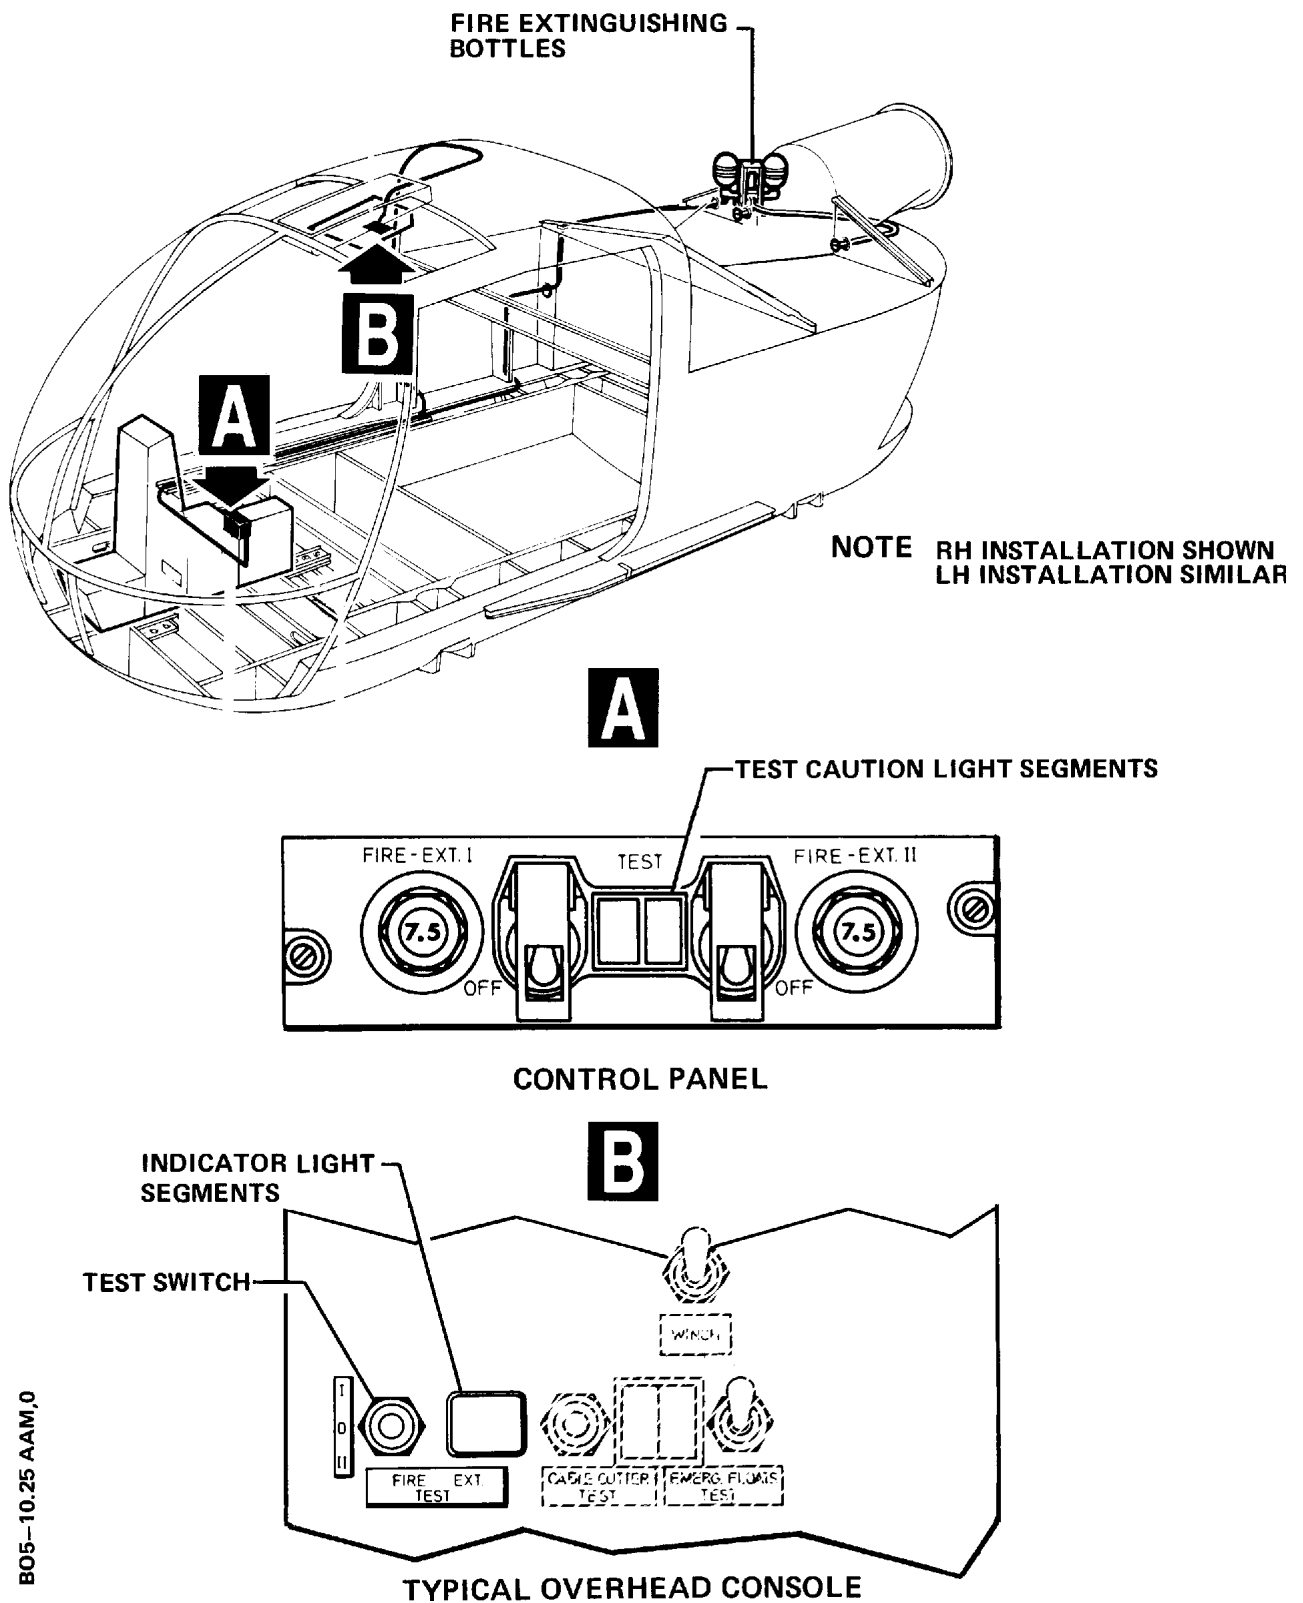


Fig. 1 Engine Fire Extinguishing System

