

8. HANDLING, SERVICING, AND MAINTENANCE

8.1 SEAT REMOVAL

1. Pull cushions (3, 9) free from hook/pile fasteners.
2. Disconnect outer lap belt halves (5) from bulkhead fittings.
3. Release quick-locks (7), raise seat board (6) and fold legs (8) to retaining clips (10).
4. Remove locking pins from brackets (2, 4) and remove backrest assembly (1).

8.2 SEAT INSTALLATION

1. Position backrest assembly (1) and secure brackets (2, 4) using locking pins.
2. Release legs (8) and secure quick-locks (7) to floor fittings.
3. Secure outer lap belt halves (5) to bulkhead fittings.
4. Position cushions (3, 9) and press against hook/pile fasteners.

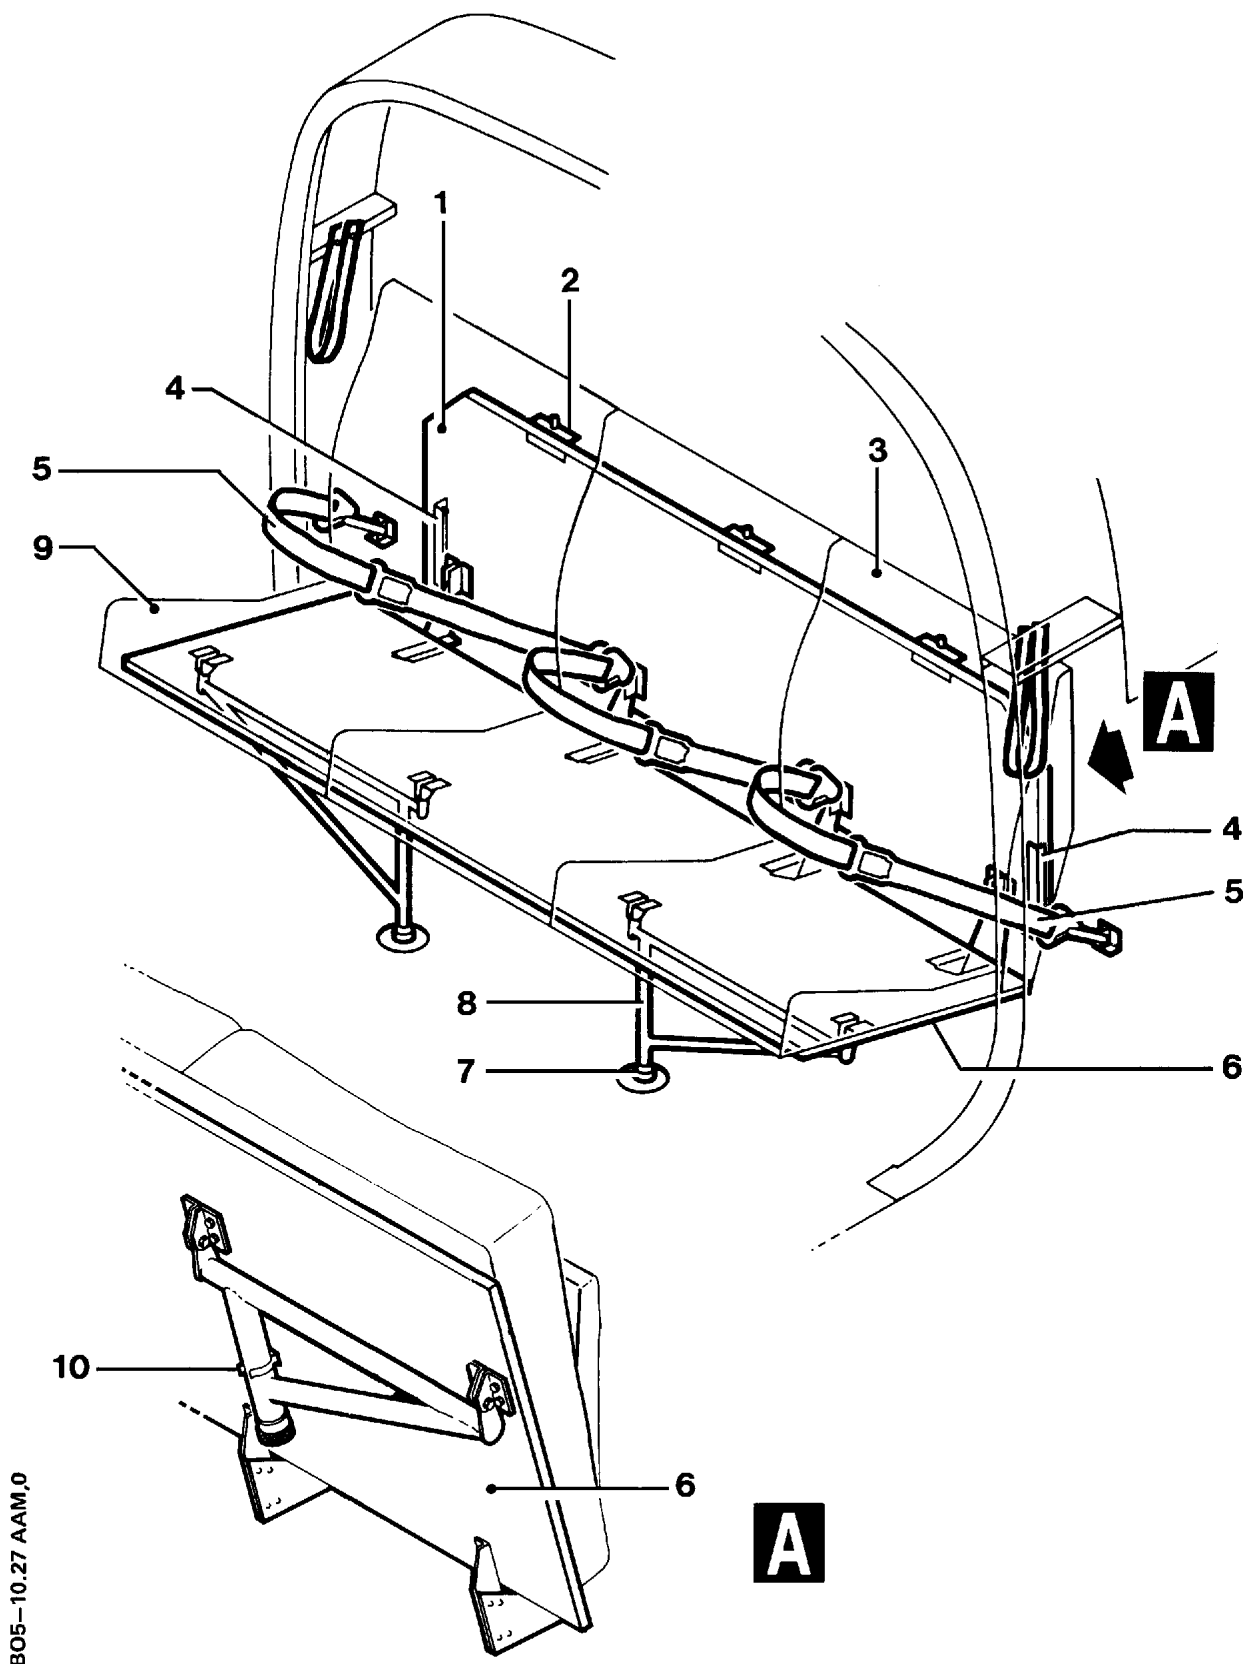


Fig. 1 Foldable Bench Seat - Removal/Installation