

EFFECTIVITY ALL

4.3 PRE-LANDING CHECK

EFFECTIVITY Air Cleaner System D133-2760

Bypass control lever – Aft (closed) position, check detent locked

EFFECTIVITY ALL, except Air Cleaner System D133-2760

SAND FILT switch – On (forward position)

BLEED AIR/SF indicator light (if fitted) – On

EFFECTIVITY ALL

5. PERFORMANCE DATA

5.1 HOVER CEILING

Use the basic FLM hover ceiling HIGE/HOGE diagrams, Section 5. However, depending upon the position of the particle separator bypass door(s), modify the chart derived gross mass value as follows:

Bypass door(s) closed

Subtract 130 kg from the derived chart gross mass value to obtain the corrected gross mass.

Bypass door(s) open

EFFECTIVITY Air Cleaner Systems without Bleed Air Valve

Subtract 70 kg from the derived chart gross mass value to obtain the corrected gross mass.

EFFECTIVITY Air Cleaner Systems with Bleed Air Valve

No change.

NOTE Should the bleed air valve malfunction and remain open (BLEED AIR/SF indicator light remains on), then subtract 70 kg from the derived chart gross mass value to obtain the corrected gross mass.

EFFECTIVITY ALL

5.2 RATE OF CLIMB

Use the basic FLM rate-of-climb diagrams Section 5, however, depending upon the position of the particle separator bypass door(s), adjust the chart derived rate-of-climb value as follows:

Bypass door(s) closed

Subtract 200 fpm from the derived chart rate-of-climb value to obtain the corrected rate-of-climb.

Bypass door(s) open

EFFECTIVITY *Air Cleaner Systems without Bleed Air Valve*

Subtract 120 fpm from the derived chart rate-of-climb value to obtain the corrected rate-of-climb.

EFFECTIVITY *Air Cleaner Systems with Bleed Air Valve*

No change.

NOTE Should the bleed air valve malfunction and remain open (BLEED AIR/SF indicator light remains on), then subtract 120 fpm from the derived chart rate-of-climb value to obtain the corrected rate-of-climb.

EFFECTIVITY *ALL*

5.3 INFLIGHT POWER CHECKS

The inflight power checks shall be performed with the engine air cleaner system switched off (bypass door open).

EFFECTIVITY *Air Cleaner Systems without Bleed Air Valve*

Use the basic FLM Inflight Power Check diagram Section 5, however, subtract 4 % from the indicated Torque, and then enter the diagram.

EFFECTIVITY *Air Cleaner Systems with Bleed Air Valve*

No change.

NOTE Should the bleed air valve malfunction and remain open (BLEED AIR/SF indicator light remains on), subtract 4 % from the indicated Torque, and then enter the diagram.

EFFECTIVITY *ALL*

5.4 HEIGHT-VELOCITY DIAGRAMS

The height-velocity diagrams (see Fig. 1) are presented for one engine inoperative conditions under varying gross mass and pressure altitude, and apply when the engine air cleaner system is on (functioning).


HEIGHT-VELOCITY DIAGRAMS SINGLE ENGINE FAILURE

ISA CONDITIONS

ANTI-ICING - OFF

ENGINE AIR CLEANER SYSTEM - ON

CAUTION AVOID OPERATION WITHIN CROSS-HATCHED AREAS.

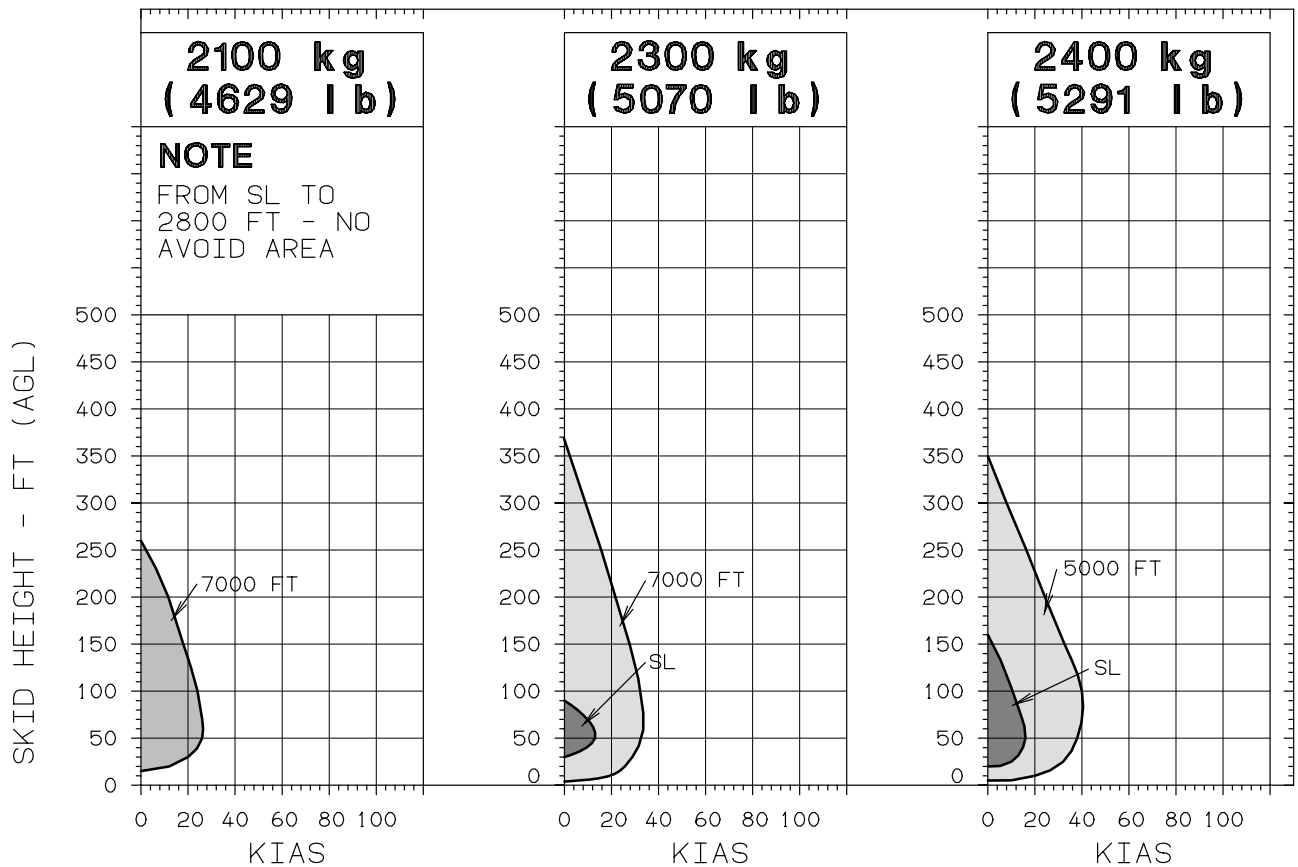

B05-10 37AAM,2

Fig. 1 Height-Velocity Diagrams - Single Engine Failure