

console, is for opening and closing the bypass doors. The control lever is detent locked in both forward (open) and aft (closed) positions.

During operations in sand/dust contaminated air, the bypass doors should be closed to obtain full benefits of the particle separator. However, as conditions permit, opening the bypass doors will slightly improve engine performance.

EFFECTIVITY *Air Cleaner Systems without Bleed Air Valve, except D133-2760*

The system comprises a triangular-shaped roof-mounted particle separator, bleed air lines, a SAND FILT switch, an enlarged oil cooler with modified air intake and a seal assembly to cover openings in the cowling around the main rotor mast and control rods.

The particle separator houses the swirl tube panels and is fitted with a bypass door on the forward face. The SAND FILT switch on the overhead console supplies 28V DC power to an actuator, mounted in the separator housing, for bypass door opening and closing.

During operations in sand/dust contaminated air, the bypass door should be closed to obtain full benefits of the particle separator. However, as conditions permit, opening the bypass door will slightly improve engine performance.

EFFECTIVITY *Air Cleaner Systems with Bleed Air Valve*

The system comprises a triangular-shaped roof-mounted particle separator, bleed air lines with motorized valve, a SAND FILT switch, a BLEED AIR/SF indicator light, an enlarged oil cooler with modified air intake and a seal assembly to cover openings in the cowling around the main rotor mast and control rods.

The particle separator houses the swirl tube panels and is fitted with a bypass door on the forward face. The SAND FILT switch on the overhead console supplies 28V DC power to a bypass-door actuator, mounted in the separator housing, and to the bleed air valve, mounted on the transmission compartment forward wall, for opening and closing of each (i.e. bypass door closed-bleed air valve open). The BLEED AIR/SF indicator light on the switch panel comes on whenever the bleed air valve is open.

During operations in sand/dust contaminated air, the bypass door should be closed to obtain full benefits of the particle separator. However, as conditions permit, opening the bypass door will slightly improve engine performance.

EFFECTIVITY *ALL*

8. HANDLING, SERVICING, AND MAINTENANCE

8.1 GROUND HANDLING

Whenever the helicopter is on the ground for an extended period of time:

- Close the particle separator bypass door(s), and
- Install the particle separator protective cover.

EFFECTIVITY ALL, except Air Cleaner System D133-2760

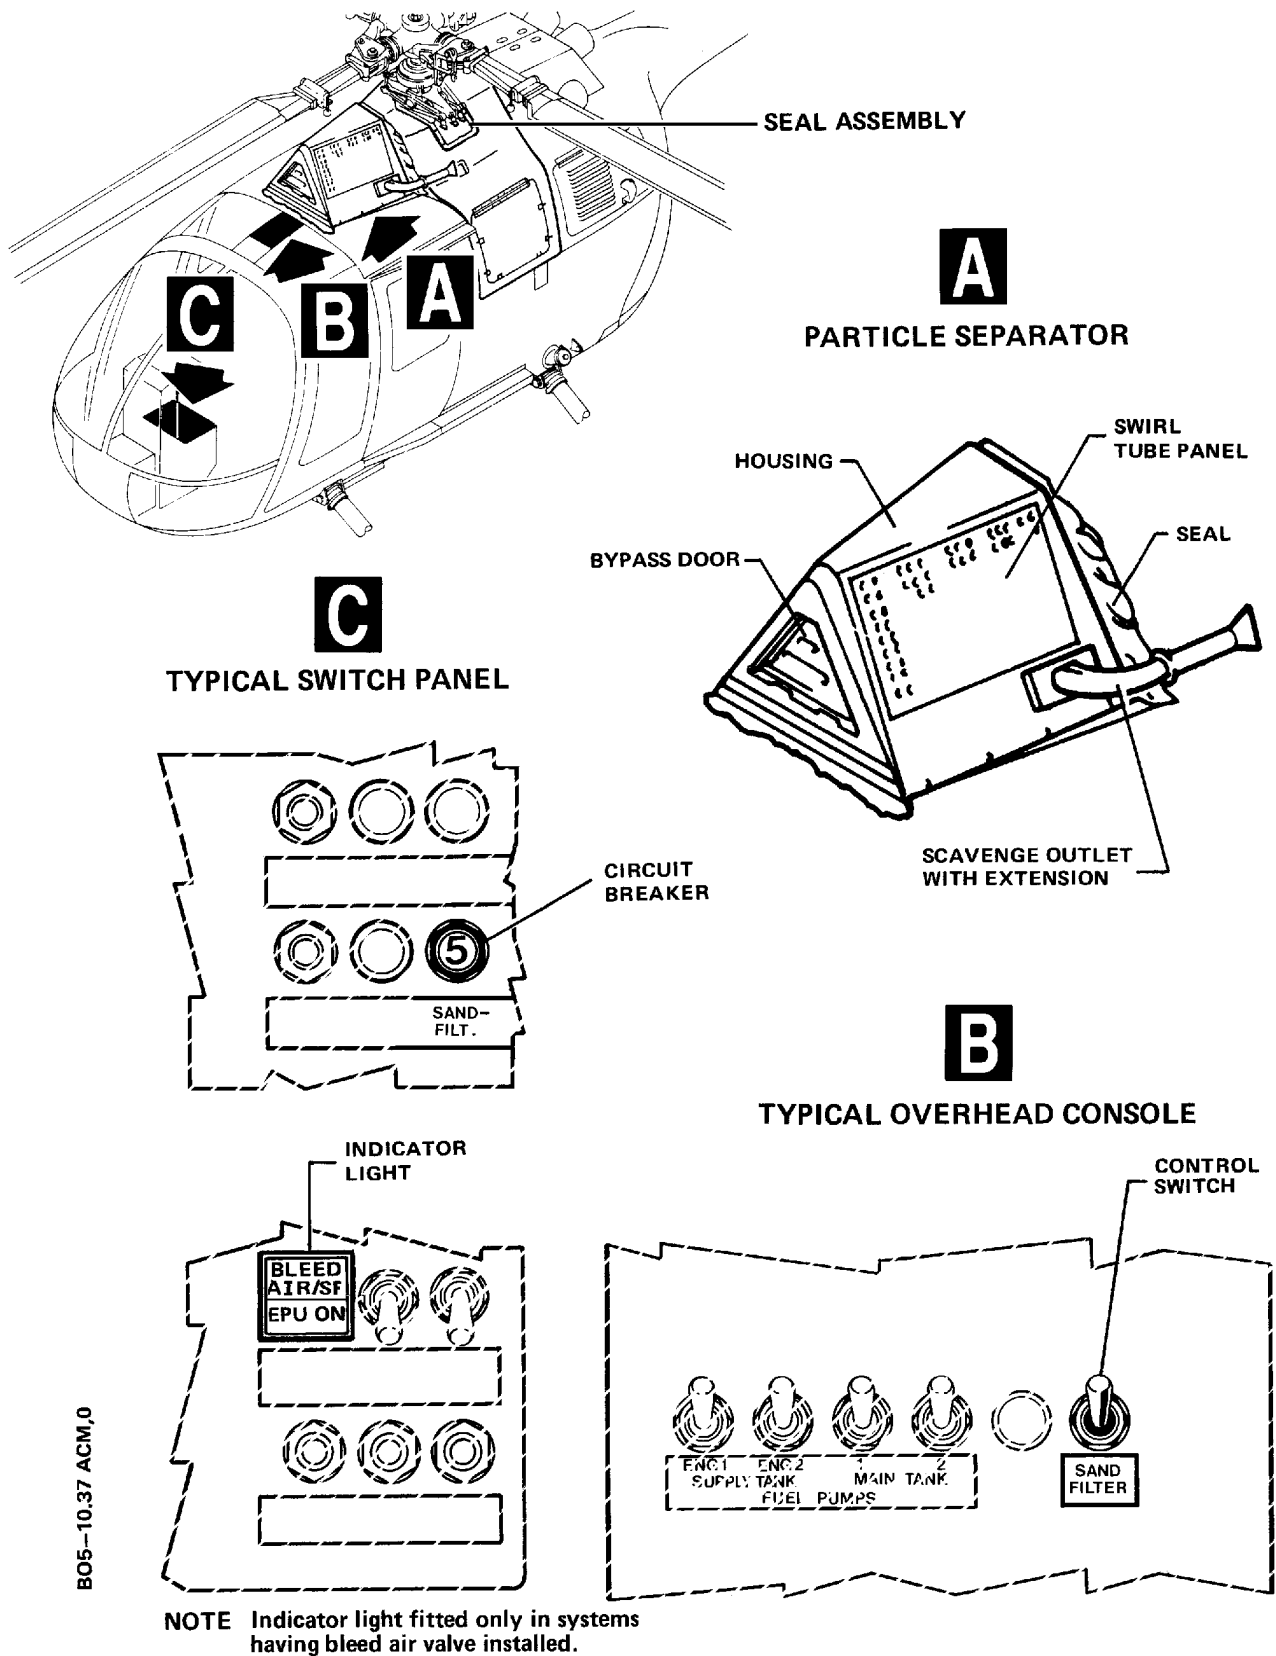


Fig. 2 Engine Air Cleaner System Component Location