

to select the desired heating control mode (manual or automatic). With this switch in the AUTO position the desired cabin temperature may be selected using the TEMP CONTROL knob; clockwise rotation increases the temperature.

With the heating control switch in the MAN position, the three-position DECR-INCR switch is activated so that displacing this switch from its spring-loaded center off position will respectively close or open the temperature control valve as long as the switch is held in that position.

The system is supplied 28V DC electrical power from the Main Bus via the HEATING circuit breaker on the center console switch panel. Placing the heating control switch to either the MAN or AUTO position will open a hot air supply valve which in turn activates a green-colored HEATING indicator light.

Air flowing in the distribution ducting is monitored by an overtemperature switch located downstream of the temperature control valve. Activation of this switch will cause the hot air supply valve to close and the HEATING indicator light will go off.

8. HANDLING, SERVICING, AND MAINTENANCE

No change in the basic Flight Manual data.

9. OPERATIONAL INFORMATION

For operations with bleed air heating ON (max heating power), modify the following basic FLM flight planning chart results as indicated:

Fuel Consumption Add approx 8 kg/h

Max Cruising Speed Subtract approx 3 kt

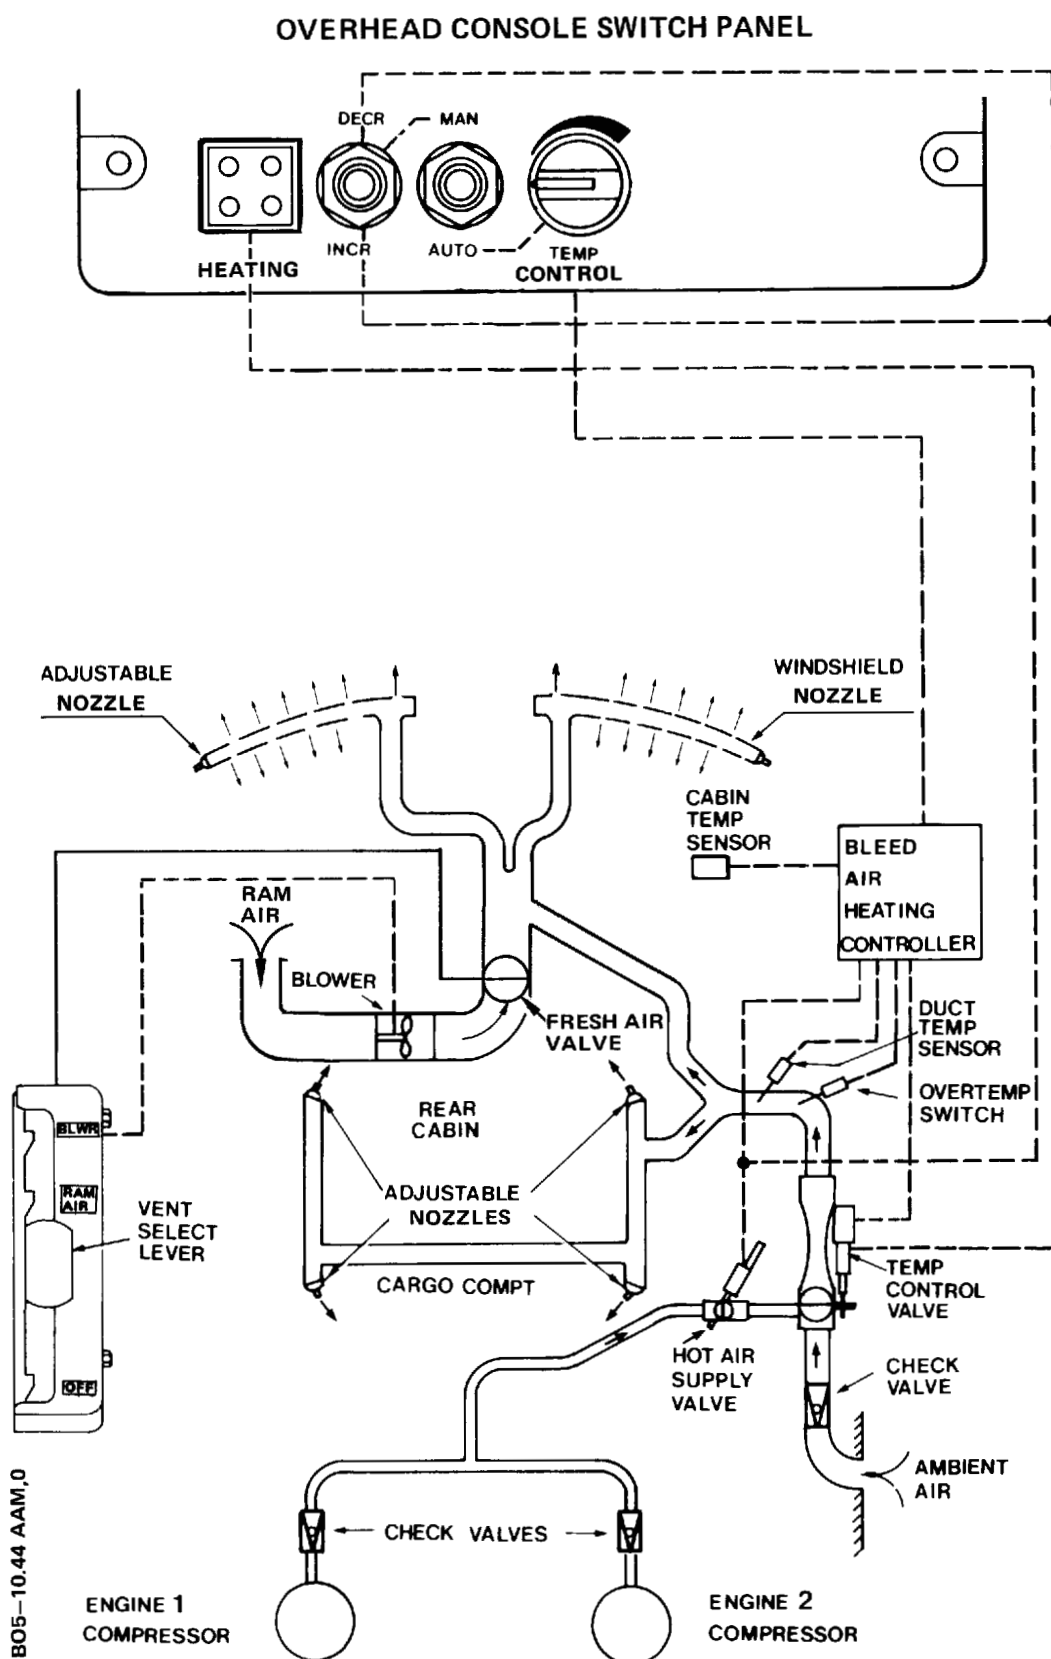


Fig. 1 Bleed Air Heating and Ventilation System Schematic