

8. HANDLING, SERVICING, AND MAINTENANCE

8.1 SERVICING AERIAL FLARE SYSTEM

- WARNING**
- WHEN LOADING/UNLOADING FLARES SWITCH OFF ALL AIRCRAFT RADIO AND RADAR INSTALLATIONS IN THE IMMEDIATE VICINITY TO PREVENT INADVERTENT FIRINGS CAUSED BY THE EFFECTS OF ELECTROMAGNETIC PICKUP.
 - BEFORE LOADING/UNLOADING FLARE CARTRIDGES, MAKE CERTAIN THAT:
 - HELICOPTER ELECTRICAL POWER IS OFF
 - FLARE SYSTEM POWER IS OFF
 - HELICOPTER IS ELECTRICALLY GROUNDED.

8.1.1 Loading

WARNING DO NOT LOAD ANY DAMAGED FLARE CARTRIDGES.

1. Make certain that the FLARE-PWR and FIRE switches are OFF.
2. Remove knurled rings and protective discs (if fitted); stow discs for later use.
3. Place knurled rings over each flare cartridge.
4. Insert flare cartridges into mount sockets.
5. Hand tighten knurled rings until rings butt on annular rib of flare.
6. Hand tighten lock rings against knurled rings.


8.1.2 Unloading

1. Make certain that the FLARE-PWR and FIRE switches are OFF.
2. Loosen lock rings.
3. Remove knurled rings and discard empty flare cartridges.

CAUTION ANY FLARE THAT HAS MISFIRED MUST BE INSPECTED AND IF DAMAGED PROPERLY DISPOSED OF.


If no further flare cartridges are to be loaded:

Insert protective discs in each knurled ring and install knurled rings on mount. Hand tighten lock rings against knurled rings.

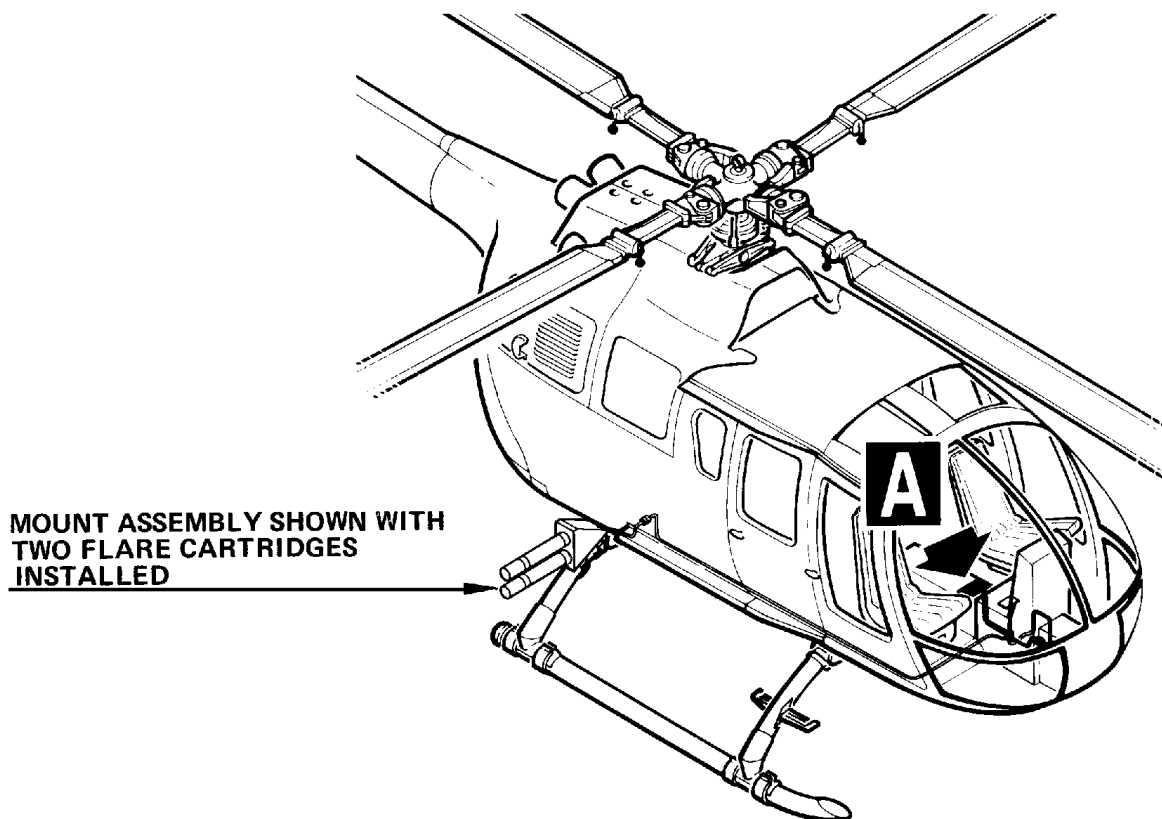

A

TYPICAL CONTROL PANEL
(CENTER CONSOLE)

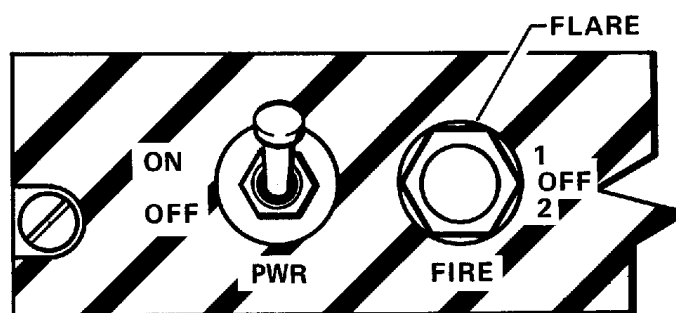

BO5-10.45 AAM,0

Fig. 1 Aerial Flare System