

5.5 HEIGHT-VELOCITY DIAGRAMS (see Fig. 5-5 and 5-6)

CAUTION AVOID OPERATION WITHIN THE CAUTION AREA - POWER LOSS OR ENGINE FAILURE WHILE OPERATING WITHIN THIS AREA IS LIKELY TO RESULT IN DAMAGE TO THE HELICOPTER.

The operator must become familiar with the height-velocity diagrams to determine what altitudes and airspeeds are required to safely make an emergency landing in case of a power loss or engine failure. The altitude-airspeed combinations where a safe emergency landing on a smooth level firm surface may not be possible are represented by the caution (cross-hatched) area of the diagrams.

Two groups of height-velocity diagrams are presented; the first for **single engine failure** represented in varying gross mass and pressure altitude, and the second for **double engine failure** also represented in varying gross mass and pressure altitude.

HEIGHT-VELOCITY DIAGRAMS

SINGLE ENGINE FAILURE

ISA CONDITIONS

ANTI-ICING – OFF

BLEED AIR CONSUMERS – OFF

CAUTION AVOID OPERATION WITHIN CROSS-HATCHED AREAS.

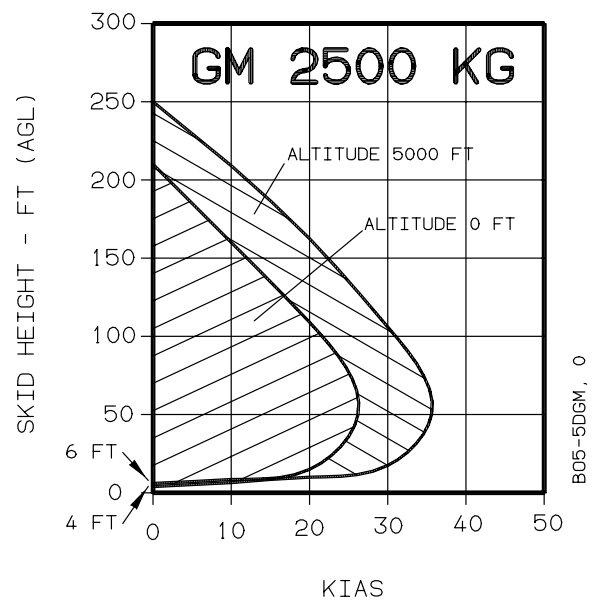
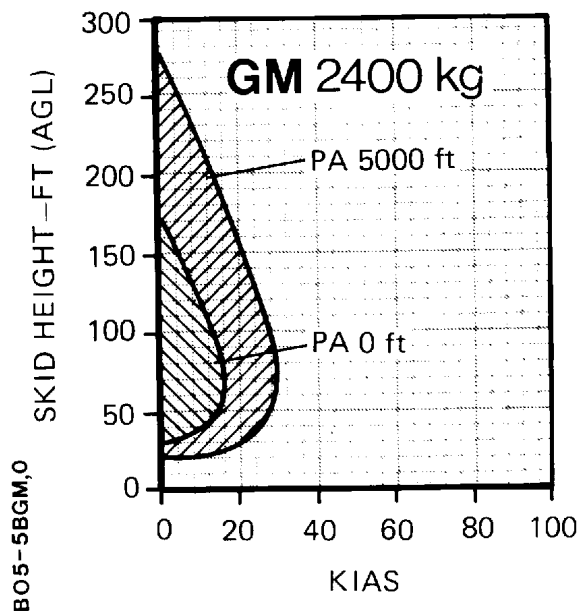
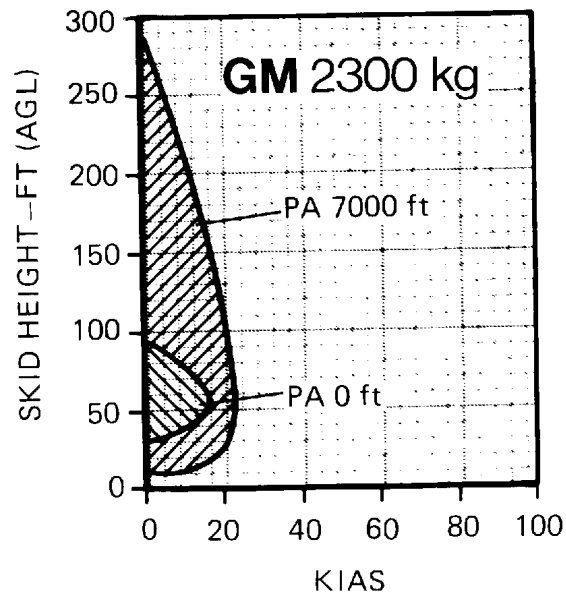


Fig. 5-5 Height-velocity Diagrams - Single Engine Failure

HEIGHT-VELOCITY DIAGRAMS

DOUBLE ENGINE FAILURE

ISA CONDITIONS

CAUTION AVOID OPERATION WITHIN CROSS-HATCHED AREAS.

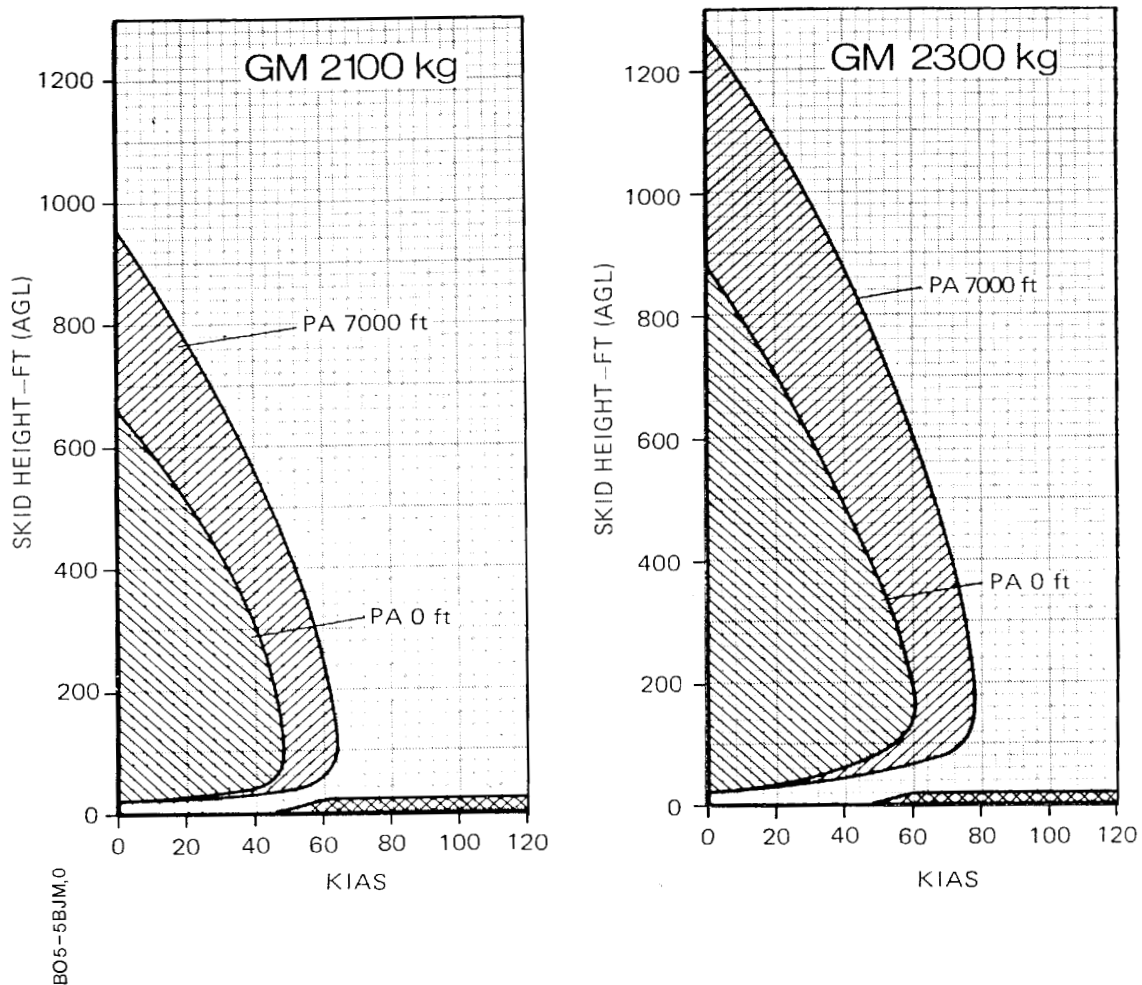


Fig. 5-6 Height-velocity Diagrams - Double Engine Failure (Sheet 1 of 2)

HEIGHT-VELOCITY DIAGRAMS

DOUBLE ENGINE FAILURE

ISA CONDITIONS

CAUTION AVOID OPERATION WITHIN CROSS-HATCHED AREAS.

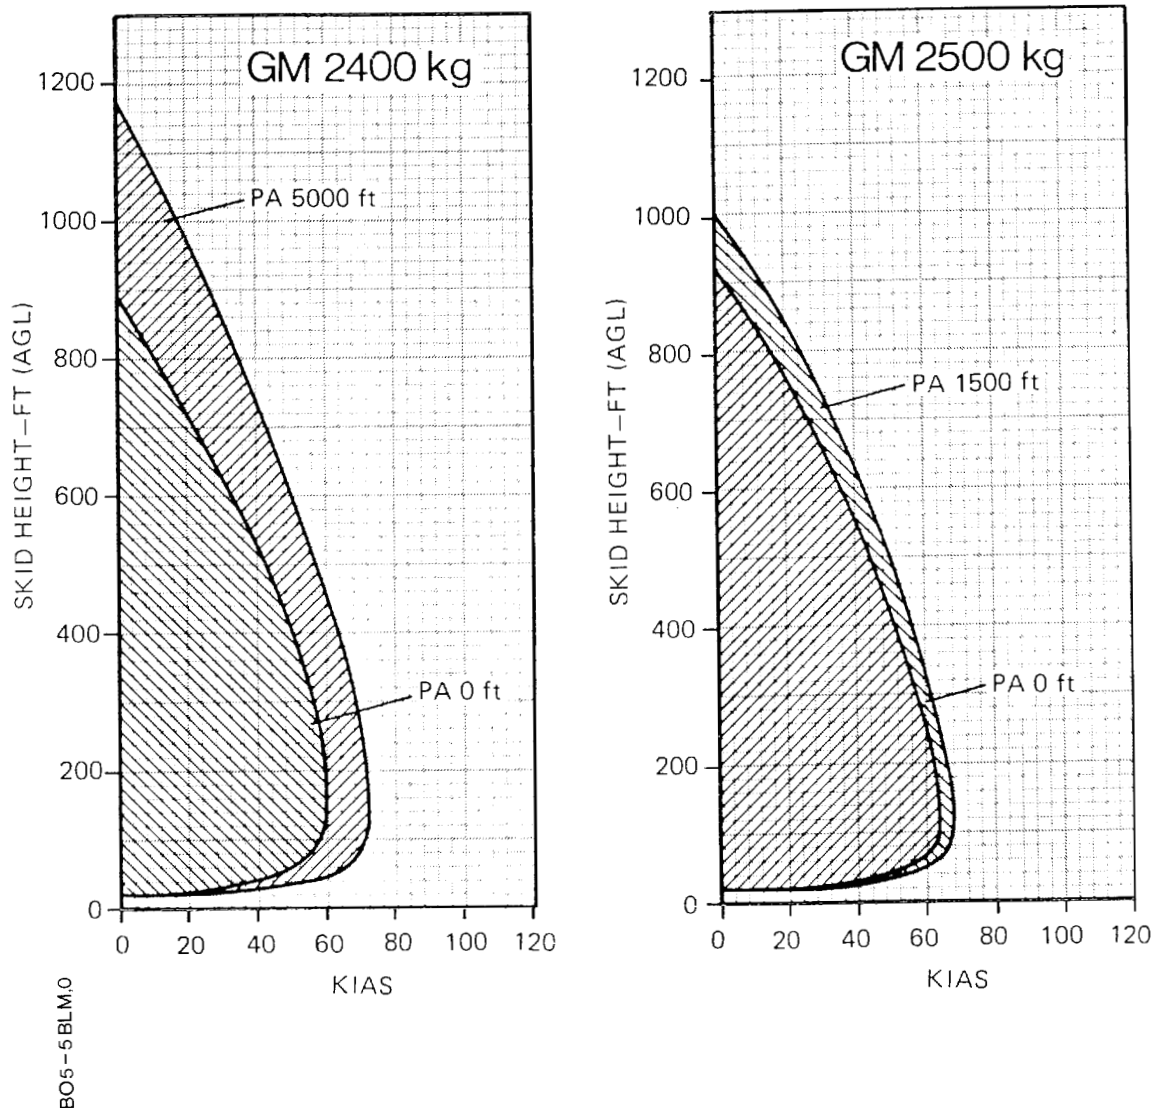


Fig. 5-6 Height-velocity Diagrams - Double Engine Failure (Sheet 2 of 2)