

6.3 LOADING DATA (see Fig. 6-1)

The loading data provides location information necessary in calculating the longitudinal CG of the helicopter. Following is a listing of items with their respective arm (fuselage station location).

6.3.1 Crew and Passenger Stations

	ARM (mm)
Pilot and copilot	1650
Passengers	2690 (2740*)
* Only for Sectioned Bench Seat, FMS 10-21.	

6.3.2 Cargo Tie-down Points

	ARM (mm)
Cabin	2230
	2690
Cargo Compartment	3150
	3380
	3610
	4030

- NOTE**
- Cargo compartment longitudinal center is at ARM 3900mm.
 - Ensure that the cargo is properly secured by restraining it from shifting with tie downs.
 - Cargo should be centered in the cabin.
 - Cargo shall be loaded within the perimeter defined by the tie-down ring centroids.
 - The operator shall be responsible for the proper placement and securing of cargo in accordance with standard operating procedures and practices.

6.3.3 Fuel

	ARM (mm)
Supply Tank	2275
Main Tank	3220

6.3.4 Avionics Equipment Bay

ARM = 4250 mm

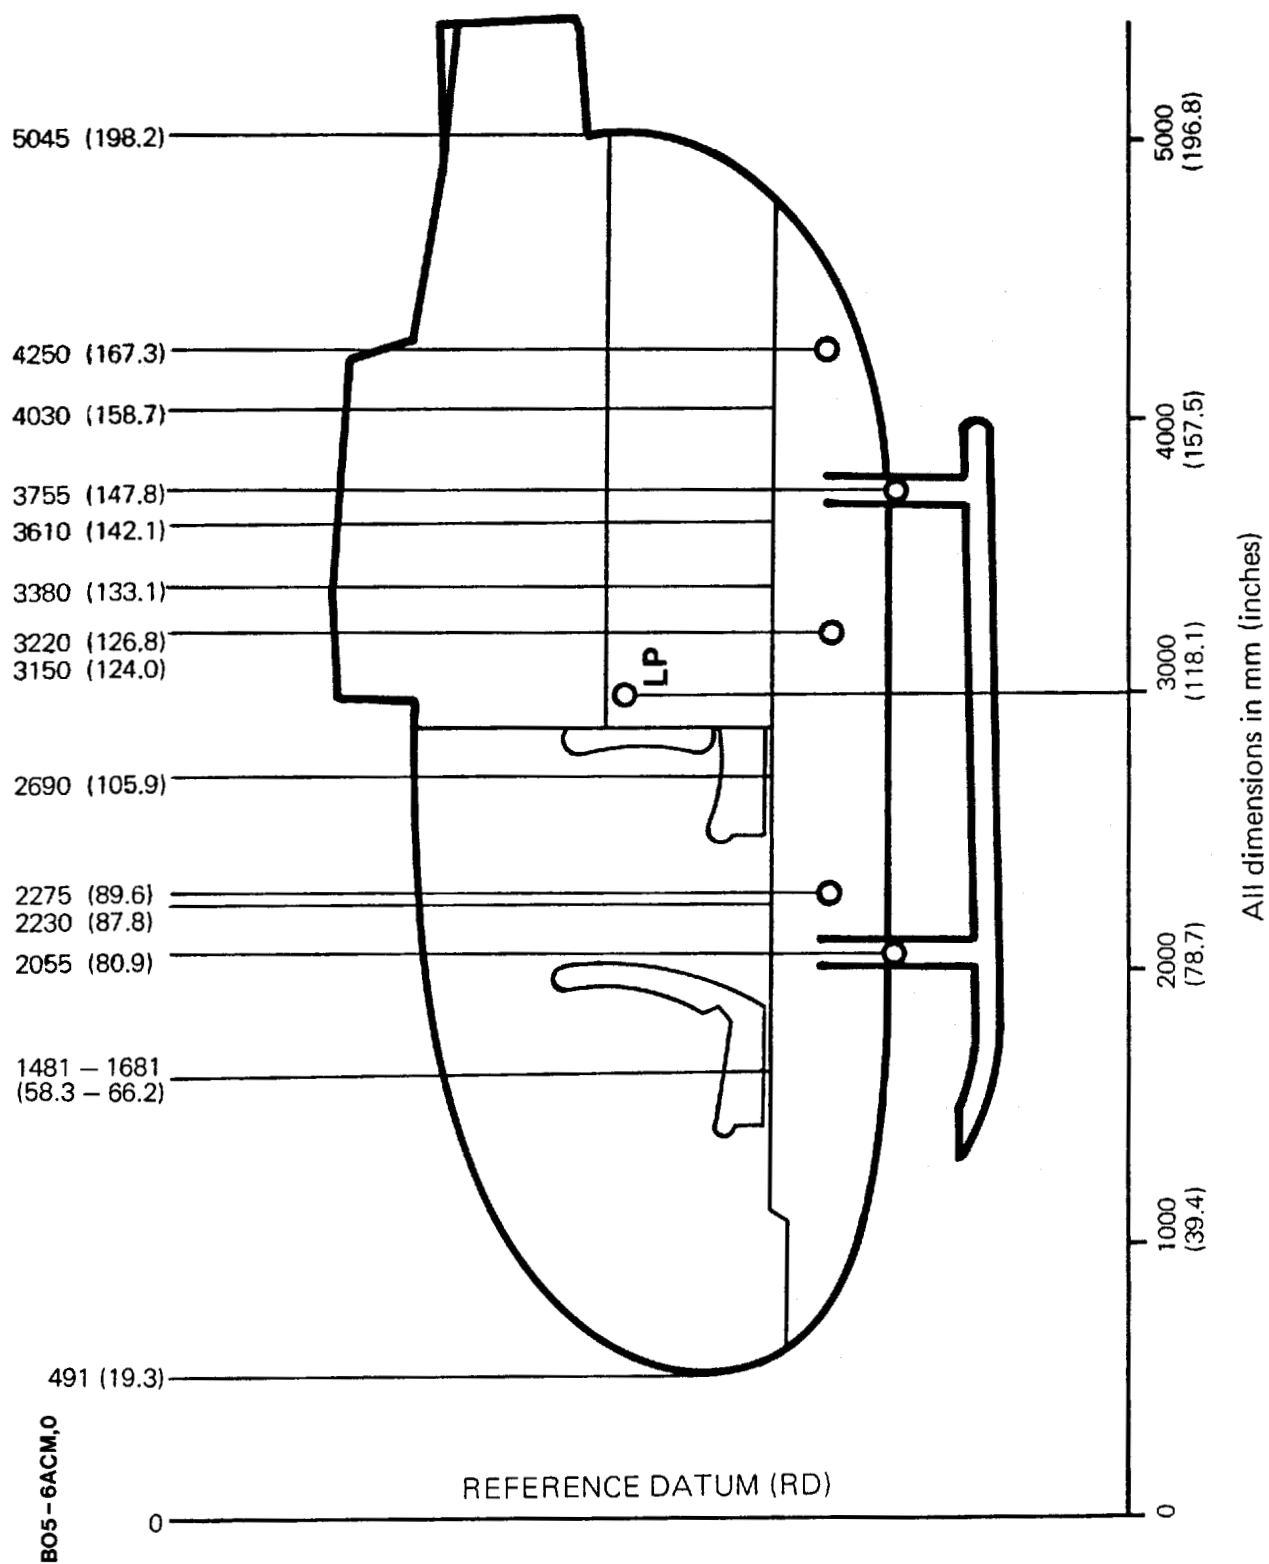


Fig. 6-1 Fuselage Station Diagram